

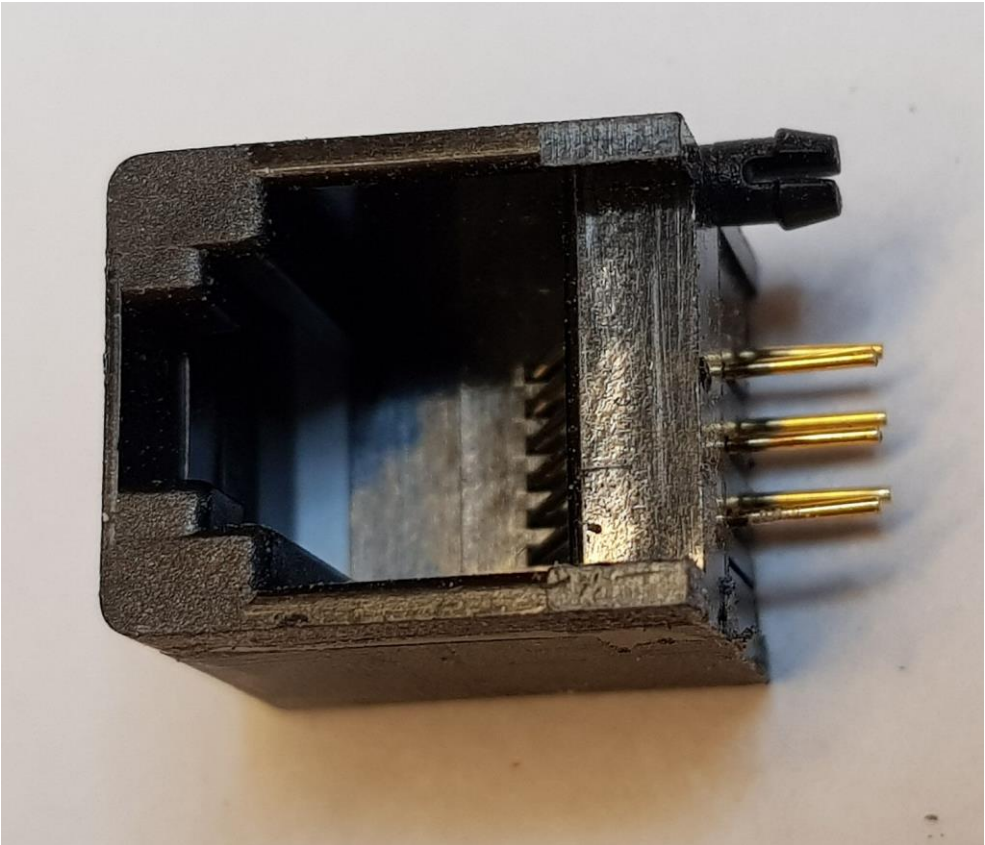
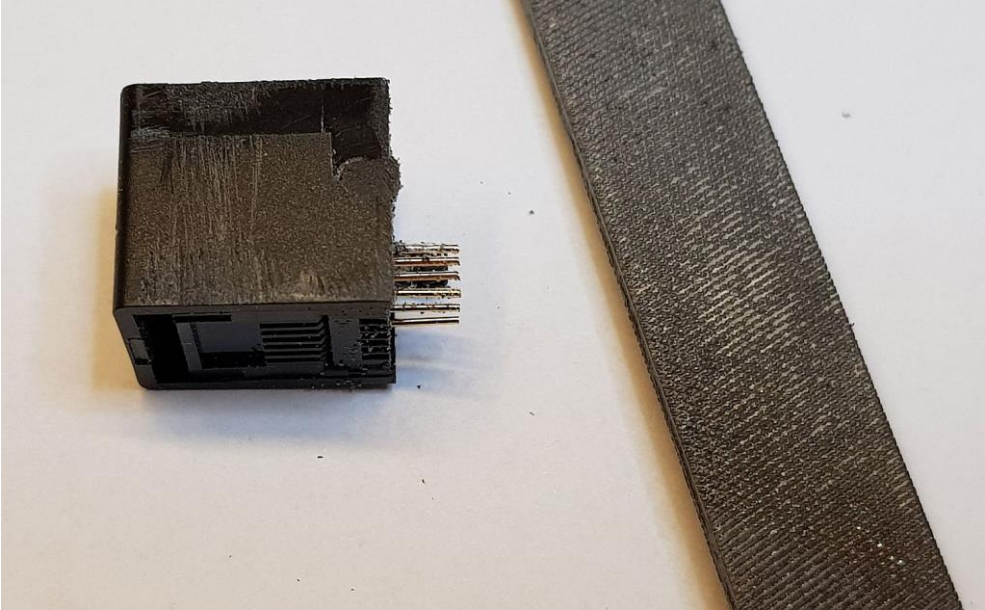


Here is a possible fix for using the boards with the RJ11/12 connector:

- 1. Remove the plastic pin on the right side (viewed from back of the connector) and smoth the side with a rasp:

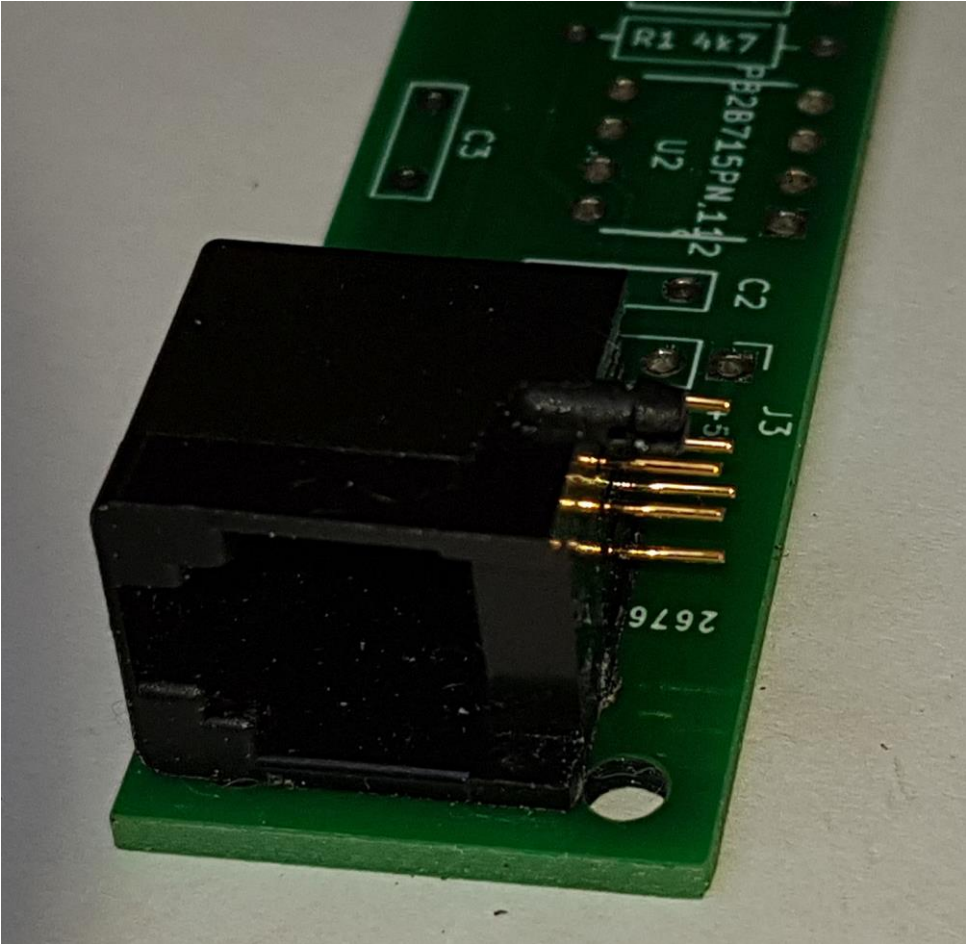

2. Glue the connector on the board like this:

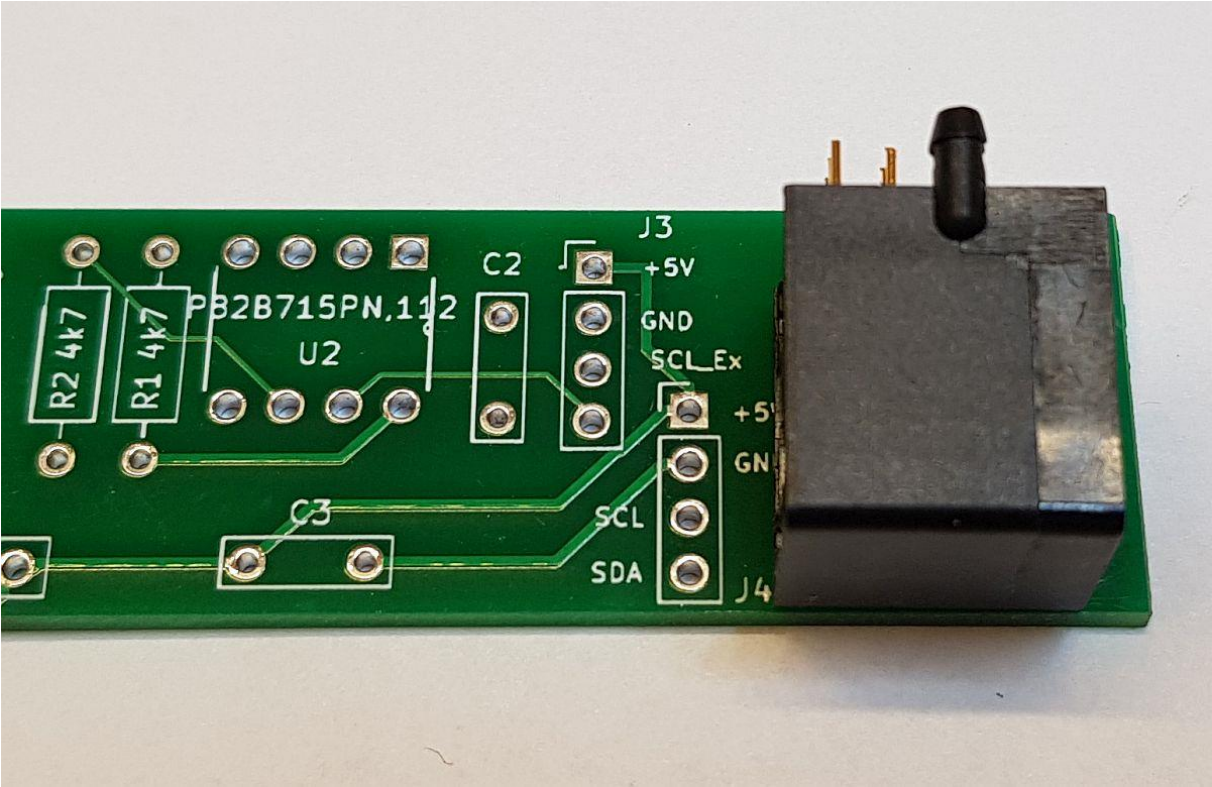



3. Now solder the connections with short wires (use silicon cable) from the board to the RJ11/12 connector like this:

