

Simplified modelling of electric and hybrid vehicles

A learn-by-using tutorial – January 2020

Massimo Ceraolo – University of Pisa – Italy

Massimo.ceraolo@unipi.it

Table of Contents

1	About this document.....	2
2	Introductory stuff	2
2.1	Acronyms	2
2.2	Language and Tools	2
2.3	Model and data (txt) files	3
2.4	Prerequisites to this document.....	5
2.5	About this document and library	5
3	My first EV model.....	5
3.1	My first simulation: the Sort1 Cycle	7
3.2	Details on DragForce model.....	10
3.2.1	Numerical values.....	11
3.2.2	Adding slope	12
3.3	Simulating NEDC.....	12
3.4	Details of Driver model.....	14
3.4.1	Proposed activity.....	16
4	Easing vehicle switch	16
5	Map-based EV model	17
5.1	The idea of map-based electric drives.....	17
5.2	General arrangement	19
5.2.1	Model limitations	24
5.2.2	Proposed activity.....	24
5.3	Modelling batteries	24
5.3.1	Proposed activity.....	29
5.4	Map-based DC-interfaced electric drive implementation	29
6	Simplified electric drives	30
6.1	Constant voltage/frequency asynchronous drive	30
6.1.1	Starting Asynchronous machines	31
6.1.2	Torque following	32
6.1.3	Speed following.....	34
6.2	Synchronous machine drive.....	35
6.2.1	Simulation of wbEHPTlib.ElectricDrives.TestingModels.SmaDriveFW	35
6.2.2	Simulation SmaDriveLim	38
7	Map-based HEV models	40
7.1	HEV's resume	40
7.2	SHEV basic model	41
7.3	SHEV with SOC closed-loop control.....	44
7.3.1	Proposed activity.....	46
7.4	SHEV with On/Off control	47
7.4.1	Proposed activity.....	48
7.5	PSD-HEV model	48
7.5.1	ICE model.....	54
7.5.2	Proposed activity.....	55
7.6	PSD-HEV with power filter	55
7.7	PSD-HEV with power-filter and SOC-loop control.....	57

7.7.1	Proposed activity.....	60
7.8	PSD-HEV with power-filter SOC control and ON/OFF	61
8	Map-based support models	64
8.1	EfficiencyT block.....	64
8.1.1	Proposed activity.....	65
8.2	MBEfficiencyLF block.....	65
8.3	TauLim block	67
8.3.1	Proposed activity 1.....	67
8.3.2	Proposed activity 2.....	69
8.4	ConstPg model	69
8.4.1	Proposed activities	70
9	EV-HEV simulation concluding remarks.....	70
10	References.....	71

1 About this document

This document is an update of a webbook chapter available from the OpenModelica web site from the url:

<http://omwebbook.openmodelica.org/SMEHV>

Since updating the quoted document involves work of people other than myself, I decided to keep updated this copy to be distributed along the library

2 Introductory stuff

2.1 Acronyms

EHPT Electric and Hybrid Power Train

MSL Modelica Standard Library (in its rel. 3.2.3, except when otherwise specified)

MS Modelica specifications (in its rel. 4.3 except when otherwise specified)

2.2 Language and Tools

This chapter is written taking as reference MS 3.2 and MSL 3.2.3.

All the examples provided are checked with two Modelica tools:

- Dymola, a very well-known commercial Modelica tool, in its rel. 2019¹
- OpenModelica the most complete (as far as I know) open-source Modelica simulation tool, in its rel. 1.14, 64bit Windows version².

OpenModelica is available for free, under different platforms (Windows, Mac, Unix) from its official site, <http://www.openmodelica.org>.

All the Modelica tool pictures included in this chapter are taken from OpenModelica. The appearance of that tool might slightly change from a computer to another, even running Windows, because the OpenModelica editor, OMEdit, is highly customisable, and my customization could have a slightly different appearance than readers'.

¹ Dymola 2019 comes with MSL 3.2.2; however models have been checked with MSL 3.2.3 from other sources.

² At the time of writing, OM 1.14 has not been released yet, but is in advanced development phase; models have been checked using a, OpenModelica nightly build available in May 1019

Note that in this chapter we are not making usage of replaceable models, because these cannot be managed by the OMEdit GUI yet. This is not a big limitation: it just implies some additional replications of models. If this webbook has a future release, maybe replaceable components will be added, since this feature it is expected to be included in OMEdit in the coming months.

Once one has run a simulation using OpenModelica, the output can be analysed in other computers, even not having OpenModelica installed, especially if the CSV format is used as an output. OpenModelica CSV outputs can be conveniently read and the result plotted and post-processed using the freeware PlotXY program, which can be downloaded from:

<http://ceraolo-plotxy.ing.unipi.it/default.htm>

This program is continuously updated and the most recent version is dated 2017. Plots with PlotXY are high quality and can be exported in several ways. Post-processing with PlotXY includes:


- algebraic combination of curves (sums, products, etc. with possible usage of parentheses)
- Fourier analysis to find and plot harmonics
- integral of variables (e.g. to find energies from powers).

2.3 Model and data (txt) files

Before start the reader should have these files available:

- **wbEHVpkg.mo**. It contains all the examples proposed in this chapter.
- **wbEHPTlib.mo**. It is a support library necessary to run the examples in wbEHVpkg.mo.
- **Sort1.txt** and **NEDC.txt** and **WLTC3.txt** These are textual files containing three standard vehicular cycles: the Sort1, the NEDC cycle and the most recent WLTC (Worldwide harmonised Light Vehicles Test Cycle) – for class 3 vehicles. Most of the examples are proposed using the first two cycles, which are simpler, and therefore more adequate for teaching. The reader can use the third one for more realistic analysis.
- **EVmaps.txt**, **SHEVmaps.txt** and **PSDmaps.txt** contain numerical data (e.g. specific fuel consumption) for the engine and electrical drive used respectively in the MBEV example (sect. 4), SHEV examples (sect. 7.2 to 7.4) and PSD examples (sect. 7.5 to 7.8).
- **Angle1.txt** and **TestAngle.txt** which contain simple data to check some simulations containing roads with slope.

To make **txt** files them available in OMEdit, you must put them in the OMEdit working directory. The location of OMEdit's working directory can be looked at, or set from the windows Tools|Options|General as shown below:

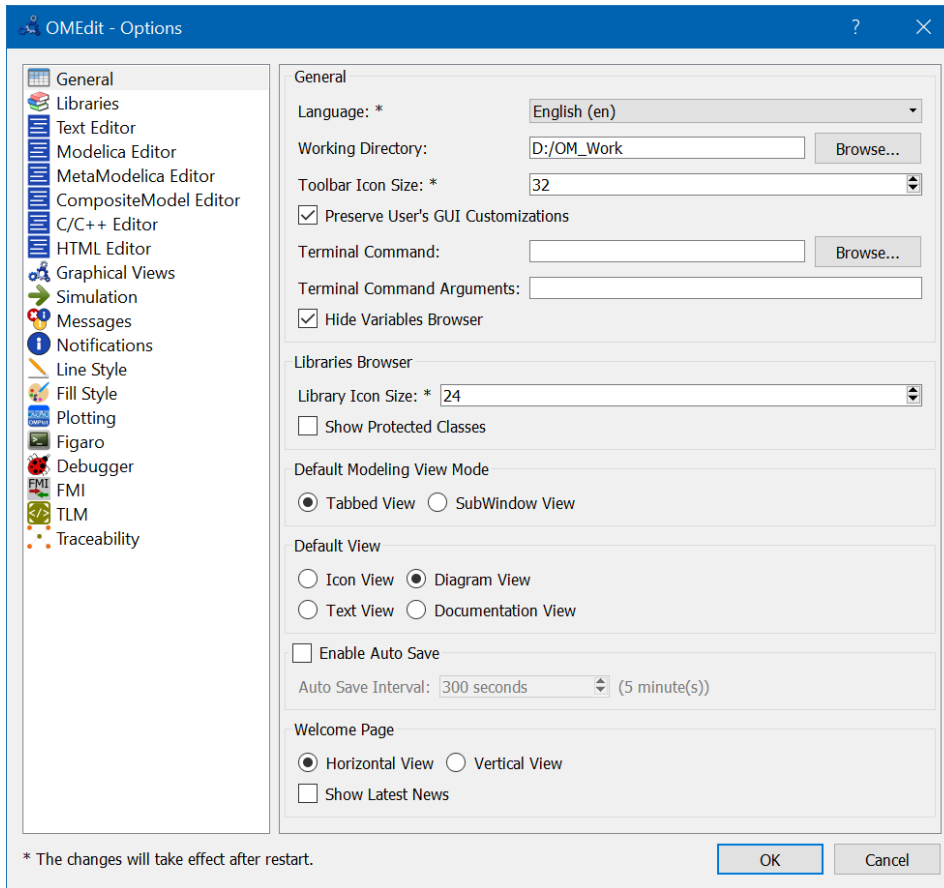

So, in the PC used to write this chapter this working directory is D:/OM_Work.

If the reader wants to change the numerical parameters of the models' components he often will have to change them in the models' dialog boxes. When the data are relatively a large number they are written in the above-mentioned text files (**SHEVmaps.txt** and **PSDmaps.txt**). So, to change the performance, e.g. fuel consumption, of the components the user has to change the data on these files. He can also have several text files related to different components and switch between them just changing the file name in the model's dialog box. For instance:

- If the user opens the `genset` dialog box of `wbEHVPkg.SHEV.SHEVpowerFiltSoc` model, he will find that the default `mapsfileName` is "SHEVmaps.txt". If he changes this name, the relevant ice data will be got from the file having the new name.
- If the user opens the `genset` dialog box of `wbEHVPkg.SHEV.SHEVpowerFiltSocOO`, he will find that the numerical data is not got from a file, but directly written in the dialog box. This is impractical, and one of this book's proposed activities is to modify this `genset` so that also its data are read from a txt file, in a way similar to that implemented in the `wbEHVPkg.SHEV.SHEVpowerFiltSoc` model.

- If the user opens the `ice` dialog box of `wbEHVPkg.PSD.PSecu1` model, he will find that the default `mapsfileName` is “PSDmaps.txt”. If he changes this name, the relevant ice data will be got from the file having the new name.
- If the user opens the `gen` dialog box of `wbEHVPkg.PSD.PSecu1` model, he will find that the numerical data is not got from a file, but directly written in the dialog box. This is impractical, and one of this book’s proposed activities is to modify this `gen` so that also its data are read from a txt file, in a way similar to that implemented in the `PSecu1` model.

2.4 Prerequisites to this document

This document is written having in mind a technical learner, typically an Engineering student at a bachelor level. Any learner that has at least the technical knowledge of a bachelor student in Engineering should be able to understand it easily. It could be also useful to any full engineer that wants to learn something about electric and hybrid vehicles, somehow “hands-on”. In fact Modelica offers learners an experience similar to the one we could have in a laboratory making tests on a full vehicle. With the advantage that we can measure everything without having to build complex measuring chains, and we can change everything in the physical and control parts of our system without having to spend a fortune, or risk an explosion.

Regarding Modelica, only some very basic experience with this language and MSL is required; one should be able to use a simulation tool, however. It is best if that simulation tool is the open-source OpenModelica (through the GUI interface offered by OMEdit), since all the pictures and the models presented are represented using OpenModelica’s OMEdit.

2.5 About this document and library

Modelling of road vehicles is a highly multidisciplinary task. It may involve modelling with rotational mechanics, translational mechanics, electrical machines and converter, hydraulic components and systems, and more.

In particular, modelling electric and hybrid vehicles cannot absolutely avoid at least interfacing the electrical and mechanical domains, and their control.

Because of this, vehicle modelling and simulation in general, and electric and hybrid vehicle modelling in particular, are a field of engineering in which Modelica excels, because of its inherent capability to simulate multi-domain systems, from the ground up.

That is the rationale behind the choice of writing this chapter.

This chapter will not provide very detailed (thus huge) models, but instead models with a calibrated level of detail, which can help learning the basics and constitute a solid basis for building more compete and realistic versions of them.

3 My first EV model

The core of this chapter is simulation of EV’s and HEV’s *power trains*. All of the vehicle that is around the power train (chassis, auxiliary systems) will be dealt with only marginally.

A very basic representation of the vehicle’s power train, using whenever possible MSL components and using a Modelica diagram, is in figure 1. It is a Modelica *simulation model*, according to MS sect 1.2.

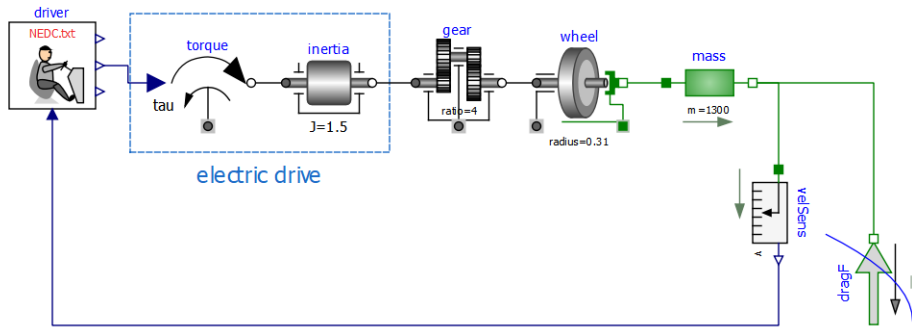


Figure 1. A first, very simple, EV Model (wbEHVPkg.EV.FirstEV).

Let us now explain the graphical elements (submodels of the simulation model in figure) shown, starting from its left side.

- **driver.** It is impossible to simulate a vehicle without including in the simulation a driver model, unless we intend to consider a self-driving vehicle, which is totally out of the scope of this chapter. We will use a very simple driver model in this book, which are created on purpose, since they are not available in MSL. This driver model is described in section 3.4. It is designed to follow a kinematic drive, whose name is displayed in its icon ("Sort1.txt" in the example above). It is a *block*, i.e a Modelica model without any physical connector, which generates signals that should be interpreted to be torque signal: accelerator (above), brake (below), combined (midrange, connected to power train in the figure above).
- **torque.** This is the Modelica.Mechanics.Rotational.Sources.Torque. It plays the important role of connecting the "cyber" part of our simulation model to its "physical" part, in the direction cyber->physical; another connection between the two worlds, in the opposite direction, is made by the speed sensor at the right side of the picture above. The combination torque-inertia here simulates a power train that adds power to the signal issued by the driver. It could be for instance an electric drive, composed by an electronic converter and an electric motor.
- **inertia.** This is the inertia of the electric drive, e.g. the rotational inertia of the rotor of an electric motor present in the power train.
- **electric drive.** In this vehicle simplified model, the torque-inertia pair constitutes the electric drive, which receives as input a torque signal, positive when accelerating and negative when braking, and actuates it, considering the dynamics induced by the inertia. The electric drive absorbs or delivers power. This simple model does not show power conversion into electricity.
- **gear.** Commonly EV's have only a fixed ratio reduction gear. That is the role of gear in the above picture.
- **wheel.** This is an ideal rolling wheel. Note that in real-life cases wheels do not roll ideally. They have some *slip*, which is below 5% on good tyre-to-tarmac contact, and accelerations below 5-7 m/s². Since this book describes simplified vehicle modelling and simulation, we always consider ideal rolling; the accelerations we will see will be, indeed, well below the 5 m/s² threshold.
- **mass.** A very important part, though very simple, is the Modelica.Mechanics.Rotational.Components.Mass model called *mass*. It is the vehicular mass, in the example in figure 1400 kg. At its flange_a it is subject to propulsive force due to power train torque, at its flange_b to the resistance force to movement of the vehicle *dragF*.

- velSens. As mentioned earlier, in terms of the “cyber-physical” simulation environment, which is Modelica, this sensor (as all sensors) creates a communication link between the physical and cyber parts of our simulation model. Looking at things in another way, it plays the role of a vehicle dashboard. The driver has in mind the kinematic cycle he wants to follow, and to do this he acts a closed-loop controller. Therefore, he looks at the actual speed through the dashboard (which in our mind displays the speed measured by velSens) compares it with the desired kinematic cycle, and acts on its commands (brake, accelerator) so that to reduce or nullify the error.
- dragF. This an object describing the vehicle resistance to movement. Since this force requires some rather sophisticated code to avoid unexpected effects, this is not a MSL model. It is instead a model extended from Modelica.Mechanics.Translational.Interfaces. PartialFriction. A description of this model will be given in sect. 3.2

3.1 My first simulation: the Sort1 Cycle

I imagine the reader wishing to see our first simulation model at work, even before knowing all the details of its component models.

Therefore we introduce here a very simple driving cycle, which is able to show the basic characteristics of an electric vehicle motion. Although simple, the cycle were are going to introduce is standard. It is a standardised cycle used for urban bus testing, called “Sort1”. Below you can see how this cycle is defined in a text file (“Sort1.txt”), its plot over time, and the resulting acceleration.

```
#1
# Standardised Sort1 cycle
# columns: time, speed (km/h)
double Cycle(13,2)
  00.00    0.00
  05.39    20.0
  17.22    20.0
  24.17    0.00
  44.17    0.00
  54.99    30.0
  68.37    30.0
  78.79    0.00
  98.79    0.00
 116.71    40.0
 120.60    40.0
 134.49    0.00
 150.00    0.00
```

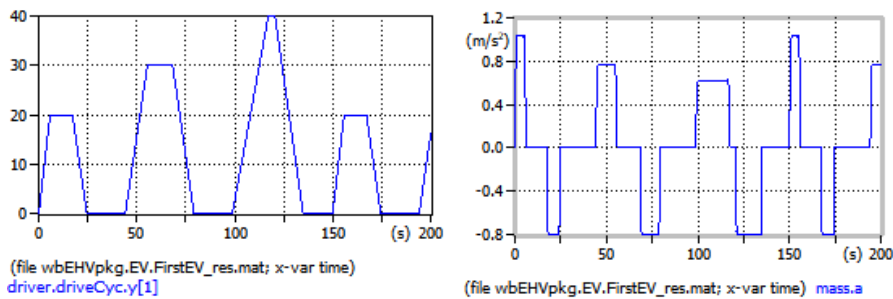


Figure 2. The sort1 cycle (left) and its resulting acceleration (right).

Note that these plots contain also the file name, so the reader can reproduce them by running the model with OMEdit, the GUI tool to use OpenModelica compiler. They will get virtually the same curves above, even though the visual aspect will be slightly different.

For instance, their OMEdit version could appear as follows:

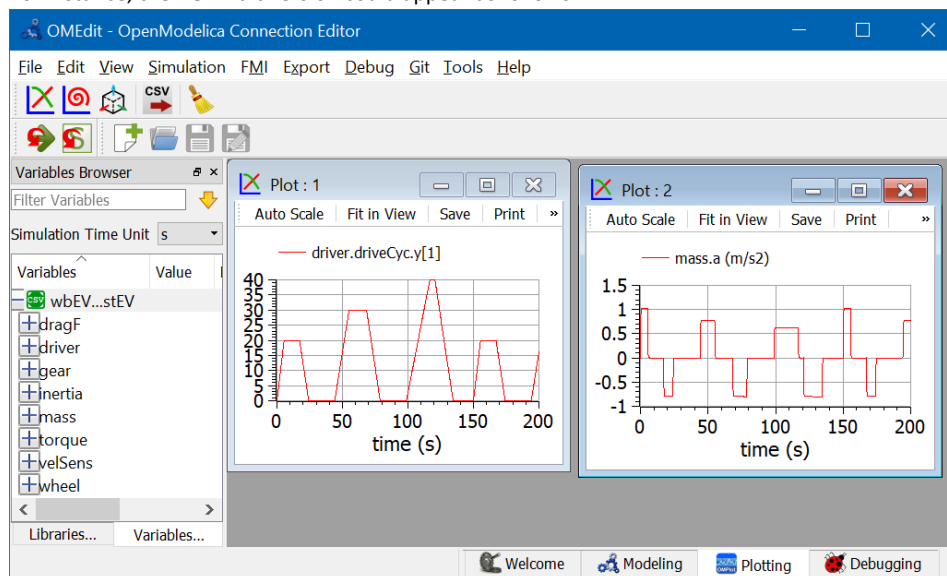


Figure 3. Plots corresponding to figure 2, but obtaining through OpenModelica.

At the left –hand side of this screenshot you see the list of variables, at the right side the two plots. Above, menus and the toolbar.

To select a cycle in one of the supplied models, the reader has just to tell the driver the cycle name. E.g. for the sort1 cycle the driver's parameter window under OMEdit might appear as follows:

OMEdit - Component Parameters - driver in wbEVPkg.EV.FirstEV

Parameters

General **Modifiers**

Component

Name: driver

Class

Path: wbEVPkg.SupportModels.PropDriver
Comment: Simple Proportional controller driver

Parameters

CycleFileName	<input type="text" value="Sort1.txt"/>	...	Drive Cycle Name ex: "sort1.txt"
k	<input type="text" value="1000"/>	...	Controller gain
yMax	<input type="text" value="100000.0"/>	...	Max output value (absolute)
extrapolation	<input type="text" value="Modelica.Blocks.Types.Extrapolation.Periodic"/>	...	Extrapolation of data outside the definition range

OK Cancel

Figure 4. The parameter dialog box for the proposed driver model.

The Sort1 cycle, in its period which is 140s, has three trapezoids, which are scaled progressively: the acceleration reduces from the first trapezoid on, the maximum speed raises.

The above plots, as well as plots of many other quantities, can be obtained simulating an EV using the simulation model shown in figure 1, with the addition of two power sensors, giving rise to the model shown in figure 5.

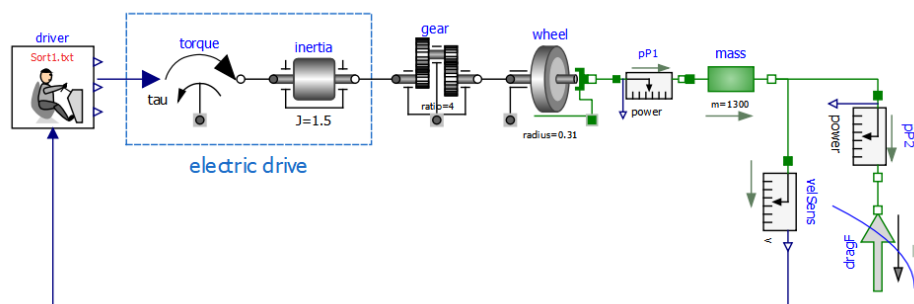


Figure 5: Model wbEHVPkg.EV.FirstEVpow.

Running this model we could for instance have a look at two propulsion powers p_{P1} and p_{P2} , shown in conjunction with the cycle. This can be done using PlotXY, which allows twin vertical axes (speed, green, is against the right vertical axis):

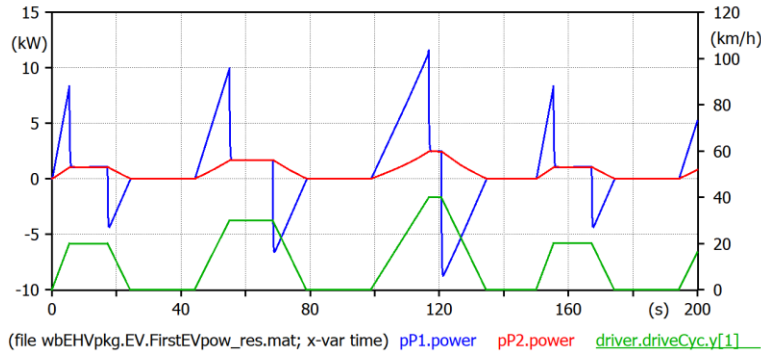


Figure 6 Powers under the Sort1 cycle and vehicle speed.

When speed is constant pP1 power equals pP2's. During transients the two differ, and the difference is the accelerating torque. The areas between red and blue curves are kinetic energies: when the red curve is above the blue ones, we are accumulating kinetic energy in the vehicle's mass, when the position is reversed, that energy is given back to the power train. The power train shown in figure 5 is totally reversible and has no loss, i.e. it can be assumed to be an *ideal EV power train* since, in addition to not having losses, is able to fully recover braking energy. Therefore at the end of the simulation the net energy delivered by the electric drive is the area below red curve, which equals the area below the blue one (if we consider as initial and final two points in which vehicle speed is zero, i.e. time=0 and time=180s).

Drag force needs special consideration and will be discussed in the next section.

3.2 Details on DragForce model

According to vehicular mechanics, the resistance to movement force R for horizontal paths is usually expressed as follows:

$$R = fmg + \frac{1}{2}\rho SC_x V^2 \quad (1)$$

The first term, containing the rolling resistance factor f , the mass m and gravity acceleration g , simulates rolling resistance; the second one simulates aerodynamic drag. In it, ρ is the air density, S is the cross-sectional vehicle area, C_x the longitudinal drag coefficient, V the vehicle speed. Indeed using the (1) in simulations is incorrect; we must instead use the expressions shown in (2).

$$\begin{cases} R = F_{appl} & \text{if } V = 0 \text{ and } F_{appl} < fmg \\ R = fmg + \frac{1}{2}\rho SC_x V^2 & \text{otherwise} \end{cases} \quad (2)$$

This requires special code: when V crosses zero, it the vehicle is pushed with a force lower than fmg , it stays stuck at $V=0$. If instead of (2) we used (1) when the vehicle is standstill horizontally and no torque is applied to the wheel hubs, the vehicle would move backwards!

More in depth

Note that when accelerating or braking the vertical load of front and rear wheels are different from each other. For instance, when braking the load on front wheels is higher. The first term in (1) refers to the total load on the four wheels, whatever its distribution. This is correct whenever all the wheels are nearly rolling, that occurs in normal conditions, except when we have very high accelerations (e.g. more than 5-7 m/s² on good tyre-to-tarmac contact). Therefore, the models in this chapter are valid if we avoid very strong accelerations, such that road-to-tarmac slips larger than 5-8% occur.

Equations (2) describe a behaviour that occurs whenever there is the switch from stationary grip to dynamic grip. E.g., in vehicles, in clutches and brakes. Therefore, a model for the dragForce able to operate correctly can be obtained using something already available in MSL.

The model `wbEHVPkg.SupportModels.DragForce` is built slightly modifying `Modelica.Mechanics.Translational.Components.Brake` to introduce equations (2).

The reader could look at the whole code if he wants, but it is not very important. Here we just comment a few rows of code.

First we define protected parameters A and B as follows:

```
protected
parameter Real A = fc * m * g_n;
parameter Real B = 1 / 2 * rho * S * Cx;
```

They are the two coefficients in equation (1)

Then we define the drag force, according to the R formulas in equation (2):

```
f - B * v ^ 2 * Sign = if locked then sa * unitForce else f0 *
  (if startForward then
    Modelica.Math.tempInterpoll(v, [0, 1], 2)
  else if startBackward then
    -Modelica.Math.tempInterpoll(-v, [0, 1], 2)
  else if pre(mode) == Forward then
    Modelica.Math.tempInterpoll(v, [0, 1], 2)
  else
    -Modelica.Math.tempInterpoll(-v, [0, 1], 2));
```

The part right of ‘=’ is just copied from `Translational.Components.Brake`, without even try to understand all details. The part left of ‘=’ is just equation (1), to which we added “Sign” that is the sign of V and considers whether the movement is forwards or backwards.

Finally, the brake model contains the variable `free`, which decouples the two brake parts when we are not braking. In our case this would occur when the considered wheel is not in contact with the asphalt, e.g. for a car “jump”. But our model is not able to simulate such things. We consider therefore wheels always in contact with the soil, and add the following row in `DragForce`:

```
free = false;
```

3.2.1 Numerical values

In the simulations of section 3 as numerical values of the parameter connected to drag force we have used, and will be using the following ones, corresponding to a typical small car at typical air pressure:

$m = 1300 \text{ kg}$ $\rho = 1.226 \text{ kg/m}^3$, $S = 2.2 \text{ m}^2$, $f = 0.014$, $C_x = 0.26$.

To see our `dragForce` at work, we can have a look at its flange force while still simulating the model shown in figures 1 and 5.

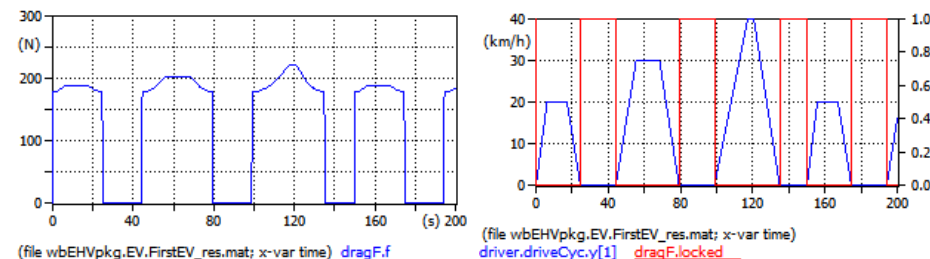


Figure 7. Drag force example, for a vehicle loperating under the Sort1 Cycle (model `wbEHVPkg.EV.FirstEV`).

In the left plot we see that the part of drag force not depending on speed prevails, being around 180 N; while the part depending on speed becomes more and more significant when we move from the first to second and third trapezoid. This is reasonable, since typically in cars the aerodynamic part of drag force becomes prevalent starting from speeds around 80 km/h. With our parameters this critical speed is found from:

$$fmg = \frac{1}{2} \rho S C_x V_{crit}^2$$

which gives $V_{crit}=81$ km/h.

In the right plot we see two curves: the red one must be read on the left vertical axis and contains speed. The green one is a boolean variable indicating when the drag force understands the vehicle to be stopped, and its value is to be read on the right vertical axis (1 means true, 0 false). When `locked=true` the first of (2) is valid, otherwise the second one applies.

3.2.2 Adding slope

In the previous subsections we introduced drag force without the effects of slope. When we have non-horizontal paths, we must modify it. Equations (2) become (α is the angle with reference to the horizontal plane):

$$\begin{cases} R = F_{appl} & \text{if } V = 0 \text{ and } F_{appl} < fmg \\ R = fmg \cos \alpha + mg \sin \alpha + \frac{1}{2} \rho S C_x V^2 & \text{otherwise} \end{cases} \quad (3)$$

Adding slope is a rather trivial task. However, it requires information about the path slope to be transferred to the new, slope-aware, enhanced drag force component we want to create.

In `wbEHVPkg` this is done through a txt file. An example txt file for angles is supplied carrying the name `Angle1.txt`, and has the following content:

```
#1
```

```
# First column: position, second column: angle (rad)
```

```
double Angle(8,2)
0.00    0.0
100.    0.
110.    0.1
200.    0.1
220.    -0.1
300.    -0.1
310.    0.0
400     0.
```

In `wbEHVPkg` we have also a ready model named `FirstEVAngle`. The reader is prompted to try it, remembering that for these kinds of simulations two txt files must be supplied: the cycle, inside driver (for instance the provided `TestAngle.txt`) and the angles, inside drag force (for example the provided `Anelw1.txt`).

3.3 Simulating NEDC

NEDC (New European Driving Cycle) Cycle is richer than `Sort1`, and is thought for cars, not buses. It has an urban part, constituted each by three near-trapezoids, which is repeated four times, and a final extra-urban part.

To simulate this cycle the file name “NEDC.txt” must be chosen in the driver’s parameter window, as shown earlier for Sort1 cycle. This cycle looks as follows:

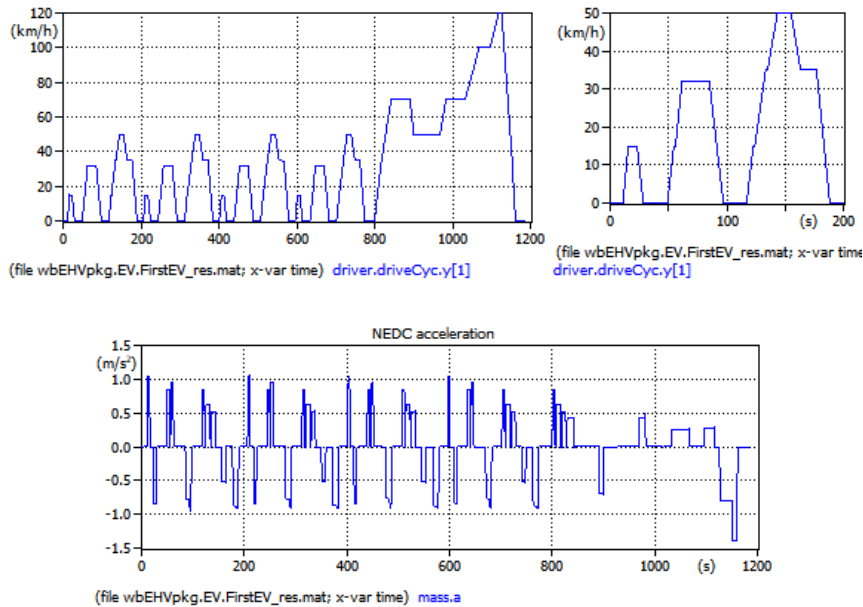


Figure 8. The NEDC cycle (top) and its resulting acceleration (bottom). Model wbEHVpkg.EV.FirstEV. To reproduce select “NEDC.txt” in driver’s parameters dialog and use simulation time=1200s.

The acceleration plot shows very rapid acceleration changes even during ramps of the near-trapezoid shapes. These are due to the fact that this cycle was thought for conventional vehicles, in which during acceleration gears are switched, and during switching speed has a plateau (see zoom above) where acceleration goes to zero or so.

These plateaux are meaningless for EVs and those working with these vehicles usually use modified versions of the cycle not having these plateaux.

A final note. NEDC cycle is very old. A new family of cycles has been developed as a worldwide effort, called WLTC (Worldwide Light-vehicle Test Cycles). They are planned to be progressively introduced in some countries, in particular in Europe, starting from September 2017 ³.

Also for the NEDC cycle the power plots as those in fig. 6 can be plotted, as per the following figure 9. Naturally actual powers depend not only on the kinematic cycle, but also on the vehicle parameters: mass, drag force.

³ <https://www.vda.de/en/topics/environment-and-climate/exhaust-emissions/wltp-worldwide-harmonized-light-vehicles-test-procedure.html>

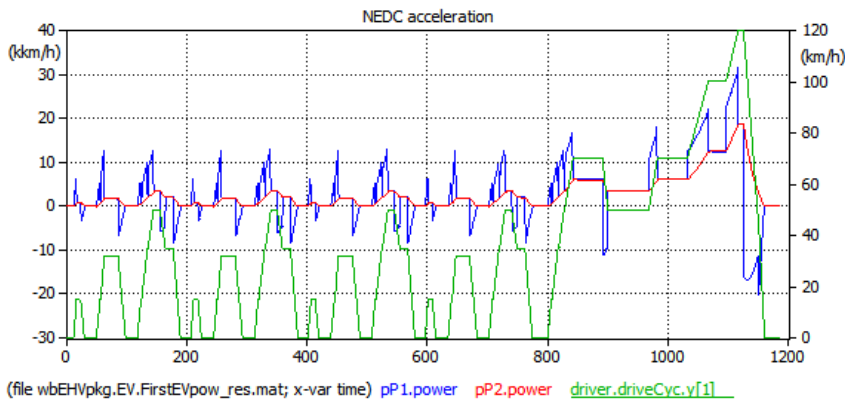


Figure 9. Some powers for a vehicle operating under the NEDC cycle. Model wbEHVPkg.EV.FirstEVPow. To reproduce select “NEDC.txt” in driver’s parameters dialog and use simulation time=1200s.

The peak power now reaches 30 kW inclusive of accelerating power, while the power needed to overcome motion resistance has a peak of 18.8 kW in the final part of the cycle, reaching 120 km/h.

3.4 Details of Driver model

The driver is a man, and therefore to simulate him models can be very complex. However, for our first EV, the driver has just to follow the given driving cycle, closely enough. In addition, this chapter is not to study people, but machines, i.e. our EVs and HEVs. Therefore, here a very simple driver model can be used. The driver model used is shown in the following figure:

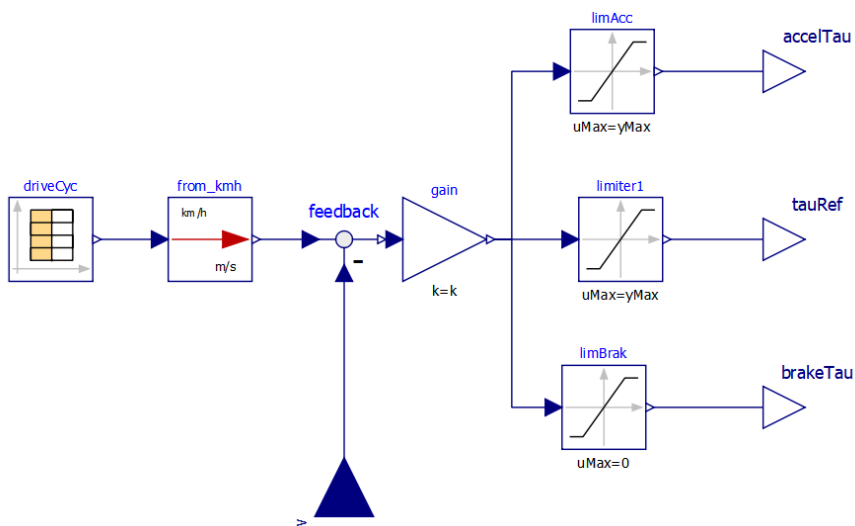


Figure 10. Proportional Driver model diagram.

It is called `PropDriver` because it implements a simple proportional control. A real driver commands propulsion through acceleration and brake pedals. In a simplified way, we can say that

a positive torque (i.e. so that the power train delivers power) is requested acting on the accelerator pedal, while a negative one is requested while acting on the brake. This is how the above `PropDriver` works. The two signals are also combined into a unique torque signal, named `tauRef`.

Signal `yMax` is imputed from the component GUI. Signal `accelTau` is limited between 0 and `yMax`, `tauRef` between `-yMax` and `yMax`, `brakeTau` between 0 and `yMax`.

Considering the situation more in detail, we must say that in reality accelerator can require negative torque as well, when the foot is released with the vehicle running at a given speed. This occurs naturally in a conventional vehicle (internal-combustion engine based) since when gas is zeroed releasing the accelerator pedal, inner ICE losses cause a mild negative torque to be delivered. This natural behaviour helps smooth driving, since it allows moderate braking without requiring displacing a foot from a pedal into another. Therefore, it is replicated artificially in modern EV controllers.

Just as an example, we can consider the technique to perform this *accelerator release braking* similar to the one published in [2].

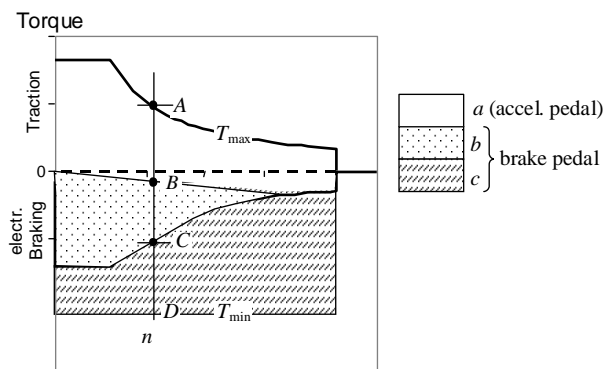


Figure 11. Operating regions showing a possible logic to manage pedal signals, and to get *accelerator release braking*.

According to that logic, an effective way of interpreting the driver commands, the zone between maximum and minimum electric drive torques T_{\max} and T_{\min} is split into three sub-zones in which the driver commands have different interpretations.

The zone *a* is limited by the upper part of the operating region and a straight line that passes in the point characterised by null torque and speed. At any generic Electric Drive speed n all points of segment *AB* correspond to different apertures of gas pedal position (GPP): for its maximum aperture, the maximum drive train torque T_{\max} is requested; for minimum aperture, a negative torque (then a light braking action) is requested whenever $n > 0$; for intermediate apertures, linear interpolation is used.

Zone *b* (segment *BC*) is still available for stronger electrical braking action. Finally zone *c* (segment *CD*) adds mechanical braking.

Inside zone *a* there are parts with positive and part with negative torques. The latter realise the mentioned acceleration release braking. So, the position of the accelerator pedal totally released corresponds to zero torque only at the drive zero speed; that torque becomes negative at higher speeds to get moderate braking action.

<pre> record Bus parameter Real m = 16000; parameter Real ratio = 6; parameter Real radius = 0.5715; parameter Real J = 5; parameter Real Cx = 0.65; parameter Real S = 6; parameter Real fc = 0.013; parameter Real rho = 1.226; parameter Real kContr = 1000; end Bus; </pre>	<pre> record Car parameter Real m = 1300; parameter Real ratio = 3.905; parameter Real radius = 0.31; parameter Real J = 1.5; parameter Real Cx = 0.26; parameter Real S = 2.2; parameter Real fc = 0.014; parameter Real rho = 1.226; parameter Real kContr = 100; end Car; </pre>
---	---

The reader is invited to perform several simulations changing vehicle behaviour, using these data records.

The reader can also modify other supplied models to allow also for them “easy vehicle switch” using record.

5 Map-based EV model

The EV model used earlier was to understand the very basic behaviour of an EV power train, but has too many limitations for practical usage. In particular:

- it does not consider any battery model and behaviour
- it does not consider power train losses
- it does not consider that braking can occur with either power train and mechanical brakes
- it does not consider that power trains have limits in the torque and power they can deliver or absorb.

Before presenting a model overcoming these limitations, in the next section we first describe what we intend for a map-based electric drive.

5.1 The idea of map-based electric drives

There are several cases in which it is not important to model all the details of a physical system. We can therefore use simplified models, which do not reproduce fast transients, but are enough for the scope of EV and HEV simulation: evaluate torques, forces, powers, battery SOCs, etc.

As regards EVs, the component that we will simulate with maps (ap-based component) is the *electric drive*.

Note that an electric drive is not just a machine: it is an electrical machine, its feeding converter (often called Power Processing Unit, or PPU) and the related control. Figure 13 shows the idea of electric drives, when they are fed from a DC source, which is the case of electric vehicles.

Two typical electric drives are:

- DC drives: a converter feeds a DC machine (fig. a)
- three-phase drives: a voltage-sourced converter (VSC) feeds a three-phase machine (fig b). The machine, in turn, can be induction (asynchronous) or synchronous; in the latter case for EVs the most common case is a permanent-magnet synchronous machine.

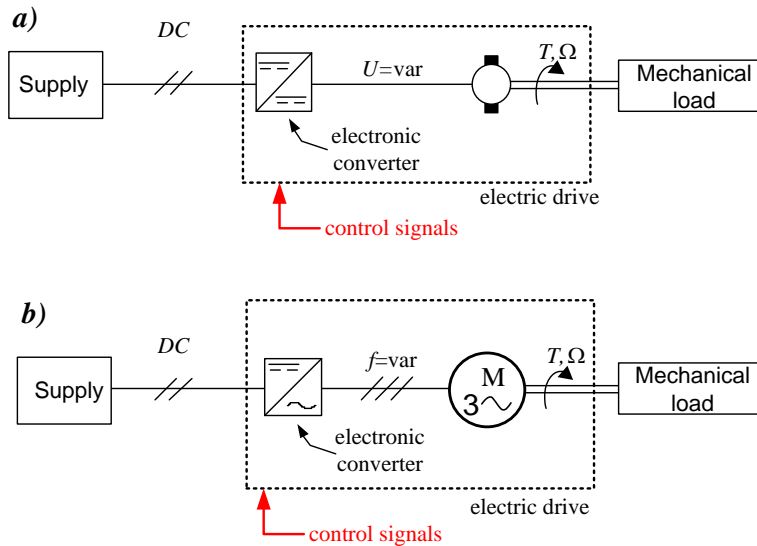


Fig. 13: DC-fed Electric drives: based on a DC machine (a)) or an AC machine (b)).

In several cases all electric drives for simplified EV simulation purposes can just model:

- the inertial behaviour of machine rotor
- the torque and power limits
- the capability to respond to control signals.

Regarding torque and power limits, very often, just symmetric limits, a base speed, and a maximum speed can be considered as represented in figure 14.

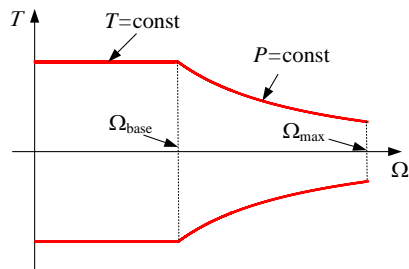


Figure 14: the operating region of an electric drive, showing torque-limited and power-limited zones.

All points between the two red curves and the vertical axes $\Omega=0$ and $\Omega=\Omega_{\max}$ are acceptable operating points for the drive. Each of them implies a given efficiency: ratio of mechanical to electrical powers when the machine is operating as a motor (positive torques), or electrical to mechanical when it is operating as a generator (negative torques i.e., for a vehicle regenerative

braking). Many electric drives can be modelled this way: the distinction between DC drive, Induction drive, and PM-SM (permanent-magnet synchronous machine) drive disappears.

In SMEHV library we propose just one map-based model of electric drives, which illustrates this kind of modelling: the operating region as in figure 14, with efficiency values inside that region, the electric motor inertia, control. A detailed explanation of this model is in sect.5.4.

5.2 General arrangement

In the model presented in this section, we will remove the limitations listed in sect. 5. Nevertheless, it will not be very detailed for two reasons:

- to understand things, it is often better to have as simple models as possible
- to allow simulation of the large timespans required for vehicle simulations (minutes or tens of minutes) it is not wise to go into minute details such as commutation of valves inside vehicle power electronic converters.

The model we propose has the diagram shown in figure 15.

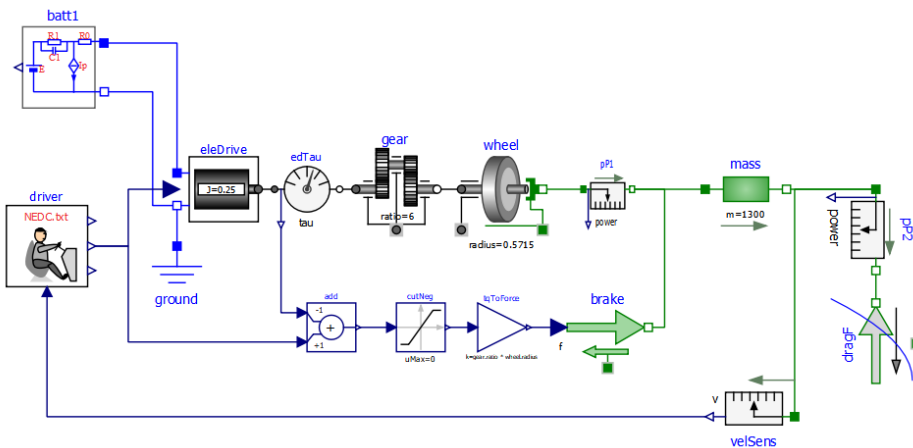


Figure 15: Map-based EV model diagram (Model wbEHVPkg.EV.MBEV).

This model requires, to run, the power train efficiency to be specified directly on the eleDrive mask, or on a txt file. To reproduce the results shown here the reader can use the provided "EVmaps.txt". How to link a txt file with a model is explained in section 2.3.

Some comments about the added components:

1. the battery model will be discussed in section 5.3
2. the drive train (eleDrive) model is a map-based electric drive model, as introduced in sect. 5.1, and discussed more in detail in in sect. 5.4
3. the brake action is simulated by just adding a braking force to the mass's flange_b. A more sophisticated brake model exists in MSL (Modelica.Mechanics.Translational.Components.Brake), but it was not chosen because in this book we prefer simplicity to completeness.

Regarding the above point 3, it is interesting to note that sum of torque is automatically made by any Modelica tool (here OpenModelica), since torque is a flow variable and flow variables are automatically algebraically summed up when several connectors are connected to each other.

Here, the requested braking force is non-zero only when electric braking from `eleDrive` is insufficient.

Simulation of NEDC cycle using the model in figure 15, with `mapsOnFile=true` inside `eleDrive`, gives the results shown in the following pictures (fig. 16; `add.u2` is the reference torque, requested by the driver).

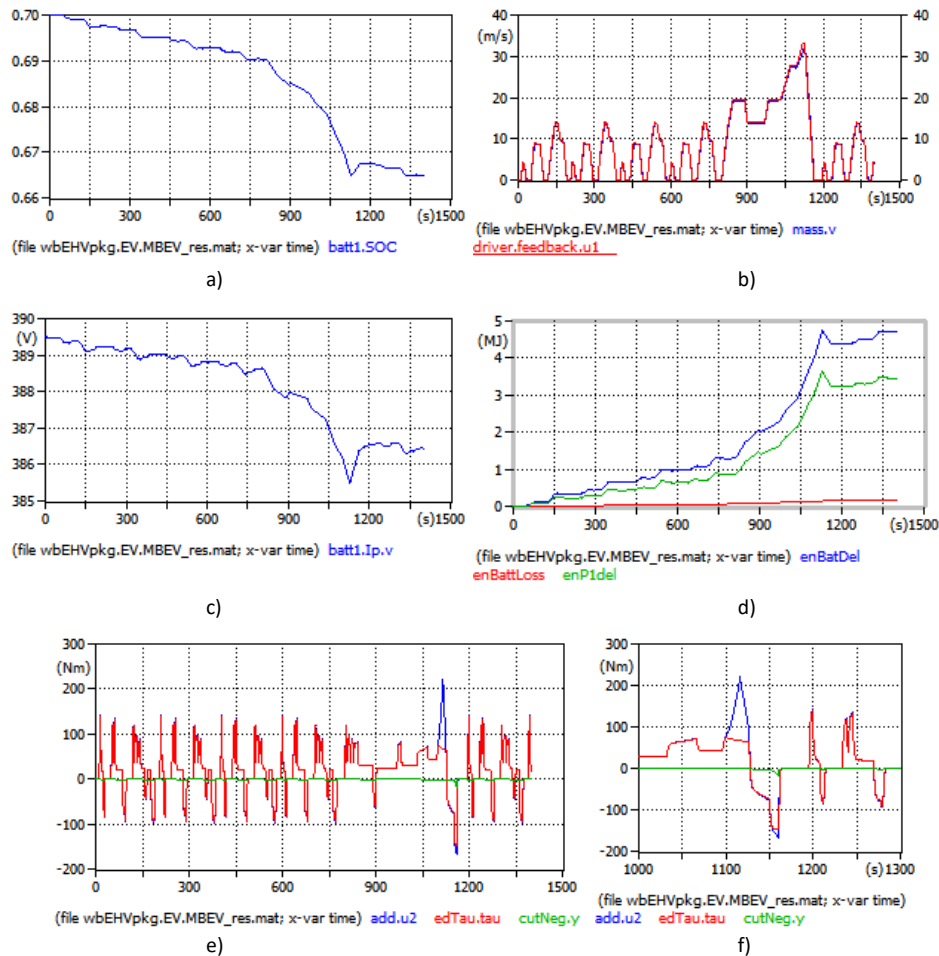


Figure 16. Plots related to the model in figure 15 operating under NEDC cycle.

Plot a) contains the battery Stat-of-charge (SOC)

Plot b) compares actual (red) and desired speed, and shows that they are very near to each other.

Plot c) contains the battery voltage

Plots e) and f) show torque request (blue), torque delivered by the electric drive (red) torque corresponding to the mechanical braking force (blue). We can note that:

- between $t=1100$ and $t=1126$ s not all the requested torque can be delivered. This is because the max power= 22 kW is hit. This is common in vehicles, whenever drivers request torques that

are larger than maximum available (due to torque or power limitations), but in this case has no practical effects on the desired speed

- negative torques are nearly always obtained with electric braking; mechanical braking here occurs only at the final deceleration of the extra-urban part (plot zoom in the lower right corner). In practice, however, real EV's use more mechanical braking. Compare with figure 56 in sect. 8.3.1

Plot d) shows energies. In this case energies are obtained using direct equation writing, to avoid the diagram to become too crowded. They are simply the following ones, in model MBEV:

```
Modelica.SIunits.Energy enBatDel, enPlDel, enBattLoss;  
equation  
der(enBatDel) = (batt1.p.v - batt1.n.v) * batt1.n.i;  
der(enDTdel) = eleDrive.powSensor.power;  
der(enPlDel) = mPl.power;  
der(enBattLoss) = batt1.powerLoss;
```

The variable `enBatDel` is the energy delivered by the battery, while `enPlDel` is the energy supplied to the left flange of mass: the two powers differ from each other because of the non-unity efficiency of the power train `eleDrive`. If we select, in this component, “`mapsOnFile`”=false, and leave the default `effTable` (which means unity efficiency) the two curves overlap.

Using this simulation we can evaluate the Wh per km this vehicle requires under the given cycle. We must remember that a “rule-of-thumb” for common usage is that the required energy is around 100 Wh per tonne for a car operating mainly in urban areas.

Here we have, dividing the final value of `enBatDel` for the final value of `mass.s`, taking into due consideration the units of measure, 116 Wh/km, which is good for a 1300 kg car.

If we repeat the simulation using the provided WLTC class 3 cycle (“WLTC3.txt”) for its duration (1800 s) we find 133 Wh/km, which confirms what we already knew that WLTC3 is more severe than NEDC, and corresponds very well to the 100 Wh/(tonne.km) rule-of-thumb value.

The model `EleDrive` in figure 15 is a component able to operate at a maximum permissible torque and maximum permissible power. These limits can be plotted in a torque-speed diagram, in which we can put also the points in which the vehicle operates under a given cycle. Figure 17 Contains a parametric plot showing the vehicle operating points under NEDC, inside the operating map.

The red curves are the maximum and minimum allowed torques (cf. fig. 14). The curve requested by the driver curve stays most of the time inside, and is shown in blue; when it should have gone beyond, it is cut and shown in green.

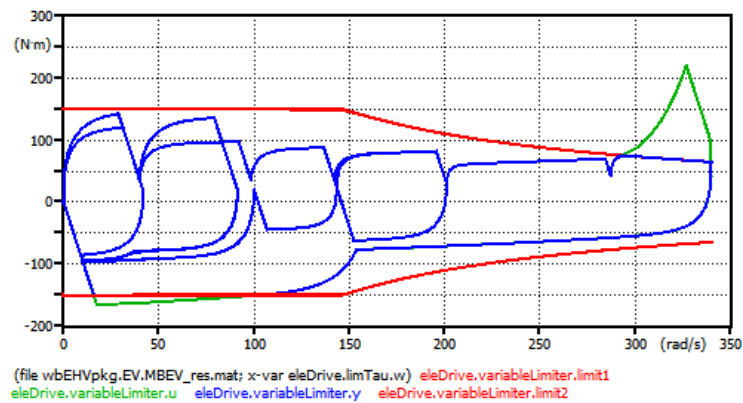


Figure 17. Actual torques (blue) shown inside the limits (red).

A typical EV study consists of the evaluation of the actual operating points (i.e. the points belonging to the green curve in the diagram above), in a diagram plan containing the map efficiency: in case they stay too often in zones having low efficiency, something must be changed in the power train design.

More on the efficiency maps in sect.8.

The dialog to introduce drive-train parameters is as in figure 18. Note that writing the efficiency map directly is not that practical. Therefore is written into a file. In the example provided the file is the provided "EVmaps.txt" and the variable name stored in that file is "effTable".

OMEdit - Component Parameters - eleDrive in wbEHVpkg.EV.MBEVdata

Parameters

General Modifiers

Component

Name: eleDrive

Class

Path: wbEHPTlib.MapBased.OneFlange

Comment: Simple map-based model of an electric drive

Parameters

powMax	22e3	W	Maximum drive power
tauMax	200	N.m	Maximum drive torque
uDcNom	100	V	nominal DC voltage
wMax	1000	rad/s	Maximum drive speed
J	data.J	kg.m2	Rotor's moment of inertia
mapsOnFile	true		= true, if tables are taken from a txt file
mapsFileName	"EVmaps.txt"		File where matrix is stored
effTableName	"effTable"		Name of the on-file maximum torque as a function of speed
effTable	[0, 0, 1; 0, 1, 1; 1, 1, 1]		

OK Cancel

Figure 18. Dialog box to set parameter of `eleDrive` component (`OneFlange` class).

Just to be more explicit, the provided `EVmaps.txt` has the following aspect:

```
#1
# efficiency - rows:speeds pu, columns:torques pu
#
double effTable (6,6)
  0.00  0.00  0.25  0.50  0.75  1.00
  0.00  0.75  0.80  0.81  0.82  0.83
  0.25  0.76  0.81  0.82  0.83  0.84
  0.50  0.77  0.82  0.83  0.84  0.85
  0.75  0.78  0.83  0.84  0.85  0.87
  1.00  0.80  0.84  0.85  0.86  0.88
```

Note that if `mapsOnFile=false`, the drive will have unit efficiency.

The efficiencies in the file are with reference to values of rotational speed, p.u. of `wMax` and torque, p.u. of `tauMax` (see dialog box in figure 18).

It is interesting to evaluate the amount of energy recovered when braking, that would otherwise be lost. To do this, the model can be slightly modified in a graphical way, or with addition of the following code:

```
Modelica.SIunits.Energy enBraking;
der(enBraking) = if pP1.power > 0 then 0 else -pP1.power;
```

This braking energy is compared with pP1 energy in the plots in figure 19:

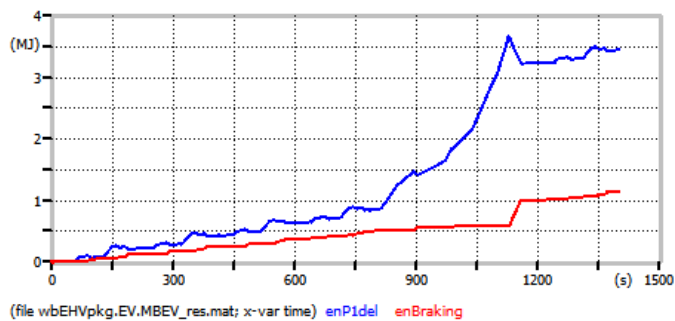


Figure 19. Braking Energy (green) compared with total energy (red) to vehicle mass.

5.2.1 Model limitations

The proposed EV model is simple and thought for teaching.

Many more additions could be made for industrial production models either in terms of completeness (e.g. some vehicles have switching gears, which is not included in our model), or accuracy: being map-based, this model is not able to depict the machine currents and other electric quantities in detail.

5.2.2 Proposed activity

Modify the wbEHPTlib.MapBased.OneFlange model in such a way that the efficiency map is loaded from file.

This can be done taking inspiration from the Driver's model, which already uses this technique.

Another useful activity is to modify MBEV in such a way that all braking energy is lost in brakes. This will be a better picture than that in figure 19 of the advantages of braking energy recovery.

5.3 Modelling batteries

Our battery model has the structure as shown in figure 20 that replicates, with additions (in red), our models icon. It is rather directly drawn from paper [1] which, published on 2000, has had a wealth of 274 citations and 4321 full text views since then⁴, and many papers have appeared in subsequent years that replicated the approach used there. Although the original paper [1] referred to lead-acid batteries, that same model has proved to be adequate also for other kind of batteries, such as lithium based [6].

⁴ As reported by Google Scholar on June 2017

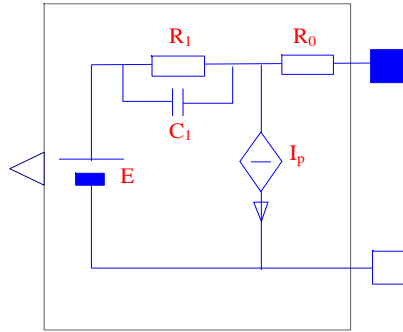


Figure 20 The icon of our battery model (wbEHVPkg.SupportModels.Batt1).

The model consists of an electromotive force E , an R-C network, a parasitic current I_p . The charge stored in the battery is the integral of current flowing through E , while the integral of I_p is charge that is lost.

In paper [1] E is a complex function of the battery state-of-charge SOC, and I_p is a function of battery voltage and temperature. However, this chapter is not a study about batteries. We can add here two simplifying hypotheses:

- we take E as proportional to the stored charge. Therefore E itself can be substituted by a capacitor, having a very, very large capacitance, and a voltage equal to the so called “open circuit voltage (OCV), i.e. the voltage that can be measured when the battery is disconnected from the outside circuit, and has stayed disconnected for a while. Therefore, that capacitor will still partially charged even when the battery is discharged.
- I_p is taken as being a fixed fraction of the absolute value of the current flowing through terminals.

The diagram of the model we propose, is then as follows:

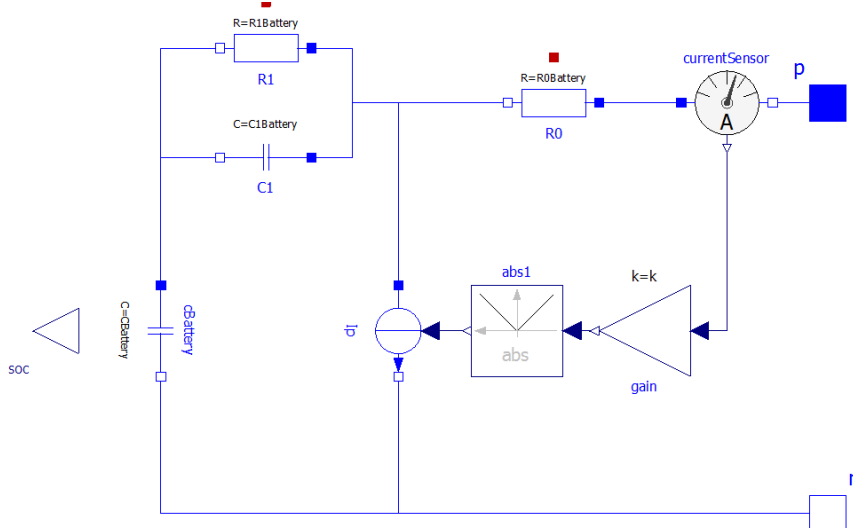


Figure. 21. The diagram of our battery model (wbEHVPkg.SupportModels.Batt1).

Both internal capacitance $c_{Battery}$ and parasitic current I_p are automatically computed at initialization stage by the model itself, based on the user's data.

In this model, in fact, it is used the golden rule to ask the users, whenever possible, data in the form they are used to, and compute internally the data that are to be used during simulations. Below the tabs on the parameter window are shown.

OMEdit - Component Parameters - batt1 in wbEVPkg.EV.MBEV

Parameters

General | Cell data | Battery pack data | Modifiers

Component

Name: batt1

Class

Path: wbEVPkg.SupportModels.Batt1

Comment: Battery model based on one R-C block in its electric circuit

Initialization

Ubat.start ☒ V

SOC parameters

SOCMin Minimum state of charge

SOCMax Maximum state of charge

SOCInit Initial state of charge

Parameters related to losses

efficiency Overall charging/discharging energy efficiency

iCellEfficiency A Charging/discharging current the efficiency refers to

OK Cancel

OMEdit - Component Parameters - batt1 in wbEVPkg.EV.MBEV

Parameters

General Cell data Battery pack data Modifiers

Parameters

QCellNom	100 * 3600	C	Nominal electric charge
ECellMin	3.3	V	Minimum open source voltage
ECellMax	4.15	V	Maximum open source voltage
ICellMax	10 * QCellNom / 3600.0	A	Maximum admissible current

Electric circuit parameters

R0Cell	0.05 * ECellMax / ICellMax	Ohm	Serial resistance "R0"
R1Cell	R0Cell	Ohm	Serial resistance "R1"
C1Cell	60 / R1Cell	F	Capacitance in parallel with R1

OK Cancel

OMEdit - Component Parameters - batt1 in wbEVPkg.EV.MBEV

Parameters

General Cell data **Battery pack data** Modifiers

Size of the package

ns 100 Number of serial connected cells per string

np 1 Number of parallel connected strings

OK Cancel

Battery pack data assume that the pack is made by parallel connection of np strings, each of which made up by a serial connection of ns cells.

The battery model gives as output the StateOfCharge SOC, defied by:

$$SOC = \frac{Q_s}{C} = 1 - \frac{Q_e}{C} \quad (4)$$

where Q_s is the “stored charge”, while Q_e the “extracted charge” (starting from full battery). The definition involving Q_e is more useful because the condition of battery full is more clearly defined than battery empty [1, 6]. However SOC is internally used in the model, the user may think of eq. (4) considering:

$$Q_s = \int_{t_{empty}}^t I_E dt \quad Q_e = \int_{t_{full}}^t -I_E dt$$

and t_{empty} and t_{full} are time at which the battery is fully empty or full, I_E is the battery current entering its positive terminal.

The reader is however invited to have a look at the code to gain experience in reading Modelica code.

In one of the two the provided battery models, in addition to what shown here, a very small capacitance, named “cDummy”, has been added across the battery terminals. Being very small, this does not influence the results, but facilitates convergence in special circumstances.

We already discussed the concept of map-based models. Our map-based model of an electric drive fed by a DC source is shown in figure 22 (wbEHPTlib.MapBased.Partial.PartialOneFlange).

Figure 24. Diagram of control logic for ASMA constant voltage/frequency control (model `wbEHPTlib.ElectricDrives.ASMARelated.ControlLogic`)

This diagram follows quite closely the one illustrated in figure 23. In particular:

- block tauToDW receives the torque requested and converts it into slip speed $\Omega_0 - \Omega$. Note that if the torque request is beyond the maximum allowed by the machine, the output slip speed is equal to $\Omega_0 - \hat{\Omega}$, where $\hat{\Omega}$ is the speed value corresponding to the maximum torque.
- we have two saturations: limWm that blocks any further frequency rise, when we have reached the maximum operational speed: this is the control logic parameter named wmMax, and limU, which limits the maximum voltage to the Ubase value set in the control logic parameters. Note that uBase is reached when wBase frequency is reached.
- As usual, letter “w” or “W” indicate angular speed or angular frequency. To avoid confusion, here “we” indicates angular frequency (“e” stands for electric”) while “wm” indicates angular speed (“e” stands for mechanical).
- the current reference inputted to add1 block is a non-linear function of $\Delta\Omega$ implemented using the very formula of eq. 12.14 of [4].

6.1.1 Starting Asynchronous machines

In wbEHPTlib as a simple example to evaluate how control Logic works, the starting of the MSL asma machine, with default parameters is obtained with a full start from constant-voltage.-constant-frequency mains source, or using an electric drive using the constant voltage/frequency logic. The model diagram is shown in figure 25.

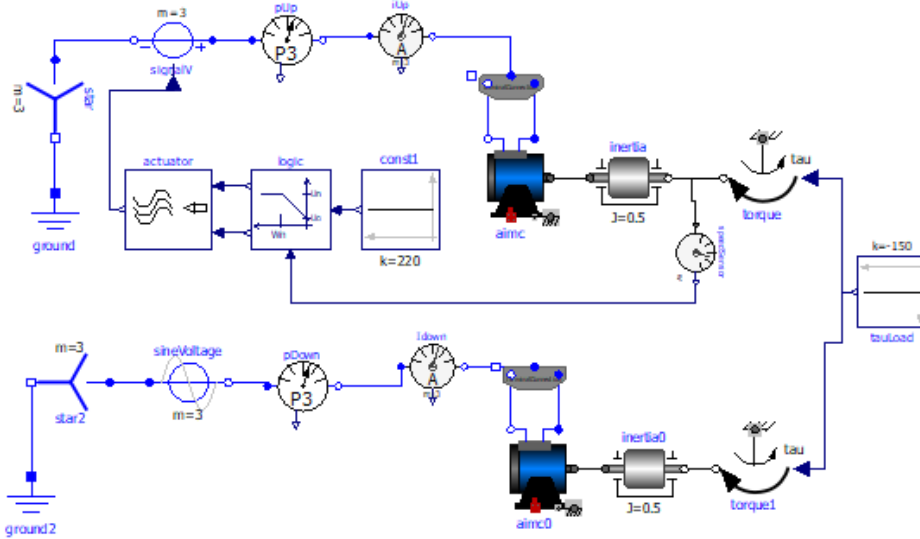


Fig. 25. Starting an ASMA machine from mains and a constant voltage/frequency logic.
(wbEHPTlib.ElectricDrives.StartASMA)

In the upper part the machine is started with our drive, while in the lower part using the plain constant voltage network starting.
In figure 26 some results are shown.

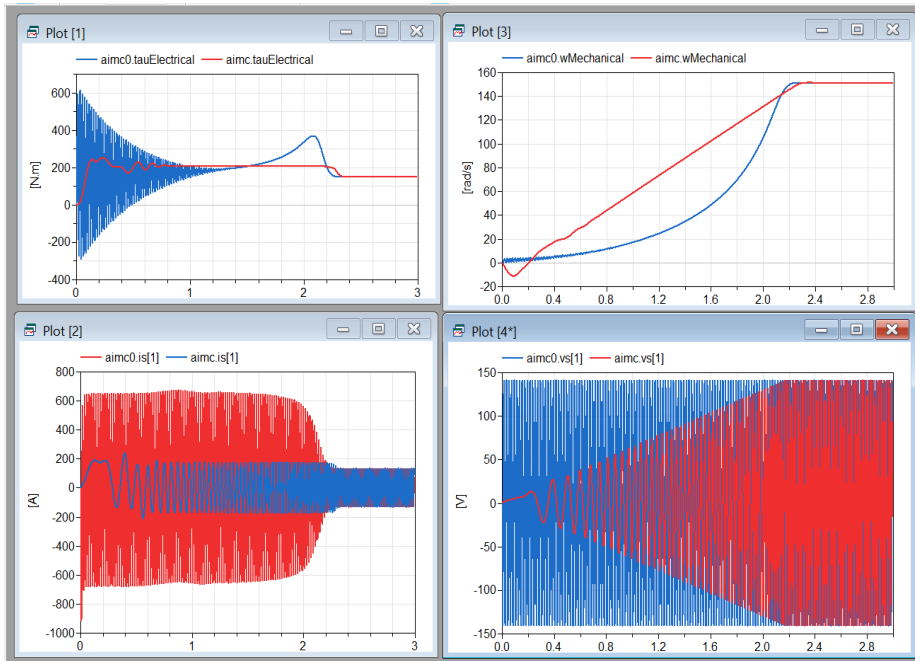


Fig. 26. Some curves obtained simulating the diagram shown in figure 25.

The top-left picture shows torques. The blue curve represents the torque when starting from mains. We see huge oscillations due to the fact that initially the three currents are not a balance set of three-phase currents; the drive torque is quite near to be constant. More constant could be obtained with field oriented control, which however is out of the scope of this tutorial and library. Top-right we see the angular speed: with the used parameters both simulations reach final regime in the same time.

Bottom-left we see the current. It is seen that the starting from mains requires much higher currents than the other case, which also means that the machine cannot stay at low speed for long times: it would heat and eventually burn; moreover it operates at very low efficiency. The drive, instead requires much lower currents and is such that the drive could stay at any speed between zero and the maximum one, without thermal issues. Finally, the bottom-right plots compare the phase voltages in the two cases.

6.1.2 Torque following

Obviously, electric drives are not used for just starting machines, but also to control their operation. In `wbEHVPkg` an example is proposed for using the drive to follow a torque request.

In this model (`wbEHVPkg.ElectricDrives.tqFollowing`) the drive is requested to follow a torque signal.

The proposed model is as in figure :


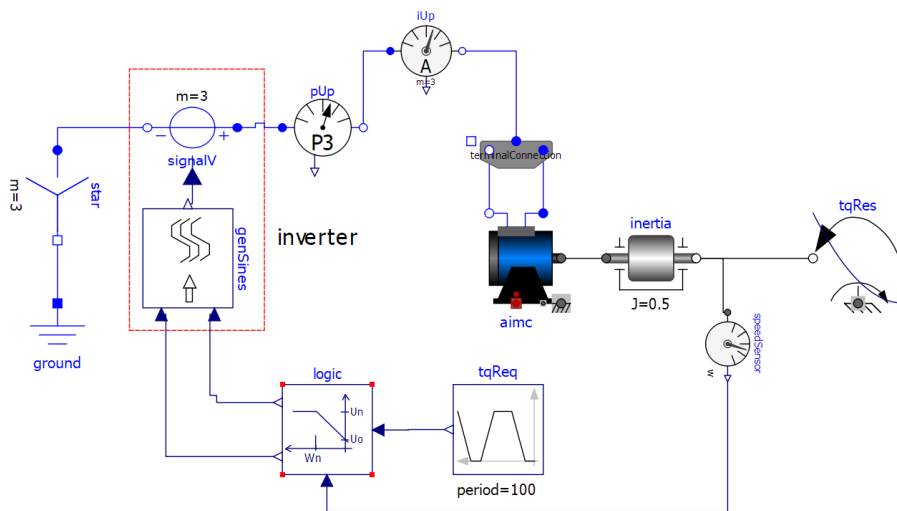


Figure 27. Diagram used to show torque-following logic.
(wbEHPVPkg.electricDrives.twFollowing))


Some significant plots follow:

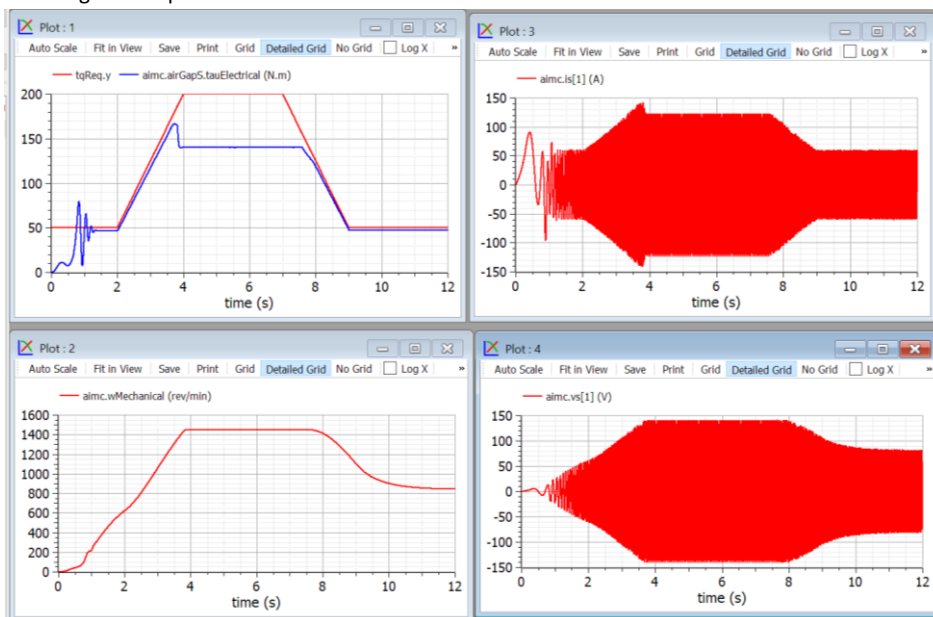

Note that the machine cannot follow torque in the central region, because max voltage and max speed are reached, as can be seen looking at variables `logic.toWeakening.y` and `logic.toMaxSpeed.y`. voltage limitation is reached, and no torque weakening logic is included here.

The torque is followed much better if we double in the control logic `uBase` and `weBase` and `wmMax` bringing them to 200 V rms 2x314.16 rad/s and 314 rad/s respectively.

the corresponding plots are as follows:

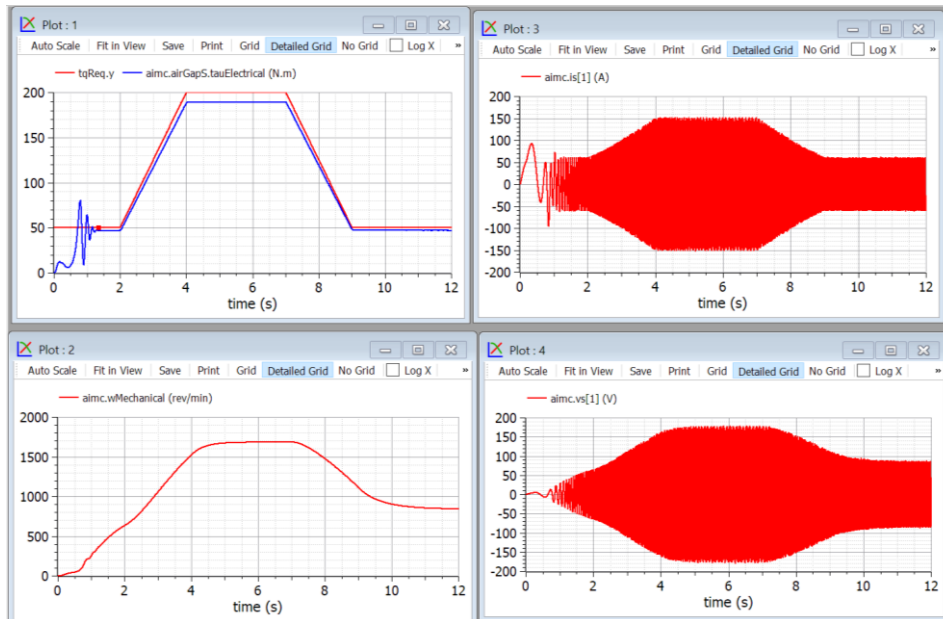


variables `logic.toWeakening.y` and `logic.toMaxSpeed.y`.voltage remain false.

Note that torque is not exactly followed because we used an open-loop control. Closed loop control of torque is rare. Very often when need to control speed, so loop is closed on speed. as per the following example. In vehicles also we have closed loop speed control, where we consider the controller to be the driver.

6.1.3 Speed following

Now we simulate a closed-loop speed control. The model is as follows:

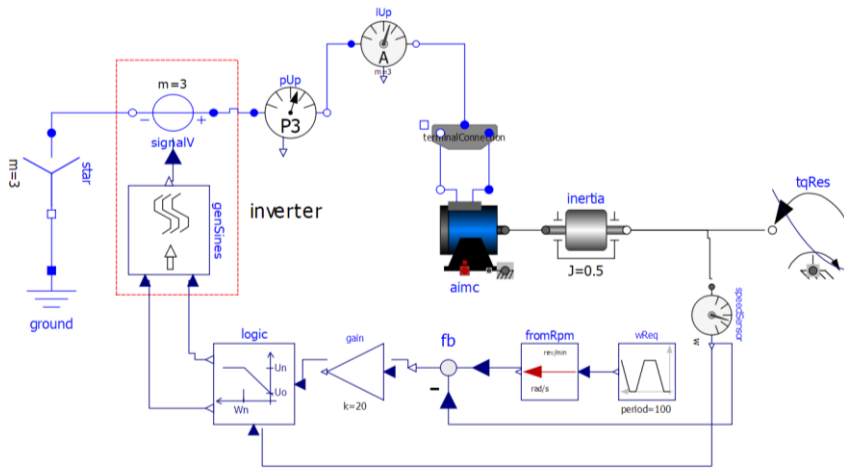

Here we see that mechanical torque follows the requested signal; since we used a simple proportional controller, some error is still present. This can be reduced significantly by enlarging (but not too much to avoid instability or lack of convergence) the control gain or adding an integral part to control (in this case the steady-state error reaches zero).

6.2 Synchronous machine drive

Today many electric drives are implemented using permanent-magnet synchronous machines.

To have a mildly detailed idea of how they work, here control blocks able control torque of both isotropic and anisotropic machines are proposed. They can operate to keep under control the machine's terminal voltage (producing negative direct-axis currents I_q), and terminal current, reducing the delivered torque if delivering the requested one would imply overcoming the given machine current limits.

The following blocks are provided:

- ToPark and FromPark: they convert phase quantities into Park's and vice-versa
- MTPAi, determines the currents I_d and I_q to implement the Maximum Torque Per Ampere control, adequate for isotropic machines. In this case below base speed I_d is always zero
- MTPAa, determines the currents I_d and I_q to implement the Maximum Torque Per Ampere control, adequate for anisotropic machines. In this case below base speed I_d for anisotropic machines is different from zero. MTPAi behaviour is obviously attainable using MTPAa, imposing equal values for I_d and I_q . Two different blocks are provided, since for simplified analysis and teaching MTPAi is easier to understand
- MTPAal, a modified version of MTPAa, that is able also to limit stator current so that to avoid the machine to be overloaded.

6.2.1 Simulation of `wbEHPTlib.ElectricDrives.TestingModels.SmaDriveFW`

In this simulation the permanent-magnet synchronous machine of the MSL (with the default parameters) is controlled using the MTPA controller.

The model diagram is shown in figure:

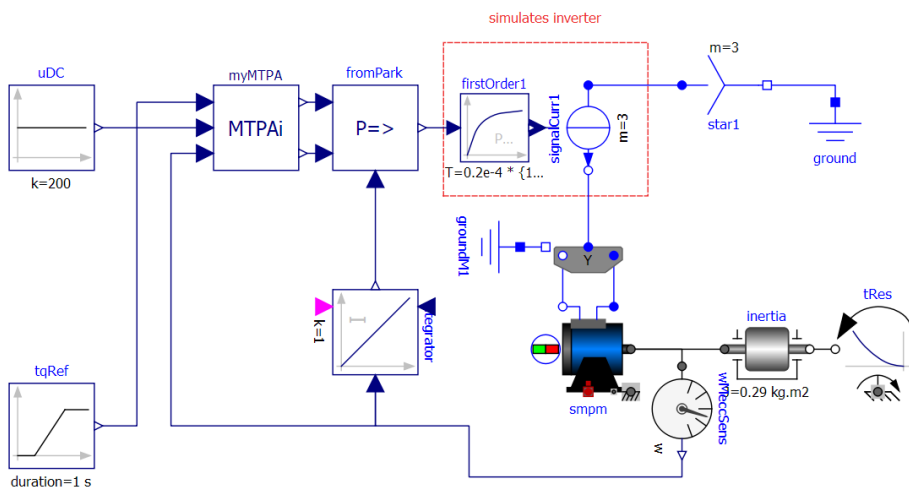


Fig. 28: Starting a Permanent-magnet synchronous machine using park components of stator current.

At in real life, the controller must be calibrated on the controlled machine. This is also done in this model, as shown in the following dialog window:

OMEdit - Component Parameters - myMTPA in wbEHPTlib.ElectricDrives.TestingModel... ? X

Parameters

General Modifiers

Component

Name: myMTPA

Class

Path: wbEHPTlib.ElectricDrives.SMArelated.MTPAi
Comment: MTPA logic for an isotropic machine

Parameters


Ipm	<input type="text" value="smpm.permanentMagnet.Ie"/>	A
pp	<input type="text" value="smpm.p"/>	Pole pairs
Rs	<input type="text" value="smpm.Rs"/>	Ohm Stator resistance
Ld	<input type="text" value="smpm.Lmd"/>	H Direct-axis inductance
Umax	<input type="text" value="100"/>	V Max rms voltage per phase to the motor

Initialization

gammaStar.start	<input type="checkbox"/>	<input type="text" value="0"/>	deg
IparkFF.start	<input type="checkbox"/>	<input type="text" value="0"/>	A Ipark amplitude FullFlux (i.e. before flux weakening evaluation)
Ipark.start	<input type="checkbox"/>	<input type="text" value="70"/>	A Ipark amplitude ($=\sqrt{Id^2 + Iq^2}$)

OK Cancel

Some interesting results are shown in the following figure:

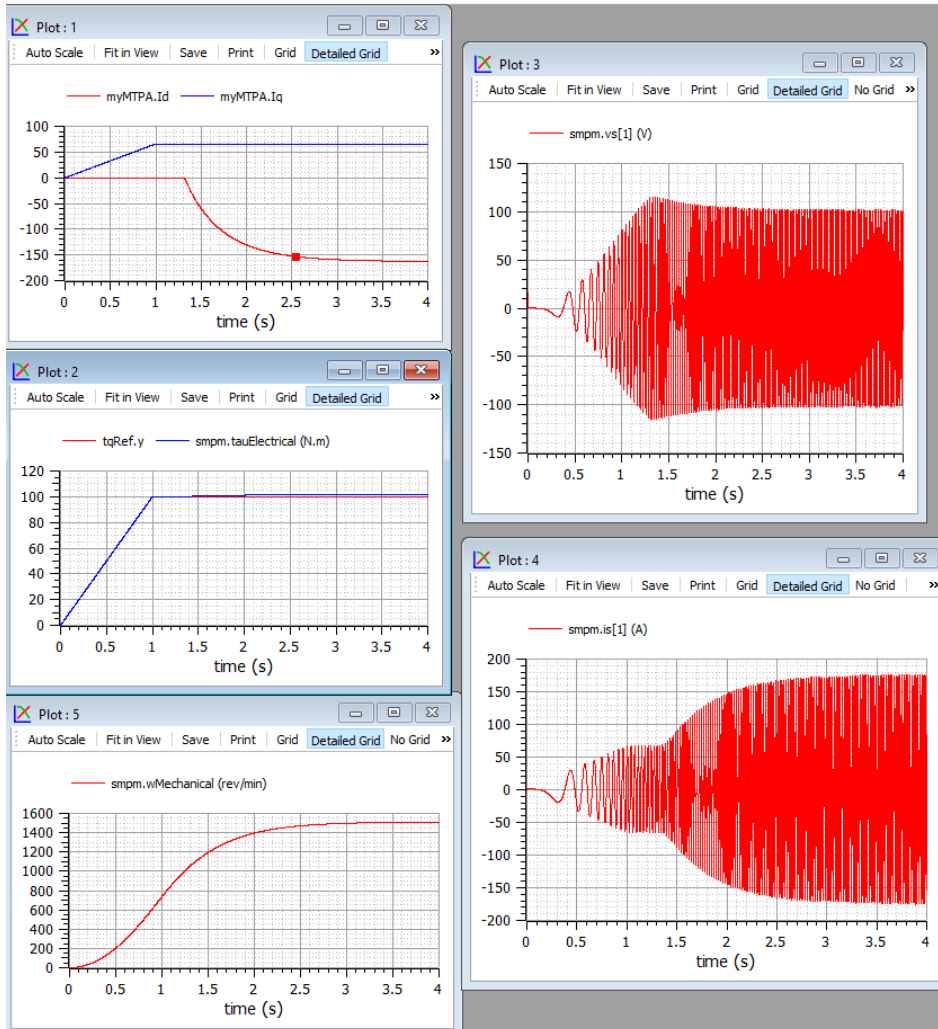


The U_{dc} input to myMTPA is the actual DC voltage. Internally the block limits the maximum line-to-line peak voltage to the UDC; which is what required by state-of-the art Space-Vector PWM control. From the output it can be checked that the machine voltage is limited to 15.5 V (peak, which corresponds to 200V line-to-line (peak).

6.2.2 Simulation SmaDriveLim

In this simulation the drive is subject to a torque request that would imply the machine current to overcome the maximum allowed. The controller MTPAal is used that is able to control also that the current does not overcome the maximum allowed. In this simulation this controller controls the MSL PMSM machine, that is isotropic. When satisfying torque request and voltage control cannot be attained while keeping current below the maximum allowable value, i_q is reduced to reduce torque.

Intervention of torque limitation to limit current is indicated by the status of the output of block “limiting” inside MTPAa1.

In the following figure the plots at the left-hand side are drawn setting the limiting current to 200 A rms. Here current limitation does not intervene. In the right plots, instead the current limitation is set to 100A rms, and intervenes effectively: it keeps current under control, at the expenses of some torque reduction.

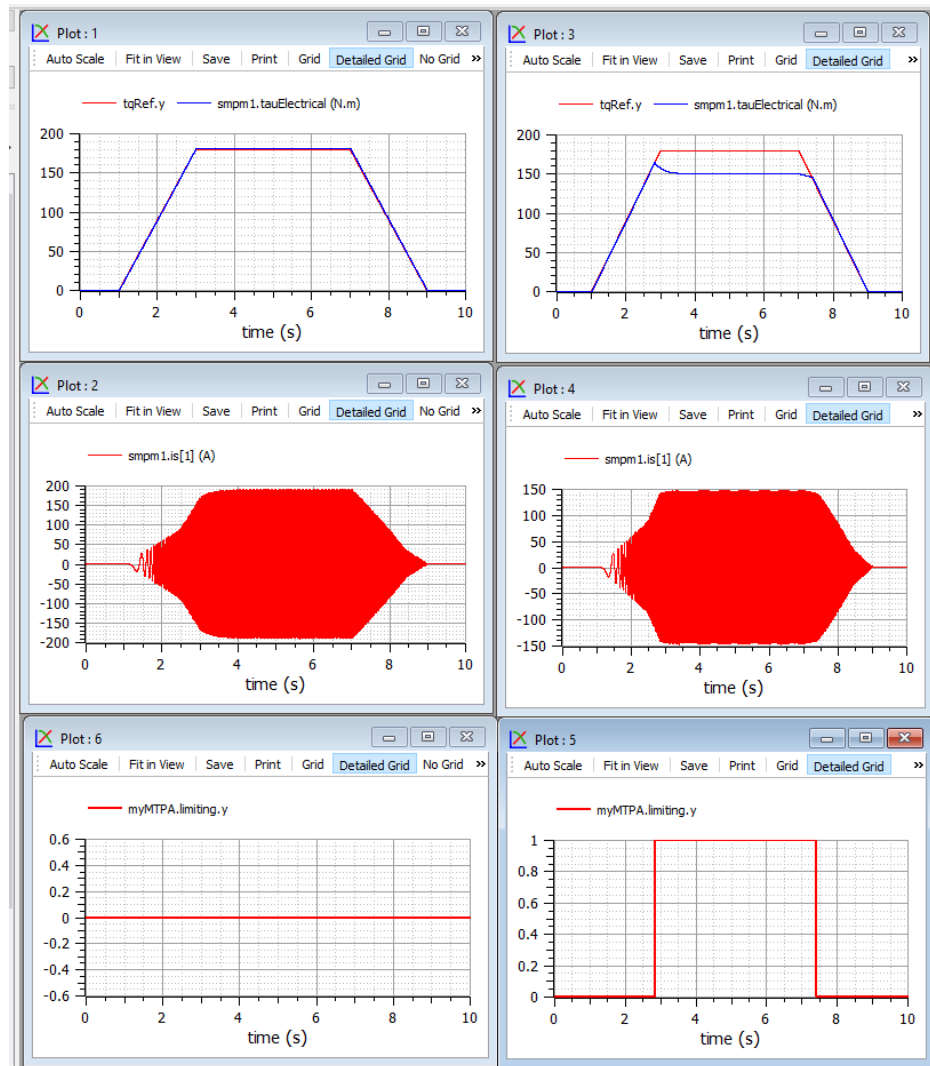

7 Map-based HEV models

7.1 HEV's resume

The reader is supposed to have some basic knowledge of what hybrid vehicles are and how they are structured. Therefore here we give just a brief resume.

According to ISO/TR 8713, a hybrid vehicle is a vehicle which has both a Rechargeable Energy Storage System (RESS) and a fueled power source for propulsion.

This corresponds to the following graphical representation:

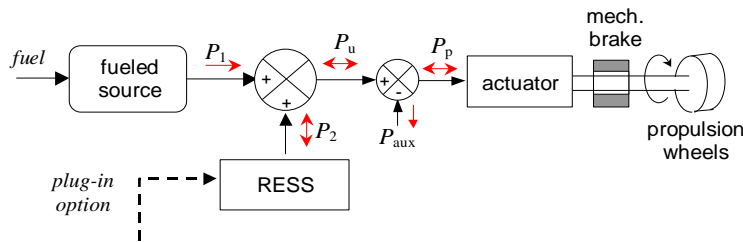


Figure 29. A general representation of a hybrid power train.

In which the red arrows indicate possible power directions. In the figure we use the following symbols:

P_1 : fuelled source power (positive)

P_2 : RESS power (positive when contributing to propulsion, negative when absorbing power into RESS)

P_u : useful power

P_{aux} : power “delivered” absorbed by auxiliaries. In reality auxiliaries absorb power, so P_{aux} is always a negative number as indicated by the red arrow. It is the sum of any load other than propulsion, e.g. lamps, GPS, radio, etc.

P_p : propulsion power: positive when in traction, negative when regen-braking.

The plug-in option is often provided to recharge RESS from the mains. This will not be considered in the remainder of this chapter.

We might say that the scheme in figure 29 is *cyber-physical*: the part left of the actuator is represented in terms of the block diagrams usually used to analyse control systems, and good at describing general fluxes, the part right of the actuator is more physical (it represents physical objects).

The scheme in figure 29 is rather general and accommodates several architectures. For instance, the fueled source could be an internal combustion engine (the most common case), a gas turbine, a fuel-cell generation system, etc. In this chapter we will only consider as fueled sources internal combustion engines.

Even while sticking to internal combustion engines, there are many ways in which this abstract representation can be implemented. Often they are classified as follows:

- Parallel Hybrid Vehicles (PHEV). Here there is a mechanical path from the ICE to wheels. Power contribution from RESS is added or subtracted to this main mechanical path
- Series Hybrid Vehicles (SHEV) Here the mechanical power produced by the ICE is first converted into electricity; then additional power from RESS is algebraically summed to this power, to generate the full propulsion power.
- Complex Hybrid Vehicles (CHEV): solutions which cannot be classified in the previous two architectures, e.g. in cases in which there is a parallel and a series power path.

In this chapter we present models of all these architectures. In the third group we choose a Power-Split-Device based architecture, which is the scheme used by the best-selling hybrid vehicle ever⁵.

Note that since every HEV has two possible sources of electricity, there is an additional degree of freedom in comparison to conventional vehicles: at each time we can decide which part of the needed propulsion power is to be delivered by the fueled source, and which from the RESS.

Deciding this share is a complex operation since a lot of issues must be solved, related to the fact that the RESS can get discharged (and so cannot deliver power anymore), fully charged (cannot absorb power anymore), the load to be coped with, the useful power, is a function of time, the choices we make at a given time t influence what will happen in the future, and so on. This complex task is performed by a control system usually called EMS (Energy Management System), which takes as input the drivers commands and operates the power train in such a way to satisfy the propulsion and auxiliary power requests, while trying to maximise an performance index, typically the average efficiency (thus minimising the fuel consumption).

7.2 SHEV basic model

The SHEV model proposed here has the following diagram:

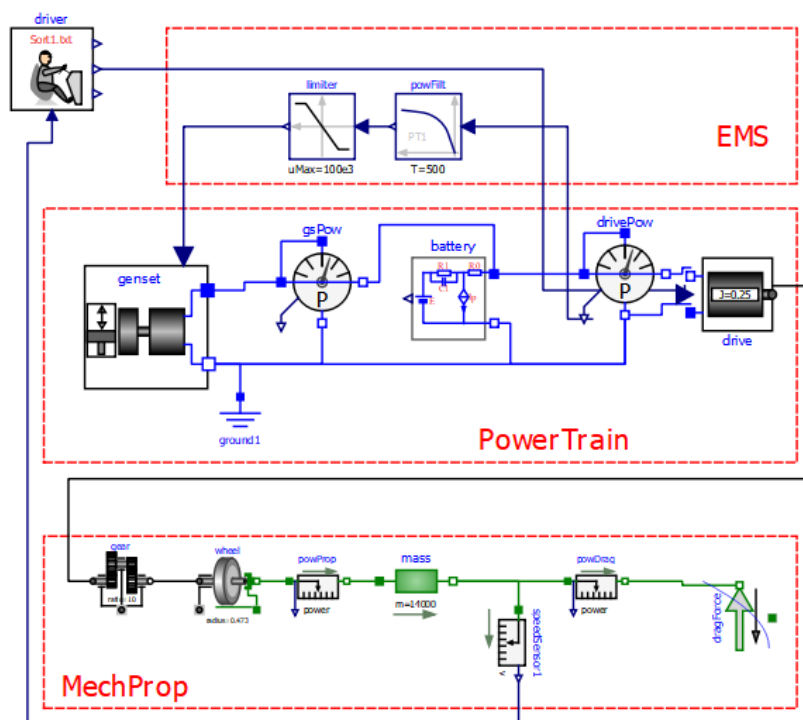


Figure 30 Diagram of the `wbEHVPkg.SHEV.SHEVpowerFilt` model.

⁵ The Toyota Prius that, according to [11], has sold between 1997-2013, over 3 million cars worldwide.

This model requires, to run, some data to be specified on a txt file. To reproduce the results shown here the reader can use the provided "SHEVmaps.txt". How to link a txt file with a model is explained in section 2.3.

The lower part is the physical mechanical propulsion part used in the previous EV models.

In the central part of the picture the Power Train is detailed.

It contains a `genset`, which generates electricity, the battery `batt`, constituting the RESS in figure 29, a map-based electric drive `drive` of the same type used in [section 4](#).

The upper part contains the EMS (whose need was discussed at the end of section 7.1), here having a very simple structure: it requires the `genset` to deliver the average propulsion power: in this way battery operates as a "power filter": its delivers fast components of the propulsion power, leaving the average to the `genset` (i.e. the fueled source). Naturally, EMS must take into account the torque requests from the driver, which in turn tries to follow a given driving cycle, as seen when discussing pure (non-hybrid) electric vehicles.

Series Hybrids are most suited for urban trips, in which they allow important downsizing of the Internal combustion engine. Therefore here we test that hybrid using, as mass and resistance to movement data, numbers adequate for a bus: mass is 14 tonnes, cross sectional area 6 m^2 , C_x 0.65.

The following figure 31 shows some results, obtained when simulating a few repetitions of a Sort1 cycle that, as already noted, was conceived for buses. These results can be replicated simply by running `wbEHVPkg.SHEV.SHEVpowerfilt` using the default data.

Commentato [M1]: 3

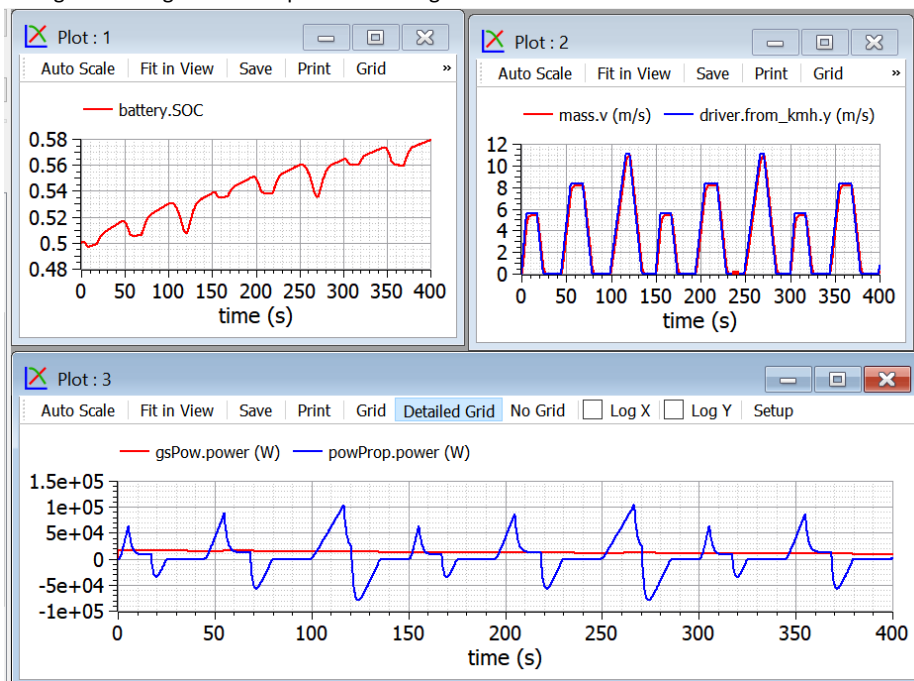


Figure 31. Plots of some Sort1 repetitions using the system in figure 30.

Note that the peak power required by this cycle is around 120 kW; using this hybridisation, the power required from the ICE is around only 7 kW.

The reader can reproduce these results selecting in the `driver` the Sort1 cycle as parameter.

However, buses, from time to time, are requested to cover also extra-urban routes, e.g. when going into the deposit at the end of the day or when they are to be transferred from a town to another.

Therefore it might be of use to evaluate also the performance of our hybrid bus also under the NEDC cycle.

This is easily done just changing the cycle (in the driver's parameter) and the simulation duration. Some results, which can obviously be reproduced by the reader (he has just to change the cycle from sort1.txt into NEDC.txt and the simulation duration), are as follows:


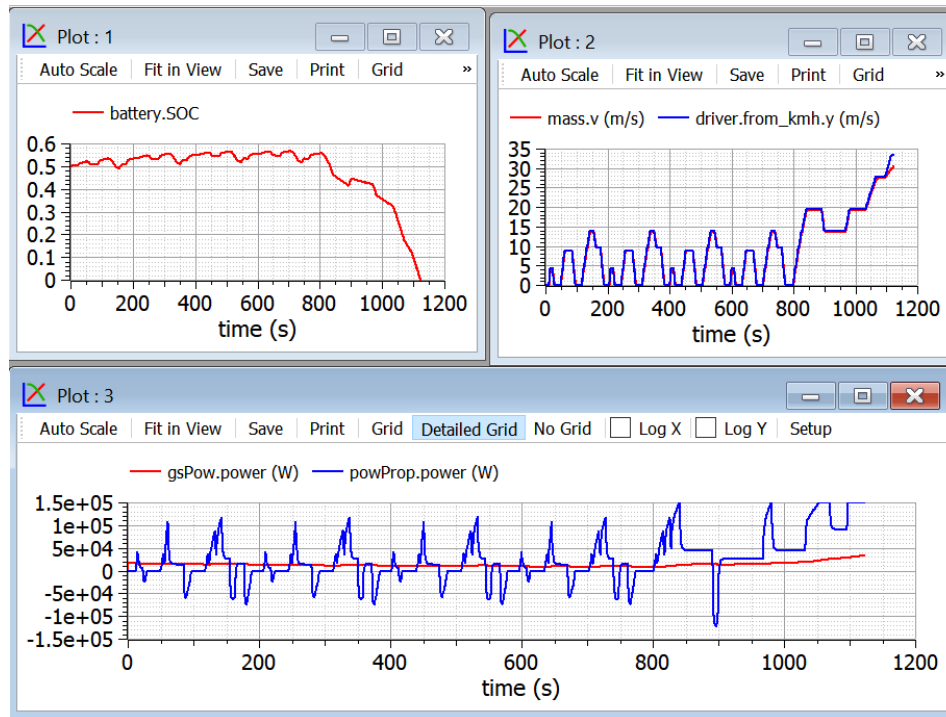


Figure 32. Plots of NEDC cycle using the system in figure 30.

In this case, simulation stops due to the battery becoming totally discharged. If simulation of figure 32 is repeated using a 50 Ah battery instead of one having 25 Ah (and having $I_{max}=1000$ A), the following results are obtained:

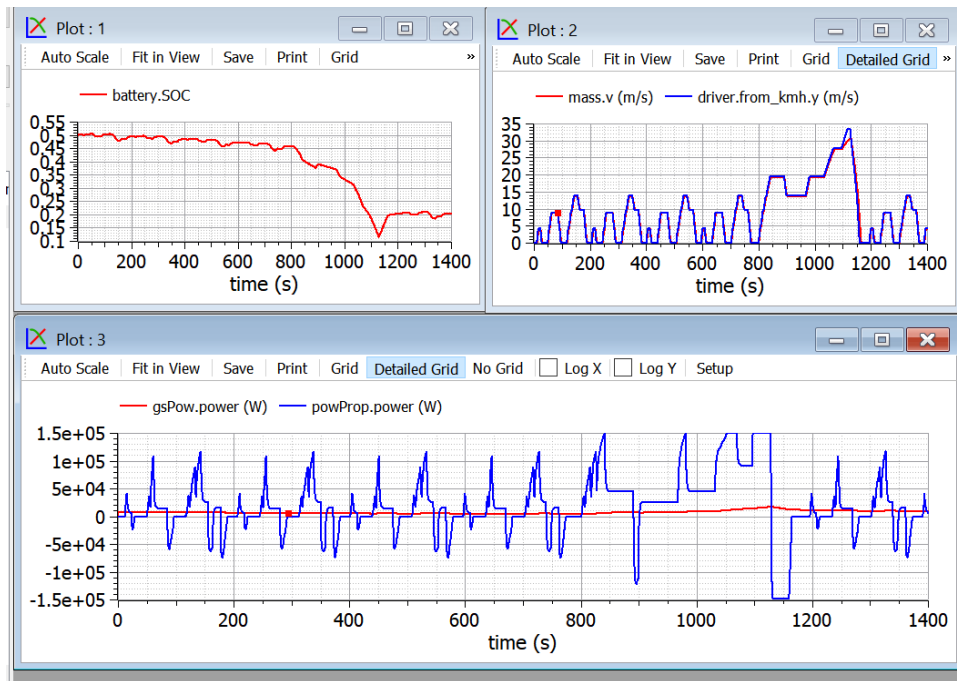

Powers, especially when the vehicle is in the extra-urban part, are much higher. At the highest speeds the power train hits its max power limit (150 kW)⁶, and actual speed is lower than the expected one.

Notwithstanding a much larger battery that what adequate for Sort1, this simulation reveals a weakness of our model: the SOC drops significantly. This is because we ask the ICE to deliver the average power train power, as computed by a simple power filter. I.e., we have no correction factors for SOC departure from its reference value. The situation is improved in the next section, where it is shown that even NEDC can be overcome with the 25 Ah battery, with a better control.

7.3 SHEV with SOC closed-loop control

The problem of SOC control, shown in the previous section, can be addressed by adding in the EMS a correction term to the ICE requested power, according to the diagram of figure 33.

⁶ In the SHEV simulations the parameter `mapsOnFile` of drive has been set to false, and therefore drive has unit efficiency.

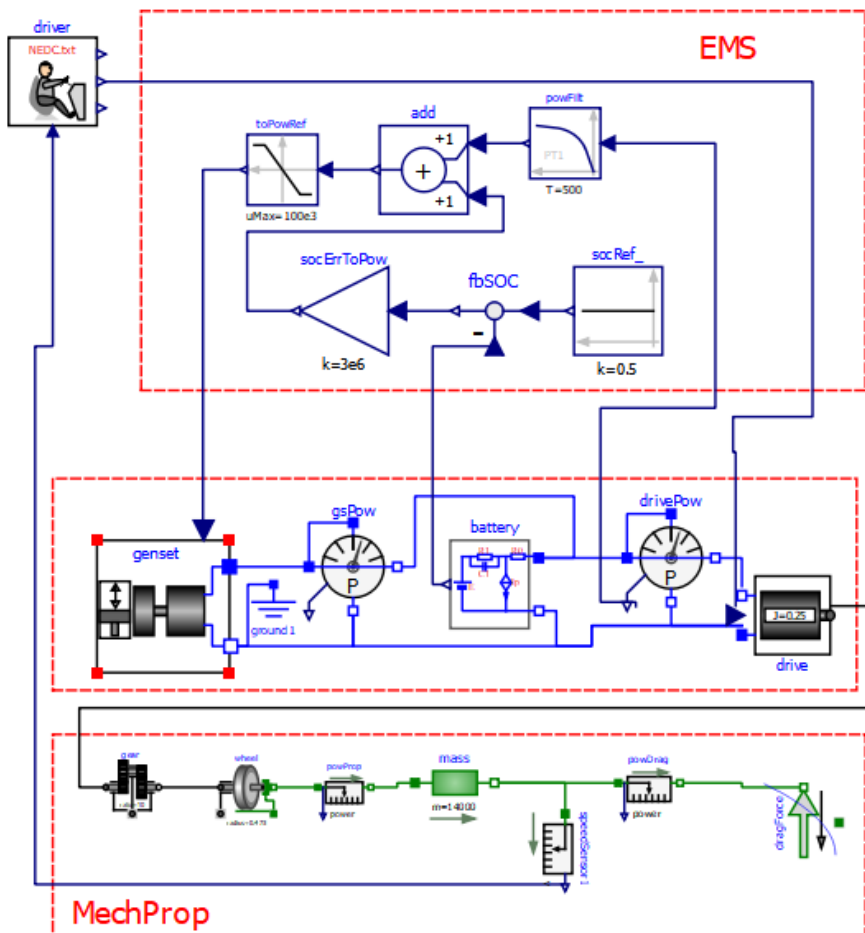


Figure 33: Diagram of the wbEHVPkg.SHEV.SHEVpowerFiltSoc model (Series Hybrid Electric Vehicles, with SOC control).

This model requires, to run, some data to be specified on a txt file. To reproduce the results shown here the reader can use the provided "SHEVmaps.txt". How to link a txt file with a model is explained in section 2.3.

Some plots that can be obtained running the model whose diagram is in figure 33, and the battery is again set to 25 Ah, $I_{max}=500$ Ah, are as follows:

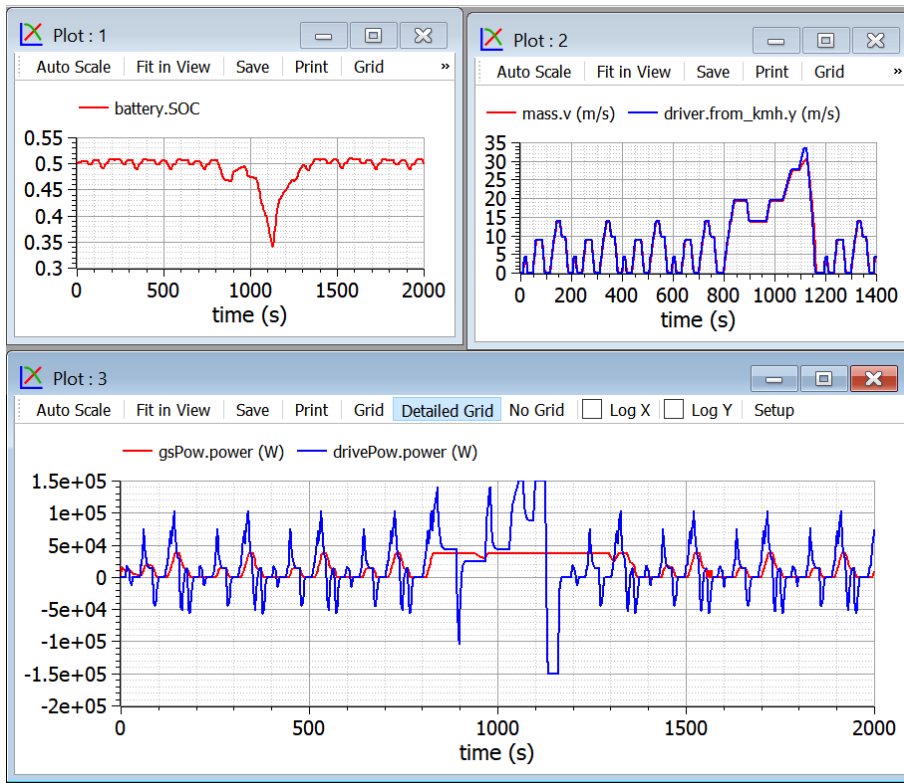


Figure 34. Plots of NEDC cycle using the system in figure 33.

Here, the SOC drops much less than the previous case, and continues to slowly recover, beyond $t=1200$ s, and go near to the reference set. The SOC set-point is `socRef`, the speed with which SOC is corrected to stay near the set point is the value of constant in `socErrToPow`. Note that the genset power stays largely constant between 80 s and 1300, because the max generator torque is reached (set to 500 Nm).

This simulation shows that, using proper SOC control, the 25 Ah battery is correct for this vehicle subject also to the cycle NEDC, much heavier than Sort1.

7.3.1 Proposed activity

In case the bus has a plug-in architecture, it may be useful to discharge more the battery near the end of daily service, to take advantage of the cheaper mains recharge. This can be obtained by a driver command "prepare for night", which changes the SOC set-point. Similarly, if the bus is allowed to go in a special city centre in EV mode (ICE shut-off), maybe the driver wants the battery to prepare for this run with a command "prepare for ZEV".

The reader is prompted to modify the model giving this further level of control to the driver. Indeed in modern vehicles, in addition to accelerator and brake pedals, it is often possible for drivers to choose also the *mode* in which he want to drive (sports, economy, etc.) this additional command we are suggesting falls within the family of additional driver commands.

7.4 SHEV with On/Off control

In the model shown in the previous section, it has been noted that the ICE power is below 10 kW. The ICE size, however, is usually much larger than this, for instance to allow sustained driving at a “motorway” speed (e.g. 80 km/h) for instance during transfers to deposit or to another town (remember that our vehicle is a bus). With this requisite the ICE power should be at least 60 kW, as can be checked using equation (1) and possibly a constant-speed simulation with a high `socErrToPow` constant.

To allow some margin for acceleration, thus, a reasonable ICE sizing is a bit larger than 60 kW, say around 80-90 kW. With this size, however, during urban trips the ICE operates at a power that is less than one tenth of that size, which implies high specific fuel consumption. To enhance efficiency, an ON/OFF strategy can be envisaged: the ICE is switched OFF when the average power is too low, and for some time the vehicle operates taking all the propulsion energy from the battery. When the battery is partly discharged, the ICE is switched ON again, and works at a larger power since it has both to supply propulsion and recharge the battery.

Just to have an idea on how an ON/OFF strategy could look like and work, we can simulate the provided `SHEVpowerFiltOO`, which has the aspect shown in figure 35.

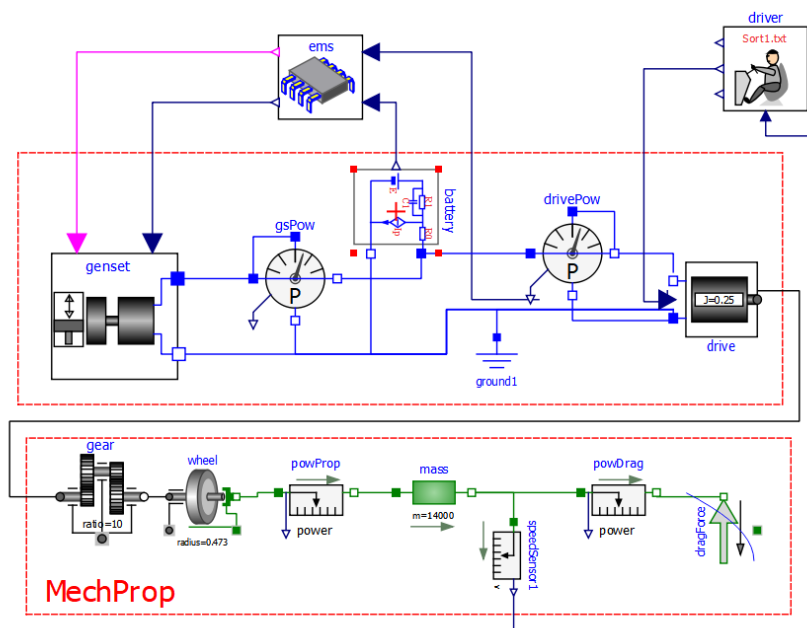


Figure 35: Model of the proposed Series Hybrid Electric Vehicles, with SOC control and ON/OFF.

This model requires, to run, some data to be specified on a txt file. To reproduce the results shown here the reader can use the provided “SHEVmaps.txt”. How to link a txt file with a model is explained in section 2.3.

The plots in figure 36 show some results with the Sort1 cycle repeated many times, using for the driver the extrapolation “Periodic”.

Red curves refer to the ON/OFF operation, while blue-ones are from the SHEVPowerFiltSoc model, and are reported here for comparison.

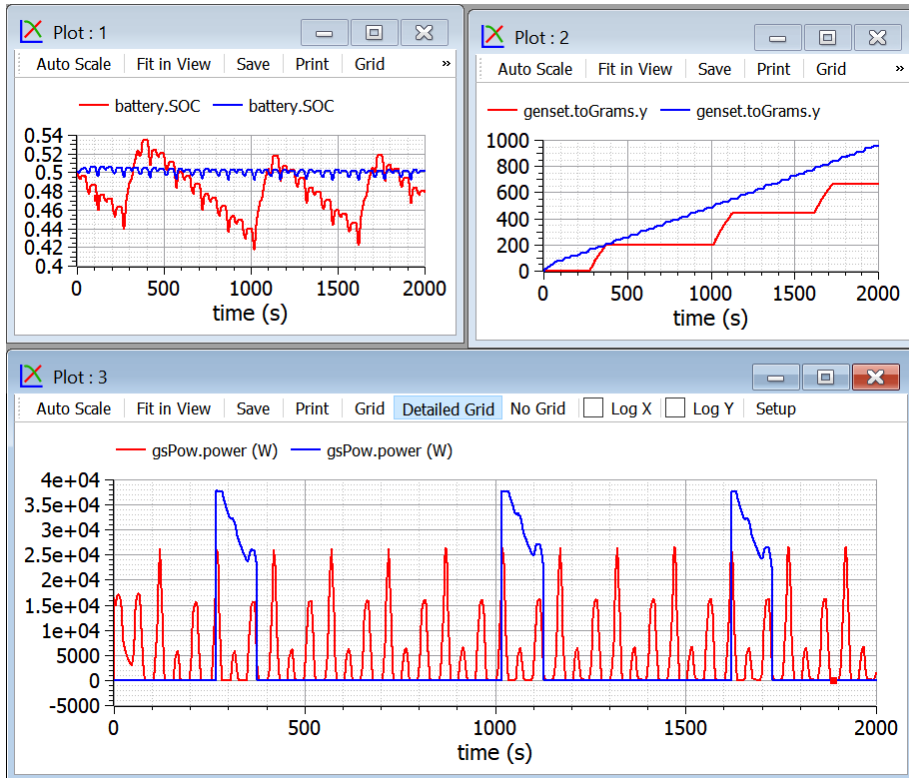


Figure 36. Comparison of SHEV behaviour with different control strategies (SHEVpowerFiltSOC and SHEVpowerFiltSocOO, Sort1)

The plots show that the fuel consumption with ON/OFF is much lower than the other, even though at the end of the simulation the vehicle with ON/OFF is slightly more discharged than the other.

7.4.1 Proposed activity

In the previous section it has been seen that the proposed ON/OFF control reduces fuel consumption.

However the consumption depend on the switch-on and switch off thresholds chosen, and on the used cycle. In particular, the advantages are much more with Sort1 Cycle, which has a very low average power than with NEDC.

The reader is therefore prompted to change the cycle and the thresholds, to see their effect on consumption. Remember that comparisons are to be made at equal initial and final SOC.

7.5 PSD-HEV model

While a SHEV can be considered a variation of a battery EV, with the addition of the fuelled source, a PHEV can be considered a variation of a conventional Vehicle, with the addition of an

electric machine. In both cases, the smaller the addition, the nearer the vehicle to the original one (battery EV and conventional ICE based, respectively).

To create a simulation model of a PHEV therefore, we should start from a simulation of a conventional vehicle, with gears switching. This is not done in the current version of this model however, to reduce its complexity and length.

Instead, as an example of a general purpose hybrid vehicle, we will discuss a complex hybrid architecture, often called Series-parallel architecture, which is based on a planetary gears, called Power Split Device (PSD).

This architecture is installed on-board very successful commercial hybrid vehicles (see note 5).

The implementation of this architecture we consider is shown in fig. 37. T 's are torques, Ω 's are angular speeds, P 's are powers.

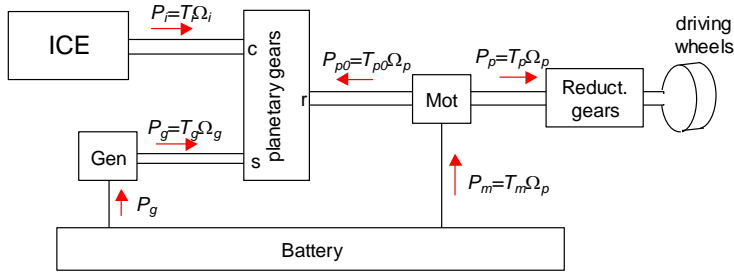


Figure 37. The considered PSD-based power train architecture.

The core of the power train is the planetary gears, which has an inner structure of the kind shown in figure 38.

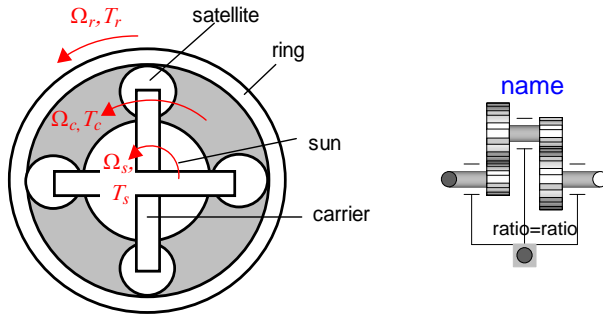


Figure 38 PSD (idealized) construction and corresponding MSL model (idealPlanetary).

It is nice to know that a planetary gear of this kind is already present in MSL. Its icon is shown in fig. 38 as well, in its right part.

A simple analysis of kinematic and static relations of this device shows that two static and one kinematic equation exist. They can be expressed in different, equivalent forms. If we indicate with ρ the ratio between ring and sun radius and with $\sigma=1/\rho$, we can equivalently write, as kinematic equations:

$$\Omega_r = (1 + \sigma)\Omega_c - \sigma\Omega_s \quad \Omega_s = (1 + \rho)\Omega_c - \rho\Omega_r \quad \Omega_c = \frac{1}{1 + \sigma}\Omega_r + \frac{1}{1 + \rho}\Omega_s$$

And as static equations:

$$\begin{cases} T_r = \rho T_s \\ T_c = -(1 + \rho) T_s \end{cases} \quad \begin{cases} T_s = \sigma T_r \\ T_c = -(1 + \sigma) T_r \end{cases} \quad \begin{cases} T_r = -\frac{1}{1 + \sigma} T_c \\ T_s = -\frac{\sigma}{1 + \sigma} T_c \end{cases}$$

Because of these relations, once one angular speed is known the PSD geometry determines the ratio between the other two; once a torque is known, the geometry of PSD determines the other two.

The above formulas are written according to the sign conventions used in MSL: torques are the torques acting from the outside towards the PSD, and when they have the same sign as the corresponding angular speed, positive mechanical power is transferred from the outside towards the PSD.

In the architecture shown in figure 37 the internal combustion engine is flanged to the PSD carrier, the electric drive called *generator* “Gen” to the sun, the output shaft, to which the electric drive called *motor*, “Mot” is connected, to PSD’s ring.

The architecture shown in figure 37 allows to choose the power to make flow in the battery, independently of the vehicle operation point. If this power is zero, we use a mode which we call “electric balance” mode, or CVT mode, since in this case we use the whole architecture as an intelligent Continuously-Variable Transmission (CVT). Otherwise, we can use some strategy to control the battery SOC, in a way similar to what done above with SHEV’s.

“Gen” and “Mot” are reversible electric drives, since both can operate in motor and generator mode. However during vehicle traction and with all PSD speeds positive, Gen actually operates as a generator and Mot as a motor; the opposite occurs when, being the speeds still positive, the vehicle is regenerative braking and PSD output power is reversed.

In a way totally similar to SHEV basic model previously discussed now we show a logic in our PSD power train which tries to make the ICE deliver the average power needed for propulsion.

The principle diagram in figure 37 in our Modelica code becomes the diagram shown in figure 39.

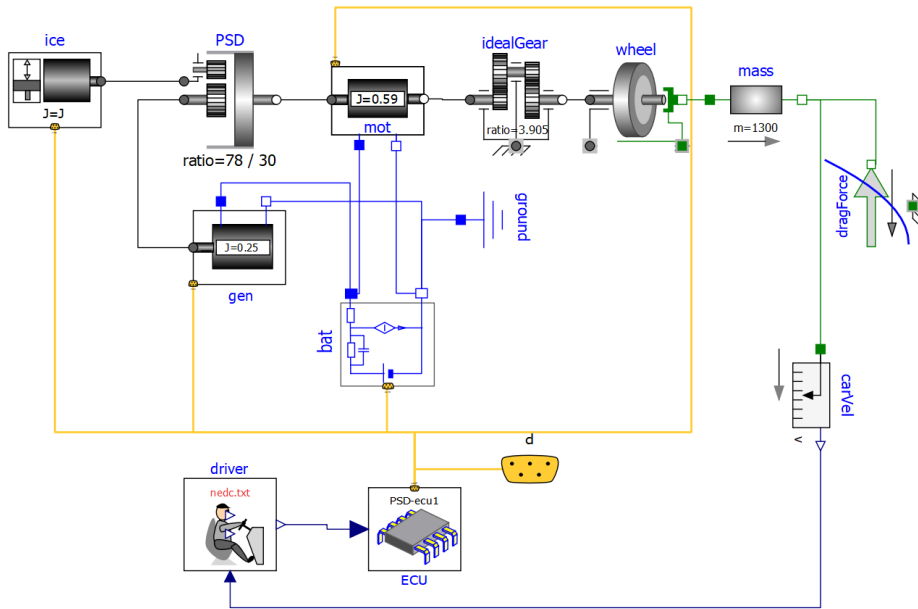


Figure 39. Modelica Diagram of the proposed PSD-based hybrid drive model (wbEHVPkg.PSD.PSecu1).

This model requires, to run, some data to be specified on a txt file. To reproduce the results shown here the reader can use the provided "PSDmaps.txt". How to link a txt file with a model is explained in section 2.3.

The reader should easily distinguish the elements in figure 37, with the addition of the control part, constituted by driver and Electronic control unit (ECU).

To reduce the wiring complexity, the various submodels' signals are connected to each other by means of a bus (yellow).

To do this one has to:

- 1) decide with signals must flow in the bus and decide unique names since the various signals are distinguished by their name
- 2) create a specialised version of the various components, which are able to exchange their signals though expandable connectors, using the unique naming standard. The reader can easily see that the components in the above diagram are directly derived from the ones used above, with some modifications to allow connection though expandable connectors
- 3) create an Electronic Control Unit which manages the signals and implements the vehicle control logic.

The signals that will pass through our signal bus are listed in the following table:

<i>Name</i>	<i>sender</i>	<i>users</i>	<i>comment</i>
batPowDel	bat	<i>disp</i>	Electric power delivered by the battery
batSOC	bat	controller	Battery state-of-charge
genTauLim	gen	ice	maximum generator torque at its actual speed
genTauRef	ECU	gen	
genPowDel	gen	<i>disp</i>	generator power delivered through its mechanical flange
genW	gen	controller	generator angular velocity
icePowDel	ice	<i>disp</i>	ICE power delivered through its mechanical flange
icePowRef	ECU	ice	ICE reference power
iceW	ice	<i>disp</i>	ICE angular velocity
iceON	ECU2	<i>disp</i>	ICE ON/OFF state (*)
motPowDelB	mot	contr	Mot power delivered through its flange B
motPowDelAB	mot	<i>disp</i>	Sum of Mot powers delivered through flanges A and B)
motTauRef	ECU	mot	
motW	mot	<i>disp</i>	Mot angular velocity

(*) used only by ECU2, in simulations with ON/OFF

Several names are composed by two or three parts. The first part indicates the component to which the variable refers, (for instance "ice") the central one which kind of variable it is (for instance "tau" means torque), finally the(optional) third part indicates info about de variable for instance "del" means delivered, i.e. for a power a positive value indicates that the power is delivered to the outside by the component the variable belongs to; "ref" indicates a reference value (a variable that is used as a reference by some controller) "Lim" a limit, or maximum, value.

Jut to have an idea of the changes needed to make specialised, connector of components in the following figures we see first the component `OneFlange`, then its specific-connector-based version made with signal names related to PSD power trains, `PsdGenConn`.

Figure 40. OneFlange model of an electric drive Input signal is reference tau tauRef (wbEHPTlib.OneFlange).

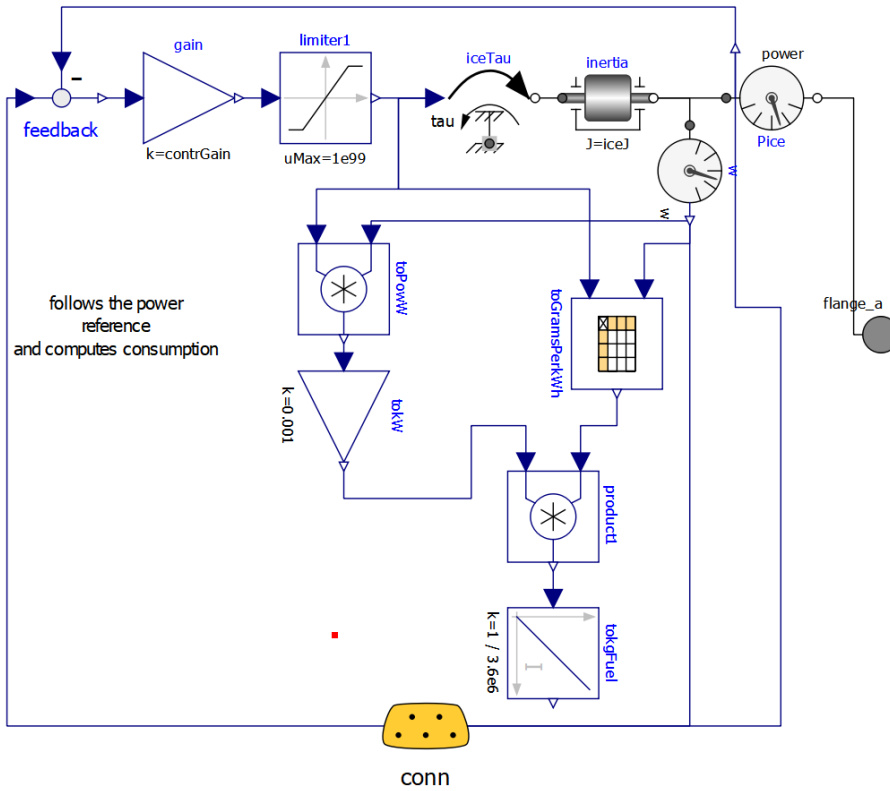


Figure 42. ICE model diagram (wbEHPTlib.MapBased.IceConnP)

The ICE dynamics is modelled by `inertia`; its fuel consumption by a map, read from a txt file (e.g. in the provided `PSDMaps.txt`). This model has a simple inner control logic, which tries to follow the input signal, sent through the expandable connector `conn`, containing a torque request.

Here, by simplicity, the maximum torque is limited by a constant value. More realistically, it should be limited using a variable limit, whose value is function of the rotational speed.

7.5.2 Proposed activity

The reader can enhance the supplied `IceConnP` model, making the maximum torque function of rotational speed. He can follow, as an example, the implementation of this kind of torque limitation used in the provided model `wbEHPTLim.MapBases.ECUs.GMS`.

7.6 PSD-HEV with power filter

Here we control the vehicle in such a way that the ICE delivers the average power needed for propulsion, and delivers it at its optimal speed, i.e. at the speed corresponding, for the given power, at the minimum fuel consumption. This logic implemented in the EMS, which has the scheme shown in figure 43.

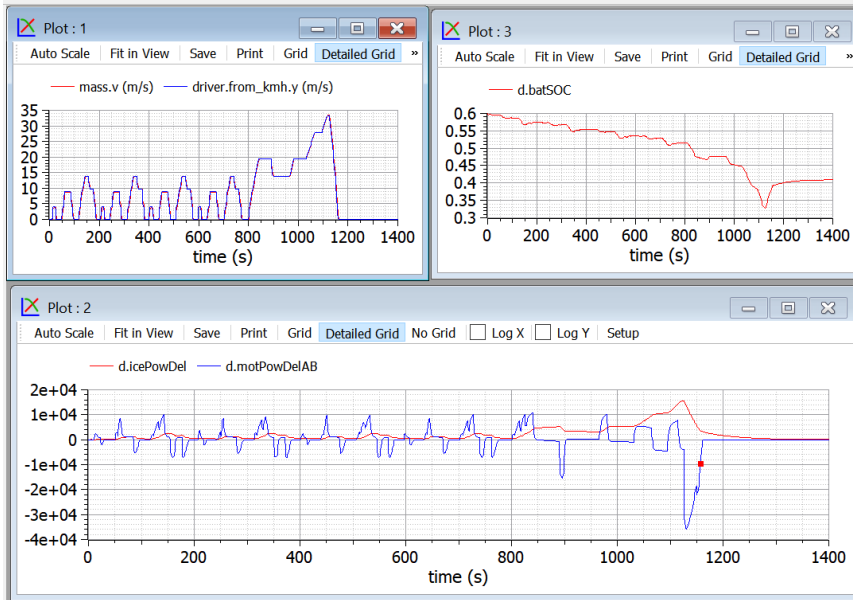


Figure 44 Some plots obtained when simulating the model in figure 39, controlled with the ECU shown in figure 43 (ECU1) subject to NEDC cycle.

The plots show that the vehicle closely follows the requested NEDC cycle, with the ICE delivering ($icePowDel$) a smoothed version of the power needed for propulsion ($icePowDelAB$).

However, this is an open-loop control of the power that, in this case, causes a non-negligible shift in the battery SOC $d.batSOC$. In fact this cycle has a larger power request in its last part, the suburban section of the cycle, which is felt with delay by the averaging block, and never corrected.

Therefore it appears necessary to enhance the control logic, so that SOC is kept under better control.

7.7 PSD-HEV with power-filter and SOC-loop control

To enhance the previous simulation, the EMS is modified as follows and called ECU2. Note that no other component has changed.

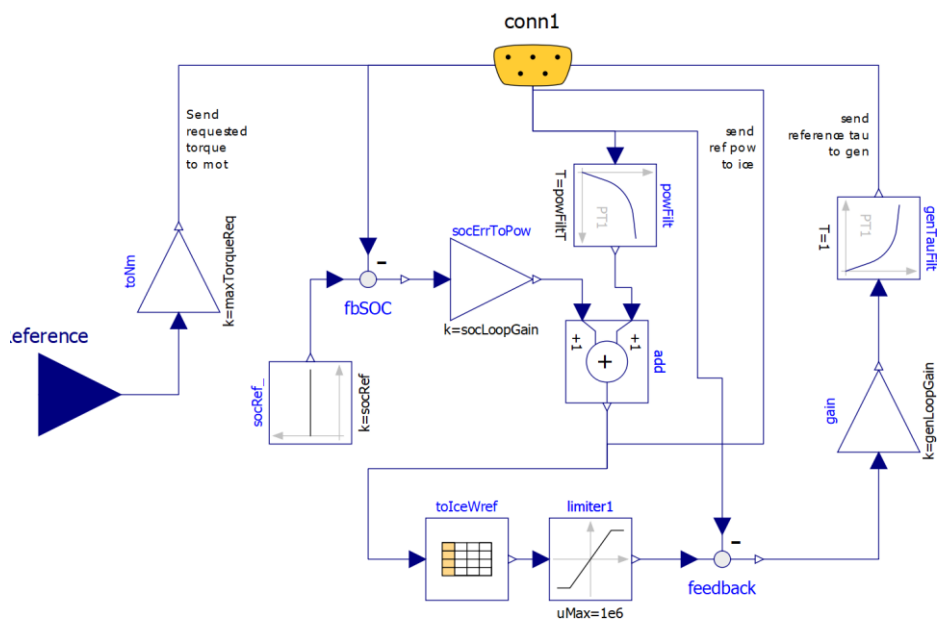


Figure 45. Modelica diagram of the proposed wbEHPTlib.ECUs.Ecu2 model.

A comparison with the diagram in figure 43 shows the difference: now the requested power is determined by the block `add`, which has two contributions: in addition to the previous one, consisting in the averaged propulsion power, we have a signal proportional to the SOC error.

The corresponding results are shown in figure 46.

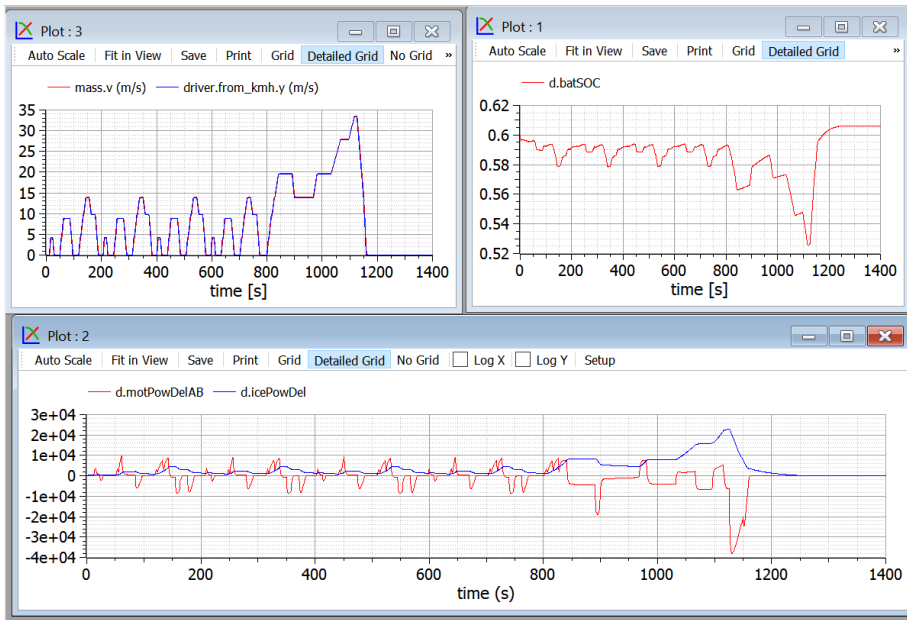


Figure 46. Some plots obtained when simulating the model in figure 39, controlled with the ECU shown in figure 45 (wbEHVPkg.PSD.PSecu2), subject to NEDC cycle.

We see that now SOC is kept under much better control.

The control we implemented here is closely determined by the action of the two terms of the `add` block in `Ecu2`. We can enlarge or reduce the ice power and battery SOC fluctuations. With large values of the parameter `powFiltT` (the time constant in the block `powFilt`) and small values of parameter `socLoopGain` (the gain of the `socToErrPow` block) we will have a rather constant ICE speed, and large power and energy fluctuations in the battery, which needs to be sized accordingly. On the opposite side, smaller time constants of the power filter and large gains in the `socToErrPow` block will help keep the battery at a nearly constant level. In this case the battery can be smaller.

In extreme cases, we could design a vehicle with a very small battery, in which the propulsion power is nearly totally given by the `ice`, while during transients `gen` and `mot` supplied powers that are nearly one the opposite of the other (`gen` generates the power `mot` uses) to allow the PSD operating point to be changed, and the PSD architecture operates more like a Continuously Variable transmission than a true hybrid. This extreme choice, however, is not advisable since it would not leave room for regenerative braking.

To see these things in practice, the reader is advised not to tamper with `ecu2` model directly, but, instead using its parameter dialog box, which has the following appearance:

OMEdit - Component Parameters - ECU in wbEVPkg.PSD.PSecu2

Parameters

General Modifiers

Component

Name: ECU

Class

Path: wbEHPTlib.MapBased.ECUs.Ecu2

Comment: Power Split hybrid power train controller, with SOC control, without ON/OFF

Parameters

genTorqueMax	80	...	N.m	maximum absolute value of gen torque
socRef	0.6	...		Target value of SOC
socLoopGain	1e5	...	W	soc loop gain
maxTorqueReq	80	...	N.m	Torque request (Nm) that corresponds to 1 from driver
genLoopGain	1.0	...	N.m/(rad/s)	Control gain between ICE speed error and gen torque
powFiltT	60	...	s	Power filter time constant (s)

OK Cancel

Acting on it, we change the value of the instance of `ecu2` we use. The reader is prompted to do this while doing the following *proposed activity*.

7.7.1 Proposed activity

The proposed model is for teaching purpose and not for production. Therefore is not very robust. However, starting from the working version, the reader is invited to play with `socLoopGain` and `powFiltT` in `ECU2`, to try to obtain the behaviour described in the comment just above here. In particular it is given the task to size the control so that a small battery (just around 500 Wh, e.g. 100 cells of the type used in our models but having 5 Ah nominal capacity) is sufficient to cover NEDC, with SOC staying between 0.2 and 0.8.

To avoid to enter into operating zones which create numerical difficulties, it is suggested to make small variations at each simulation and to save models which better the previous ones, before making additional attempts.

As an example we can show what happens with a small battery: 2Ah-100 cells, which means for a nominal voltage of 1.2 V 240Wh: a very small battery. Using this battery, `powFiltT`= 10s, `socLoopGain`= 20 kW and `SOCinit`=`SOCref`=0.6: we get the following curves:

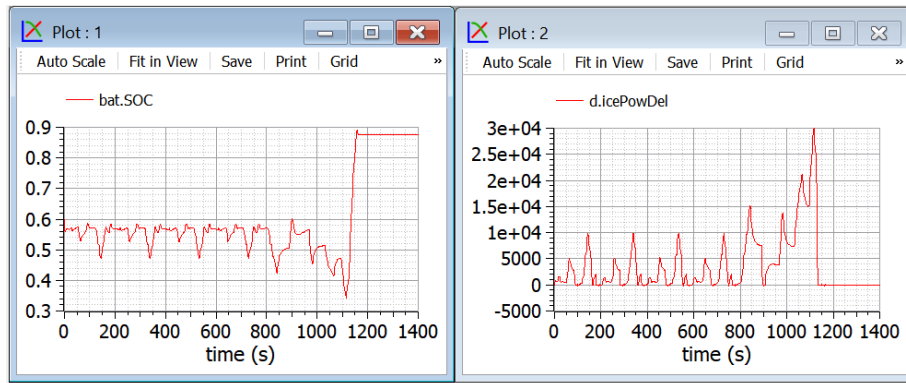


Figure 47. Some plots related to a small-battery proposed activity for PSD-hybrid.

In this case we privilege a small battery at the expenses of large ICE power variations.

Note that in the final part of our plots, when we have a strong braking action, the battery gets filled over the reference value of 0.6.

In case of even stronger braking, e.g. when running downhill, this small battery gets filled and part of the energy must be dispersed into heat using mechanical brakes.

Since mechanical braking is not present in the proposed models, if we try to further reduce the battery, during last braking the battery reaches SOC=1, and simulations stop since the power train can not brake anymore in absence of dissipative brakes.

7.8 PSD-HEV with power-filter SOC control and ON/OFF

Consider the results shown in the previous section 7.7. From them, we see that on one hand, with the used battery size, battery SOC under NEDC varies a little; on the other during the urban part of it, the average power, which becomes the ICE power, is rather small, and therefore implies low ICE efficiency.

Because of this it is in this case advisable to envisage an ON/OFF strategy which automatically shuts-off the engine to avoid it to be too light loaded, in a way that is very similar to those seen for SHEV's.

To attain this control, a further modification of the EMS is made, giving rise to the Ecu3, whose diagram is shown in the following figure:

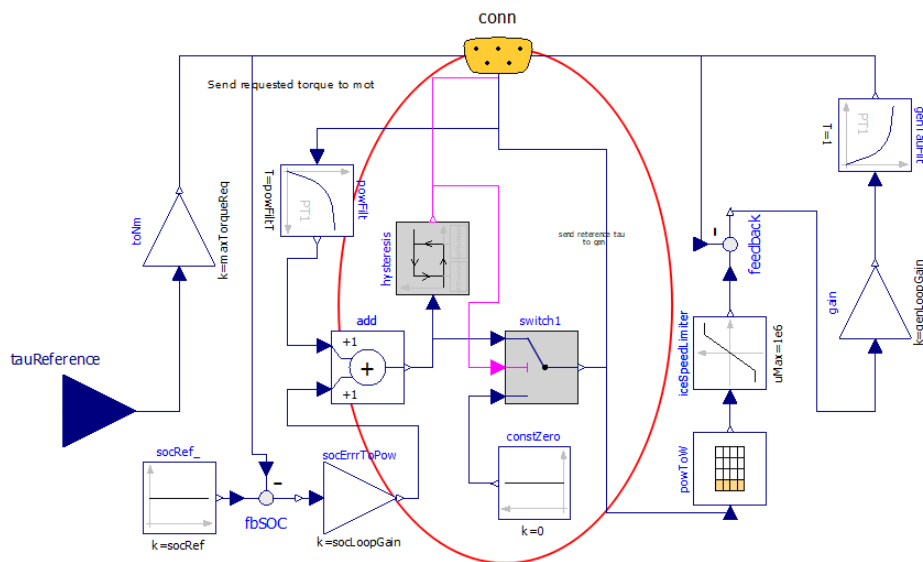


Figure 48 Modelica Diagram of wbEHPTlib.MapBased.ECUS.Ecu3.

Now the diagram has become rather complex, but the addition to the previous case is small, and highlighted with a circle.

ON/OFF is made through a hysteresis block, which switches the engine OFF when the power becomes lower than the lower threshold `offThreshold` and switches ON when the requested ICE power becomes larger than the higher threshold `onThreshold`.

Some of the results that can be obtained are summarised in the following picture. They can be replicated using the provided model, with the provided parameters

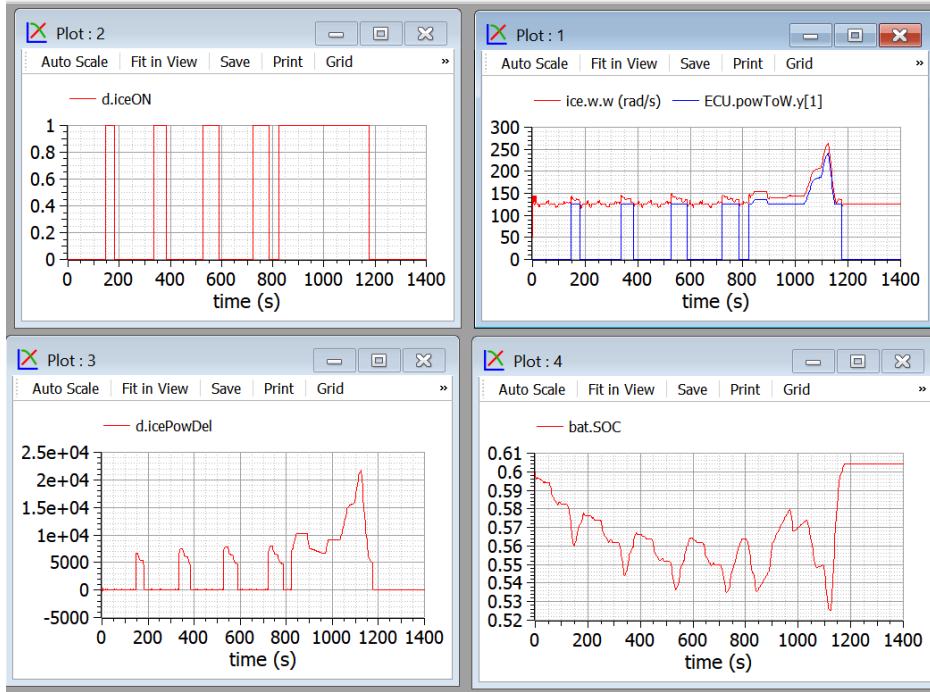


Figure 49. Plots from wbEHVPkg.PSD.PSecu3 model.

It is easy to see that the ON/OFF strategy allows higher ICE powers when in ON state, and the SOC control is still guaranteed. The top-right picture shows that when ON the ICE operates near its optimal speed.

Ice is able to give information about the consumption in this case, compared with case in sect. 7.7.

This comparison must be made having the care of choosing control variables which allow to have in one case the battery more discharged than in the other, otherwise to comparison would be unreliable. So, to obtain the following pictures (fig. 50), some slight modifications on the control signals are made to obtain this SOC equivalence (ecu.SOCref , for the case with ON/OFF, changed to 0.65).

The results obtained playing with the supplied models are interesting, and showing below: the two simulations start at the same SOC, and reach the same SOC again for $t = 1250$. At this time the fuel consumed with ON/OFF is 0.356 kg, in comparison to 0.449 kg without it, implying a consumption reduction by over 20 %

It is reasonable to expect that using different thresholds the results can be even better. Naturally, for production usage, before deciding the ON/OFF thresholds several different cycles must be considered, while optimising on just a single NEDC is nearly a non-sense.

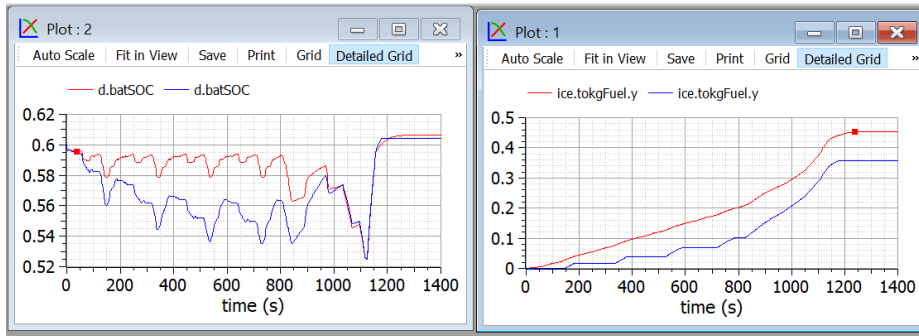


Figure 50 Fuel consumption comparison between non-ON/OFF and ON/OFF.
To replicate run wbEHVPkg.PSD.PSecu2 and wbEHVPkg.PSD.PSecu3 using the supplied parameters.

8 Map-based support models

8.1 EfficiencyT block

This block (the last “T” stands for table) having pathname `wbEHPTlib.SupportModels.MapBasedRelated.EfficiencyT`, receives as input a power train angular seed and torque, and outputs the corresponding power computed as the product of them, diminished by the internal losses evaluated by means of an efficiency map. Usually efficiency maps are known for families of components, in a normalised way. Because of this, a normalised map approach is used here as well. The diagram is as follows:

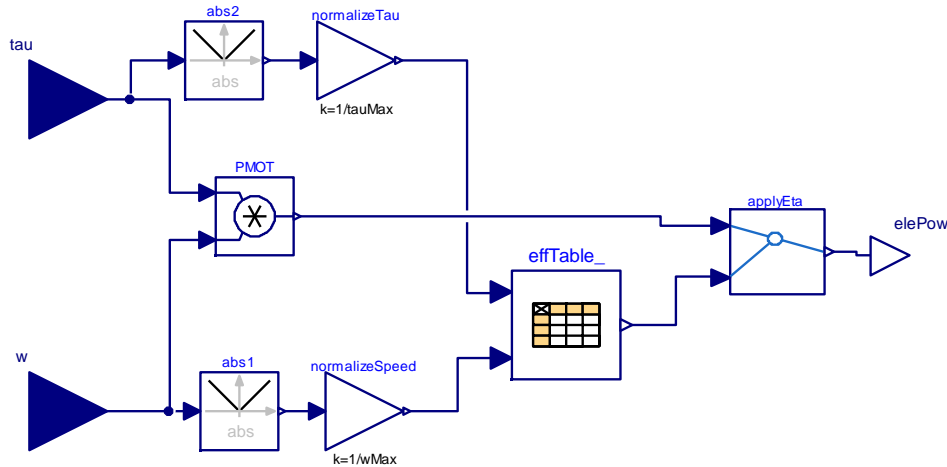


Figure 51 Diagram `wbEHPTlib.SupportModels.MapBasedRelated.EfficiencyT` block.

The model uses for the efficiency table a `CombiTable2D` component. That table can be used passing the matrix on-line or reading it from a file. In the provided form, it is passed on-line.

The numerical data inserted as an example in the model correspond to the following efficiency map, not drawn from a real case, but reproducing a somewhat reasonable trend.

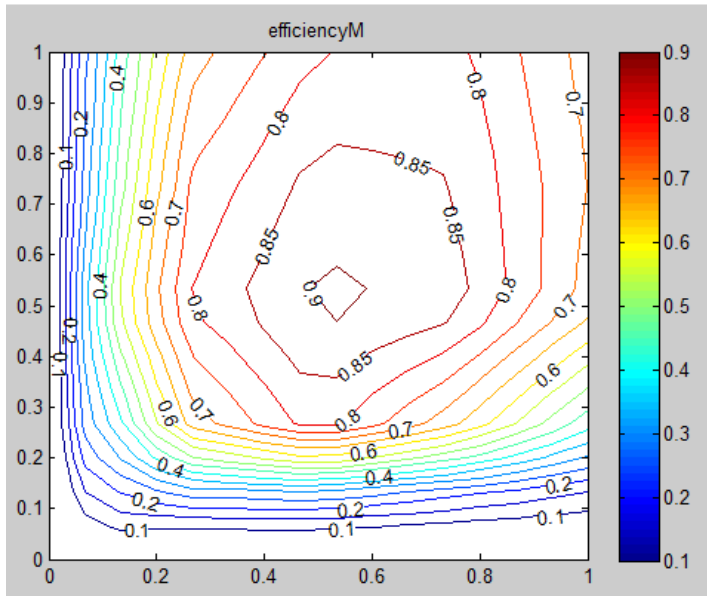


Figure 52. An example efficiency map

Drawing this kind of maps from numerical data is not a very easy task. If the user uses Scilab or Matlab, he can do this taking advantage of the “contour()” function.

The use of efficiency maps, though being very common and useful to graphically analyse things, has important drawbacks. The biggest difficulty is that on the horizontal and vertical axes (i.e. axes $\Omega=0$ and $T=0$) actual efficiencies have zero, since mechanical power is zero, but losses are not zero. To use efficiency maps in MBEfficiencyT efficiencies on these axes cannot be set exactly to zero, to avoid division by zero, but to small values, e.g. 0.01. The map in figure 52 was drawn using exactly $\text{eff}=0.01$ on the axes.

Another way to introduce efficiencies in map-based models, is to introduce formulas to compute efficiencies. This is discussed in the next section.

The map is a matrix A containing in its first column $A(:,1)$, except its first value, normalised torques (between 0 and 1), the first row, $A(1,:)$, except its first value, normalised speeds (between 0 and 1).

Element $A(1,1)$ is not used; all the other elements contain efficiencies corresponding to the normalised torque and speed given in the first column and row.

8.1.1 Proposed activity

The reader is prompted to modify the model so that the `effTable_` data are read from a file. The file name is to be passed as a parameter to the block.

8.2 MBEfficiencyLF block

This block (the last “LF” stands for Loss Formula) receives as input a power train angular speed and torque. In this case efficiency is computed through losses (fig 53).

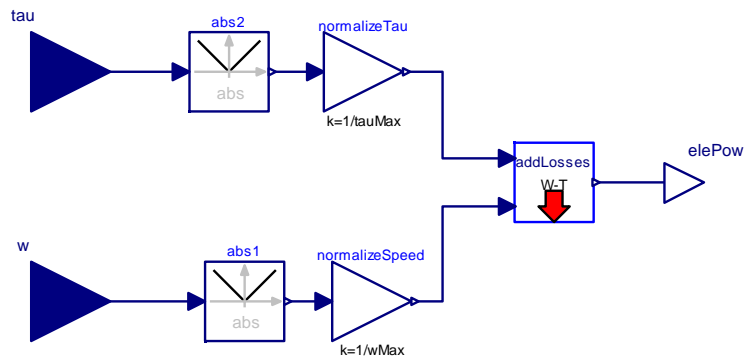


Figure 53. Diagram of the EfficiencyLF block.

Losses, in turn are computed through a loss formula (not a map, hence the model's name); `addLosses` has the following code:

```
block AddLossesWT "adds drive losses function of W and T"
  parameter Real A=0.006 "fixed p.u. losses";
  parameter Real bT(unit="J/(N2.m2)") = 0.1 "torque losses coefficient";
  parameter Real bW(unit="J/(rad2.s2)") = 0.1 "speed losses coefficient";
  parameter Real bP(unit="J/W2") = 0.07 "power losses coefficient";
  Modelica.SIunits.Energy losses;

  Modelica.Blocks.Interfaces.RealInput W
    annotation (Placement(transformation(extent={{-138,-80},{-98,-40}})));
  Modelica.Blocks.Interfaces.RealOutput y
    annotation (Placement(transformation(extent={{96,-10},{116,10}})));
  Modelica.Blocks.Interfaces.RealInput T
    annotation (Placement(transformation(extent={{-138,40},{-98,80}})));
  equation
    losses = A + bT*T^2 + bW*W^2 + bP*(T*W)^2;
    y = T*W + losses;
end AddLossesWT;
```

Using the default parameters the obtained efficiency maps, respectively for traction and braking are as follows:

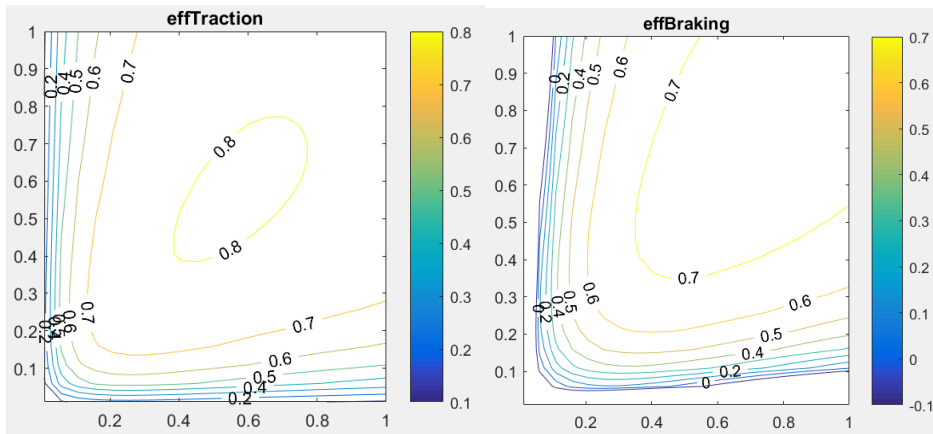


Figure 54. EfficiencyMaps with the proposed loss formula.

8.3 TauLim block

This block receives as input a torque request and measured speed; outputs the limited torque, i.e. the torque request if it is within limits, otherwise the maximum (or minimum) available torque.

The limiting torque is computed by limiting absolute value of power and torque as per the region shown in the model's icon, which is as follows:

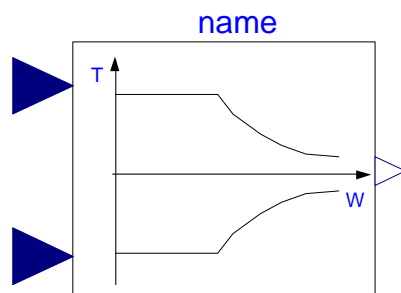


Figure 55. Icon of the TauLim block.

This is a typical simplified operating region of a drive train: it contains a maximum torque limit, a maximum power (the two hyperbolas), a maximum speed.

8.3.1 Proposed activity 1

The model `tauLim` has two significant limitations:

- It considers only symmetrical curves around the horizontal axis, i.e. equal values for positive and negative limiting torques.
- It does not consider automatic dropping of regions having negative efficiencies.

A more realistic map will have the shape shown in figure 56.

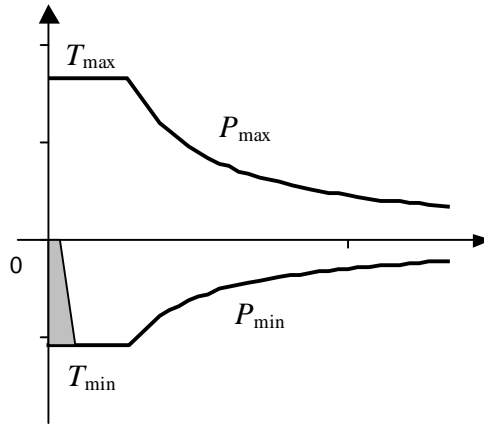


Figure 56. Improved torque limitation region.

In this figure not necessarily $|P_{\max}| = |P_{\min}|$ nor $|T_{\max}| = |T_{\min}|$

Moreover a “prohibited region”, greyed, in present, where it is not convenient to operate the electric drive. In fact, in this region we can have negative efficiency. This is due to the fact that the mechanical power is lower than the electric losses to exchange that power. Instead of using that region, then, it is convenient to mechanical braking.

The code for `TauLim` included in the `wbEHPTlib` is very simple:

`block TauLim "Torque limiter"`

```

Modelica.Blocks.Interfaces.RealInput w;
Modelica.Blocks.Interfaces.RealInput tau;
Modelica.Blocks.Interfaces.RealOutput y;
parameter Modelica.SIunits.Power powMax(start=50000)
  "Maximum absolute mechanical power (W)";
parameter Modelica.SIunits.Torque tauMax(start=400)
  "Maximum absolute torque (Nm)";
Boolean powLimPrevails
  "true when power limitation prevails over torque limitation";
Modelica.SIunits.Torque maxAbsTau;
Modelica.SIunits.Torque negMaxTau=-maxAbsTau;
algorithm
  if w < powMax/tauMax then
    powLimPrevails := false;
    maxAbsTau := tauMax;
  else
    powLimPrevails := true;
    maxAbsTau := powMax/w;
  end if;
  if tau > 0 then
    if tau > maxAbsTau then
      y := maxAbsTau;
    else
      y := tau;
    end if;
  else
    if tau < (-maxAbsTau) then
      y := -maxAbsTau;
    else
      y := tau;
    end if;
  end if;
end if;

```

end TauLim;

The reader is prompted to enhance this code, to give it more flexibility, allowing to generate a region of the type show in figure 56.

8.3.2 Proposed activity 2

This model is written for positive speeds. The user is prompted to modify it in such a way that it can operate also with negative speeds. The operating region therefore becomes four-quadrant. In case this activity is done after Proposed activity 1, the improvements there made can be included also in activity 2.

8.4 ConstPg model

This model has the purpose to interface map-based mechanical models with the corresponding electric circuit. Its diagram is as follows:

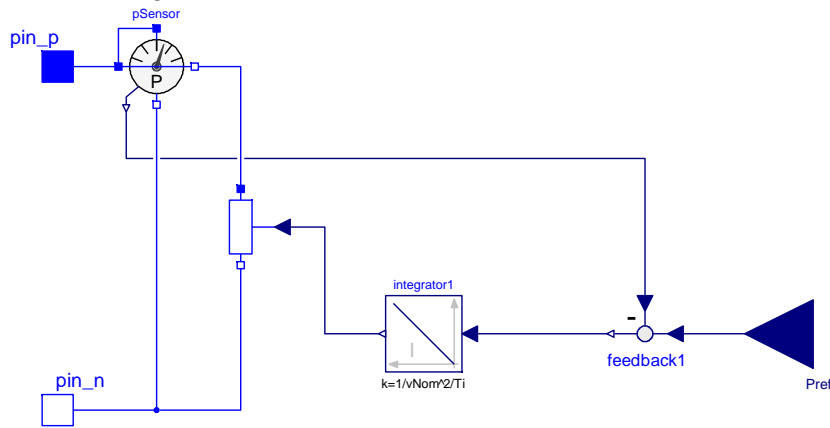


Figure 57. Diagram of wbEHPTlib.SupportModels.MapBasedRelated.ConstPg.

It is based on a variable conductor, whose value is controlled so that the absorbed power equals the requested power, using a simple integral open.-loop controller.

It is very important to note that when this is connected to a real DC circuit, not always a solution can be found.

Consider, for instance that it is connected to a DC circuit which has a thévenin equivalent with electromotive force E_{th} and inner resistance R_{th} . The situation is as shown in figure 58.

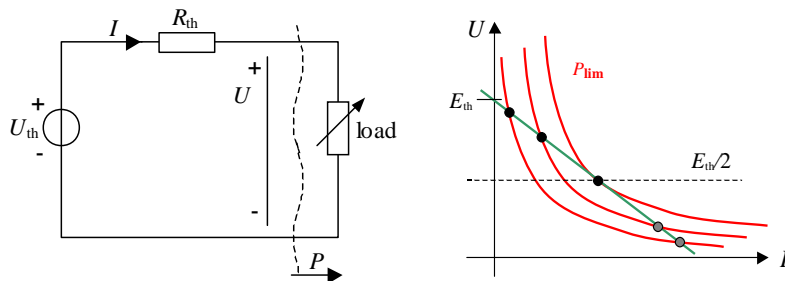


Figure 58. Duplicity of equilibrium point when a Thevenin DC source is loaded with a constant power load.

In the right part of the figure different load powers correspond to different hyperbolas. The green straight line corresponds to the operating points compatible with the source DC circuit. It is apparent that beyond P_{lim} no intersection exists between red and green curves, i.e. that power cannot be delivered. When $P < P_{lim}$ there exist two possible operation points, of which usually only the one with the higher voltage is acceptable.

This means that this kind of interface requires some attention that the requested power is not too much, and that the system initial condition is such that the wanted point (usually the upper one, as I said) is found by the solver.

Note that it is $P_{lim} = E^2 / (4R_i)$.

8.4.1 Proposed activities

1. The proposed model has as parameter the integrator constant. The provided formula contains also the nominal conductor voltage v_{Nom} . Why?
2. The integrator should have an initial value for output. Try to envisage which could be best and enhance the model to include this initial condition. Maybe a reference power p_{Nom} could be added as a parameter.
3. Try to insert the model in simple DC circuits to see where and when an operating point is found and when it is not. First you can use a circuit composed by fixed voltage in series with a fixed resistance. Then you can use more complicated circuits.

9 EV-HEV simulation concluding remarks

Specialised programs exist to simulate vehicle power trains (e.g. [10]). Also rich commercial libraries are available.

This chapter had not the ambition of discussing industrial-grade simulators. However, through simple models, all based just on MSL, and progressive exercises, it had the purpose to allow the reader to get to know the main issues and opportunities of simulating EVs and HEVs using Modelica and Open source simulators such as OpenModelica. At least OpenModelica and proposed models (all of which can be run through OpenModelica) are completely open, so one can understand, and modify, everything, up to the tiniest detail.

Indeed, in several occasions I felt that commercial programs, although powerful and reliable, have the important drawback of not allowing to understand all the details of the inner models.

Not always the more complex models are the best ones. For preliminary analyses, and evaluations, simpler ones allow to understand more easily the basic phenomena.

I hope that the reader that has got here has understood a lot regarding EV and HEV simulation, as well as HEV control and energy management.

10 References

- [1] M. Ceraolo: “New Dynamical Models of Lead-Acid Batteries”, *IEEE Transactions on Power Systems*, November 2000, Vol. 15, N. 4, pp. 1184-1190.
- [2] M. Ceraolo, A. Caleo, P. Capozzella, M. Marcacci, L. Carmignani, A. Pallottini: “A Parallel-Hybrid Drive-Train for Propulsion of a Small Scooter”, *IEEE Transactions on Power Electronics*, ISSN: 0885-8993, Vol. 21, N. 3, May 2006, pp768-778.
- [3] M. Ehsani, Y. Gao, A. Emadi: “Modern Electric, Hybrid Electric, and Fuel Cell Vehicles: Fundamentals, Theory, and Design”, CRC Press, 2009, ISBN 9781420053982
- [4] M. Ceraolo and D. Poli: Fundamentals of Electric Power Engineering”, a full book (532 pages) published by IEEE-Wiley, 2014, ISBN 978-1-118-67969-2.
- [5] Toyota documentation <http://www.evworld.com/library/toyotahs2.pdf>, May 2003, file available for download on June 2017
- [6] M. Ceraolo, T. Huria, G. Lutzemberger: “Experimentally determined models for high-power lithium batteries”, Book *Advanced battery technology*, ISBN: 978-0-7680-4749-3 doi:10.4271/2011-01-1365. Also presented at the *SAE 2011 World Congress*. Cobo Center Detroit, Michigan (USA), 12-14/4/2011.
- [7] OpenModelica Consortium www.OpenModelica.org
- [8] Dassault Systèmes Smart Electric Drives Library documentation: <http://www.3ds.com/fileadmin/PRODUCTS/CATIA/DYMOLA/PDF/dymola-smart-electric-drives-library.pdf>; File available for download on April 2015
- [9] Modelica Association: <https://www.modelica.org/libraries>, Vehicle Interfaces library Link available on April 2015.
- [10] EERE Information Center, https://www1.eere.energy.gov/vehiclesandfuels/pdfs/success/advisor_simulation_tool.pdf file available for download on June 2017.
- [11] Information on Toyota unit sold from Toyota <https://www.treehugger.com/cars/toyota-prius-hybrid-reaches-3-million-units-sold-worldwide.html>
- [12] Toyota Prius item on Wikipedia: https://it.wikipedia.org/wiki/Toyota_Prius