



ADAPTER


PWR

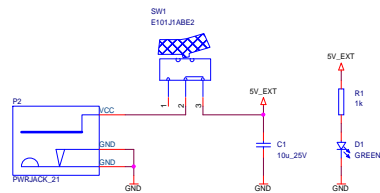

DBG

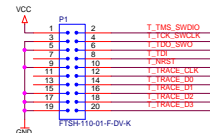






NUCLEO DBG




TEST



SHIELD

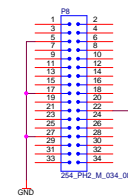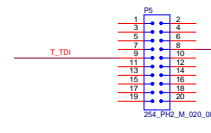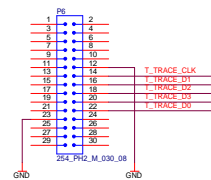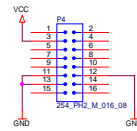

Layout Notes:
 - PWR, DBG and NUCLEO DBG should be placed on TOP
 - DBG and NUCLEO DBG should have signal names visible on TOP silk
 - PWR should have visible voltage marking
 - SHIELD should be placed on BOTTOM
 - SHIELD should fit on NUCLEO-144 ZIO connectors and JP3

Project: NUCLEO-144 DBG and TRACE Adapter			
Sheet: 1_ADAPTER			
Date: Friday, July 05, 2019		Designer: MA	
File: NUCLEO-144_DBG_TRACE_ADAPTER_AS0140_A		Sheet: 1 of 1	