


Non-inverting Opamp:
 SIG0 gain = $1 + R5/R6$

To use as...
 Low-side Current Shunt: pop R3, depop R1
 Single-ended amp: depop R3, optionally pop R1 for power
 Optionally pop C1 for filtering.

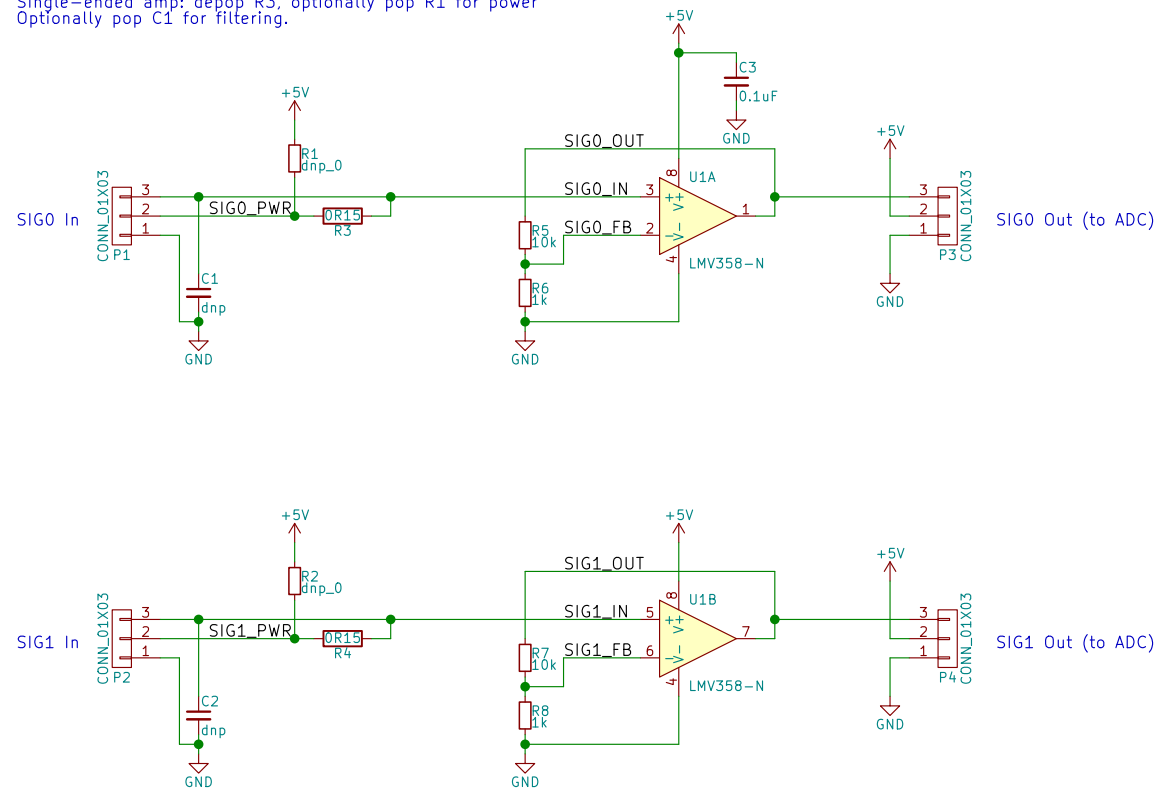

Ian Hartwig

Sheet: /
 File: romeo-opamp.sch

Title: romeo-opamp

Size: A4 Date: 2020-04-10

KiCad E.D.A. kicad 4.0.2-stable

Rev: P1

Id: 1/1