

NEST wood planks currently come in two styles: reclaimed and solid. Our reclaimed planks are recycled from old wooden structures. Our solid planks are sourced from forests that are managed sustainably. We sort, slice and precision mill each plank by hand. Our specially engineered adhesive works with most common interior wall materials.

NEST wood planks are engineered and manufactured to be dimensionally stable and to retain their natural strength. But, if handled too aggressively, the planks may split or crack. NEST wood planks also retain their natural characteristics including variation in color and texture, knots, nail holes and saw marks. Any undesirable characteristics can be cut out prior to installation.

The recommended application for NEST wood planks is a clean, dry, structurally sound and primed and painted interior surface. NEST wood planks are stiff enough to span small gaps and indents yet are flexible enough to conform to uneven surfaces. But, special care must be taken where the surface has excessive gaps, indents or is very uneven (more than 10 cm variation over 200cm). Also, we do not recommend using NEST wood planks on walls that are moist or areas with excessive moisture. If in doubt, please contact us.

NEST wood planks are shipped in cartons that hold enough planks to cover 2.5 square meters. The planks are precision cut to 120cm length x 12.5cm width. Each carton also contains up to 30% shorts for ease of installation. The shorts are precision cut to 40cm, 50cm, 60cm, 70cm or 80cm lengths. We do not ship random lengths.

PLAN

Measure the wall or surface on which NEST planks will be installed. Multiply the width and length in meters and divide by 2.5. Round up to the nearest whole number. This is the number of boxes of NEST planks that is needed for your installation. For example, if your wall is 4 meters long and 3 meters high, then you would need $4 \times 3 = 12 / 2.5 = 5$ boxes.


Before installing NEST planks, you may want to consider the placement pattern. NEST planks can be installed horizontally, vertically, diagonally or in any manner or pattern you choose. Here are some example patterns for horizontal applications to whet your inspiration. Most patterns stagger the end joints from row to row. We suggest that you give your placement pattern careful thought because once NEST wood planks are in place, it will be difficult to move them.

Please contact us at support@twonests.com if you need assistance. We would be happy to help you with your design.

PREPARE

Before starting, you may need the following tools: stepladder, pencil, level (we recommend one that is at least 1.2 meters long), tape measure and a mitre saw (also called a backsaw).

Before starting, ensure that any newly painted walls are completely dry. Open the NEST wood plank box, take the planks out and allow at least 24 hours for acclimatization. We recommend

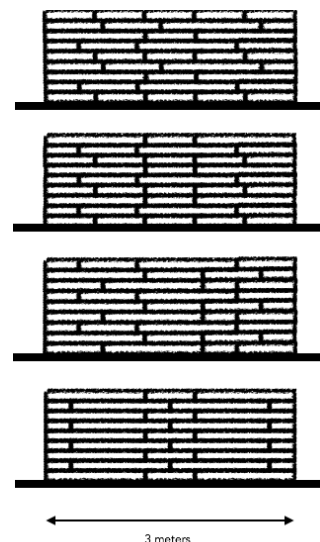

installing at temperatures above 10degC. Once installed, NEST wood planks do best when relative humidity is controlled between 30% and 60%.

If you are remodeling, then remove wallpaper, nails, blue tack, etc. Wipe the wall with a clean, dry cloth to remove dust and dirt. Lay your pattern out on a piece of paper, measure the position of any electrical outlets and the like and work out your placement strategy so that your NEST wood planks can be peeled and placed without covering these up. If needed, cut your NEST wood planks to size before removing the adhesive liner. If you do cut NEST wood planks, please take good care and use appropriate safety gear.

Since NEST wood planks have color and grain variation, it is generally a good idea to lay them out before peeling and placing to ensure you achieve your inspired visual design ethos.

Start by drawing a reference line on your wall. If you plan to cover your entire wall, then 250 cm from the top of your wall may be a good choice. Use your tape measure and level to draw your reference line. The first row of NEST wood planks should be placed above and below your reference line. It is a good idea to test the fit of a plank before peeling the adhesive and placing the plank.

PEEL and PLACE

Once you're satisfied with your placement planning and have drawn a reference line, remove the adhesive liner from your first plank. Avoid touching the adhesive surface and keep it clean and dry. Keep the NEST wood plank at an angle and carefully align one edge along the reference line. Gently roll the plank and first row of adhesive onto the wall. If needed, adjust. Then gently roll the rest of the plank onto the wall. Once satisfied with the placement, use the palm of your hand to press the plank onto wall. The adhesive bond will start strengthening within minutes. Following the pattern you've designed as part of your placement planning, place the second plank below the first and stagger the end joint.



Example of staggered end joints

Keep placing planks to the left and right until you have two full rows placed, one above and one below your reference line. You can now use these rows to confidently place the rest of your planks according to your inspired design!

ENJOY

If you have a particularly complex design or very large project, please feel free to contact us at support@twonests.com. We might be able to help either with a custom order or finish.

Please note that NEST wood planks are designed to stay on your wall without peeling or curling. Once the adhesive is well bonded, removing them will cause damage to the wall.