


Module end holder
(with thru hole for
#00 or M1.2 screw)

HDI

TBM

Flat flex cable, 75 cm length
(short "connector saver" pigtail flex will
be used for testing during assembly)

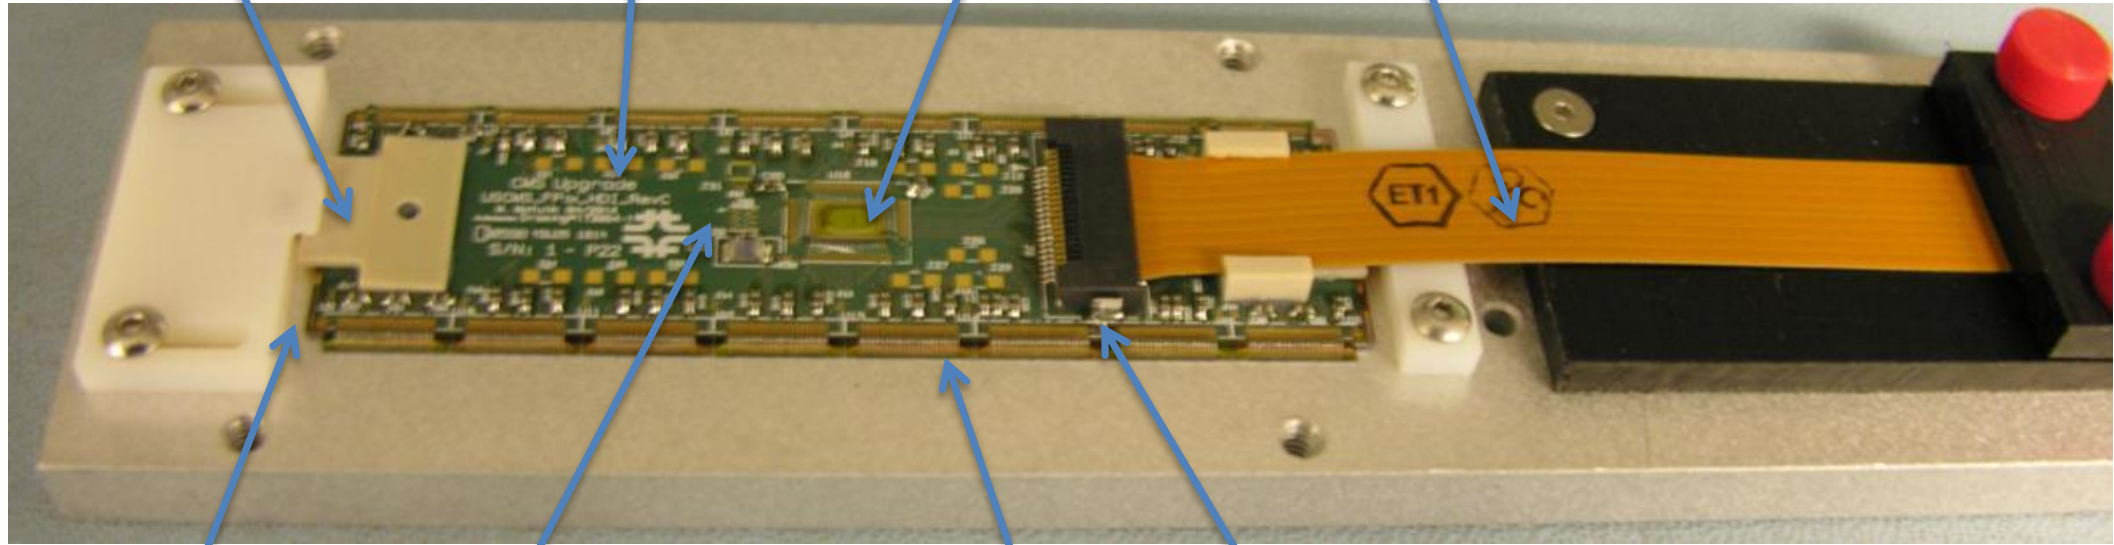

Module address setting

FPIX sensor

2x8 ROCs

ZIF Connector

Schematic cross section:

