



SyncExtPack installation instructions


Create the files by selecting the serial number of your own vehicle and the directory where the files will be created from the Sync2MirrorLink application.

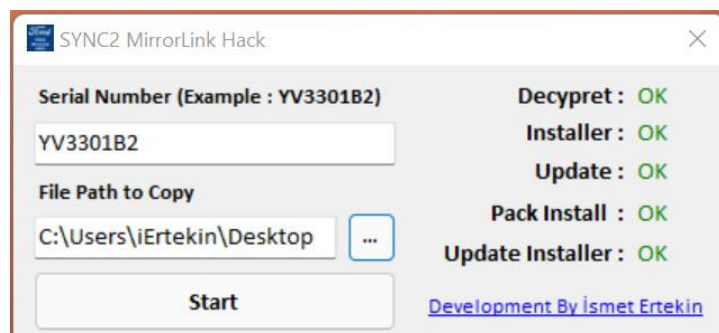

Download provided archive and unpack it onto USB pendrive. In the result you will get something like that:

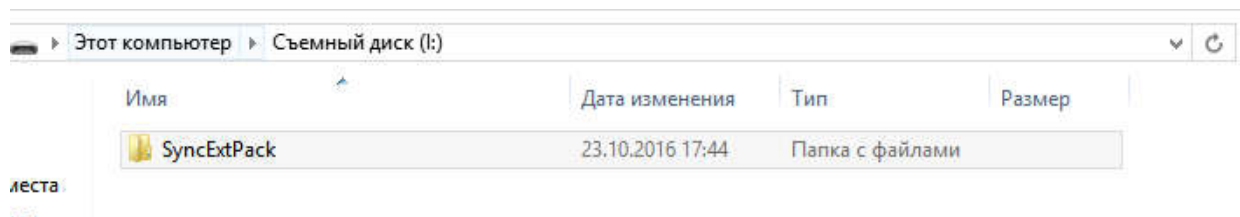

Inside the "SyncExtPack" folder you will see:

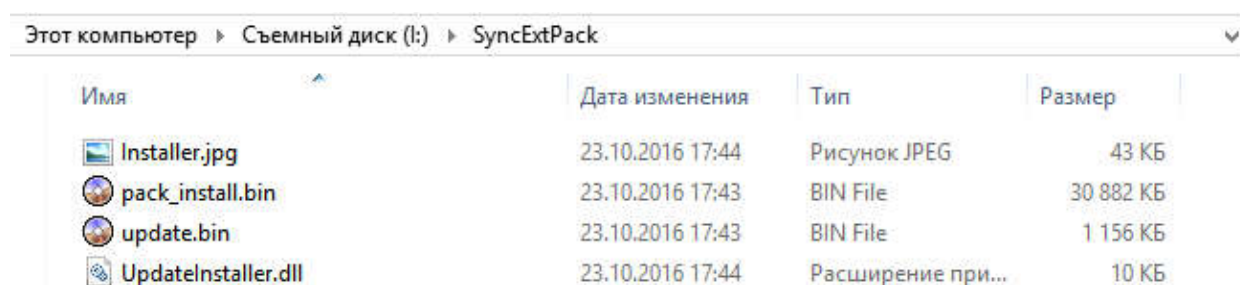


The USB pendrive can be detached from your PC. Now you need to detach ALL USB devices from your car and then you should plug your previously prepared USB disk into your car's USB port.

Now open the "Settings -> Display -> Edit wallpaper" menu. Find the "Installer.jpg" file on the USB disk and just click on it. **Do not try to set this file as a wallpaper it can cause the infinite reboot loop.** After some time (usually less than a minute) the MyTouch will be rebooted.





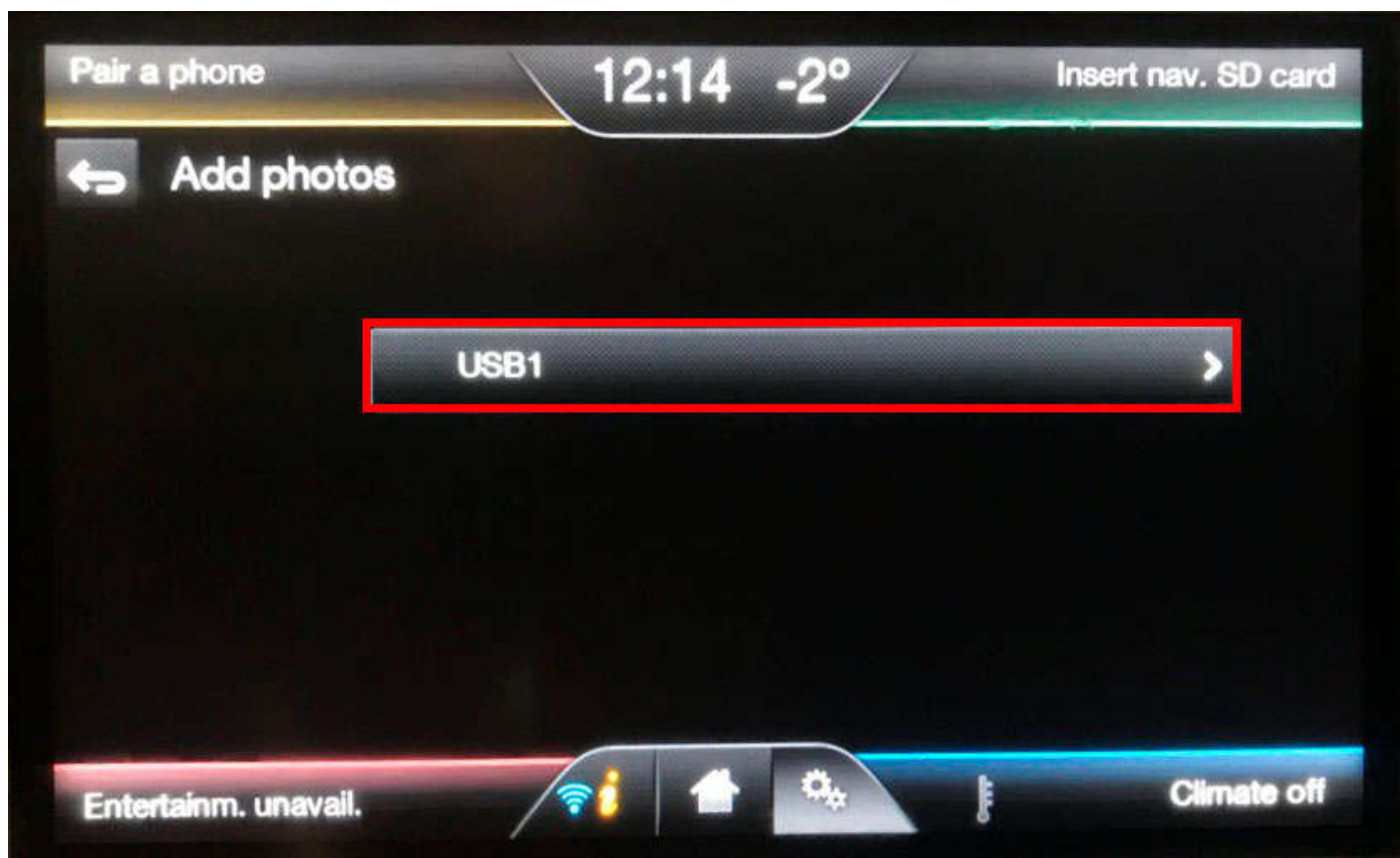



You should wait till the booting process ends:



Now you need to detach your USB pendrive and plug it to your PC again. Open up the “**SyncExtPack**” folder and rename the “**pack_install**” file into “**install**”:

Этот компьютер > Съемный диск (I:) > SyncExtPack

Имя	Дата изменения	Тип	Размер
Installer.jpg	23.10.2016 17:44	Рисунок JPEG	43 КБ
install.bin	23.10.2016 17:43	BIN File	30 882 КБ
update.bin	23.10.2016 17:43	BIN File	1 156 КБ
UpdateInstaller.dll	23.10.2016 17:44	Расширение при...	10 КБ

Then connect your USB disk into car’s USB port again and wait (usually less than a minute) for the installation window to appear:



After installation is complete the update window will be closed or the MyTouch will be rebooted. Now you can use the new features of your MyTouch!