


CD4007 Transistor Array

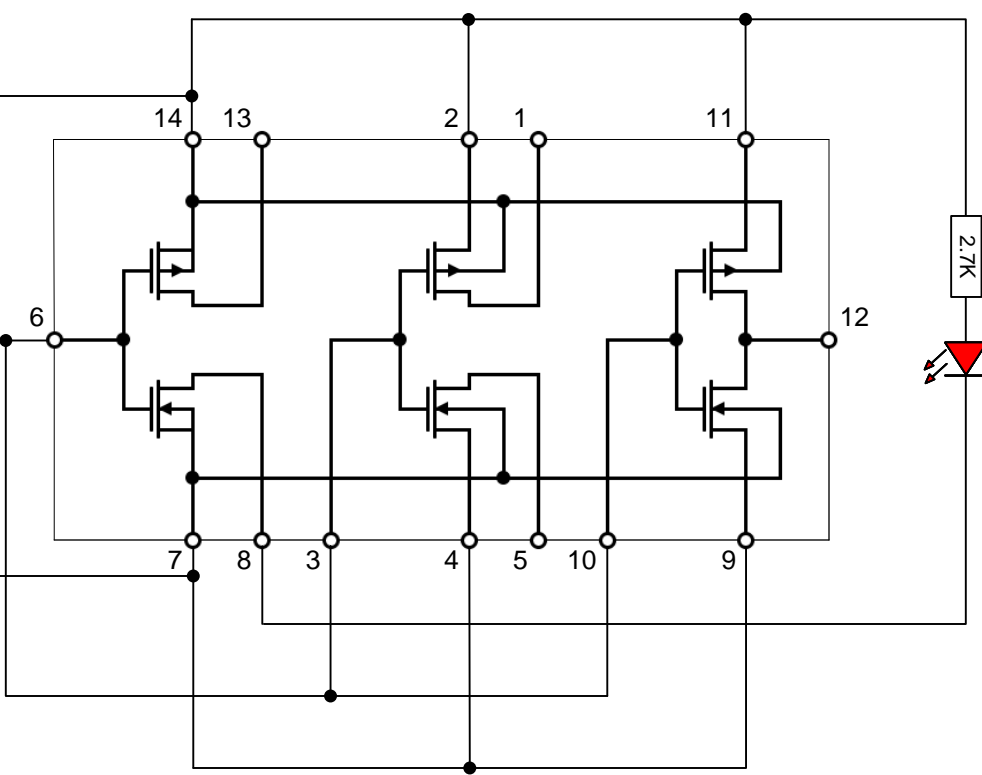

NOTE: Remove the wire connecting the receiver module's PON terminal to the clock board. Jumper the receiver module's PON terminal to ground so that the receiver is 'ON' at all times.

Atomic Clock LED Modification

Drawn by: jsl	Date:
---------------	-------