

# Sending Infrared Commands From a Raspberry Pi Without LIRC

May 29th, 2016

**TL;DR** - I made a [small C library](#) for sending infrared packets easily on the Raspberry Pi, wrote about how to reverse engineer an infrared remote for use in a [home automation server](#), and made a simple infrared LED circuit controlled by the Pi. There's also a bonus [control panel](#) written in ClojureScript! If you're frustrated with LIRC, want to send dynamic infrared signals, or want to learn more about how devices communicate with infrared light, read on!

So let's say you have some devices in your home that are controlled by infrared remotes. It could be a TV, an air conditioner, a ceiling light, an Xbox, or really anything you have a remote for. You want to control these things programmatically, but don't know anything about infrared, other than it sends some sort of signal to the devices you want to control. I was in this situation a few months ago and decided to learn about how infrared works and see if I could reverse-engineer my air conditioner and ceiling light. This article documents the steps I took to accomplish this, starting with a Raspberry Pi and ending with a working system to control infrared devices from a web interface from anywhere in the world. In order to better understand the low level details of basic infrared communication, I shunned tools that abstracted these details away, and built a simple LED circuit that connects directly to the Raspberry Pi's output pins.

Note: I try to explain some of these concepts in simple terms, but you'll need some programming experience to make your way through this in its entirety. If you're already familiar with electronics and programming, I might come off as a little patronizing. I just want programmers and non-programmers alike to be able to take something away from this article.

Minimum required components:

- Raspberry Pi (I used Raspberry Pi Revision 1.0, Model B)
- SD Card with Raspbian (I used version 2015-11-21-raspbian-jessie-lite)

- 1 infrared LED
- 1 PN2222 transistor
- 1 680 ohm resistor
- 1 infrared receiver (38 kHz)
- 1 solderless breadboard
- 3 male-to-female jumper cables

Nice to have:

- Programming experience
- Electronics experience (I actually have very little, I just knew the minimum required to get this working)
- [Raspberry Pi ribbon cable](#)
- 1 Prototype board
- Solder
- Soldering iron
- More jumper cables
- Patience

## Decoding the IR signal

I started this project with the simple goal of wanting to turn on my heater on my way home from work so I could come home to a nice warm apartment. I have a [wall mounted heater / air-conditioner](#) with an infrared remote control. I didn't know anything about infrared, but I figured there must be a fairly easy way to capture the IR signal and play it back. I wasn't sure exactly what I needed to do this, so I did some research. I came across [this wonderful video](#) by David L. Jones. In the video, he uses a fancy oscilloscope to view the waveform produced by an infrared remote, and then analyzes it to show us how it works. Infrared turned out to be fairly simple, and the video gave me an idea of the parts I would need to get this project working.

What I got out of the video was the following:

- For most products, an infrared remote is just using non-visible light to send a sequence of 1s and 0s
- To capture an IR signal, you can either use a photo diode (to capture the infrared frequency), or an infrared receiver (to give you a digital 1 or 0)
- Many products operate at 38 kHz and use the [NEC protocol](#)

- A "carrier wave" (for our purposes) is just an infrared light turning on and off very quickly. In this case, 38,000 times a second
- 1s and 0s are encoded by pulsing (turning the LED on and off) at 38 kHz for a particular amount of time, pausing a particular amount, pulsing, pausing, etc. until the full signal has been sent
- When there is no signal, reading the output from the infrared receiver will return a 1. When the LED is pulsing, the infrared receiver returns a 0 (this may be flipped, but for my hardware and OS, a 1 = carrier wave absent, 0 = carrier wave present)

Watch the video a few more times if it doesn't make sense, especially around the 7 minute mark. In essence, the only thing an infrared remote is doing is turning a light on and off very quickly in a particular pattern.

A note on NEC: NEC is not the only infrared protocol, though it's a fairly common one. I'm in Japan and both of my remotes appear to be using it, so this article will focus on NEC. Many of other protocols follow a similar pattern though, and my library can be easily modified to accomodate those.

So with this knowledge, I knew I needed to buy an infrared receiver and some cables to hook up to my Pi. The receiver will let us decode the signals our remotes are sending. I ended up getting this one:

**PARA**  
LIGHT

# INFRARED REMOTE CONTROL RECEIVER MODULE

参考資料

PL-IRM2121-A538

**PL-IRM2121-A538**


赤外線リモコン受信モジュール

## FEATURES

受信中心周波数38KHz 電源5V

- ONE MOLD SMALL PACKAGE
- 5 VOLT SUPPLY VOLTAGE LOW POWER CONSUMPTION
- SHIELDED AGAINST ELECTRICAL FIELD DISTURBANCE

ABSOLUTE MAXIMUM RATING : ( Ta = 25 °C )

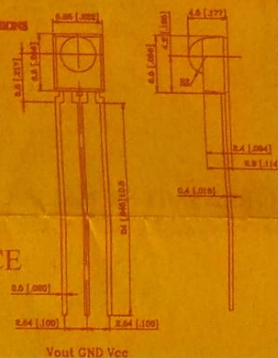

SYMBOL	PARAMETER	ULTRA CONDITION	UNIT
Vcc	Supply Voltage	5.5	V
Tstg	Storage Temperature Range	-25to 85	°C
Topr	Operating Temperature Range	-25to 85	°C
Tsol	Soldering Temperature	255(MAX 5sec)	°C


Lead soldering temperature { 1.6mm (0.063inch) from body } 250±5°C for 3 seconds.

## ELECTRO-OPTICAL CHARACTERISTICS : ( Ta = 25 °C )

SYMBOL	PARAMETER	CONDITION	MIN.	TYP.	MAX.	UNIT
Vcc	Supply Voltage		4.5	5		V
Icc	Current Consumption	Input sigal=0			2.5	mA
• P	Peak Emission Wavelength			940		nm
fo	B.P.F Center Frequency			38		KHz
L	Arrival Distance	L-514EIR1C	0°	35		m
			±30°	9		m
Voh	H Level Output Voltage	30cm over the axis	4.5			V
Vol	L Level Output Voltage			0.1	0.5	V
TwH	H Level Output Pulse Width	Burst wave=600 μ s	500	600	700	μ s
TwL	L Level Output Pulse Width	Period=1.2ms	500	600	700	μ s
Output Form		Active low output				

Arrival light source: Detecting surface illumination shall be irradiate 400Lux under ordinary white fluorescence lamp without high frequency lightening.



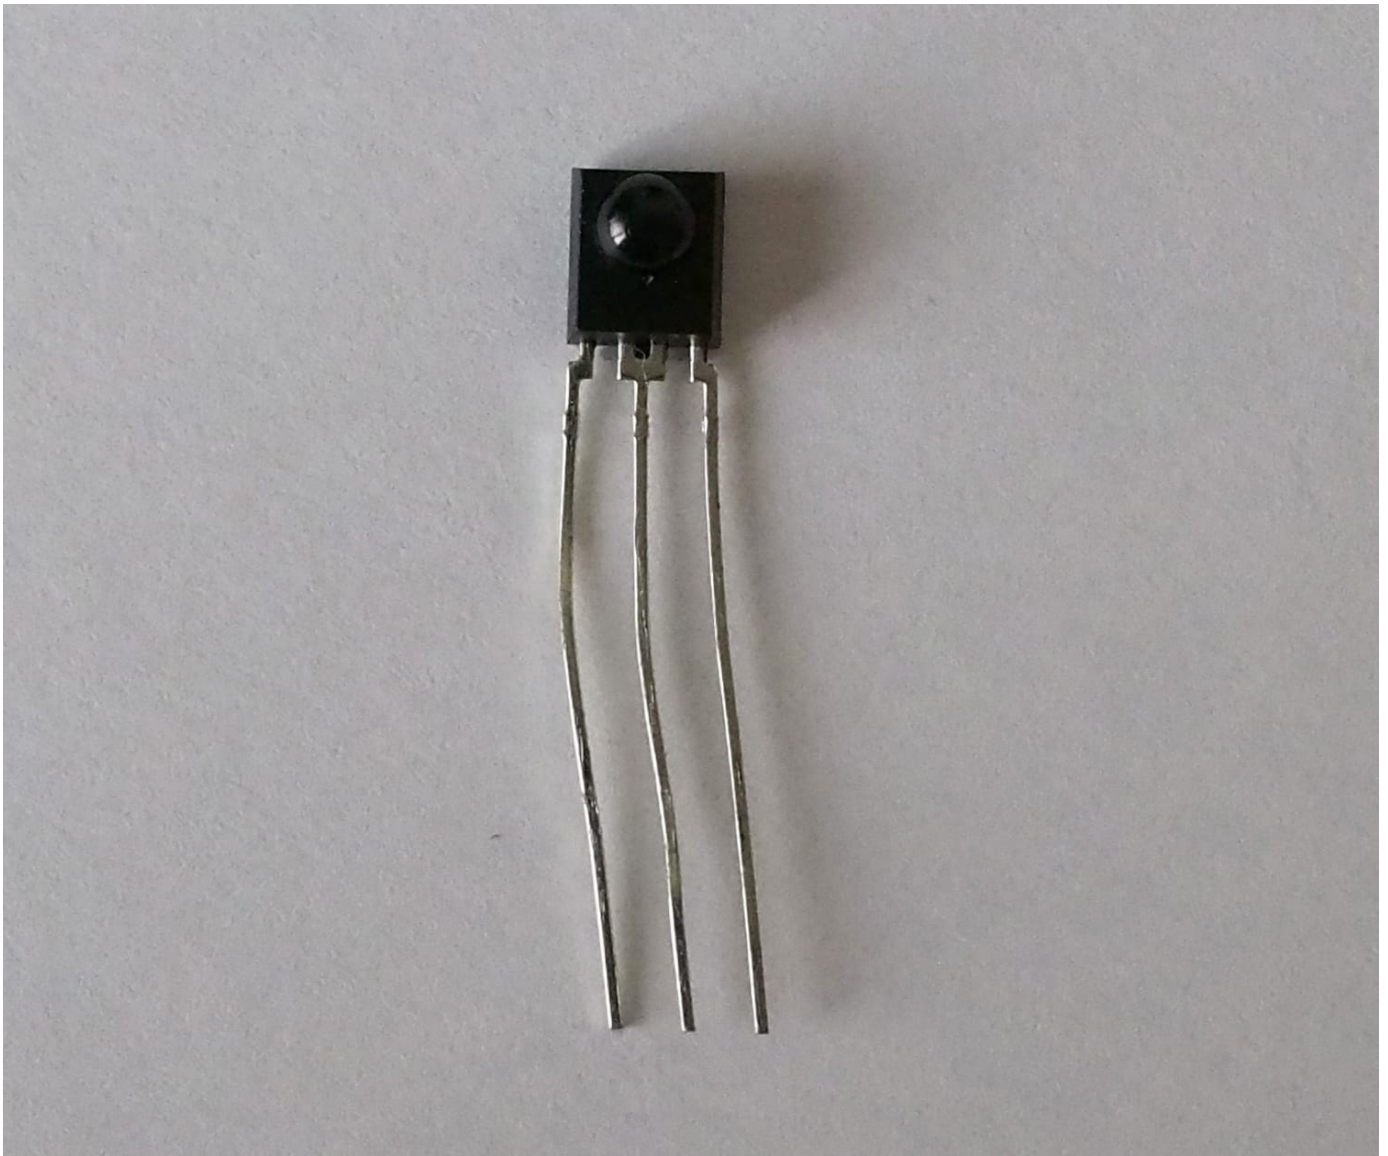

38 kHz Infrared Receiver

The great thing about these is that you don't need any other components. Just attach the 5V from the Pi to input pin, ground to ground, and an output wire going from the receiver to a GPIO pin on the Pi. Look at the data sheet on your infrared receiver to figure out which wires go where. Here's my data sheet:





Vout GND Vcc

With everything wired up, you can now load Raspbian OS onto the Pi. These steps can vary depending on the platform you're using, so I'll leave it to [raspberrypi.org](http://raspberrypi.org) to provide installation instructions. You can download Raspbian [here](#)

Once you have the SD card with Raspbian inserted in the Pi, you can start it up and configure the OS. Again, these steps can vary, and there are plenty of resources out



there to help you out. The end goal is to be able to place files on the Pi and run them. I used SSH, but you could just as easily find a GUI tool to let you do this.

Next step is to pick a remote to decode. To ensure your setup is working, it's best to choose the simplest remote you have. I have an air conditioner and a ceiling light with remotes. The light remote has [just a single button \(and it says NEC on the front!\)](#) and was perfect for testing my setup to see if things work. The best kind are those that do not hold any state in them, so find one where you think it would send the same signal every time a button is pressed. The ceiling light I have can be in four different brightness states: High, medium, low, and off. Logically my ceiling light remote would send the same signal every time, because the remote doesn't know what state the light is in. What if I turned the light off with a wall switch? The remote has no way of knowing, so it must send the same signal every time, and the ceiling light (which contains the light state) will interpret that signal as "move to the next lighting state from where you are currently". On the other hand, my air conditioner remote has a screen and it appears to remember what settings you've requested, so it likely sends a different signal each time I change something. We could also reason that an air conditioner remote which is stateful also sends the *entire* state every time. This is due to the fact that the remote will change its internal state when you press the button, even if the signal didn't reach the air conditioner. Let's say you press the wind speed button to turn the fan up high, and then change the temperature to 22 C. If the first command (wind speed) fails to reach the air unit, but the second command does, the user would still expect the fan speed to be changed to high, because that's what the remote displays on its LCD panel. To be as consistent as possible with what's displayed on the LCD panel, you can conclude that the remote must send its entire state every time a signal is sent (and we'll see later that this is true).

So now that we have a simple remote to test, let's decode the signal! I wrote a Python script to read values from the infrared receiver pin. I found that it runs fast enough to accomplish what we want to do. The goal for recording our remote is to work out the actual 1s and 0s the signal represents, and the rough timings of the pulses. To do this, we will be measuring the times that the signal is pulsing, and the times that it is pausing. The infrared receiver is always outputting a 1 (no signal). When we do a "digital read" on the input pin and receive a 0, that means the infrared receiver picked up an infrared pulse at 38 kHz (because that's the frequency the receiver is rated for). We'll take note of when the receiver first outputs a 0, and measure time until we encounter another 1. If our remote follows the [NEC protocol](#), we should see a roughly 9 millisecond leading pulse. Due to the fact that we're running an interpreted language

on a non-realtime OS, the timing values will vary quite a lot, but for the most part they should center on 9 milliseconds.

After the first 9 millisecond pulse, we should see a 4.5 millisecond gap, and then the actual 1/O signal will start.

Here's the Python script to identify these pulses and print them out. I did my best to explain what's going on in the comments.

```
import RPi.GPIO as GPIO
import math
import os
from datetime import datetime
from time import sleep

# This is for revision 1 of the Raspberry Pi, Model B
# This pin is also referred to as GPIO23
INPUT_WIRE = 16

GPIO.setmode(GPIO.BOARD)
GPIO.setup(INPUT_WIRE, GPIO.IN)

while True:
    value = 1
    # Loop until we read a 0
    while value:
        value = GPIO.input(INPUT_WIRE)

    # Grab the start time of the command
    startTime = datetime.now()

    # Used to buffer the command pulses
    command = []

    # The end of the "command" happens when we read more than
    # a certain number of 1s (1 is off for my IR receiver)
    numOnes = 0

    # Used to keep track of transitions from 1 to 0
    previousVal = 0

    while True:
        if value != previousVal:
            # The value has changed, so calculate the length of this run
            now = datetime.now()
            pulseLength = now - startTime
            startTime = now

            command.append((previousVal, pulseLength.microseconds))
```



```

        command.append((previousVal, pulseLength*1000000))

    if value:
        numOnes = numOnes + 1
    else:
        numOnes = 0

    # 10000 is arbitrary, adjust as necessary
    if numOnes > 10000:
        break

    previousVal = value
    value = GPIO.input(INPUT_WIRE)

print "-----Start-----"
for (val, pulse) in command:
    print val, pulse
print "-----End-----\n"

print "Size of array is " + str(len(command))

```

## GPIO Numbers

**Raspberry Pi B  
Rev 1 P1 GPIO Header**

		Pin No.			
3.3V	1	2	5V		
GPIO0	3	4	5V		
GPIO1	5	6	GND		
GPIO4	7	8	GPIO14		
GND	9	10	GPIO15		
GPIO17	11	12	GPIO18		
GPIO21	13	14	GND		
GPIO22	15	16	GPIO23		
3.3V	17	18	GPIO24		
GPIO10	19	20	GND		
GPIO9	21	22	GPIO25		
GPIO11	23	24	GPIO8		
GND	25	26	GPIO7		

**Raspberry Pi A/B  
Rev 2 P1 GPIO Header**

		Pin No.			
3.3V	1	2	5V		
GPIO2	3	4	5V		
GPIO3	5	6	GND		
GPIO4	7	8	GPIO14		
GND	9	10	GPIO15		
GPIO17	11	12	GPIO18		
GPIO27	13	14	GND		
GPIO22	15	16	GPIO23		
3.3V	17	18	GPIO24		
GPIO10	19	20	GND		
GPIO9	21	22	GPIO25		
GPIO11	23	24	GPIO8		
GND	25	26	GPIO7		

**Raspberry Pi B+  
B+ J8 GPIO Header**

		Pin No.			
3.3V	1	2	5V		
GPIO2	3	4	5V		
GPIO3	5	6	GND		
GPIO4	7	8	GPIO14		
GND	9	10	GPIO15		
GPIO17	11	12	GPIO18		
GPIO27	13	14	GND		
GPIO22	15	16	GPIO23		
3.3V	17	18	GPIO24		
GPIO10	19	20	GND		
GPIO9	21	22	GPIO25		
GPIO11	23	24	GPIO8		
GND	25	26	GPIO7		
DNC	27	28	DNC		
GPIO5	29	30	GND		
GPIO6	31	32	GPIO12		
GPIO13	33	34	GND		
GPIO19	35	36	GPIO16		
GPIO26	37	38	GPIO20		
GND	39	40	GPIO21		

### Key

Power +	UART
GND	SPI
I <sup>2</sup> C	GPIO

Raspberry Pi GPIO pin layout for reference. This script uses pin #16, or GPIO23

It just runs in an infinite loop, waiting for a 0 to be read from the infrared receiver. It'll then take note of the time and keep reading 0s and 1s, each time making note of how long a run of 1s or 0s was. Once it reads 10,000 1s, it decides the command has

probably ended and returns to the top of the loop. 10,000 is arbitrary and could differ depending on your Pi's CPU speed or other factors, so you may need to adjust it. Once the command has ended, the script will print out the pulses and their durations.

Here's some sample output when I ran the script and pressed my light switch remote:

```
0 8982
```

```
1 4399
```

```
0 631
```

```
1 497
```

```
0 628
```

```
1 1607
```

```
0 635
```

```
1 490
```

```
0 629
```

```
1 509
```

```
0 627
```

```
1 500
```

```
0 633
```

```
1 500
```

```
0 625
```

```
1 500
```

```
0 624
```

```
1 1623
```

```
0 629
```

```
1 1605
```

```
0 622
```

```
1 501
```

```
0 626
```

```
1 1606
```

```
0 628
```

```
1 1606
```

```
0 631
```

```
1 499
```

```
0 634
```

```
1 1605
```

0 661  
1 1569

0 632  
1 504

0 626  
1 498

0 627  
1 1615

0 620  
1 496

0 635  
1 1614

0 629  
1 1599

0 629  
1 504

0 625  
1 505

0 623  
1 516

0 627  
1 1598

0 631  
1 501

0 625  
1 1606

0 627  
1 501

0 636  
1 496

0 626  
1 1609

0 630  
1 1606

0 628



```
1 1607
```

```
0 623
```

I was thrilled to find this matches up very nicely with the NEC protocol! You can see the 9 ms pulse at the beginning, followed by the 4.5 ms gap. The script is off by several hundred microseconds but it's close enough to see what's going on. The next step is to convert this series of pulses to binary.

The basics of the [NEC protocol](#) are simple:

- A "logical 0" is a 562.5 microsecond pulse, followed by a 562.5 microsecond gap.
- A "logical 1" is a 562.5 microsecond pulse, followed by a 1687.5 microsecond gap.

Keep in mind that in my pulse list above, a 0 is a pulse, and a 1 is a gap. So to start, chop off the leading 9 ms pulse and the 4.5 ms gap and then read the lines two at a time. The first two entries are:

```
0 631
```

```
1 497
```

That's a roughly 565 pulse followed by a 565 gap, so this is a 0. Next is:

```
0 628
```

```
1 1607
```

A 565 pulse followed by a 1687 gap (you can start to see why the numbers don't need to be exact). This is a 1. Next:

```
0 635
```

```
1 490
```

565 pulse followed by a 565 gap, that's a 0. And so on. Notice the signal also has a trailing 565 pulse at the end. Some signals have this, some don't, but the NEC protocol suggests that the signal *should* have it. We end up with

```
01000001101101100101100010100111
```

I did this one by hand, but for my air conditioning remote, you can imagine it getting tedious. The algorithm to convert these pulses into binary is pretty straightforward and it's simple enough to adapt our Python script to do it for us. We can use the

heuristic that any gap over 1000 microseconds is likely a logical 1, otherwise it's a logical 0. Looking at the data, we can see that this is sufficient to distinguish the two. You could even write a cutesy one-liner to convert this "command" array into a binary string:

```
binaryString = "".join(map(lambda x: "1" if x[1] > 1000 else "0", filter(la
```



In the script, `command` is an array of tuples of the structure (`pulse_value`, `pulse_duration`) where `pulse_value` is a 0 or 1, and `pulse_duration` is an integer in microseconds. We filter this array to only include the gaps (`x[0] == 1`) because the gap is what distinguishes a 1 from a 0. Then we map all gaps with a duration (`x[1]`) greater than 1000 to be a "1", otherwise a "0". All those 1s and 0s are then joined together to form the binary string.

If we group this binary string into bytes, we can see the structure of the signal a little more easily:

```
01000001
10110110
01011000
10100111
```

One thing the NEC protocol mentioned is that the second byte should be the inverse of the first, and the fourth byte an inverse of the third. At first I thought I did something wrong, but it turns out my remote doesn't follow the standard. So that's great! We decoded the signal, and it even looks like an NEC protocol infrared signal. At this point, to test that I decoded it correctly, I wanted to run the command through LIRC (Linux Infrared Remote Control). This package lets you define static commands in hexadecimal in a config file, and then you can send them from the command line.

Here's the conversion of the binary string to both decimal and hex

Binary	Decimal	Hex
01000001	65	41
10110110	182	B6
01011000	88	58
10100111	167	A7

Final: 0x41b658a7

# Sending the IR signal

If you google around for "rasberry pi send infrared", you get almost exclusively results talking about LIRC. And unfortunately I'm probably going to add another result to the pile. I say "unfortunately" because I had a horrible experience with it. The configuration files are confusing as hell and don't seem to support comments correctly, the website is very old and extremely unhelpful when just trying to figure out how to even use it, the capture tool didn't work properly for me, and worst of all, it only seems to support static codes. A remote that keeps its own state and sends dynamic signals based on that state are not supported. There goes any hope of supporting my air conditioner, unless I wanted to settle for static presets, and that's no fun.

I mean, just look at [all this ridiculous config file ceremony](#) to get the thing set up. I found the whole process of decoding the signals and writing code to send it to be more straightforward than messing around with some crazy config file, guessing at what flags I need to set, and what config files need to be tweaked in just the right way. I ended up finding the documentation for *some* of the config files on [an old page for WinLIRC](#) that explained at least a little bit, but was stingy with details. LIRC was *not* a pleasant tool to work with, it's too cumbersome and limited with its static config files.

Also, this

If the comment character (#) appears as the first character on a line the rest of the line is ignored.

is infuriating. If the # character is the first non-whitespace character on the line, but it is not the *first* character, LIRC will complain about syntax issues with the config file (or it'll just crash, I forget and I don't care).

However, by some miracle, I didn't give up and tried enough permutations that I bruteforced my way to a working config. [Results here](#)

In the video you can actually see our hex code contained in the config file I was editing with one hand. Great, it works! I even have a [small writeup](#) on getting LIRC working if you're into that.

Now how the hell do I do this without the madness of LIRC? Why do we even need LIRC to begin with? Can't we just write a python script and turn the pins on and off,



kind of like how we were reading from the infrared receiver? Good question but no, you can't.

In order for infrared to work properly, you need a pretty consistent 38 kHz signal to be generated. That means you need to go through an entire on/off cycle every  $1/38000$  seconds, or roughly every 26 microseconds. That's no problem, you think. Even the first Raspberry Pi had a 700 MHz CPU, more than fast enough to change a pin on and off at 38 kHz. But you don't get all that 700 MHz to yourself. You have to run the OS, which takes quite a sizable chunk of that processing speed away. Then you have the fact that you're running Python, an interpreted language that might run a garbage collector at any time, delaying your code unpredictably. And even a compiled program written in C or C++ could be interrupted by the operating system, as your program is not the only thing running and the OS will stop your program to give other programs a chance to run. So you might get the correct speed with C, but the OS interruptions means you won't get a consistent wave, and thus the signal won't work, or it won't work reliably.

So how does LIRC get away with it? I don't know the exact terminology, but it uses something like a "kernel module" or "kernel extension" that runs at the same level as the operating system. In other words, it runs on the bare CPU and can do whatever the OS can. By doing this, it can prevent itself from being interrupted by the OS, which means it can generate a consistent signal on the Pi's GPIO pins. I'm not sure if there's a time limit to how long it can do this, but it definitely has enough time to send an infrared signal. In the video I linked at the beginning, he used an Arduino to send the signal. An Arduino doesn't have a big time-slicing OS running on it to interrupt your program, so it can get away with just generating the signal as you would with a Python script (except Arduino runs a version of C). But I wanted to run everything on a Pi because of its networking capabilities and the fact that I can use practically any language I want. I *could* attach an Arduino to the Pi, but then I'd have to power two microcontrollers and it's just a clunky solution. I could alternatively use an Arduino with a Wi-Fi adapter, but then I'd lose the convenience of having a full-blown and well-supported Linux environment like the Pi provides.

## A better way to send IR signals (pigpio)

With that high level understanding of LIRC, I did some searching and came across a library called [pigpio](#). What caught my eye was this sentence on the feature list:

the construction of arbitrary waveforms to give precise timing of output GPIO level changes (accurate to **a few microseconds**).

Perfect! So what this means is pigpio, among other things, is a library that will let us build up the infrared wave ahead of time and hand it off to be transmitted in a kernel extension where it won't be interrupted. There are some limits to the size of the wave we can transmit, but you can recompile pigpio to make those limits higher, and I found that my remote's signal fits entirely in the default wave size of pigpio.

I found pigpio to be a fantastic library, and it gets bonus points for being a C project that builds on the first try. Thank you, joan2937, you've made a super helpful library and this project wouldn't have been nearly as pleasant without it.

pigpio offers a ton of functionality, but I was only interested in generating waveforms with microsecond timing. I set out to create a wrapper library that is just designed for sending an infrared signal on a Pi's GPIO pin and nothing fancier than that. I wanted to be able to specify the pin, the pulse frequency, and the timing values for infrared pulses since the timing on remotes can vary. I also wanted it to accept a binary string to send, to make it easy to use it with dynamic infrared codes. I ended up creating [ir-slinger](#) to accomplish this. It just has one function, `irSling()`, which takes in all the pulse parameters, a GPIO pin number, and a binary string, and it will do its work to set up the infrared wave and send it over the pin. pigpio has tons of other features and even has the ability to output the signal on multiple pins at once. I decided to simplify my library to just work on one pin at a time but it can easily be modified to support multiple pins.

I'm not going to go into too much detail with the C library. It's a header-only library, so just include it in your own program and pass a few linker flags to the compiler. Those flags are documented in the README. Instead of making one executable that takes in a billion parameters, I settled on making an executable per infrared device I have, and hard coding the pulse parameters in the code itself. For example, this is the entire source code for the ceiling light program:

```
#include <stdio.h>
#include "irslinger.h"

int main(int argc, char *argv[])
{
    uint32_t outPin = 23;           // The Broadcom pin number the signal
    int frequency = 38000;         // The frequency of the IR signal in H
    double dutyCycle = 0.5;        // The duty cycle of the IR signal. 0.
```

```

// the LED will turn on for half the c
int leadingPulseDuration = 9000; // The duration of the beginning pulse
int leadingGapDuration = 4500; // The duration of the gap in microsec
int onePulse = 562; // The duration of a pulse in microsec
int zeroPulse = 562; // The duration of a pulse in microsec
int oneGap = 1688; // The duration of the gap in microsec
int zeroGap = 562; // The duration of the gap in microsec
int sendTrailingPulse = 1; // 1 = Send a trailing pulse with dura
// 0 = Don't send a trailing pulse

int result = irSling(
    outPin,
    frequency,
    dutyCycle,
    leadingPulseDuration,
    leadingGapDuration,
    onePulse,
    zeroPulse,
    oneGap,
    zeroGap,
    sendTrailingPulse,
    "01000001101101100101100010100111");

return result;
}

```

If you save that as `test.c`, it can be compiled on the Pi with `gcc -o light test.c -lm -lpigpio -pthread -lrt` and you'll get an executable file called `light` if everything compiled. This assumes `pigpio` is installed on your Pi, see the [github repo](#) for more detailed steps on getting this working.

This executable can then be easily called on the command line or as a child process from another language (which is exactly what I do...more on that later).

So to recap, we learned about the NEC infrared protocol, used an infrared receiver to decode the signal a simple remote is sending, and then found and used a cool C library to allow us to send arbitrary signals. Every time we run the program above, it sends the signal one time to my ceiling light. The final missing piece is the actual circuit you need to connect to the Pi to get an infrared LED blinking. I'm an electronics rookie so I can't speak authoritatively on this part of the project. I put something together that works, but I'm sure an actual EE could make it more robust (and do a better soldering job). I'm very open to any improvements that can be made!

## A basic infrared LED circuit



With that being said, this is a simple thing we're doing, just turning an LED on and off. It's a basic electronics project. At first I thought I could just hook the LED up to the GPIO pin directly (with a resistor to limit the current), but it turns out the GPIO digital outputs don't have enough current to get the LED to the right brightness levels. The Pi has a 5 volt output pin which can provide enough current, so I wanted that output to go through the LED. You can't just hook up the 5 volt line straight to the LED though, because then the LED would always be on and useless for our purposes. We want to turn that 5 volt source on and off according to our infrared signal, but you can't (or just shouldn't?) directly turn the 5 volt pin on and off. This is the perfect use case for a transistor. A transistor will let you apply a small current from a Pi's GPIO pin and when that small current is present, it allows electricity from the 5 volt pin to flow through. If the small current is absent, the stronger current can not pass through the transistor. This is a simplified explanation, as there are cases when the stronger current would make it through the transistor, but if your parts are picked correctly and the circuit is wired up properly, that is how it should work.


So my final circuit now involves an infrared LED, a PN2222 transistor, and a 680 ohm resistor because the transistor [needs a resistor at the base pin](#) (where the GPIO pin switches the 5 volt signal on and off). I knew that an LED typically should have a resistor to limit the current going through it as you don't want to burn it out. However, I wanted the strongest signal possible, and using a resistor would reduce the brightness of the LED. I also thought that since I was pulsing the LED and not just turning it on for extended periods of time, it would be okay. That worked fine...for about 60 days, and then it burned out. Or perhaps my crappy soldering job gave up. The LED still emits a very faint signal, so I'm not sure which is the case. I created an alternate circuit with a 39 ohm resistor to limit the current through the LED, but it turned out to be too weak for my devices to pick up. Any electronics experts want to chime in and tell me what you'd do to make this circuit better? I would love to build a better one. For now I just swapped out the LED with a slightly different one which I think can handle slightly more voltage.

Tip: You can see if an infrared LED is emitting light by looking at it through your phone camera, most can pick it up. Otherwise you could spend hours diagnosing issues and not know what's going on.




Infrared light often shows up purple when seen through a camera

Here is my final circuit on a solderless breadboard, and the same circuit on a smaller scale:

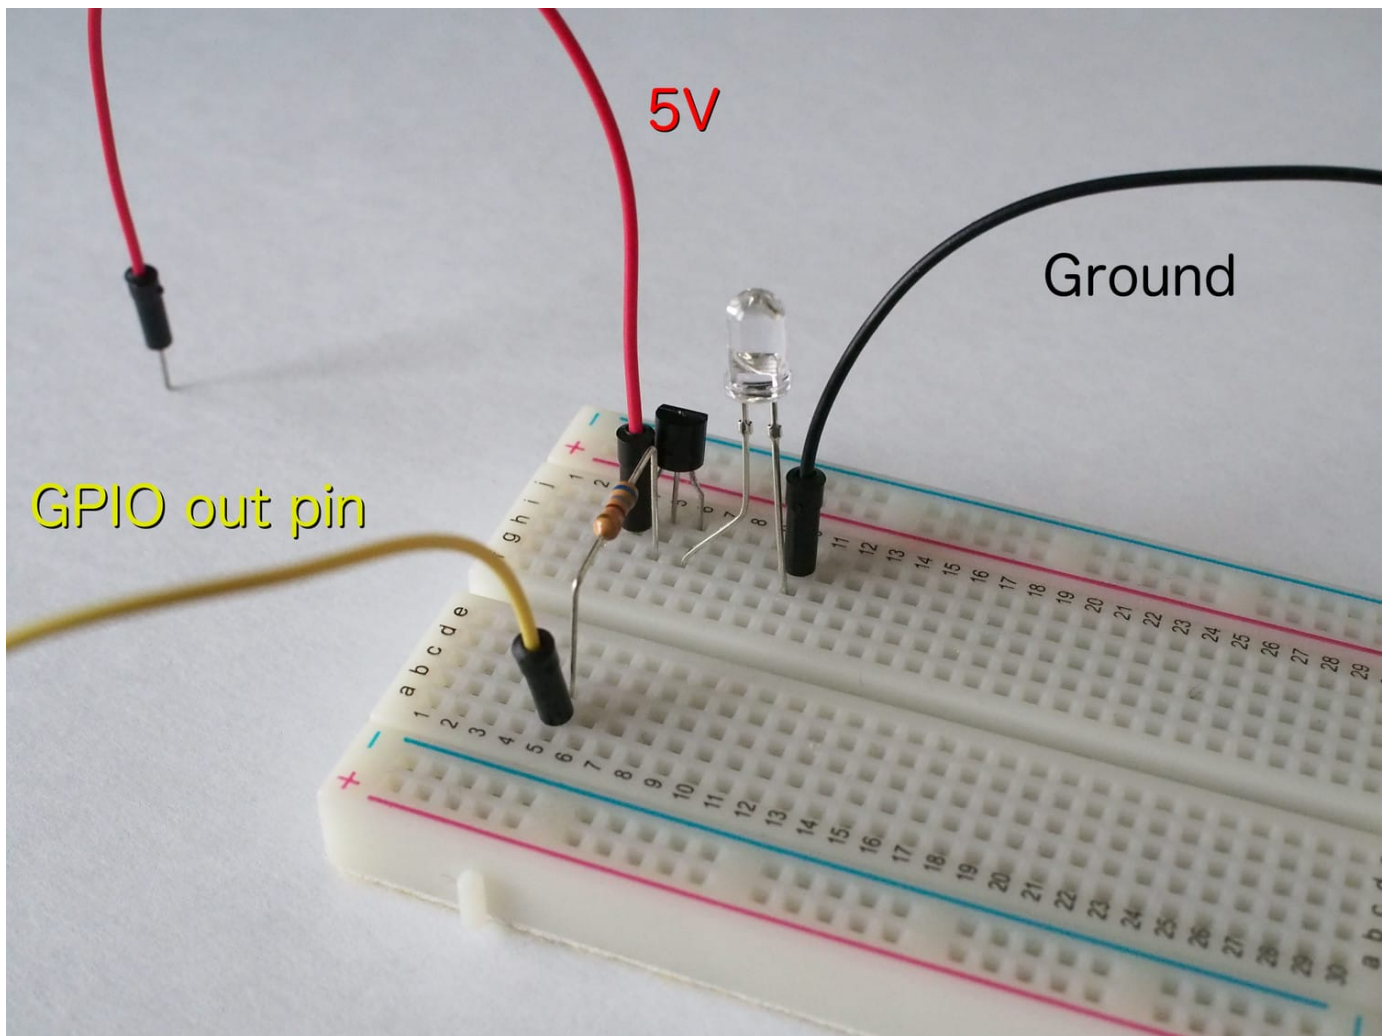


LED circuit on a solderless breadboard

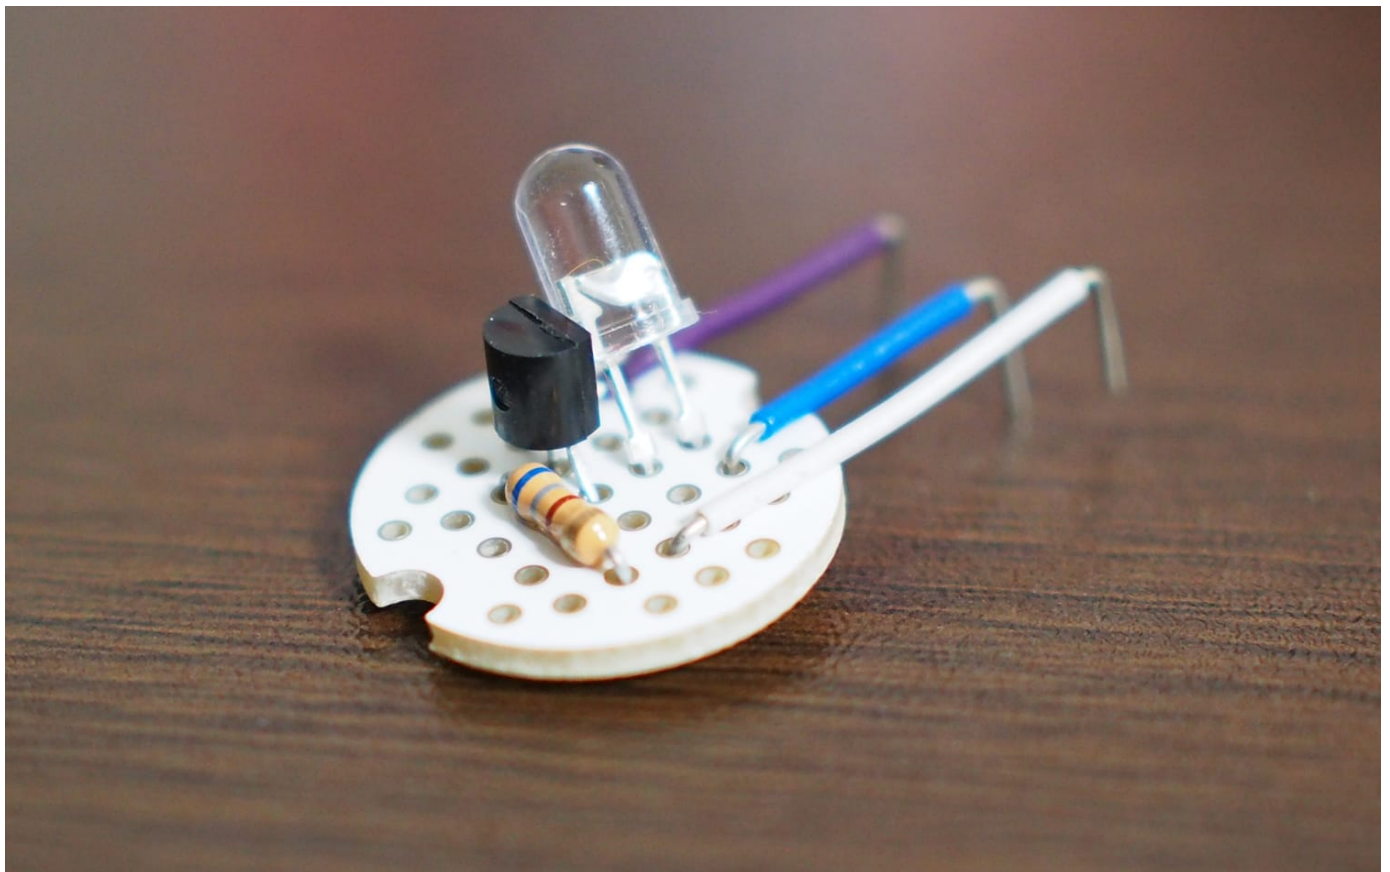

Same circuit on a prototype board



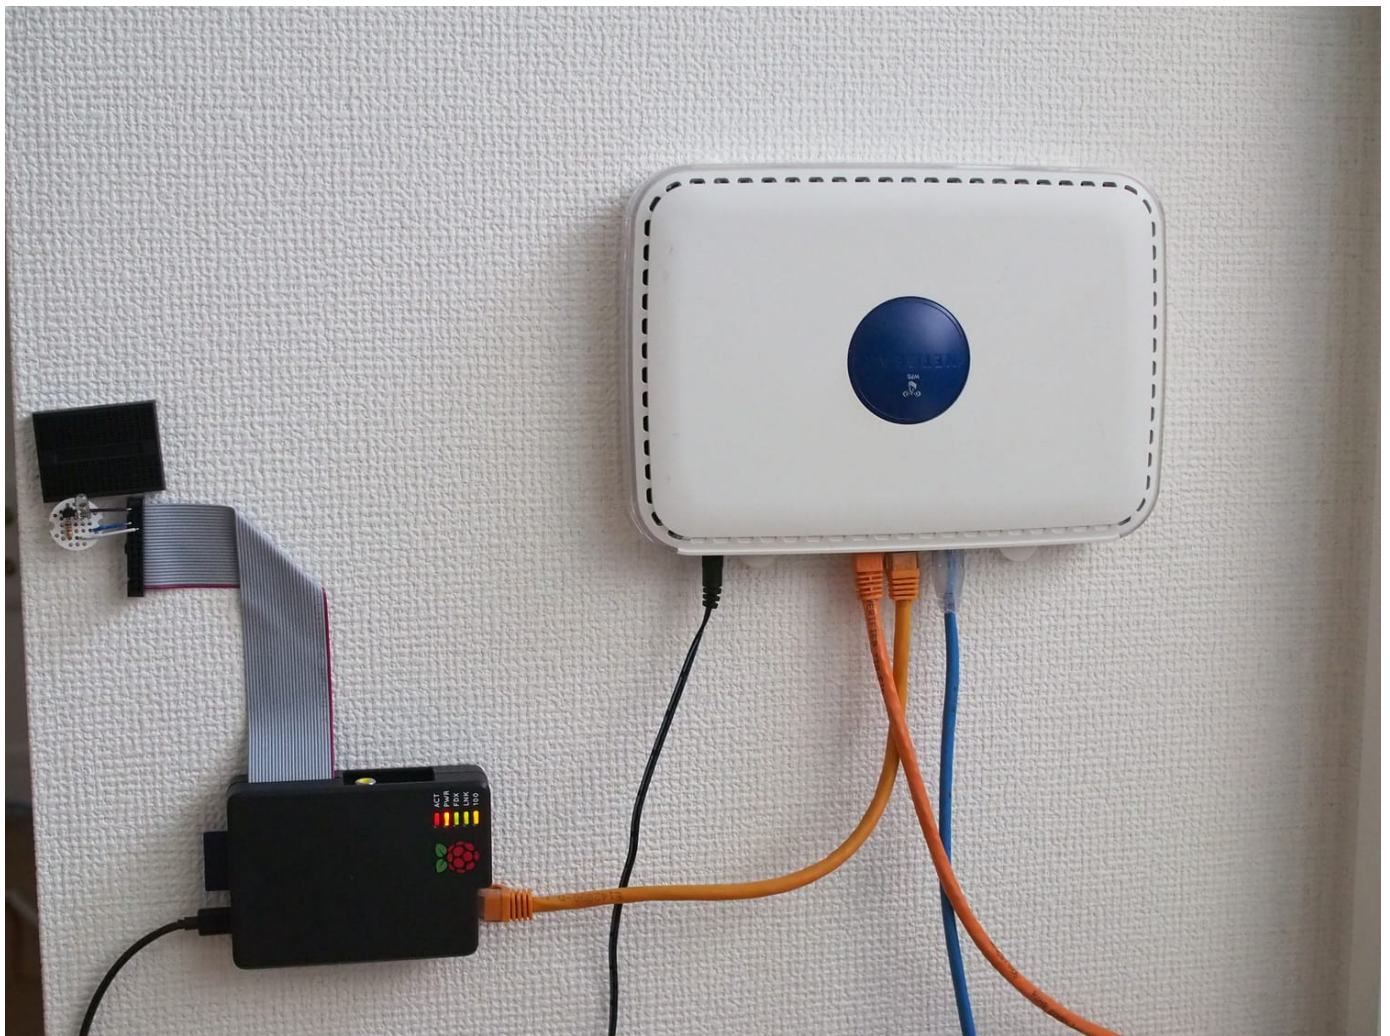

Final setup mounted on the wall (That black breadboard is for future projects and testing)

I could take this a step further and design a PCB with proper header pins, maybe someday!

## Decoding a dynamic IR remote

Dealing with my ceiling light remote was easy -- there's only one button! It sends the same signal every time, and the signal can be short because it doesn't need to carry much information. On the other hand, my air conditioning remote is a lot more complicated:



I found the area where the temperature was being encoded by just looking for differences in the string. This was a manual process, but if I were faced with hundreds of codes to analyze, I'd write a script that would assist with this. Here are the same codes, with the temperature data isolated:

```
25 c - 100000000000100000000000000000101111101111111110000000001100111100
24 c - 100000000000100000000000000000101111101111111110000000001100111100
23 c - 100000000000100000000000000000101111101111111110000000001100111100
```

Here they are again with just the binary strings that differ:

```
25 c - 00100110 11011001
24 c - 00000110 11111001
23 c - 00111010 11000101
```

I grouped these in bytes. Remember how the NEC protocol will often send a binary string, and then the inverse of that string? The same thing seems to happen on a byte-level in this string. For 25 c, we have "00100110" and its inverse, "11011001". For this temperature byte, let's ignore the inverse and just look at the first byte: 00100110. All of the observed temperature bytes seem to have two leading 0s, so I chopped those off:

```
100110
```

At first I tried to read the byte from right to left because I'm just used to having the least significant byte on the right. Converting to decimal gives:

```
5  4  3  2  1  0
1  0  0  1  1  0

5          2  1
2 + 0 + 0 + 2 + 2 + 0 = 32 + 4 + 2 = 38
```

38 is way too hot for a heater (not to mention it doesn't seem related to 25, which is the current temperature), so I tried starting from left to right:

```
0  1  2  3  4  5
1  0  0  1  1  0

0          3  4
2 + 0 + 0 + 2 + 2 + 0 = 1 + 8 + 16 = 25
```

There we go! Let's verify the code from 23 c, just to be sure:

0	1	2	3	4	5
1	1	1	0	1	0

0	1	2		4						
2	+	+	+	+	+	=	+	+	+	=

It gets tedious, but that's basically all there is to it. Keep changing one variable at a time, take note of your current state, record the binary strings, then compare the bits until you find where they differ. I was interested in the temperature, mode (heat, cool, dry), and fan speed. My full analysis is [here](#)

## Constructing the signal in code

Ignoring the on/off timer part of the signal, you can construct the full signal with this code (JavaScript):

```
function getIRCodeFromState(state) {
    var code = "10000000000010000000000000000010111111011111111100000000001

    // Button category
    switch (state.button) {
        case "UP/DOWN":
            code += "0010001011011101";
            break;
        case "MODE":
            code += "1100100000110111";
            break;
        case "FAN_SPEED":
            code += "0100001010111101";
            break;
        case "FAN_DIRECTION":
            code += "1000000101111110";
            break;
        default:
            code += "1100100000110111"; // MODE
            break;
    }

    // Temperature code
    var temperatureCode = binaryUtil.decimalToBinary(state.temperature);
    temperatureCode = temperatureCode.split("").reverse().join("");
    temperatureCode = "00" + temperatureCode + "0";
    temperatureCode += binaryUtil.inverseBinaryString(temperatureCode);

    code += temperatureCode;
```



```

// Timer-specific code. This means no timer has been set.
code += "0000000011111111000000001111111100000000111111110000000011111111

// Mode
var modeFanString = "";
switch (state.mode) {
    case "HEAT":
        modeFanString += "0110";
        break;
    case "DEHUMIDIFY":
        modeFanString += "1010";
        break;
    case "COOL":
        modeFanString += "1100";
        break;
    default:
        modeFanString += "1010"; // Dehumidify
        break;
}

// Fan speed
switch (state.fan_speed) {
    case "AUTO":
        modeFanString += "1010";
        break;
    case "STRONG":
        modeFanString += "0010";
        break;
    case "WEAK":
        modeFanString += "1100";
        break;
    case "VERY_WEAK":
        modeFanString += "0100";
        break;
    default:
        modeFanString += "1010"; // AUTO
        break;
}

code += modeFanString;
code += binaryUtil.inverseBinaryString(modeFanString);

if (state.power_status === "ON") {
    code += "100010110111010000000000111111110000000011111111";
} else {
    code += "100000110111110000000000111111110000000011111111";
}

return code;
}

```

Given a state object, such as

```
{  
  mode: "HEAT",  
  temperature: 23,  
  fan_speed: "AUTO",  
  power_status: "ON",  
  button: "MODE"  
}
```

the function above will return the binary string we need to send through our infrared LED. At this point, it's a matter of knowing the parameters for the NEC protocol, and using the `ir-slinger` library I made earlier. I guessed that the frequency would be 38 kHz since that is common. Through some measurements of the signal with my python script, I found the following parameters:

```
leadingPulseDuration = 3500 microseconds  
leadingGapDuration = 1600 microseconds  
onePulse = 400 microseconds  
zeroPulse = 400 microseconds  
oneGap = 1300 microseconds  
zeroGap = 450 microseconds  
sendTrailingPulse = 1
```

I wrote a simple C program that hard codes these parameters, but takes a binary string as an argument. This way I can send arbitrary commands that my air conditioner will understand, and then I have control over it!

## Sending commands from the Internet

Now I can use that signal construction code and my C library to build and send infrared signals while using the Pi locally. But my main use case for this project was to turn on my heat ahead of time while coming home from work. It needs to work from anywhere on the internet.

At first, my plan was to expose an HTTP server on the Pi, and use my router to forward a particular network port to the Pi. This was stopped pretty quickly though, because I have an internet connection that came with my apartment, and it seems most incoming connections are dropped somewhere before my router. I can't access or configure that part, so accessing the Pi from the outside would be tough. I could use a

VPN or some kind of service like <https://ngrok.com/>, but I decided to try out something else.

With an IR remote, you store local state. When you press a button, it changes the state on the remote and sends that new state out as an infrared signal. The remote does not receive any response from the device. In practice, I could do the same thing. It would be *nice* to get a response with the current state of the device, but it's not necessary. So keeping in mind that I don't necessarily need two-way communication, I thought of Amazon SQS as a way to provide one-way commands that can access the Pi. Amazon SQS stands for Simple Queue Service. It's a message queue that you can throw messages onto, and one of many devices can receive a message from the queue and process it, or put it back in the queue if the device can't handle it. It works by having a client send a command to a known URL (the URL of the SQS queue), and a "worker" polling that same URL for new messages.

So what I could do is write a web interface (or a native android/ios app) that posts JSON messages to the queue's URL. Then the Pi would be continuously monitoring that queue for new messages. When it receives a message that is properly formatted, it can extract the data and use it to send a command. Simple! I was actually really pleased with this idea because it requires no network changes on my end, and protects the Pi from being exposed to the Internet at large. The only things getting in from outside are SQS messages, and those can also be locked down so only clients with the right authentication can send messages. The disadvantage is that the clients don't receive any feedback from the Pi, though I could work around that by having the Pi post its latest state to AWS S3 (Simple Storage Service). I ended up using the SQS method for passing data to the Pi and so far it's been great! I expected the latency to be kind of bad, but it's actually quite fast considering all the hops involved from phone to Pi.


## The server

I wrote the server with NodeJS because it's quick, easy, and is fast enough for what I wanted to do. The source code can be found [here](#). The server originally (and still does) have an HTTP API exposed on the local network that I can use to control my light and air conditioner, but the UI I made talks to the Pi through SQS. In the future, if I make an Android app then it can detect when it's on my wifi network and use the local HTTP API to query the current state of my devices. The server keeps a history of air conditioner states in an SQLite database, is responsible for routing queue messages to

the correct device, constructing IR codes, and actually sends the IR signal by starting a child process. Instead of having one executable on the Pi that takes in a ton of parameters, I made two separate ones: `ceiling-light` and `aircon`. `ceiling-light` has everything hardcoded, you just call it and it sends a signal to my light. `aircon` takes a binary string as an argument and sends that to the air conditioner (with hardcoded timing values). I just call these from Node with the `child_process` module, which was straightforward and quick to implement. It's a pretty simple server and isn't the focus of this article, so I won't go into much more detail than that. I'm pleased with the design though, I can see myself easily adding other infrared devices into this code.

One thing to note is the security of this setup. Currently, the queue accepts messages from anyone, but only the Pi can pull messages off of it. Additionally, the client must send a password along with any messages sent to the queue. The pi will only act on messages that have the correct password (which can be arbitrarily chosen). An attacker doesn't get any feedback on whether or not the password is correct, so there's little to be gained by trying to bruteforce it. I could go a step further and only allow specific users to send messages to the queue, and I'll probably have to do that before posting this article... It's not a perfect security setup by any means, but it's enough to prevent random people from turning your apartment into a furnace.

## The web interface

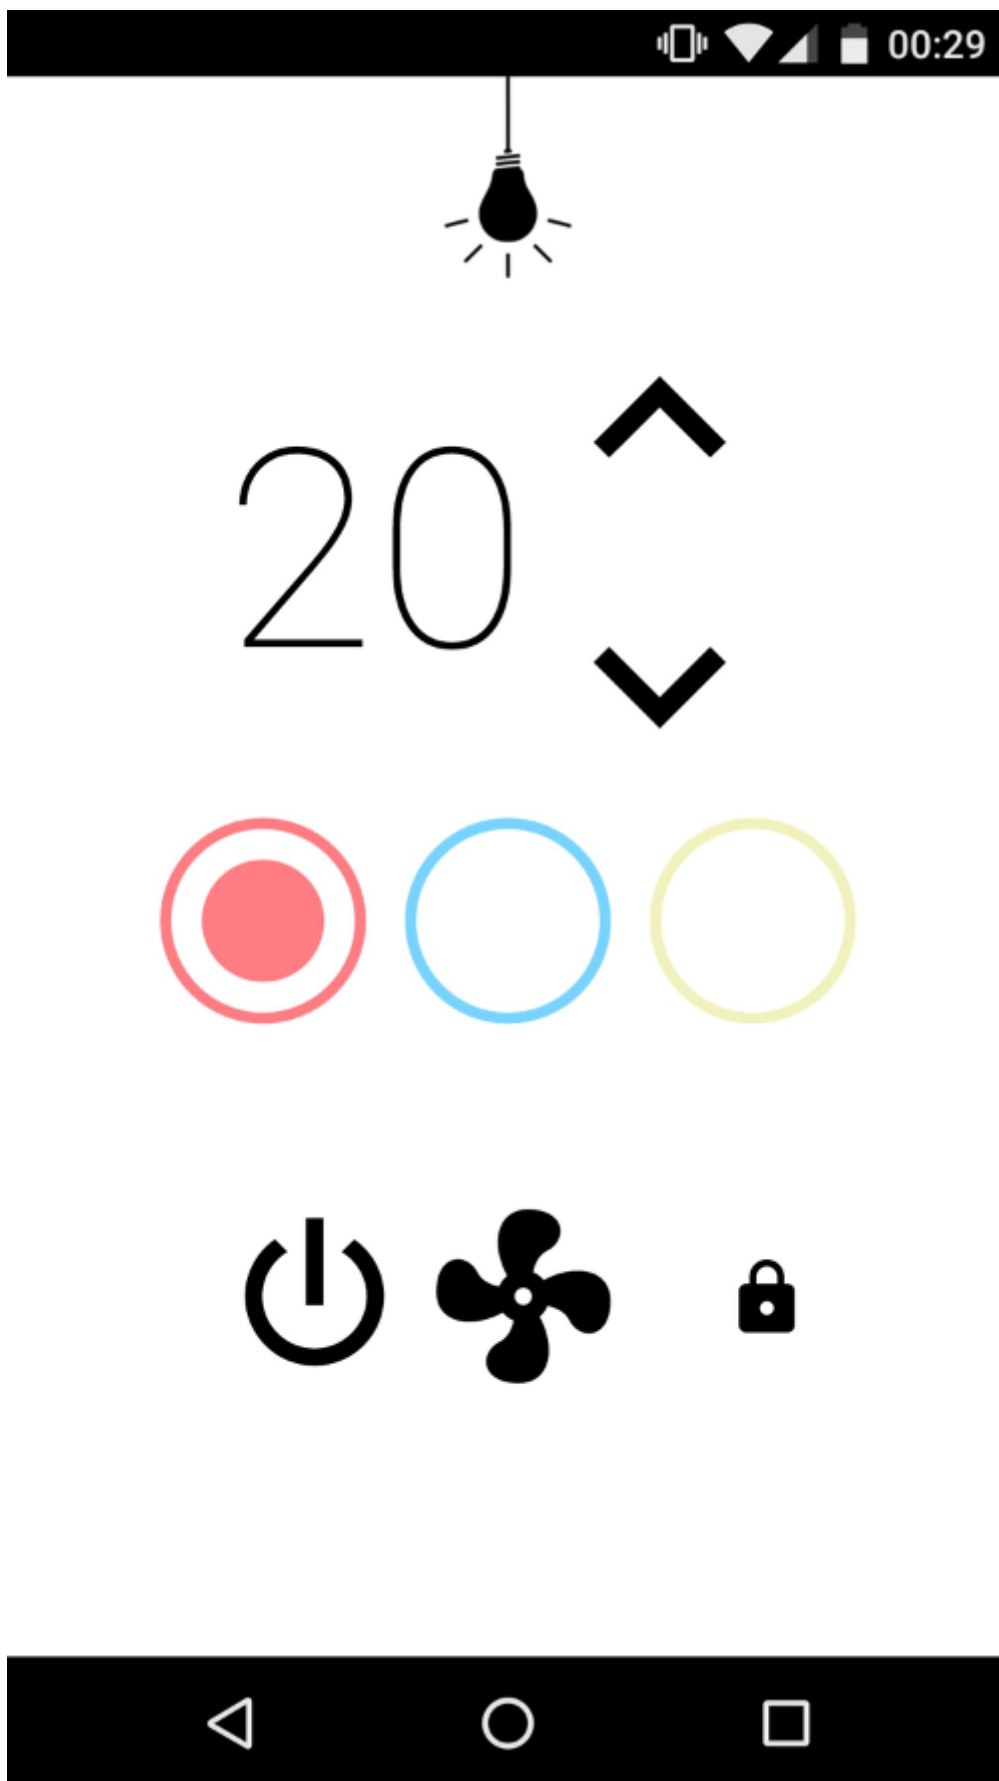


Final control panel for my air conditioner and light

This was one of my favorite parts of the project aside from getting the actual infrared signals working. I was originally going to make an Android home screen widget (and I may still do that), but I don't particularly enjoy Android programming so I settled on



making a web interface first. I just needed an interface that acted like a remote. You press buttons, state changes, and a command is sent. So it needed a bit of interactivity, but nothing too fancy. I ended up trying out ClojureScript and a small library called [Reagent](#) to handle updating the views as buttons are pressed. The entirety of the UI logic is contained in [one nice file](#).

I loved the speed of development I could achieve with ClojureScript, and it was fun seeing live code changes appear on multiple devices at once with the help of Figwheel, an excellent plugin to Clojure(Script)'s build system.

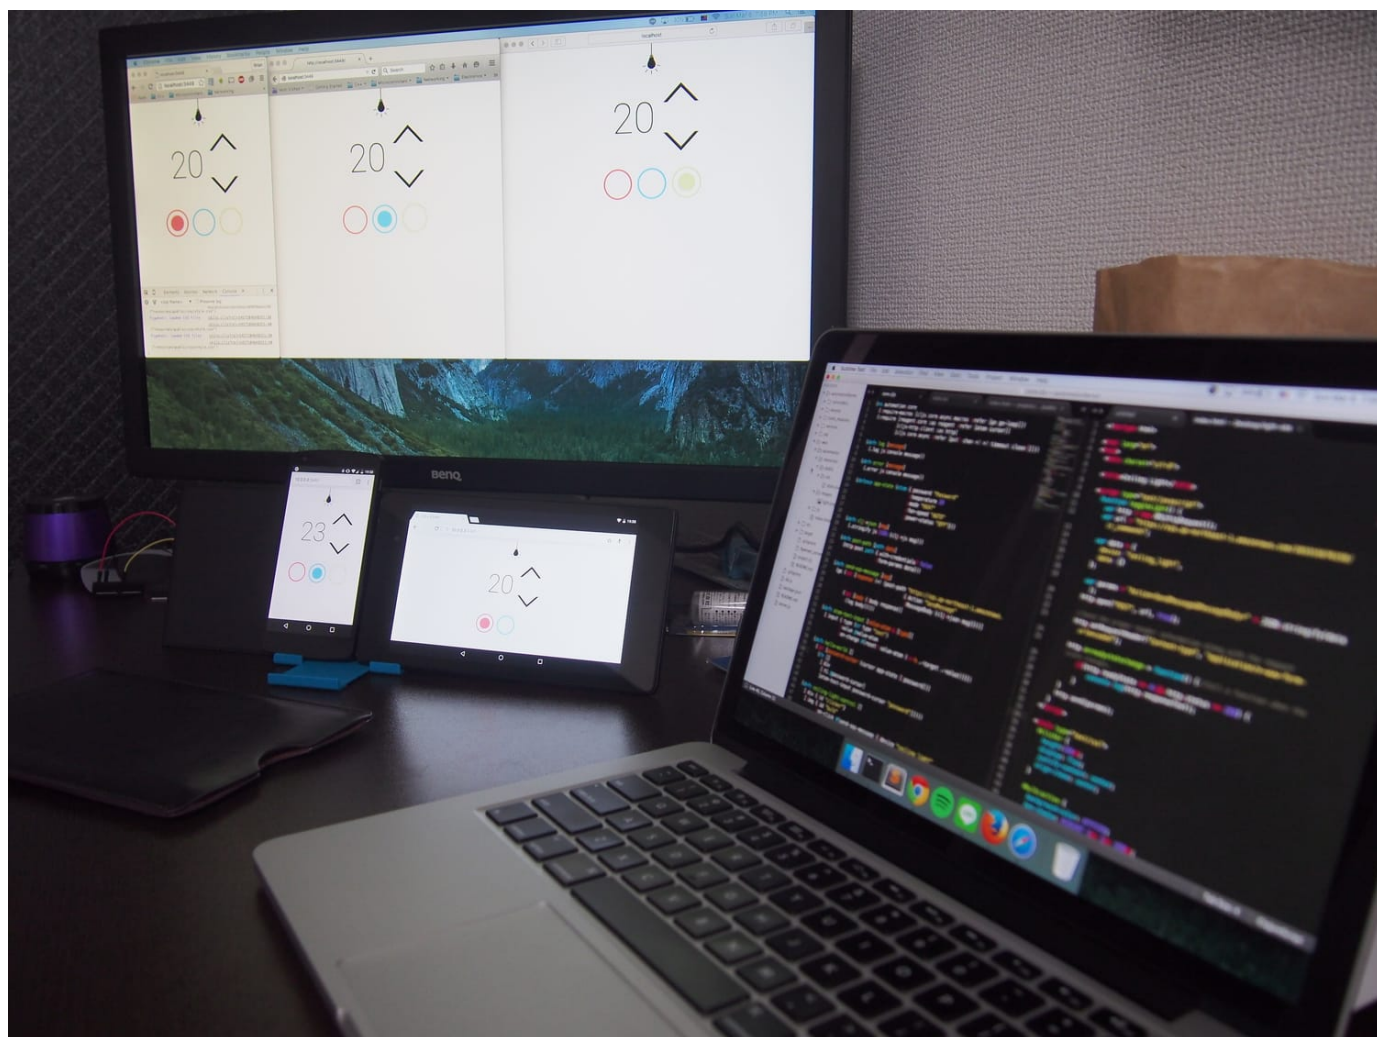

Testing multiple browsers and devices at once on every file save, thanks to Figwheel. Overkill, yet lots of fun.

I got the bare minimum set up so I could turn my light and air conditioner on and off, change the temperature, change the mode from heating to cooling, and enter the password needed for the server to accept the messages. By the time I got this functionality set up, I was basically satisfied and got a bit lazy about implementing the rest (such as the fan speed control). I finished what I set out to do though, which was to reverse engineer my infrared devices and control my heating/cooling remotely. It's not often I finish a personal project from start to finish so I'm very pleased with this

one, and I hope my ir-slinger library can be helpful to others who want to do something similar.

102 Comments

bschwind

 Login ▾

 Recommend 4

 Share

Sort by Best ▾

Join the discussion...

LOG IN WITH

OR SIGN UP WITH DISQUS 

Name



**Toxic Tigga** • 4 months ago

I'm wondering if anyone was successful in getting an RC5 signal working through this setup. This works perfectly for my Samsung TV and I enjoyed working this project. Thanks Brian.

2 ^ | ▾ • Reply • Share ›



**Hemanthkumar S** • a year ago

Hello Brian, Thanks a ton for putting up this article. I am having a hard time with LIRC for decoding my tv remote control. I am sure your tool is going to help me.

1 ^ | ▾ • Reply • Share ›



**Brian Schwind** Mod → Hemanthkumar S • a year ago

Thanks for reading!

^ | ▾ • Reply • Share ›



**Mariusz Herich** • 3 months ago

Can I ask for a little help? I try to run my AC and from remote I get (RAW)

3297, 1553, 464, 351, 473, 343, 472, 1163, 467, 351, 476, 1154,  
475, 344, 447, 370, 476, 342, 472, 1160, 469, 1167, 473, 344, 468,  
348, 466, 352,  
464, 1167, 473, 1161, 468, 348, 477, 343, 473, 343, 449, 369, 476,  
339, 476, 343,  
470, 343, 473, 346, 469, 349, 477, 340, 471, 344, 452, 365, 469,  
347, 476, 1158,  
473, 344, 500, 317, 477, 342, 473, 344, 472, 343, 468, 352, 473,  
340, 477, 1161,  
465, 348, 478, 343, 471, 344, 472, 343, 471, 1166, 473, 1158, 470,  
1166, 474, 1157,  
449, 1186, 445, 1191, 469, 1166, 472, 1159, 448, 369, 468, 349,  
477, 1156, 472,  
344, 481, 339, 473, 344, 473, 343, 468, 350, 476, 339, 476, 343,

493, 322, 472,  
1161, 479, 1157, 468, 349, 469, 348, 477, 1157, 468, 348, 469,  
348, 445, 370, 475,  
345, 470, 347, 468, 1165, 473, 344, 473, 1160, 477, 340, 476, 339,  
473, 347, 468,  
347, 477, 340, 476, 343, 471, 345, 472, 346, 477, 340, 472, 1160,  
470, 349, 476,  
1156, 473, 343, 470, 349, 467, 348, 477, 340, 443, 373, 472, 348,  
468, 350, 443,  
370, 476, 343, 472, 344, 468, 347, 477, 343, 472, 344, 472, 347,  
468, 348, 477,  
339, 473, 343, 473, 347, 468, 345, 480, 339, 472, 346, 472, 343,  
468, 348, 480,  
339, 443, 374, 470, 348, 468, 348, 476, 339, 444, 375, 472, 344,  
468, 350, 475,  
344, 472, 1161, 522, 296, 475, 339, 476, 342, 472, 1161, 476, 343,  
472, 1162, 468,  
1164, 474, 343, 474, 1160, 477, 339, 475

And I converted it for 0 and 1 - didn't work. I sent a raw - nothing. I started IR receiver and compared signal 0&1 from remote and from Raspberry - identical. I compared RAW from a remote control and from Raspberry - it has some differences, for example from remote control there is 351 and from Raspberry 284. That's all the difference I have found but AC unit is very stubborn (Fujitsu). Can you say what can I do to make it working? I gave up last year maybe this I make it working?

^ | v • Reply • Share ›



**Nik Melton** • 4 months ago

**@Brian Schwind** Wow great write up! I really wish IR was part of the standard libs for rpi...

I could use a little help with your code!

I wrote up a quick wrapper for your pyslinger code and the example receiving code you give in the above article so that send and receive functions are contained in one class.

I'm trying to get the rpi to repeat the IR signal it is receiving to a device connected by GPIO (an LED strip). The light strip I'm controlling was originally IR controllable but has had the receiver removed and in its place, the rpi is attached via an optocoupler. But I'm having issues getting the signal repeating properly. I have no trouble receiving the IR signal and I end up with a nice binary string using the code have in the article above culminating in this line:

```
binaryString = "".join(map(lambda x: "1" if x[1] > 1000 else "0",  
filter(lambda x: x[0] == 1, command)))
```

But when I go around to send this with your nvslinger library.

the command is not understood and goes by unnoticed. I know my pin outputs because I've tested the output with a visible LED but perhaps there is a formatting issue in the binary string that I'm not completely understanding? Do you think you could help?

Thanks!

^ | v • Reply • Share ›



**Brian Schwind** Mod → Nik Melton • 4 months ago

Hey Nik, did you determine your remote's timing values from the raw microsecond values you received? My remote had a leading pulse of 9000 microseconds and a leading gap of 4500 microseconds but your remote could be very different. You also need to check the timing values which represent a 1 and a 0 and specify those when using the library.

If you got the timings down already, try toggling the ``sendTrailingPulse`` variable because some remotes need a trailing pulse and some don't.

^ | v • Reply • Share ›



**Jason** • 5 months ago

Fantastic writeup, thanks! Definitely helped fill in the gaps from a bunch of other info I found online, especially around the air con remote holding the state, and what the hex codes in LIRC mean

^ | v • Reply • Share ›



**Brian Schwind** Mod → Jason • 5 months ago

Hey Jason, glad it helped!

^ | v • Reply • Share ›



**Juan** • 6 months ago

Hi Brian, nice work here. I've been working on skipping LIRC myself as well.

Any clue on how to update the code for the IR signal capture in order to start with a 1 (high pulse) recognition input instead of a low? I've try so far, but all I've achieve is to do so but without capturing the first long pulse of the head. The rest is ok. Instead, I just get a very short pulse of 50-70 us followed by the 1500 us of the low part of the head. I know because of ...LIRC... that head is about 3100 high and 1500 low. Can't figure it out why I can't read that first pulse if I modify the python script. My hardware configuration is same as yours, except for a 4,7K resistor between PIN 23 and GND to pull down #23 to 0. Otherwise I get noise readings.

Any comments would be welcome

^ | v • Reply • Share ›



**Brian Schwind** Mod ➔ Juan • 6 months ago

Hey Juan, could you put your code in a github gist and link it here? I'd be happy to take a look.

^ | v • Reply • Share ›



**Eugene Brink** • 7 months ago

Rewrite everything because of an undocumented, dodge, fragile tool? This is how I feel about everything on Linux. And everything python, for that matter. Well done, good sir!

^ | v • Reply • Share ›



**Brian Schwind** Mod ➔ Eugene Brink • 7 months ago

Thanks for reading! LIRC would be okay if it had better documentation, nicer config file formats, and helpful error messages. My solution works but isn't as flexible and takes more programming effort. As a DIY kinda person though, writing my own tool was much more fun :)

^ | v • Reply • Share ›



**Francescoroot** • 8 months ago

Hello Brian. Here is my job about my Mitsubishi remote control.  
<https://useandshare.blogspot...>

I'm still completing posts. let me know your opinion.

By the way this is the starting point. I also have a gitHub program to send codes using Python with Telegram bot.

^ | v • Reply • Share ›



**Brian Schwind** Mod ➔ Francescoroot • 8 months ago

Hey, nice writeup! I like the tables laying out the byte protocol, did you use a tool to make it or was it mostly made manually in something like Excel?

^ | v • Reply • Share ›



**Francescoroot** ➔ Brian Schwind • 8 months ago

Yes, they come from LibreOffice manual work :D

1 ^ | v • Reply • Share ›



**Henry** • 8 months ago

Thanks again i changed the frequency and used the testrawcodes.c file and it worked like a charm. Thank you your the best.

^ | v • Reply • Share ›



**Brian Schwind** Mod ➔ Henry • 8 months ago

Good to hear everything worked for you!

^ | v • Reply • Share ›



^ | v • Reply • Share ›



**Henry** • 8 months ago

Thanks for the article its the only thing ive gotten to work with my ir shield. Ive been trying for about a week with lirc with no luck. Could your program ir-slinger be used to control an rc5 remote? Ive tried but i think ill have to dig into pigpio and figure out how to use it.

^ | v • Reply • Share ›



**Brian Schwind** Mod ➔ Henry • 8 months ago

Hey Henry, glad I'm not the only one who struggled with lirc!

ir-slinger can certainly work with rc5, but you'll have to do some work to get it running as my library is pretty biased to NEC. Check out the raw codes test:

<https://github.com/bschwind...>

Those numbers in the "codes" array are microsecond delays. RC5 appears to be 36 KHz so you'll need to modify the frequency variable to be 36000. The hardest part though will be figuring out the protocol and determining how to encode a binary message in that format. You `_may_` need to purchase a 36 KHz receiver, I've only worked with devices using 38 KHz so I'm not sure if they can work at multiple frequencies.

^ | v • Reply • Share ›



**Francescoroot** • 10 months ago

After I did my studies on how to hack my Mitsubishi IR I found your blog. I could save a lot of job with your perfect tutorial. By the way I had more or less similar results. I modified your Python script to have an output file in OpenBench LogicSniffer format just to better study results with its client. How could I share it with you ? I'm going to put also my results online somewhere. I'll keep you informed.

Thanks

^ | v • Reply • Share ›



**Brian Schwind** Mod ➔ Francescoroot • 10 months ago

Thanks for the kind words! What have you discovered with LogicSniffer? That Python script was a quick and dirty job, and I imagine the timing will off in a lot of cases, but it's close enough to work. A better strategy is to use a microcontroller with GPIO interrupts to record the precise times pulses come in, but that may be overkill for infrared signals.

^ | v • Reply • Share ›



**Francescoroot** → Brian Schwind • 10 months ago

The script works like a charm :D I used an IRToy (by DangerousPrototypes) and I worked with it: it has a useful IRRX pin where I can get the signal to send to GPIO and then I can compare results with hex data coming from irtoy through the serial port. The hex values sent by irtoy are the pulse and space durations of the signal.

My remote control is RKS502A502 and it sends 6 bytes: the 1st and the 3rd with data, the 2nd is the complement of the 1st and the 4th is the complement of the 3rd. The last 2 bytes are fixed, the 6th being the complement of the 5th.

The TEMPerature encoding is slightly different. When working with MODE=AUTO it's encoded as reversedbyte(8-val) while in other modes it's encoded as reversedbyte(32-val) where val is the value to set

All the signal lasts about 160 msec

^ | v • Reply • Share ›



**Brian Schwind** Mod → Francescoroot

• 10 months ago

Glad it worked! The (8-val) and (32-val) just means the bits representing the value are shifted to the left or right a certain amount.

I've decoded a few other remotes in the past year and discovered that quite a few will send an NEC header, some actual header data, then \*another\* NEC header, then the \*actual\* signal payload. Be sure to watch out for those because my "pulse to binary" script doesn't handle that correctly.

^ | v • Reply • Share ›



**Francescoroot** → Brian Schwind

• 10 months ago

I did not used it. I just used half of your work till the signal decodification. Then I worked with paper and pencil :D:D:D My remote sends a starting pulse of about 6ms followed by a 7.5 ms pause. Then it sends the 6 bytes and a final long pulse.

I completed all my job writing a Telegram bot and driving irtoy (it works both receiving and transmitting) with it through the Raspberry. In the future I'll try to use directly the pin avoiding the irtov as

emitter.

^ | v • Reply • Share ›



**Aior** • 10 months ago

great job!

I decoded the frame of my air conditioning Hitachi and I manage to control it with the script in C language (hardcoded), it's great!

Could you publish the script with which you can pass the binary string as an argument please?

The script you call "aircon" I believe.

Thank you again, your approach is logical and functional, I like!

Aior

^ | v • Reply • Share ›



**Brian Schwind** Mod ➔ Aior • 10 months ago

Hi Aior, thanks for reading! The script is on a branch which I never ended up merging for some reason, but you can view it here:

<https://github.com/bschwind...>

^ | v • Reply • Share ›



**Aior** ➔ Brian Schwind • 10 months ago

Oh thank you ! I had not thought of looking other branch, perfect! thank you

^ | v • Reply • Share ›



**Jadro Beli** • a year ago

Hi, I have Raspberry Pi 3.

I'am not linux expert because I'am Windows user.

What do I need to get this working on my Pi 3? What I need to do in command line terminal to download and compile if needed to get this all working?

^ | v • Reply • Share ›



**Brian Schwind** Mod ➔ Jadro Beli • a year ago

Hi Jadro,

Once you have a working installation of Raspbian running on the Pi (I've only tested Raspbian), you can follow the steps in this repo to get things running:

<https://github.com/bschwind...>

Granted, those steps are for running a Node.js server and everything else, which might be more than you're after. If you just want to be able to send signals with a custom C program, follow the steps here:

program, follow the steps here.

<https://github.com/bschwind...>

Good luck!

^ | v • Reply • Share ›



**Jadro Beli** → Brian Schwind • a year ago

Brian, this is ok but I do not understaind what is DEPEDENCIES

and what will be done with BUILD command?  
What is

`gcc test.c -lm -lpigpio -pthread -lrt?`

^ | v • Reply • Share ›



**Brian Schwind** Mod → Jadro Beli  
• a year ago

Dependencies are things the application depends on. They are required in order to run. For example, my library uses the library "pigpio". Without it, my library wouldn't work.

Build commands are run on the command line, which is how you typically install software and "do things" on Linux.

Since it sounds like you're at the beginner levels, I'd recommend getting familiar with Linux first before diving into this project. Maybe start here?

<https://www.reddit.com/r/Ub...>

^ | v • Reply • Share ›



**Jadro Beli** → Brian Schwind • a year ago

Ok DEPEDENCIES is what I have mean at first, it is INCLUDE. I'am not begginer, I do stuff in Raspberyya for a year now but I do not compile anything till now. I do Home IoT little sistems in Python. In youre Python script I dont see nothing to INCLUDE from other c scripts and this is reason I ask for DEPEDENCIES. OK, I have pigpio installed on my Raspbian and I use it. And usually work everything with apt-get. Is this `gcc test.c -lm -lpigpio -pthread -lrt` command something that I realy need? Is this compile as MAKE command is? Sorry on my bad English...



Can I download this package scripts with wget?

^ | v • Reply • Share ›



**Brian Schwind** Mod → Jadro Beli

• a year ago

I'm not sure what exactly you're trying to do, but there are several parts here:

- \* ir-slinger is a C library for writing programs which send IR codes over a GPIO pin

- \* gcc is a C compiler - it takes C programs and compiles them into runnable binaries. It is necessary to run C code.

- \* Make is a simple build tool which will call tools such as gcc. Pigiopio uses Make to build

- \* The python scripts in this blog post are only for decoding the signal

- \* There's a python version of ir-slinger, called pyslinger:

<https://github.com/bschwind...>

^ | v • Reply • Share ›



**Jadro Beli** → Brian Schwind • a year ago

What this mean: \* There's a python version of ir-slinger, called pyslinger?

This Python scripts is same as C ir-slinger?

It can be used C or Py program? Am I correct or not? Is Python depending on this C lib?

^ | v • Reply • Share ›



**Brian Schwind** Mod → Jadro Beli

• a year ago

The two are separate, but the python script depends on pigpio being installed

^ | v • Reply • Share ›



**Jadro Beli** → Brian Schwind • a year ago

Thanks, thanks, thanks for be patience...

This is answer I wait for.

Python depends on pigpio that is installed on my Pi 3 and C library is not required within Python program, now I understaind. C library is fastest and Thanx for that, if I wold have any problem with Python program I will try to use C library, Thanks again.

^ | v • Reply • Share ›

^ | v • Reply • Share ›



**larafale** • a year ago

Hello Brian thank you very much for this article, really straight forward and elegant solution without lirc.

I receive signal from my remotes perfectly, but haven't tried to emit signal as i don't have an IR led yet.

looking at the python receiver code you used, i tried to achieve the same with javascript, just for the sake of trying, at first i thought this would be really simple as the logic is simple, but after many tries i failed.

am i missing something concerning python vs javascript ?

i've tried with many gpio node lib, like this for example:

\*\*\*\*\*

```
var Gpio = require('onoff').Gpio
var signal = new Gpio(23, 'in', 'both')

var startTime = new Date().getTime()
```

```
signal.watch((err, val) => {
```

[see more](#)

^ | v • Reply • Share ›



**Brian Schwind** Mod → larafale • a year ago

Hi larafale,

One thing to keep in mind is that my Python script is dealing with microseconds, not milliseconds. So it very well could be handling it correctly! Unfortunately, in order to verify this you'll need a clock with greater precision than `Date().getTime()` gets you. Try something like <https://nodejs.org/docs/v0....>

At first I thought maybe the JS event loop wasn't keeping up, but you can't yet tell until you get more precision on the timing. A callback-based solution might not work so well though because going through the event loop will add overhead. When you're timing something in the microsecond range, these indirections can quickly add up and throw off your measurements (which are already thrown off by the JS VM, OS, etc.)

You have the right idea though taking time

[see more](#)

^ | v • Reply • Share ›



**larafale** → Brian Schwind • a year ago

thanks you very much for your time and concise explanations

## EXPLANATIONS

so i feel stupid for ms and us, after diffing with microsecond i do get better results, but it's pretty random, i can't get consistent values. mostly a lot of 0s

here is the code i used

<https://gist.github.com/lar...>

like you said we should get timestamp at the onoff module level for more accuracy. they use debounce times that might false the results.

I've also tried to use while loop in javascript, but it block the CPU and i can't exit my script with ctrl+c.

i don't know why you can exit in python and not in JS

so for now i'll stay with python as it's a good excuse to learn python :)

^ | v • Reply • Share ›



**Brian Schwind** Mod → larafale

• a year ago

Hmm, yeah I suspect the event loop overhead is getting in the way of receiving accurate timer. You can't Ctrl-C because JS is single threaded and a while loop blocks the entire event loop.

By the way, Python isn't really an ideal tool to use for this, and neither are while loops. I just used it because it worked well enough for what I wanted to do. A better solution would be to run a C program on something like an Arduino or ESP chip and use hardware interrupts with a microsecond clock. That's left as an exercise to the reader :P

^ | v • Reply • Share ›



**Tom** • a year ago

How come no one ever asked this question. What font did you use for the interface, that 20 looks nice, minimalistic and modern :)

^ | v • Reply • Share ›



**Brian Schwind** Mod → Tom • a year ago

You can thank Google for that, it's their Roboto font which is heavily used on Android. More about it here:

<https://fonts.google.com/specimen>

<https://fonts.google.com/sp...>

^ | v • Reply • Share ›



**Tom** • a year ago

Hi!

This is exacelty what I've been searching for.  
Great article!

I'm not sure this is working correct for me though. After reading  
the IR signal I get a waaaay long code. Which I now know is  
correct. But sometimes the binary code is malformed, it's not  
.. . . . .