




PARTS FOR ONE LEG.  
FOUR LEGS PER BED.

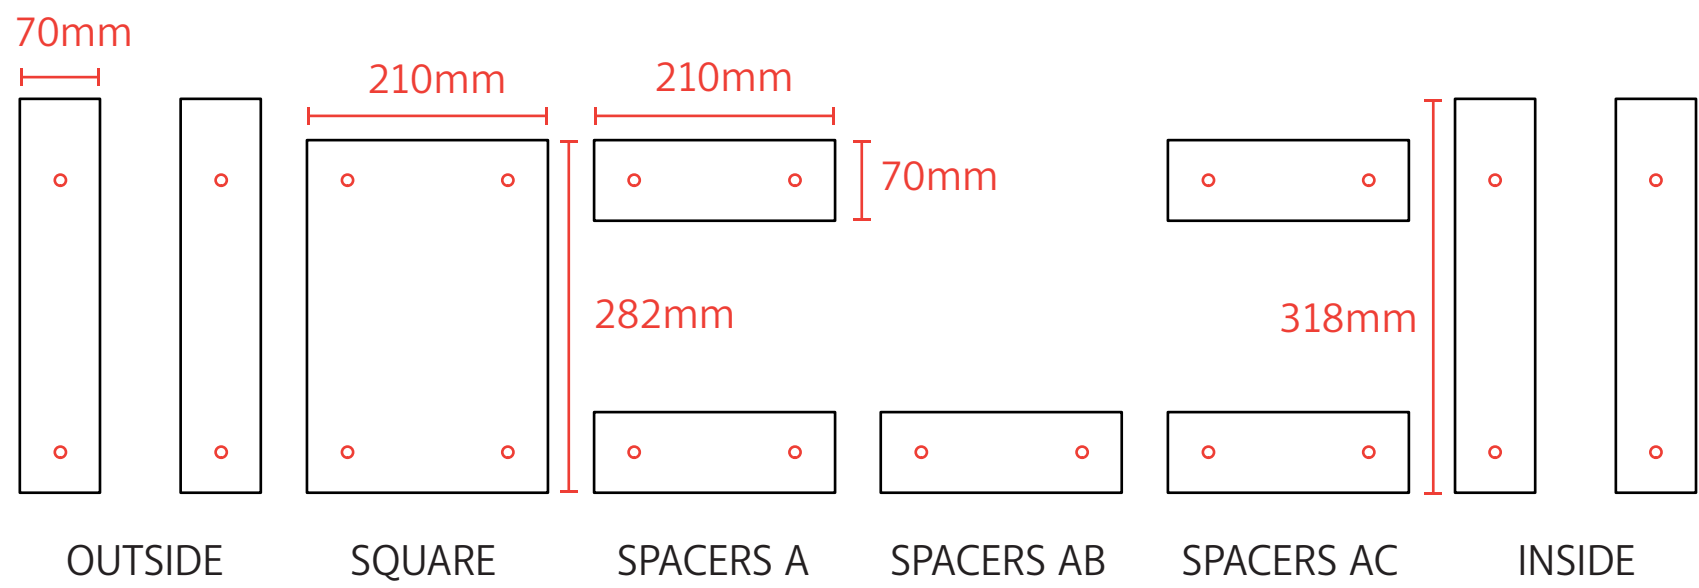

PARTS FOR ONE SIDE.  
TWO SIDES PER BED.

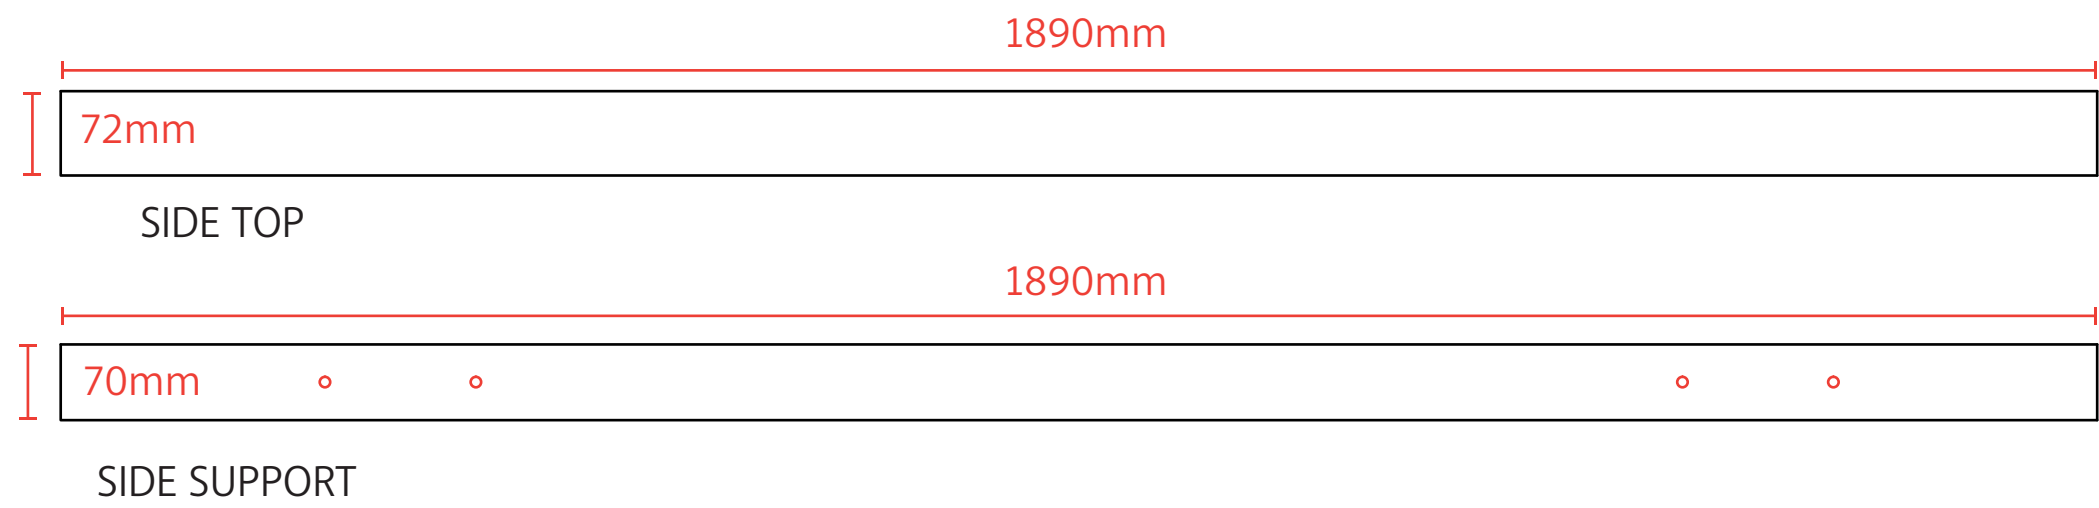


PARTS FOR ONE SLAT  
FOURTEEN SLATS PER BED.

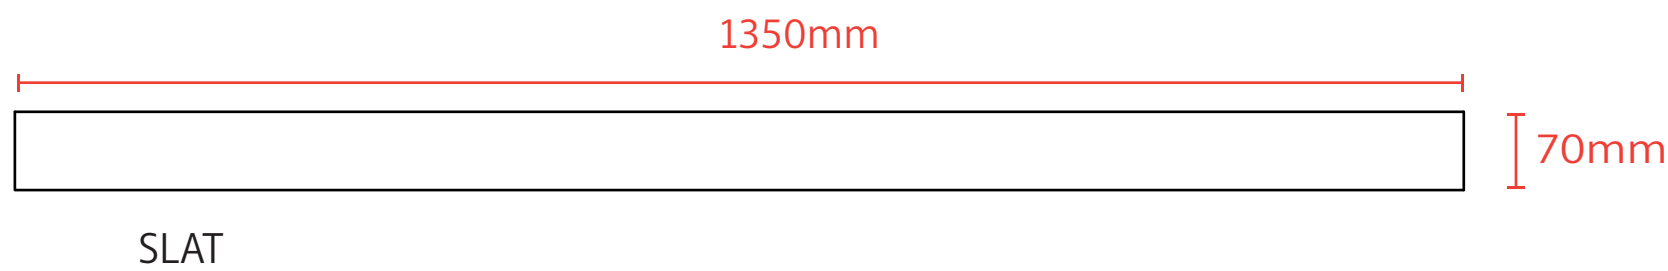


1. FOR PRE-DRILLED KIT SKIP STEPS 1 & 2.

CUT HOLES.  
CUT 'SQUARE' FIRST AND USE AS A JIG BY PLACING EACH  
OF THE OTHER PARTS ON TOP OF IT.

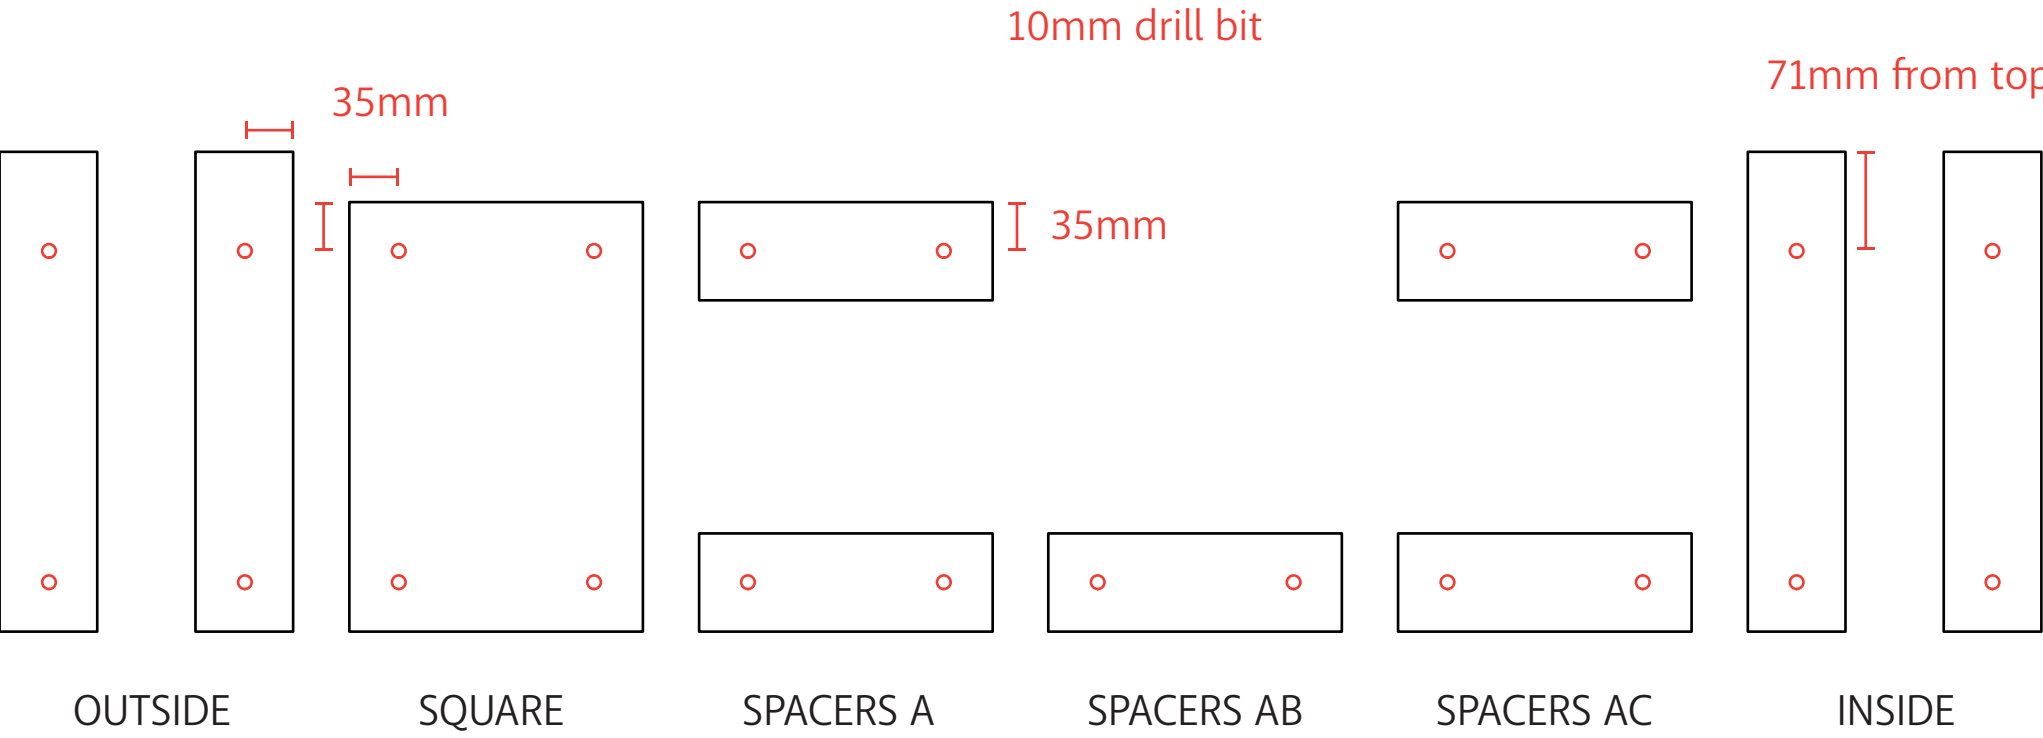


2. DRILL HOLES IN 'SIDE SUPPORT'.

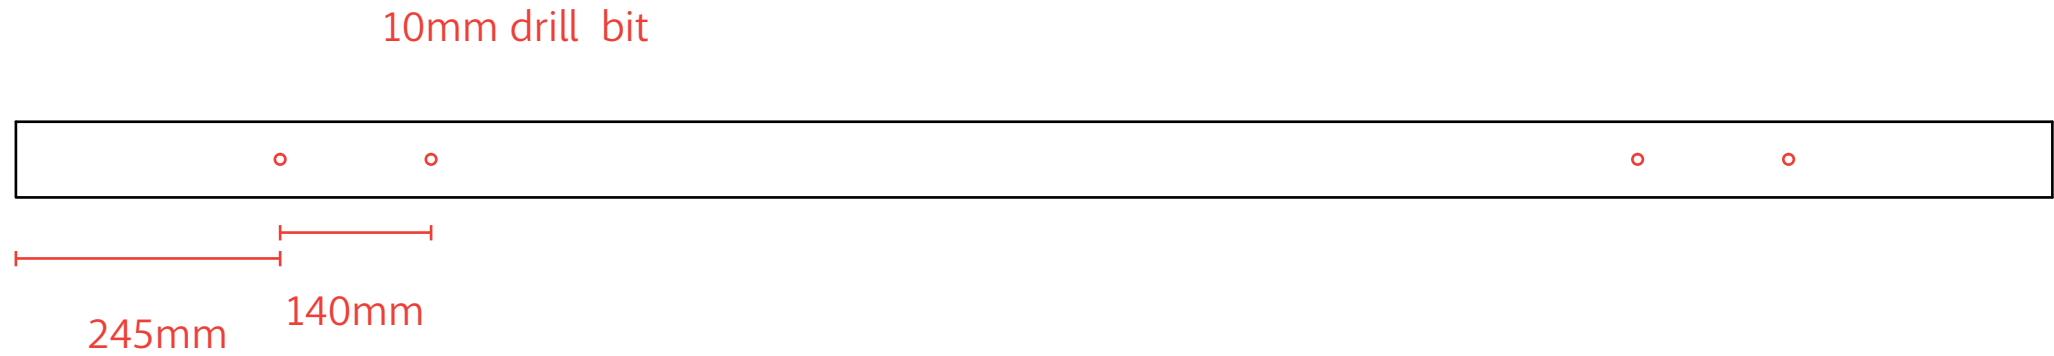


3. BOLT TOGETHER LEG.  
LEAVE OUT TOP TWO 'SPACERS A'  
AND 'SPACERS AC'

M10 - 120mm bolts  
w/ washers & nuts

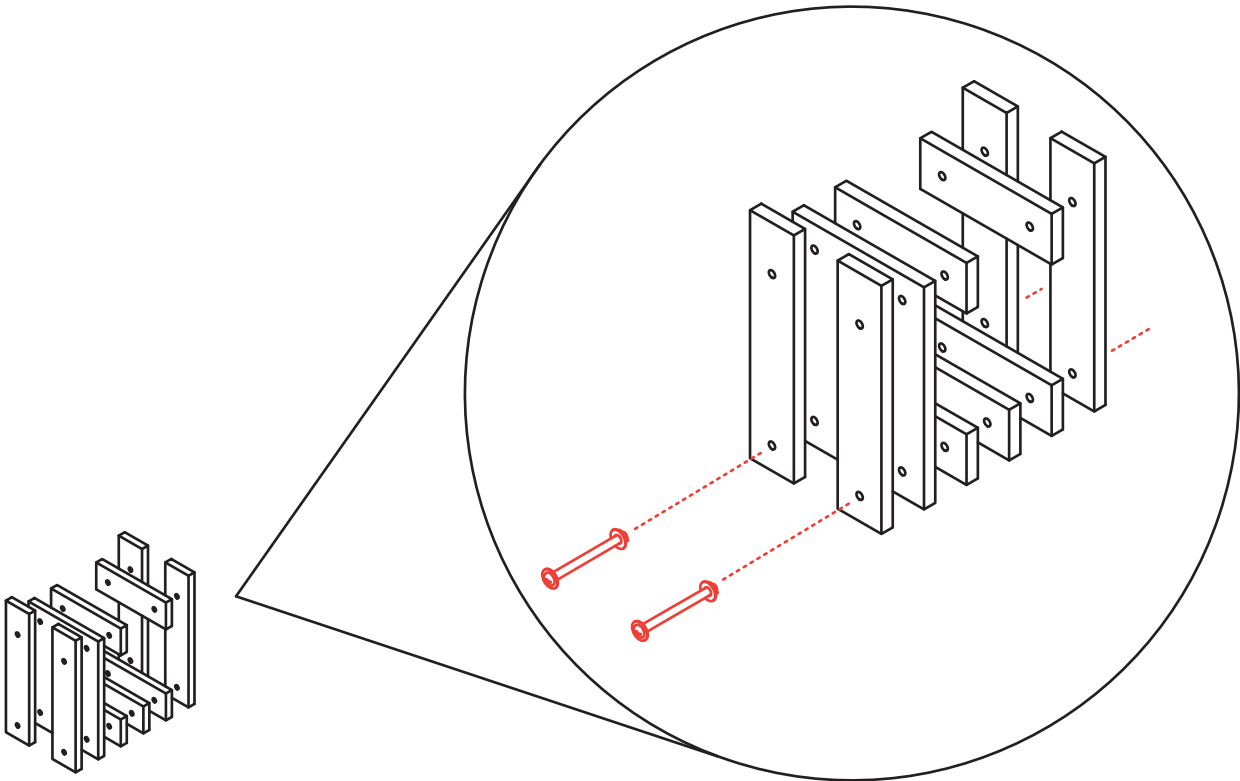


4.  
SCREW TOGETHER 'SIDE' PIECES.  
PRE-DRILL WITH 3.5MM BIT.  
18MM OFFSET FROM ONE SIDE.

3.5mm drill bit  
35mm posi gold screw

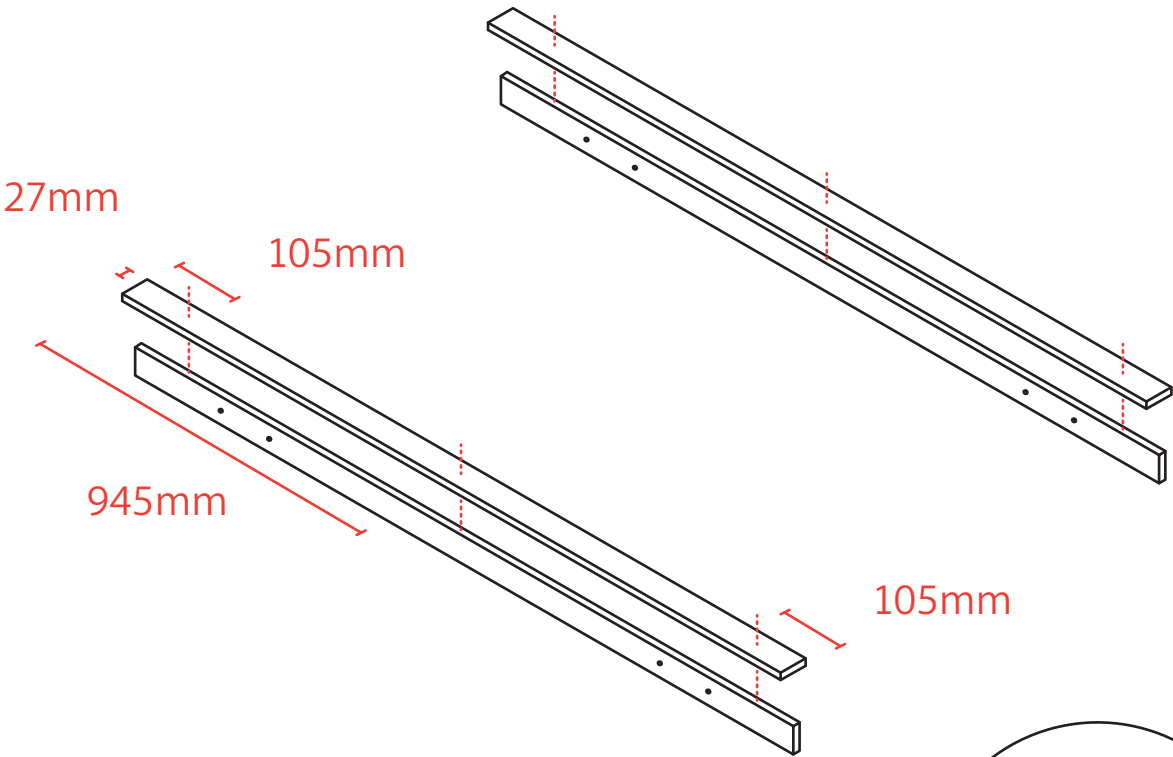

5.  
BOLT 'SIDE' TO 'LEGS'.

M10 - 120mm bolts  
w/ washers & nuts

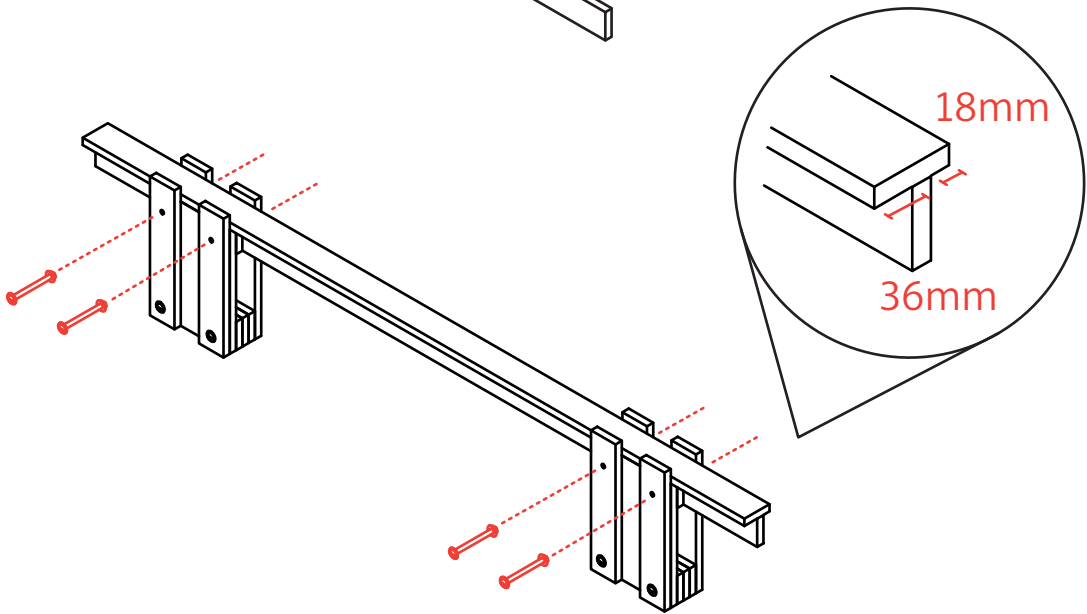

6.  
SCREW 'SLATS' TO 'SIDES'.  
PRE-DRILL WITH 3.5MM BIT.  
LEAVE 70MM SPACING BETWEEN SLATS,  
SAME ON BOTH SIDES.

3.5mm drill bit  
30mm posi gold screw

