


1. Place double-sided tape on the edges of bone inserts. Tap bone side lightly against cloth to make it less sticky

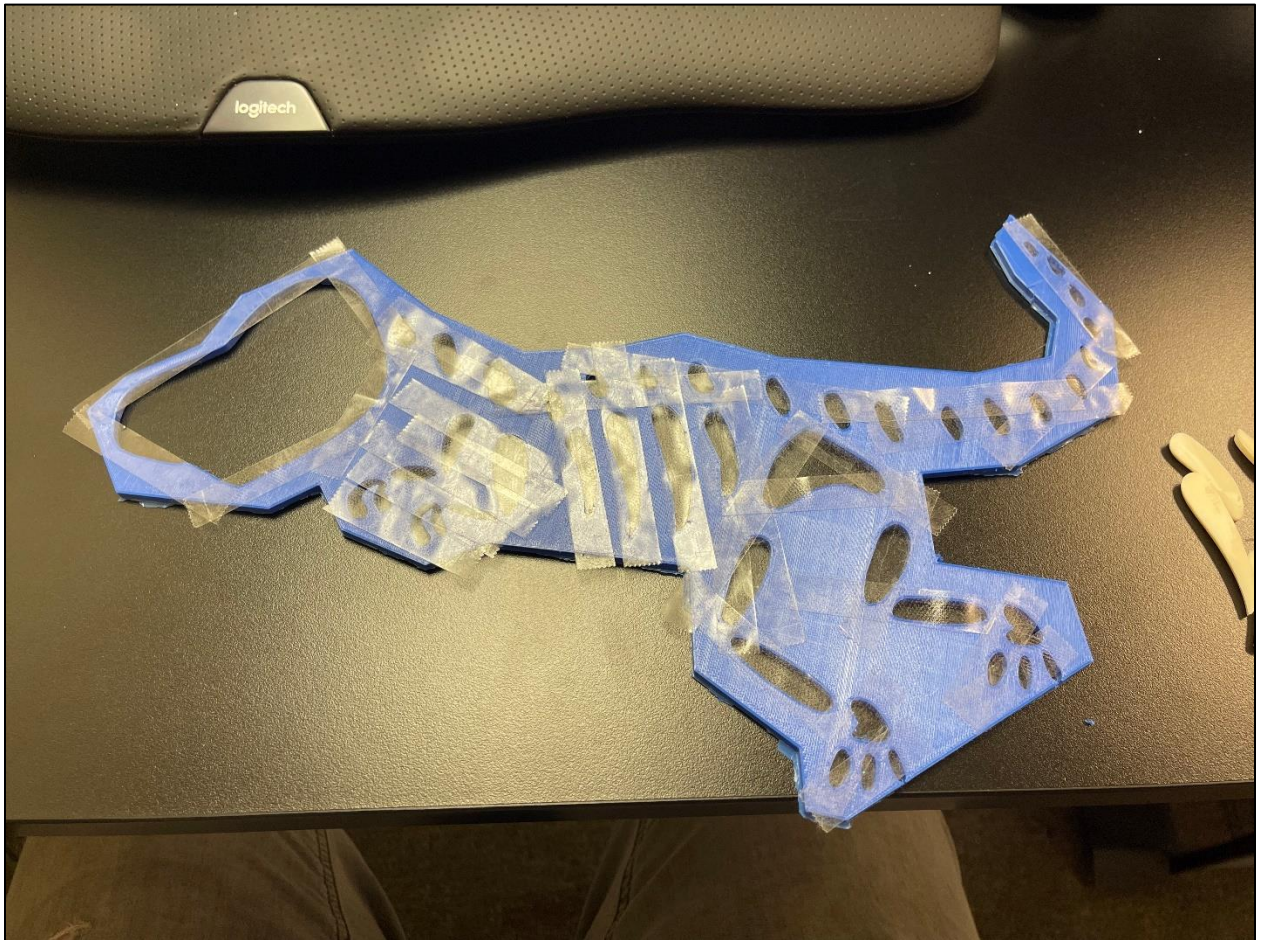

2. Gently place the pieces in





3. Press and hold firmly against the wall for proper seat of bones. Inspect and adjust accordingly (I used a toothpick to adjust some parts)



4. Cover rear of bones with an Elmer's Glue Stick



5. Place firmly to wall and seal with tape. Let sit overnight





6. He lives! Remove carefully & some bones are expected to fall/stick, reapply manually to wall

