



HOW INSTALL Y TENSIONER FOR DUMMIES

By Neko


SLIDE IDLER ONTO PIN

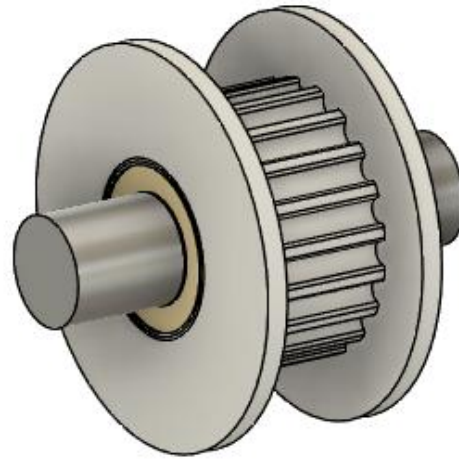


PUT THE HEATSETS IN

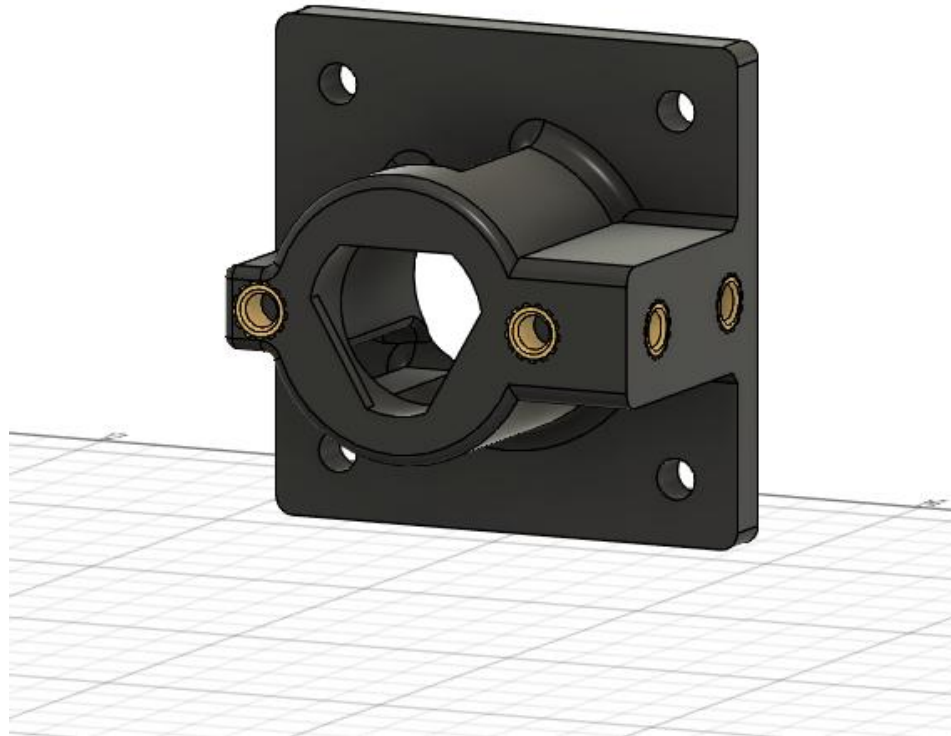


PUT IDLER ON PULLEY

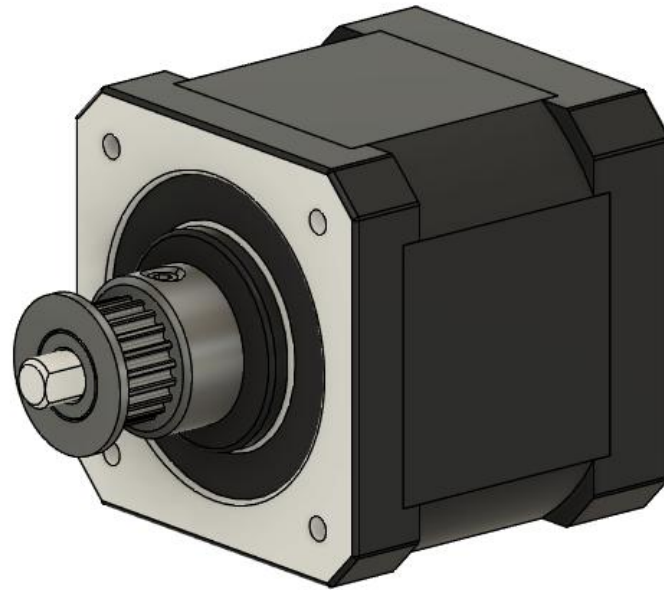


PUT 625ZZ IN DOUBLE SHEER

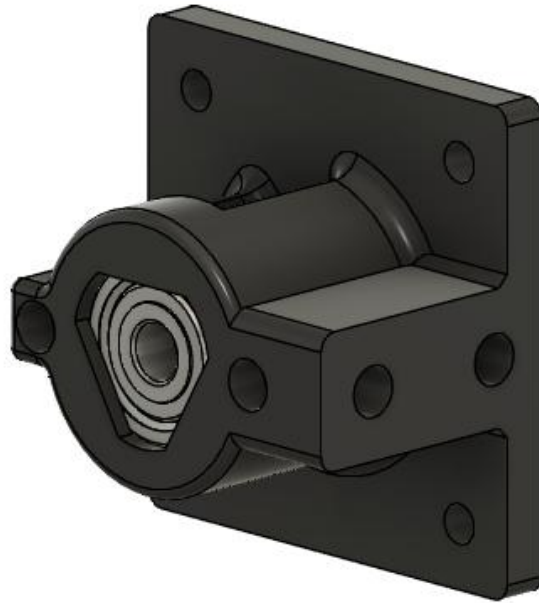

PUT 2004S1 ONTO THE Z

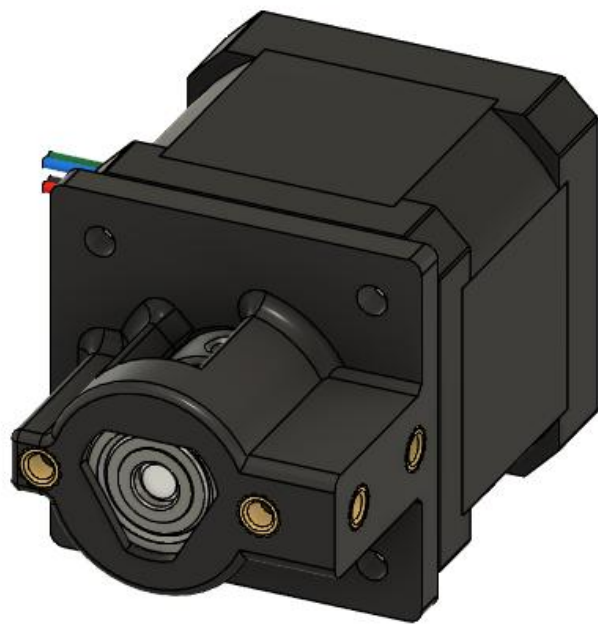


Slap into the block

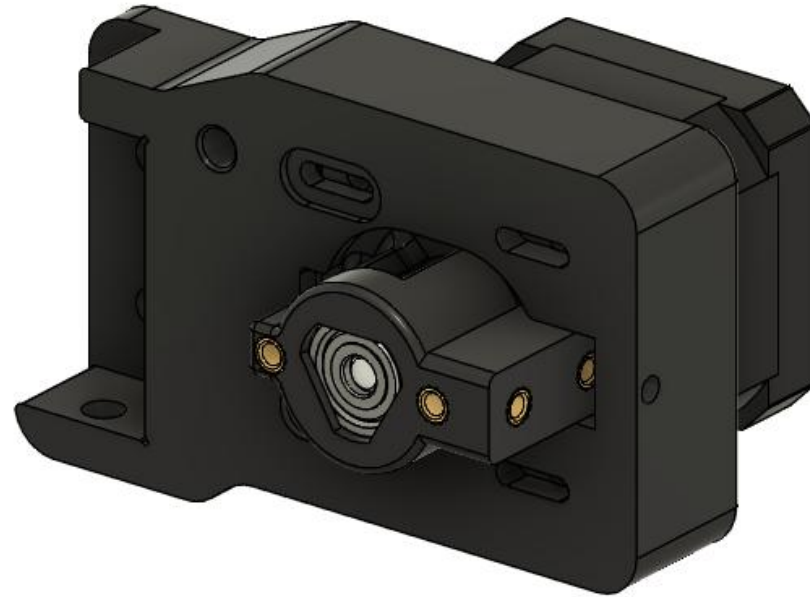



PUT IN THE IDLER AND M3X10MM DON'T
TIGHTEN DOWN



PUT ON Y AXIS AND USE M5X10MM
RUN THE BELT THOUGH

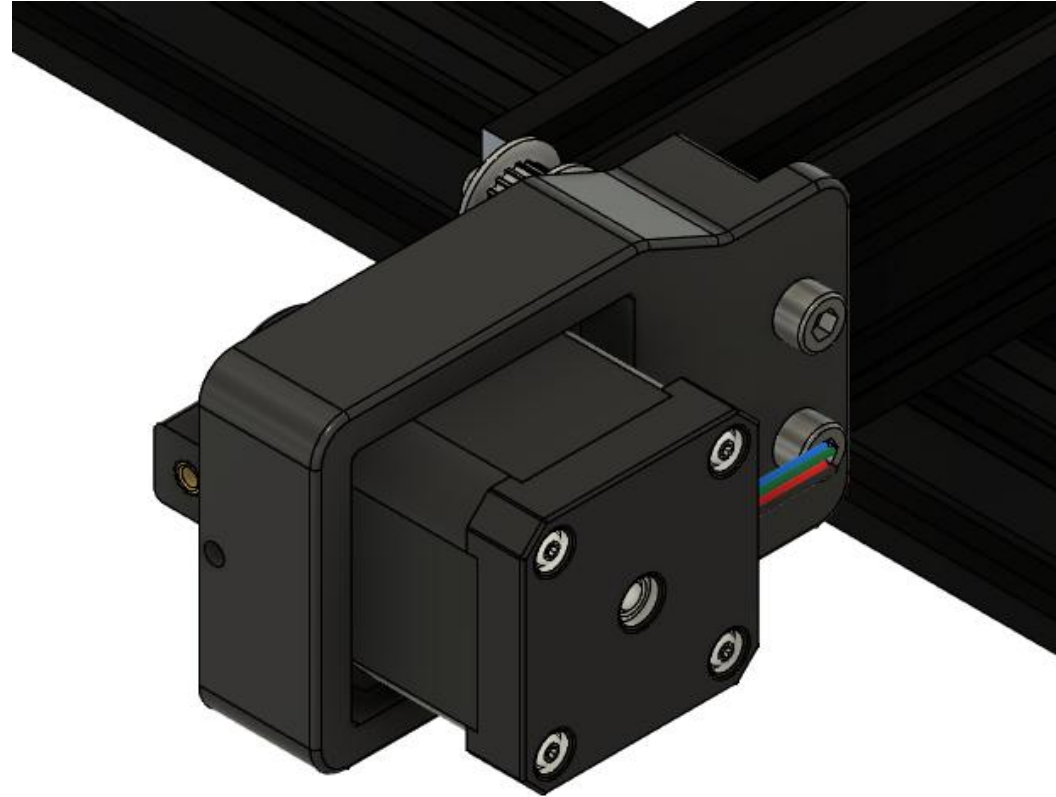

PUT ON PART B M5X10MM TIGHTEN
M3X18 AND M3X30 DON'T TIGHTEN

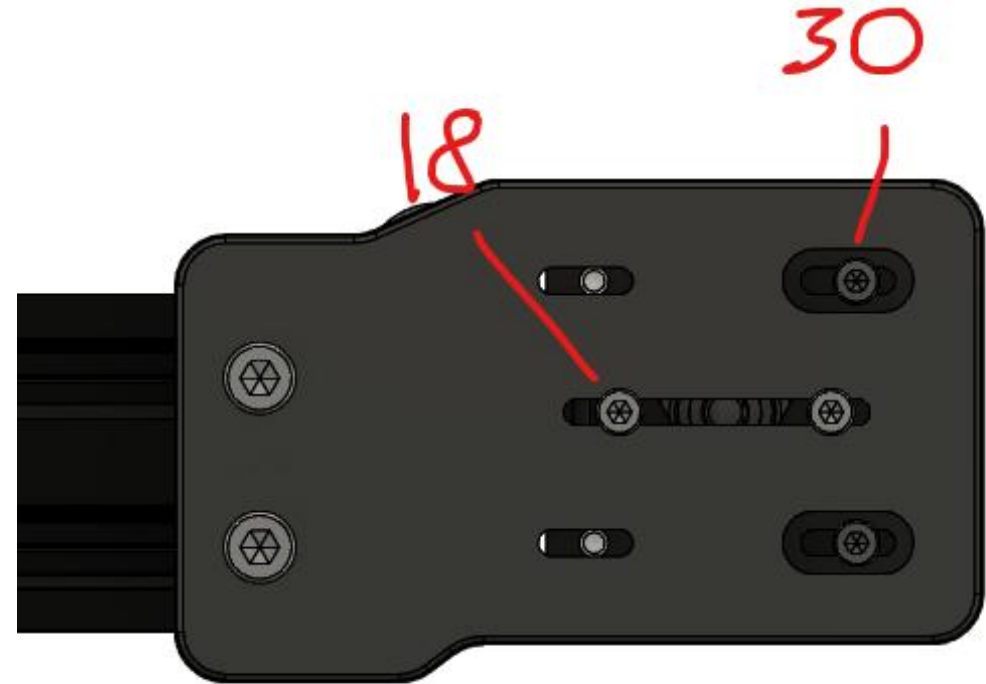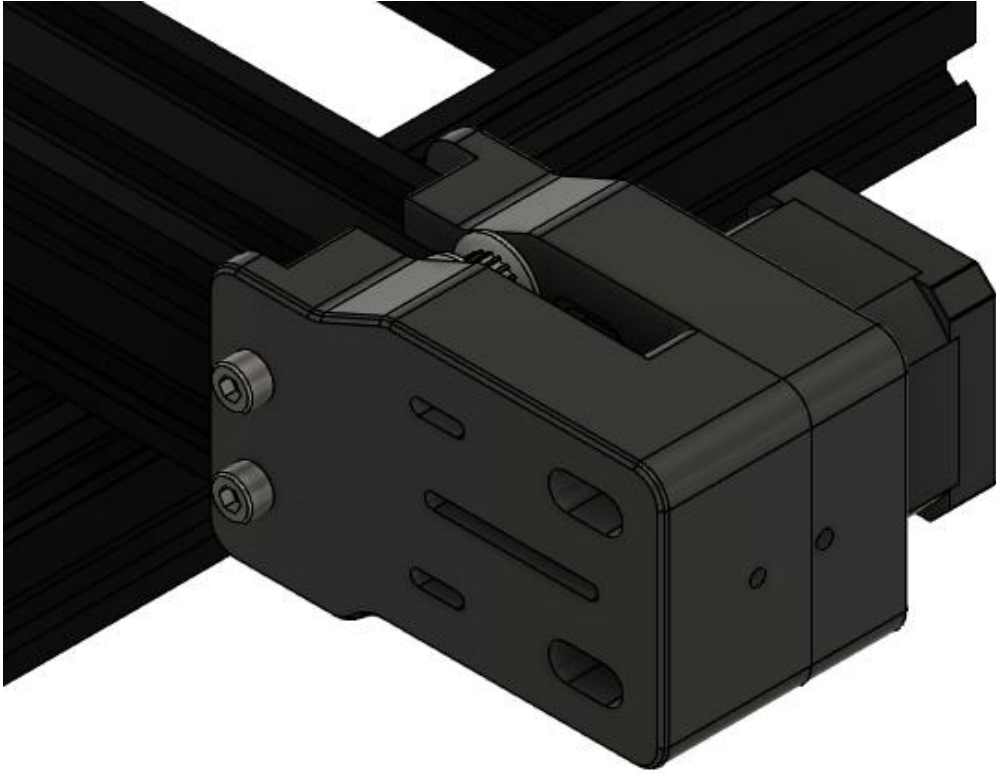

PUT IN M3X12MM AND TIGHTEN M3 TO
TENSION TO SPEC



TIGHTEN DOWN EVERYTHING

