

Installation Guide for Roof Cargo Basket

⚠ [Safety Warning/Caution]

- Not recommended for tandem bikes
- Please remove all accessories on the roof before installation
- Do not load or exceed the designated carrying capacity (154lbs/70kg)
- Only install onto the vehicle that has crossbars
- Professional Installation is highly recommended
- Do not over-tighten the bolts



Preparation:

- Clean the roof and crossbars of your vehicle
- Cleaning cloth & cleaning liquid (recommended)
- Wearing gloves to install is highly recommended



Step 1:

- Connect the upper and lower main frame with the M8 screws, half saddle washers, metal spacer tubes, washers and lock nuts.
- Tighten all the lock nuts.

This side up



Step 2:

- Place the metal plate to the front bars of the roof tray. Make sure the direction is correct.
- Insert the M6 screws, washers and lock nuts, then tighten all the nuts.




Step 3:

- Put the basket onto the roof racks of your vehicle.



Step 4:

- Place the U bolt through wire mesh from the upper side of the roof tray.
- Whilst holding place securing plate to the underside of the roof rack and fasten the U bolt to the securing plates with the securing nuts.

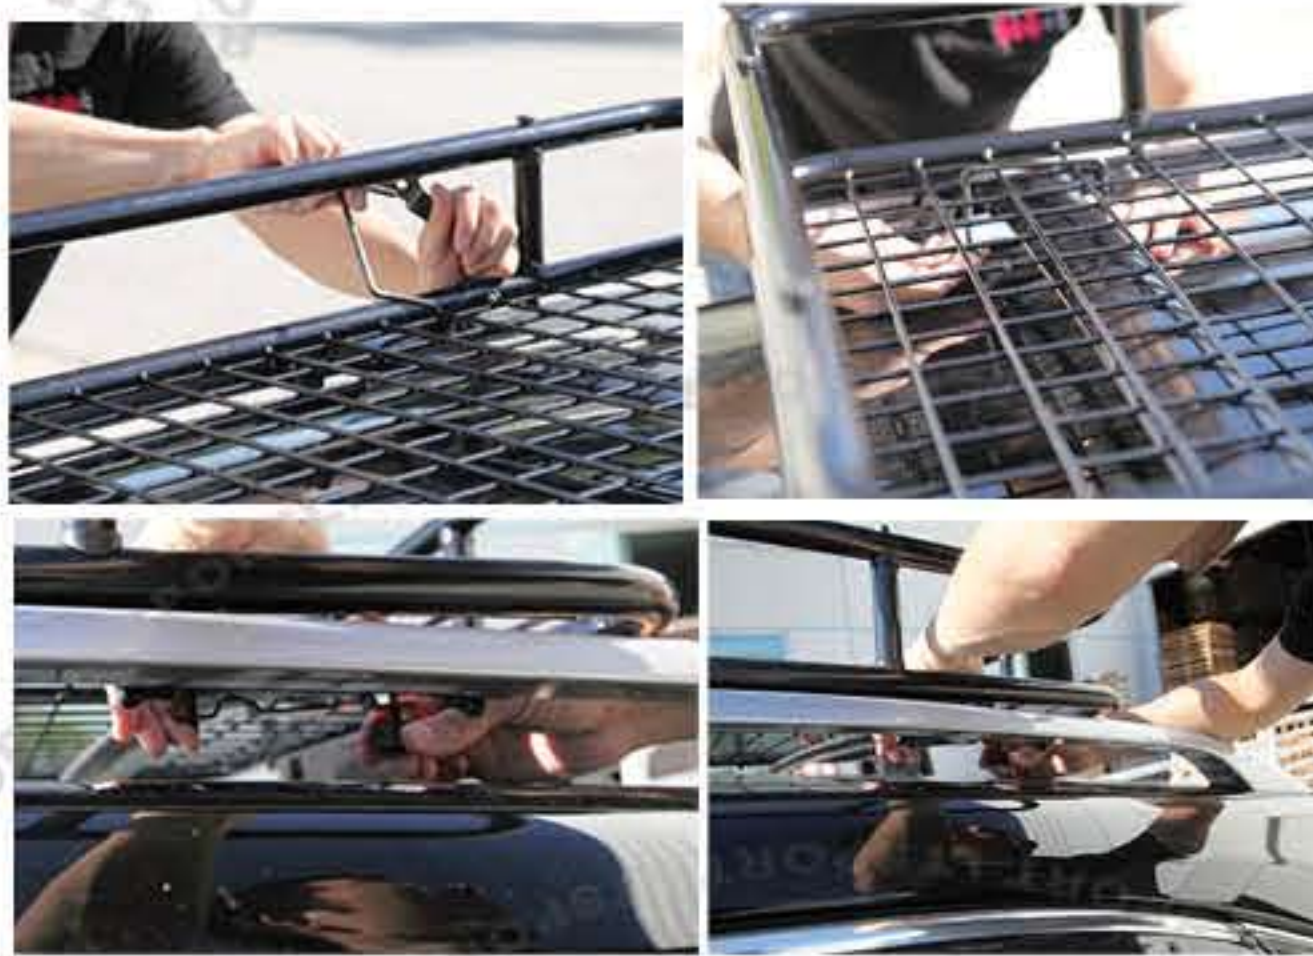

Final

- Repeat above steps to the three remaining affixing points.
- Make sure the roof basket stays firmly.

