

## Installation Guide for Cargo Net

⚠ [Safety Warning/Caution]

### Preparation:

- Clean the trunk of your vehicle with cleaning cloth & cleaning liquid
- Wearing gloves to install is highly recommended
- Do not load or exceed the recommended weight limit for your vehicle
- Only install and/or secure into the truck frames or truck beds
- Cargo net should be placed at the center of your vehicle trunk
- Remove trunk net before entering car washes



### Step 1:

- Find the loops on each side
- Put your items into the trunk





### Step 2:

- Make sure the pocket of the net is facing upward
- Check if the mounting hooks are working properly before putting the cargo net into your trunk



### Step 3:

- The cargo net should be placed at the center of your vehicle trunk and covering all items

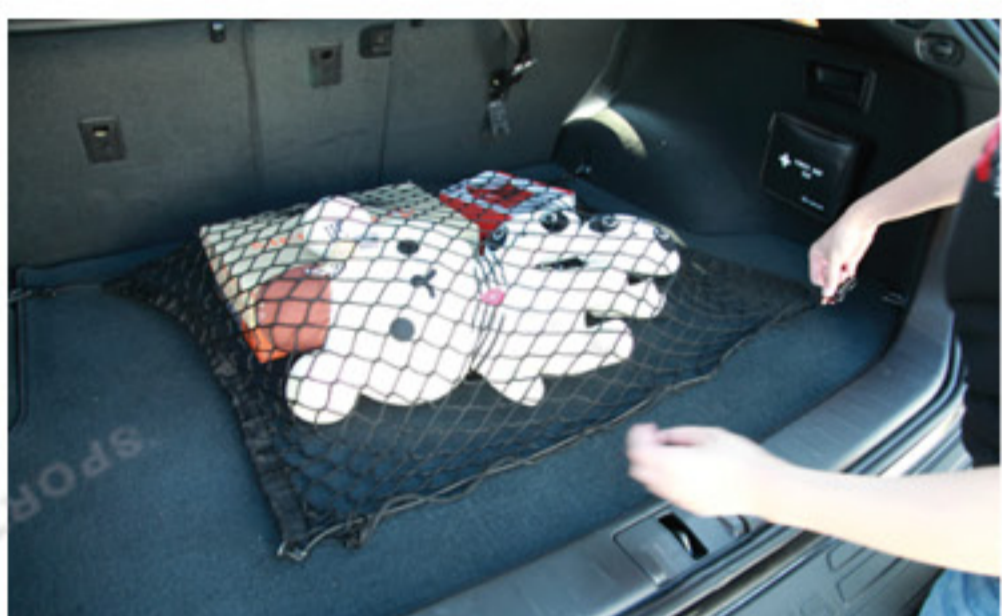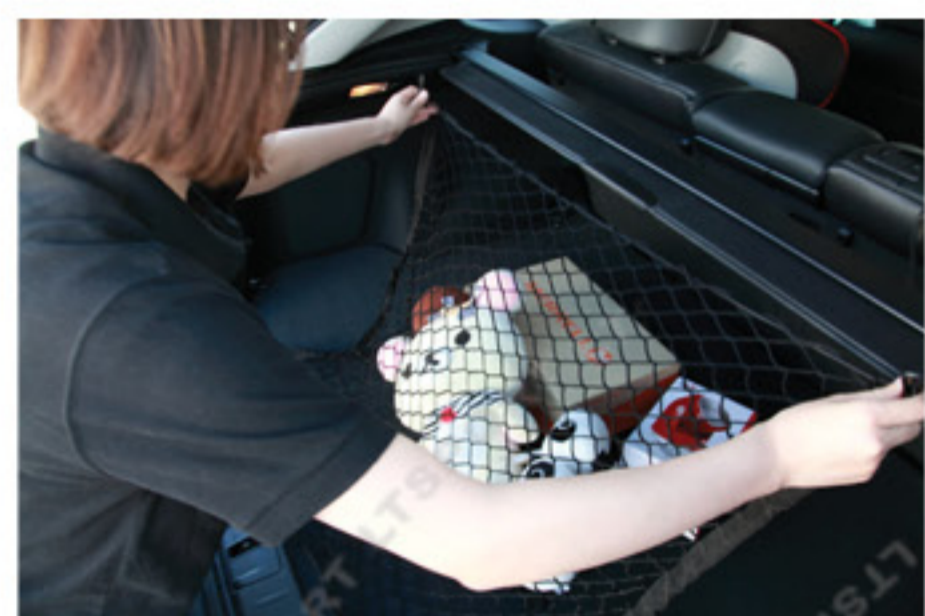

### Step 4:

- Find the clip on each side and attach to each plastic mounting hook on the trunk liner
- Stretch the cargo net to secure your items in place

