

# Installation Guide for Moonroof Visor

## ⚠ [Safety Warning/Caution]

### Preparation:

- Turn off the engine and put the vehicle in Neutral, lock the handbrake before installation.
- Avoid exposure to extreme heat and high humidity.
- Clean the window area with dry towels or cleaning wipes.
- Professional installation is always highly recommended.



### Step 1:

- Set the visor on the moonroof to trial fit. You need to adjust the visor slightly (around 0.5") in front of your moonroof opening.



### Step 2:


- Use a dry soft cloth to clean the contact area.
- Use 70% alcohol to clean the rim of your moonroof and the contact area.



**Make sure the contact area is 100% clean.**

### Step 3:

- Measure the visor, and use a sticker or marker to mark a reference point on the center of the visor.
- Mark a reference point on the center of the moonroof.

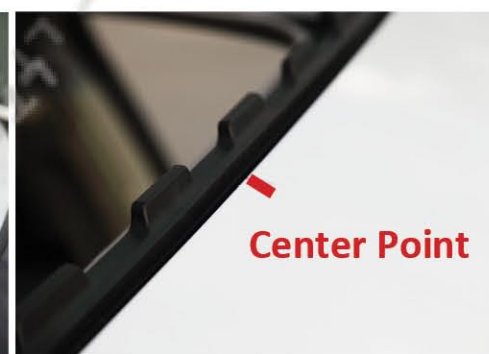



### Step 4:

- Place the visor onto the moonroof.
- Measure the distance between the visor and moonroof to ensure it's equally spaced on both sides.
- Mark the points on the contact area.



### Step 5:

- Peel off the 3M tape.
- Lightly place the visor on the moonroof and align it with marked points, make sure it is positioned and lined up correctly with your reference points.
- Rub over the taped edge of the visor with a dry cloth and apply pressure to secure it to your vehicle.

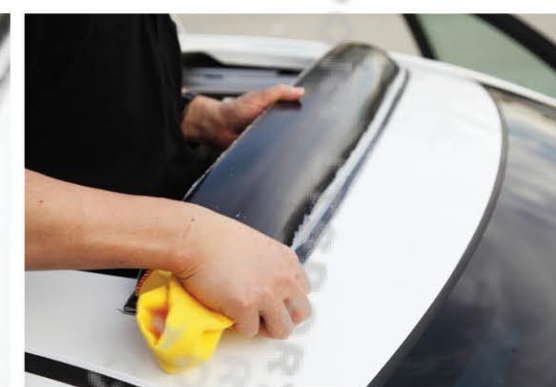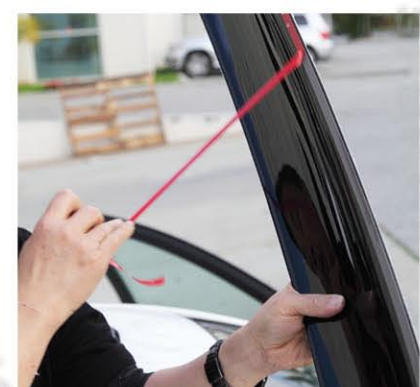

### Step 6:

- Now we can remove the proactive shield.
- Open and close the moonroof 2-3 times to make sure there is no blockage and can be operated normally after installation.



## FINAL

**Do not wash your vehicle for at least 24 hours to allow the adhesive to stay.**

