




## PROGRAMMING HEADER

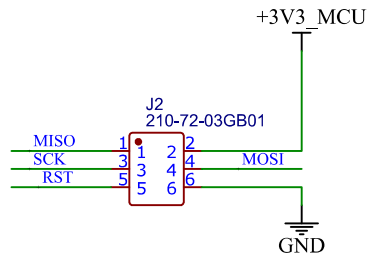


## RESET BUTTON

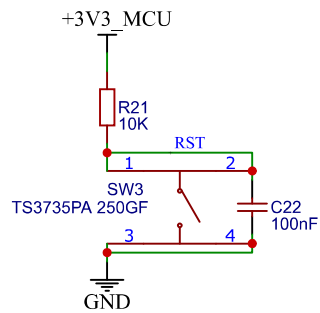


## USER BUTTONS

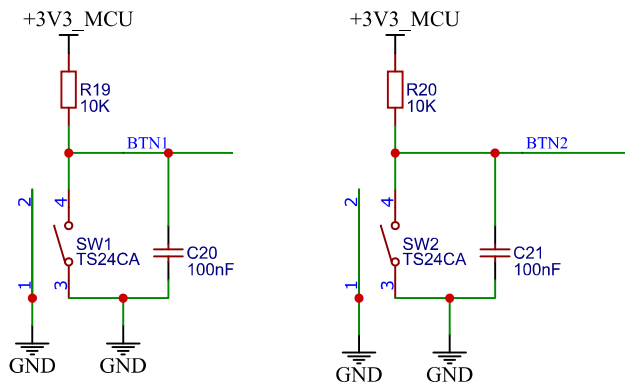

## DEBUG LOG HEADER

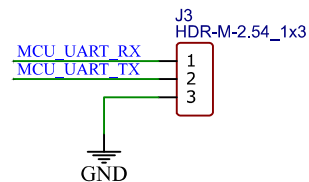

## AVR MCU

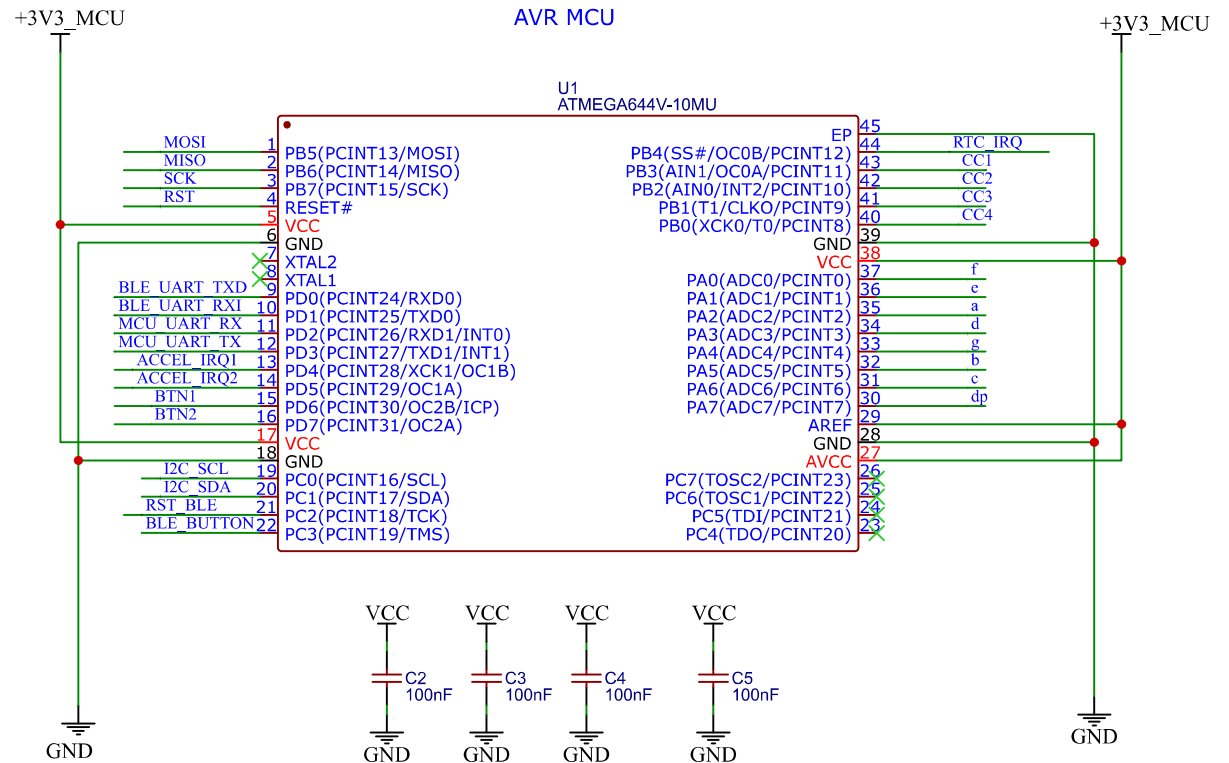


TITLE: MCU		REV: 1.0
EasyEDA	Company: Your Company	Sheet: 1/1
	Date: 2020-09-01	Drawn By: Krzysztof Kondratowicz


					Date. 2020-03-01	Drawn By. NI4YSZLOI KONTROLOWI
1	2	3	4	5		




### LI-POLY CHARGER IC

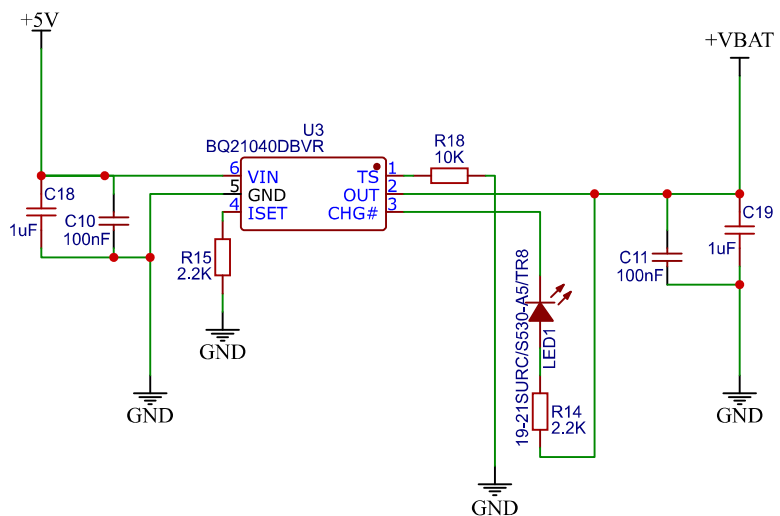

### 3V3 LDO

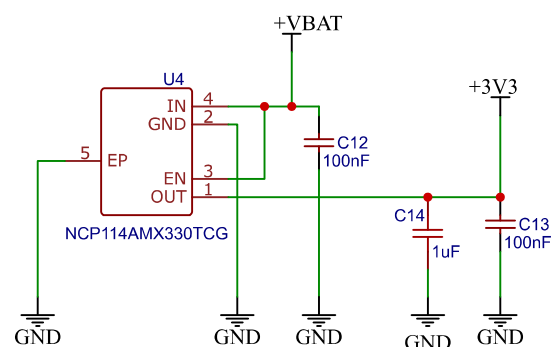


### PWR LINES FILTER

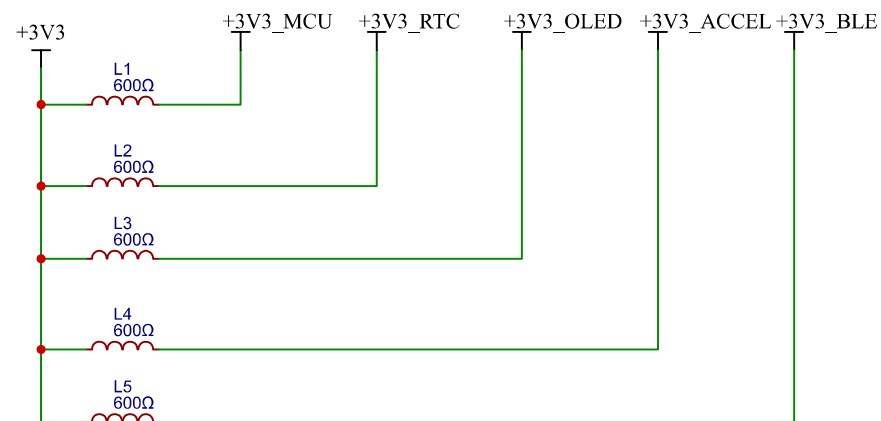

L1-L5 can be used to plug in an amp-meter to measure current consumption of peripherals.

TITLE: PWR		REV: 1.0
EasyEDA	Company: Your Company	Sheet: 1/1
	Date: 2020-09-01	Drawn By: Krzysztof Kondratowicz


					Date. 2020-03-01	Drawn By. NI4YSZLOI KONTROLOWI4
1	2	3	4	5		

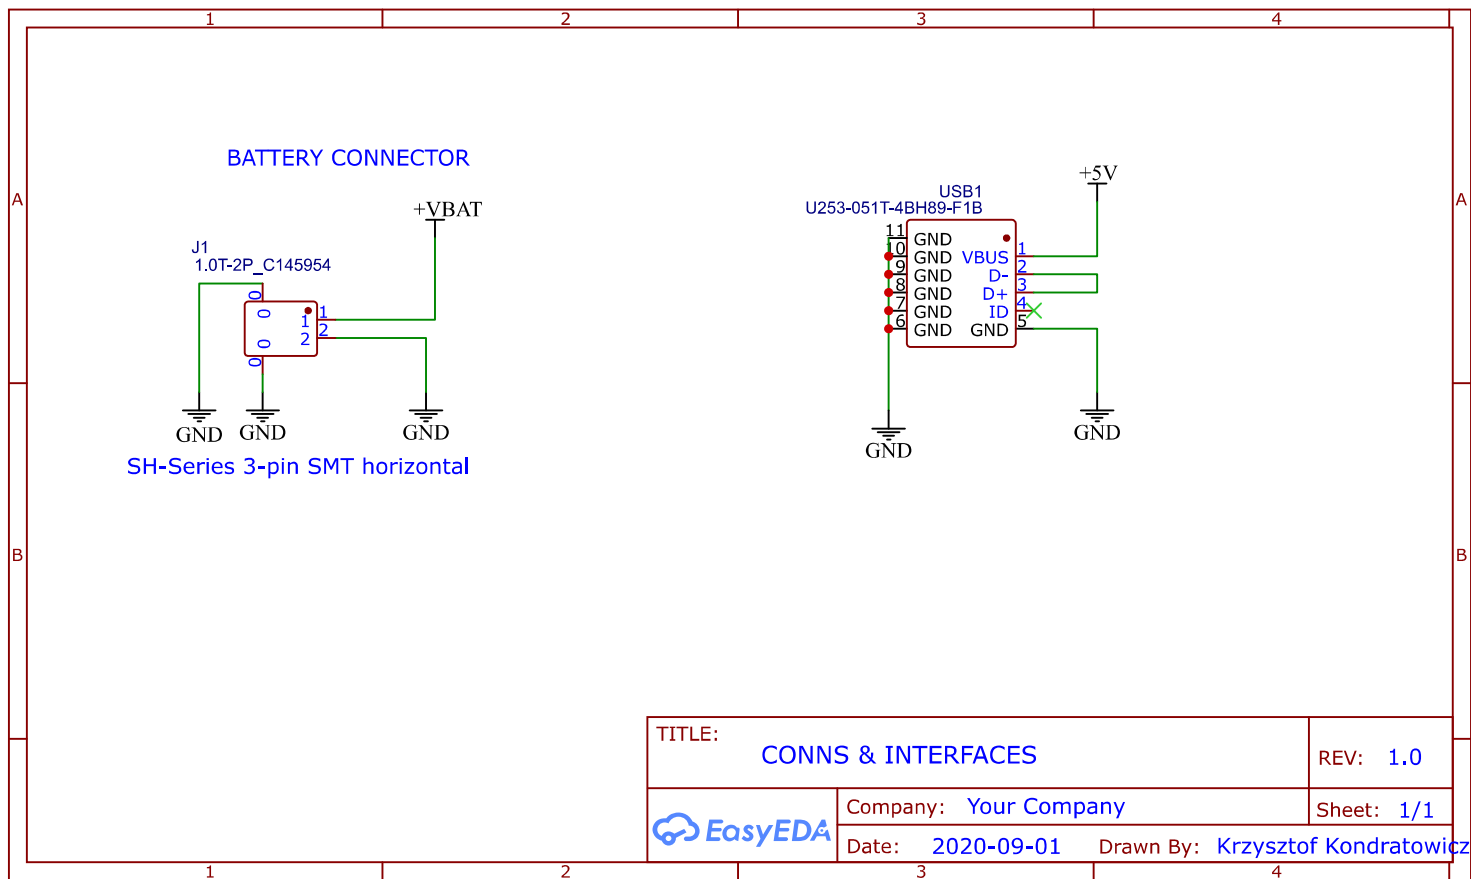



					Date. 2020-03-01	Drawn By. NI4YSZLOI KONTROLOWI4
1	2	3	4	5		



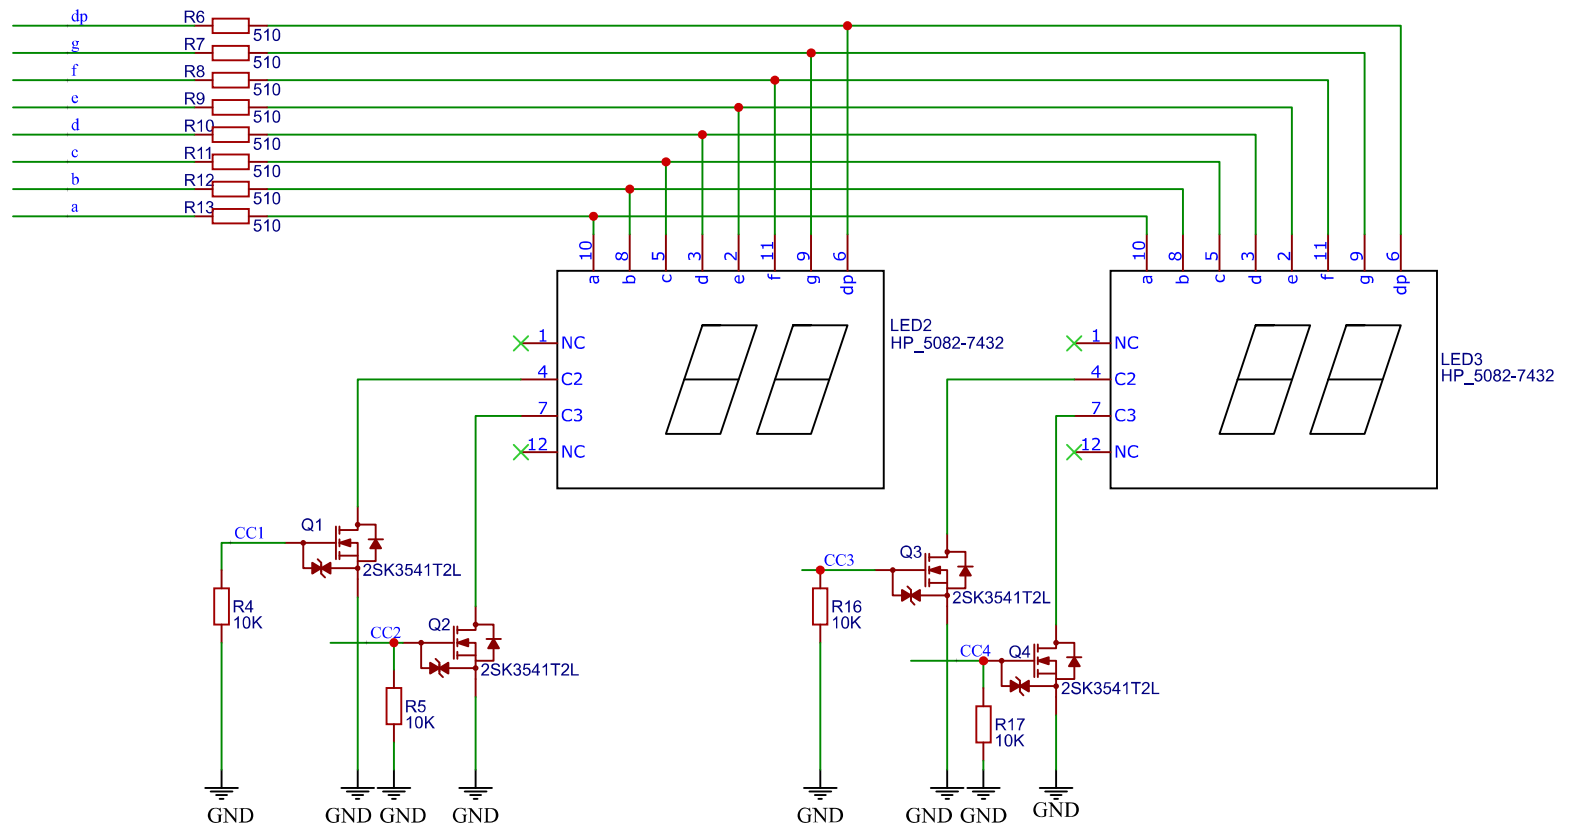

TITLE: Sheet_1		REV: 1.0
Company: Your Company		Sheet: 1/1
Date: 2020-10-20		Drawn By: k24electronics

					Date. 2020-10-23	Drawn By. K2TELECOMICS
1	2	3	4	5		