



# OpenTrons Pipette Tool


## Assembly Instructions

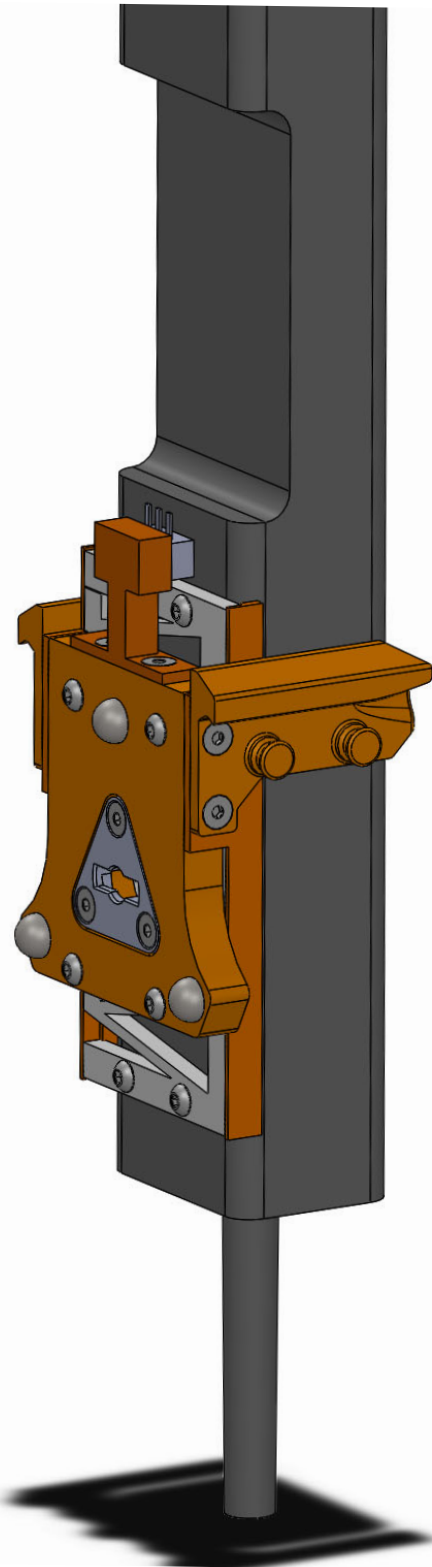

4 | M3 x 6mm buttonhead

1 | OT2 pipette

1 | Nested flexure


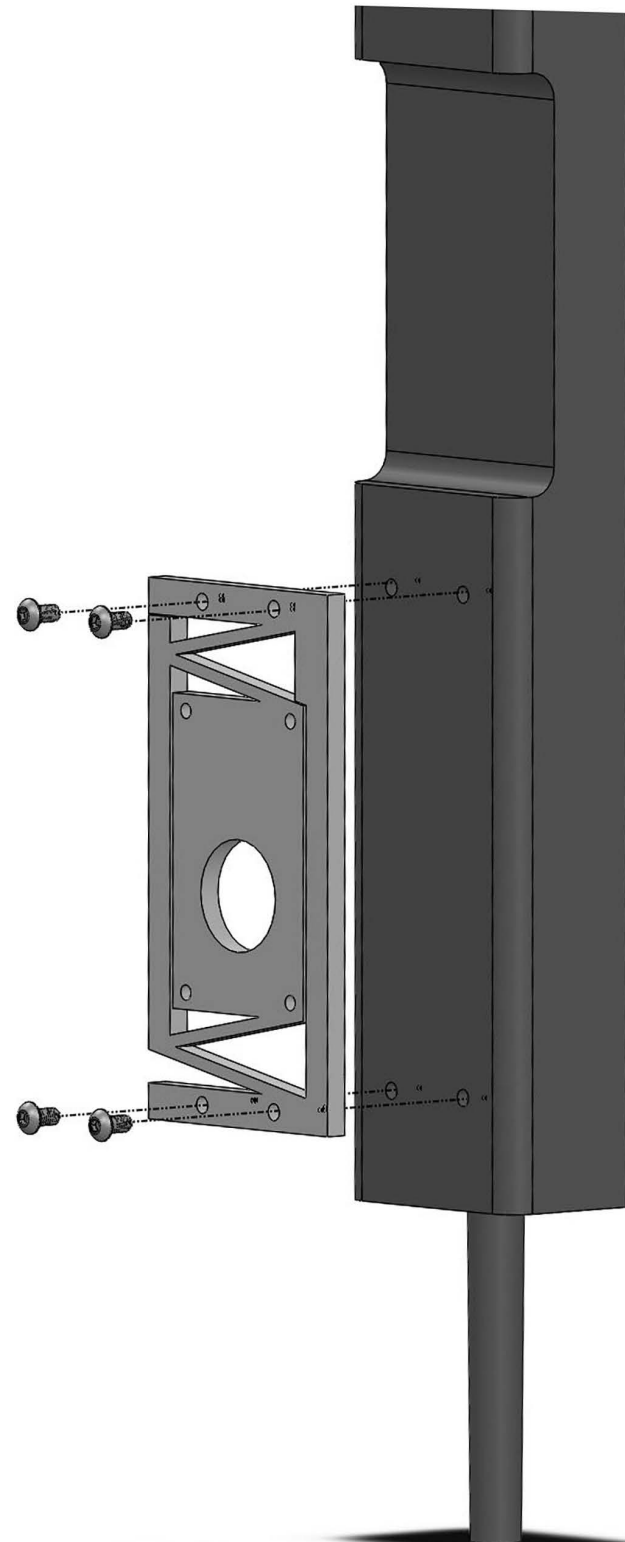


1 | Toolplate

1 | Delrin wedgeplate


3 | M3 heatset insert

3 | M3 x 6mm flathead


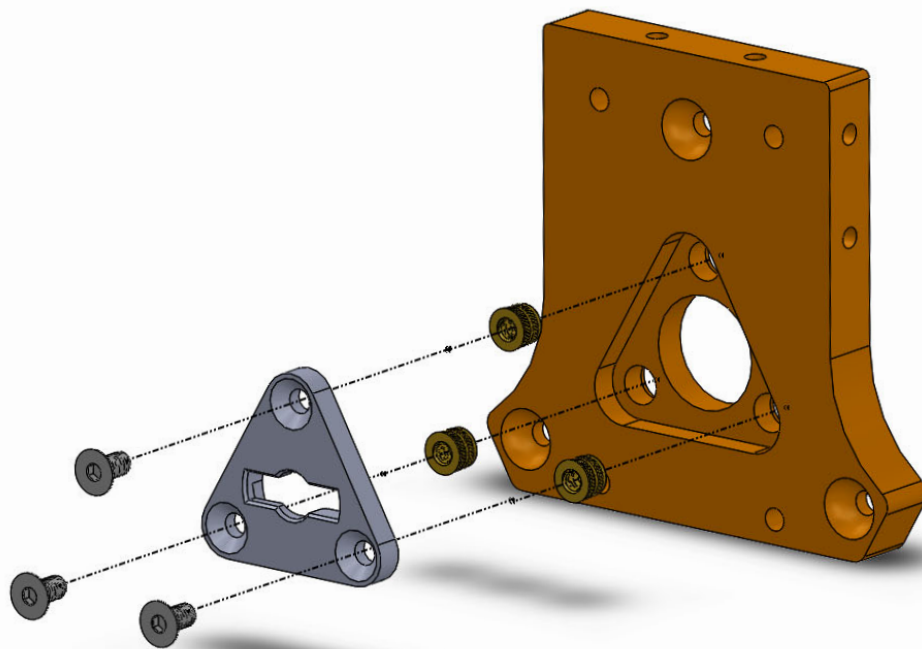


3 | M3 x 6mm flathead

3 | Toolball

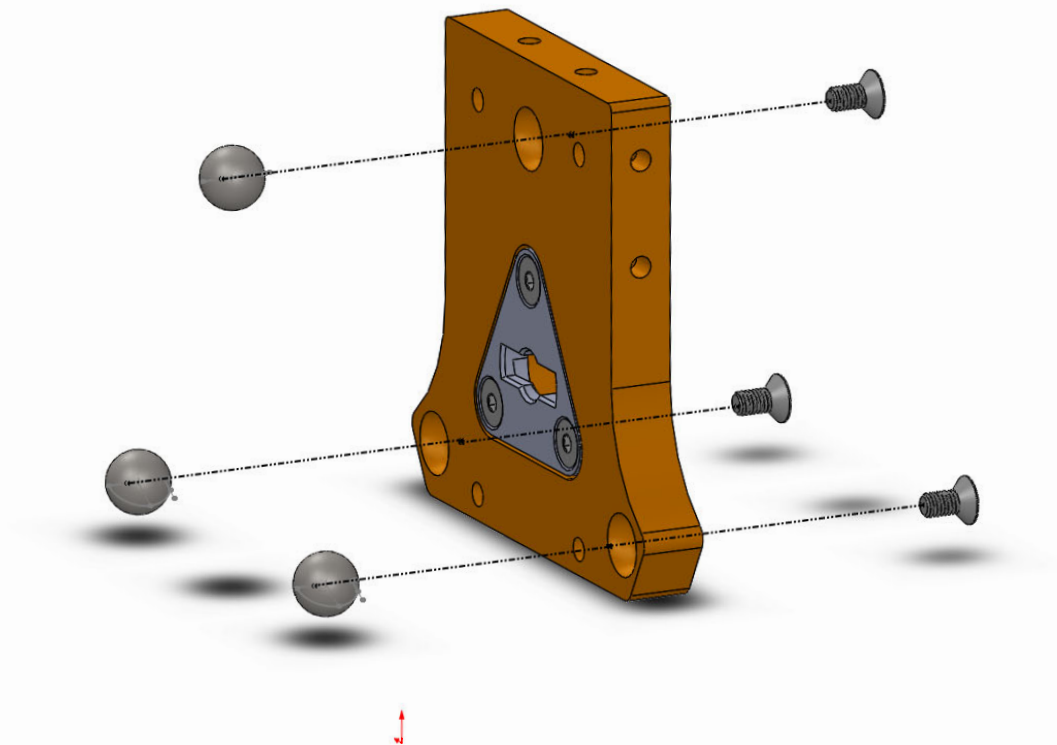



4 | M3 x 10mm buttonhead

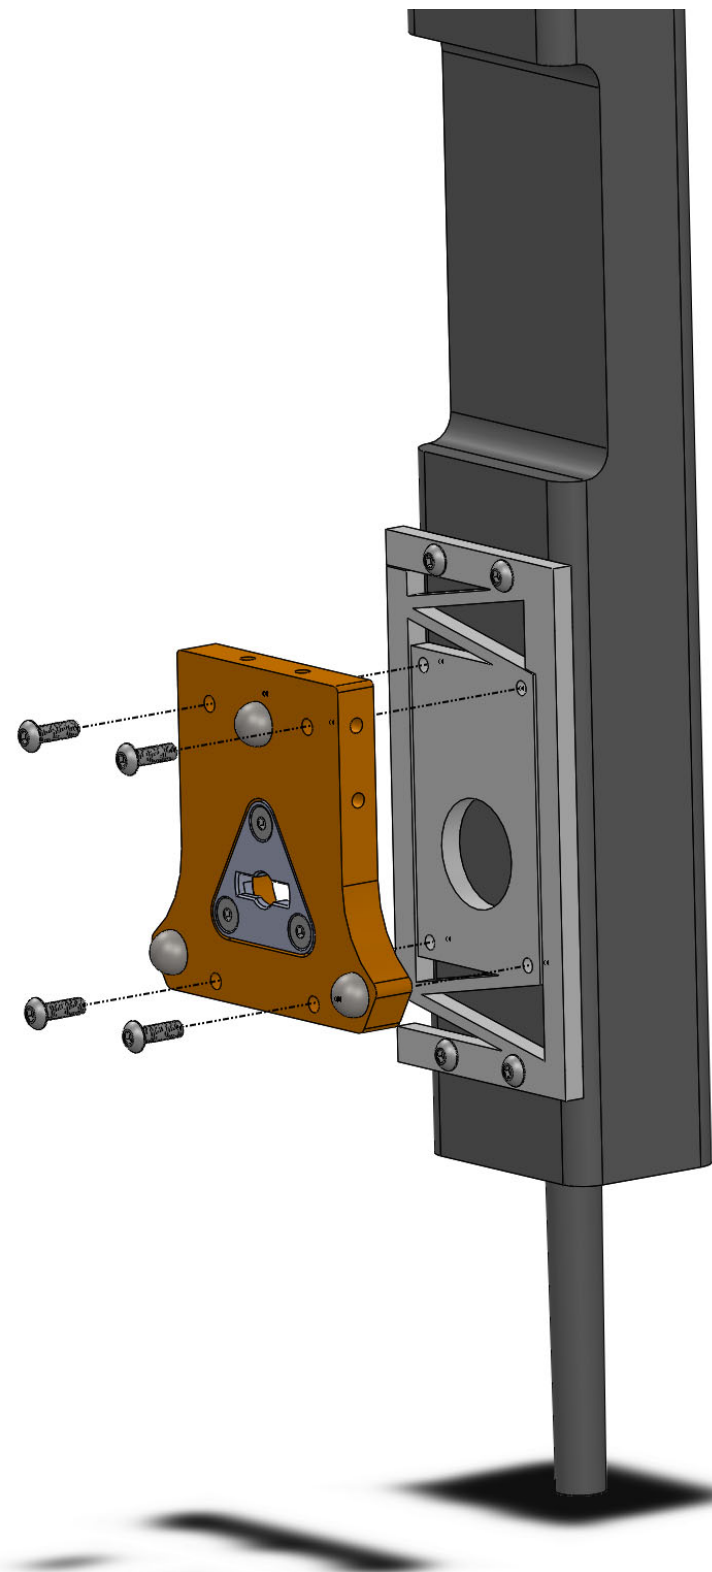

4 | M3 x 10 flathead

2 | Flexure rail

2 | Tool wings

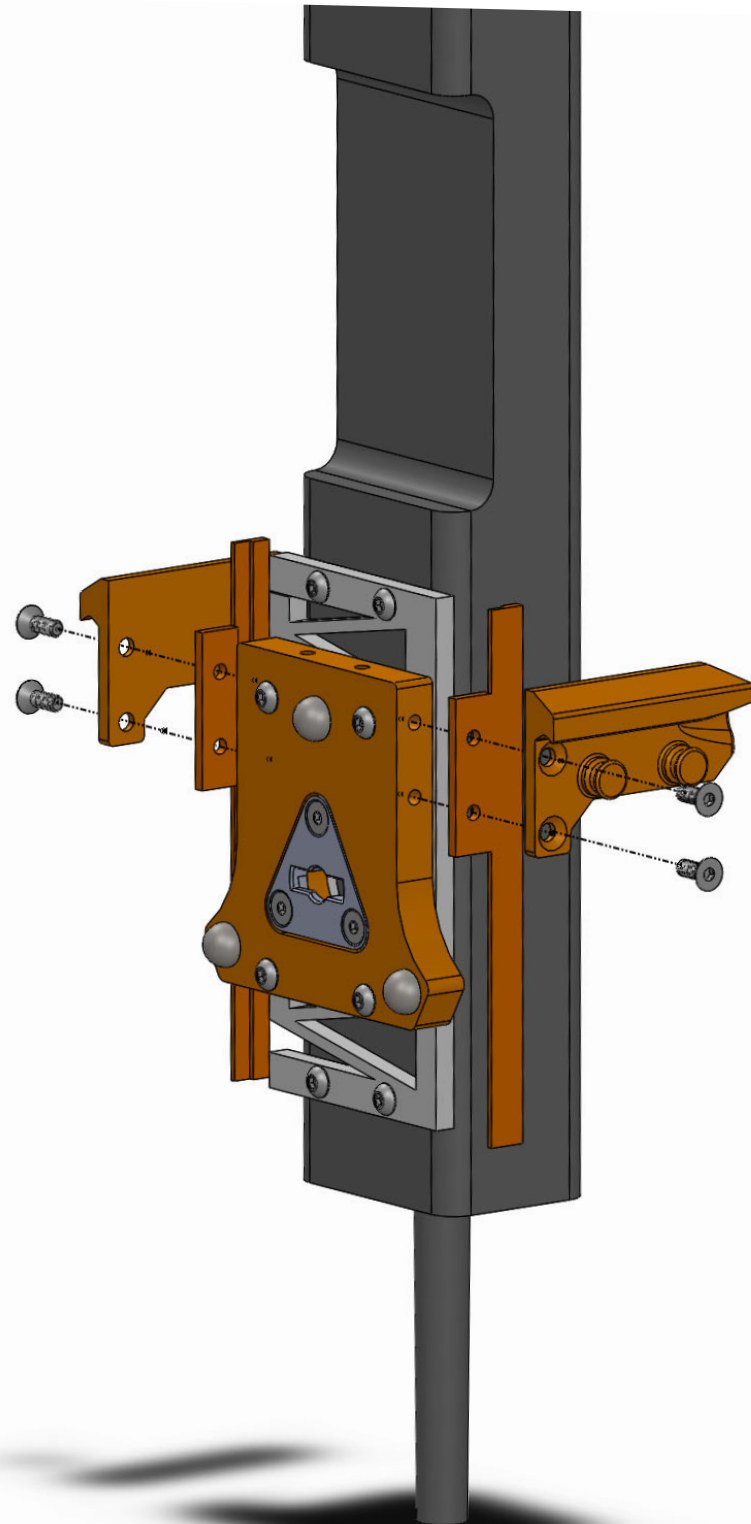

2 | M3 x 6 flathead

1 | Endstop

1 | Endstop connector

Make sure you place the limit switch into the connector before screwing the connector to the tool plate!

