



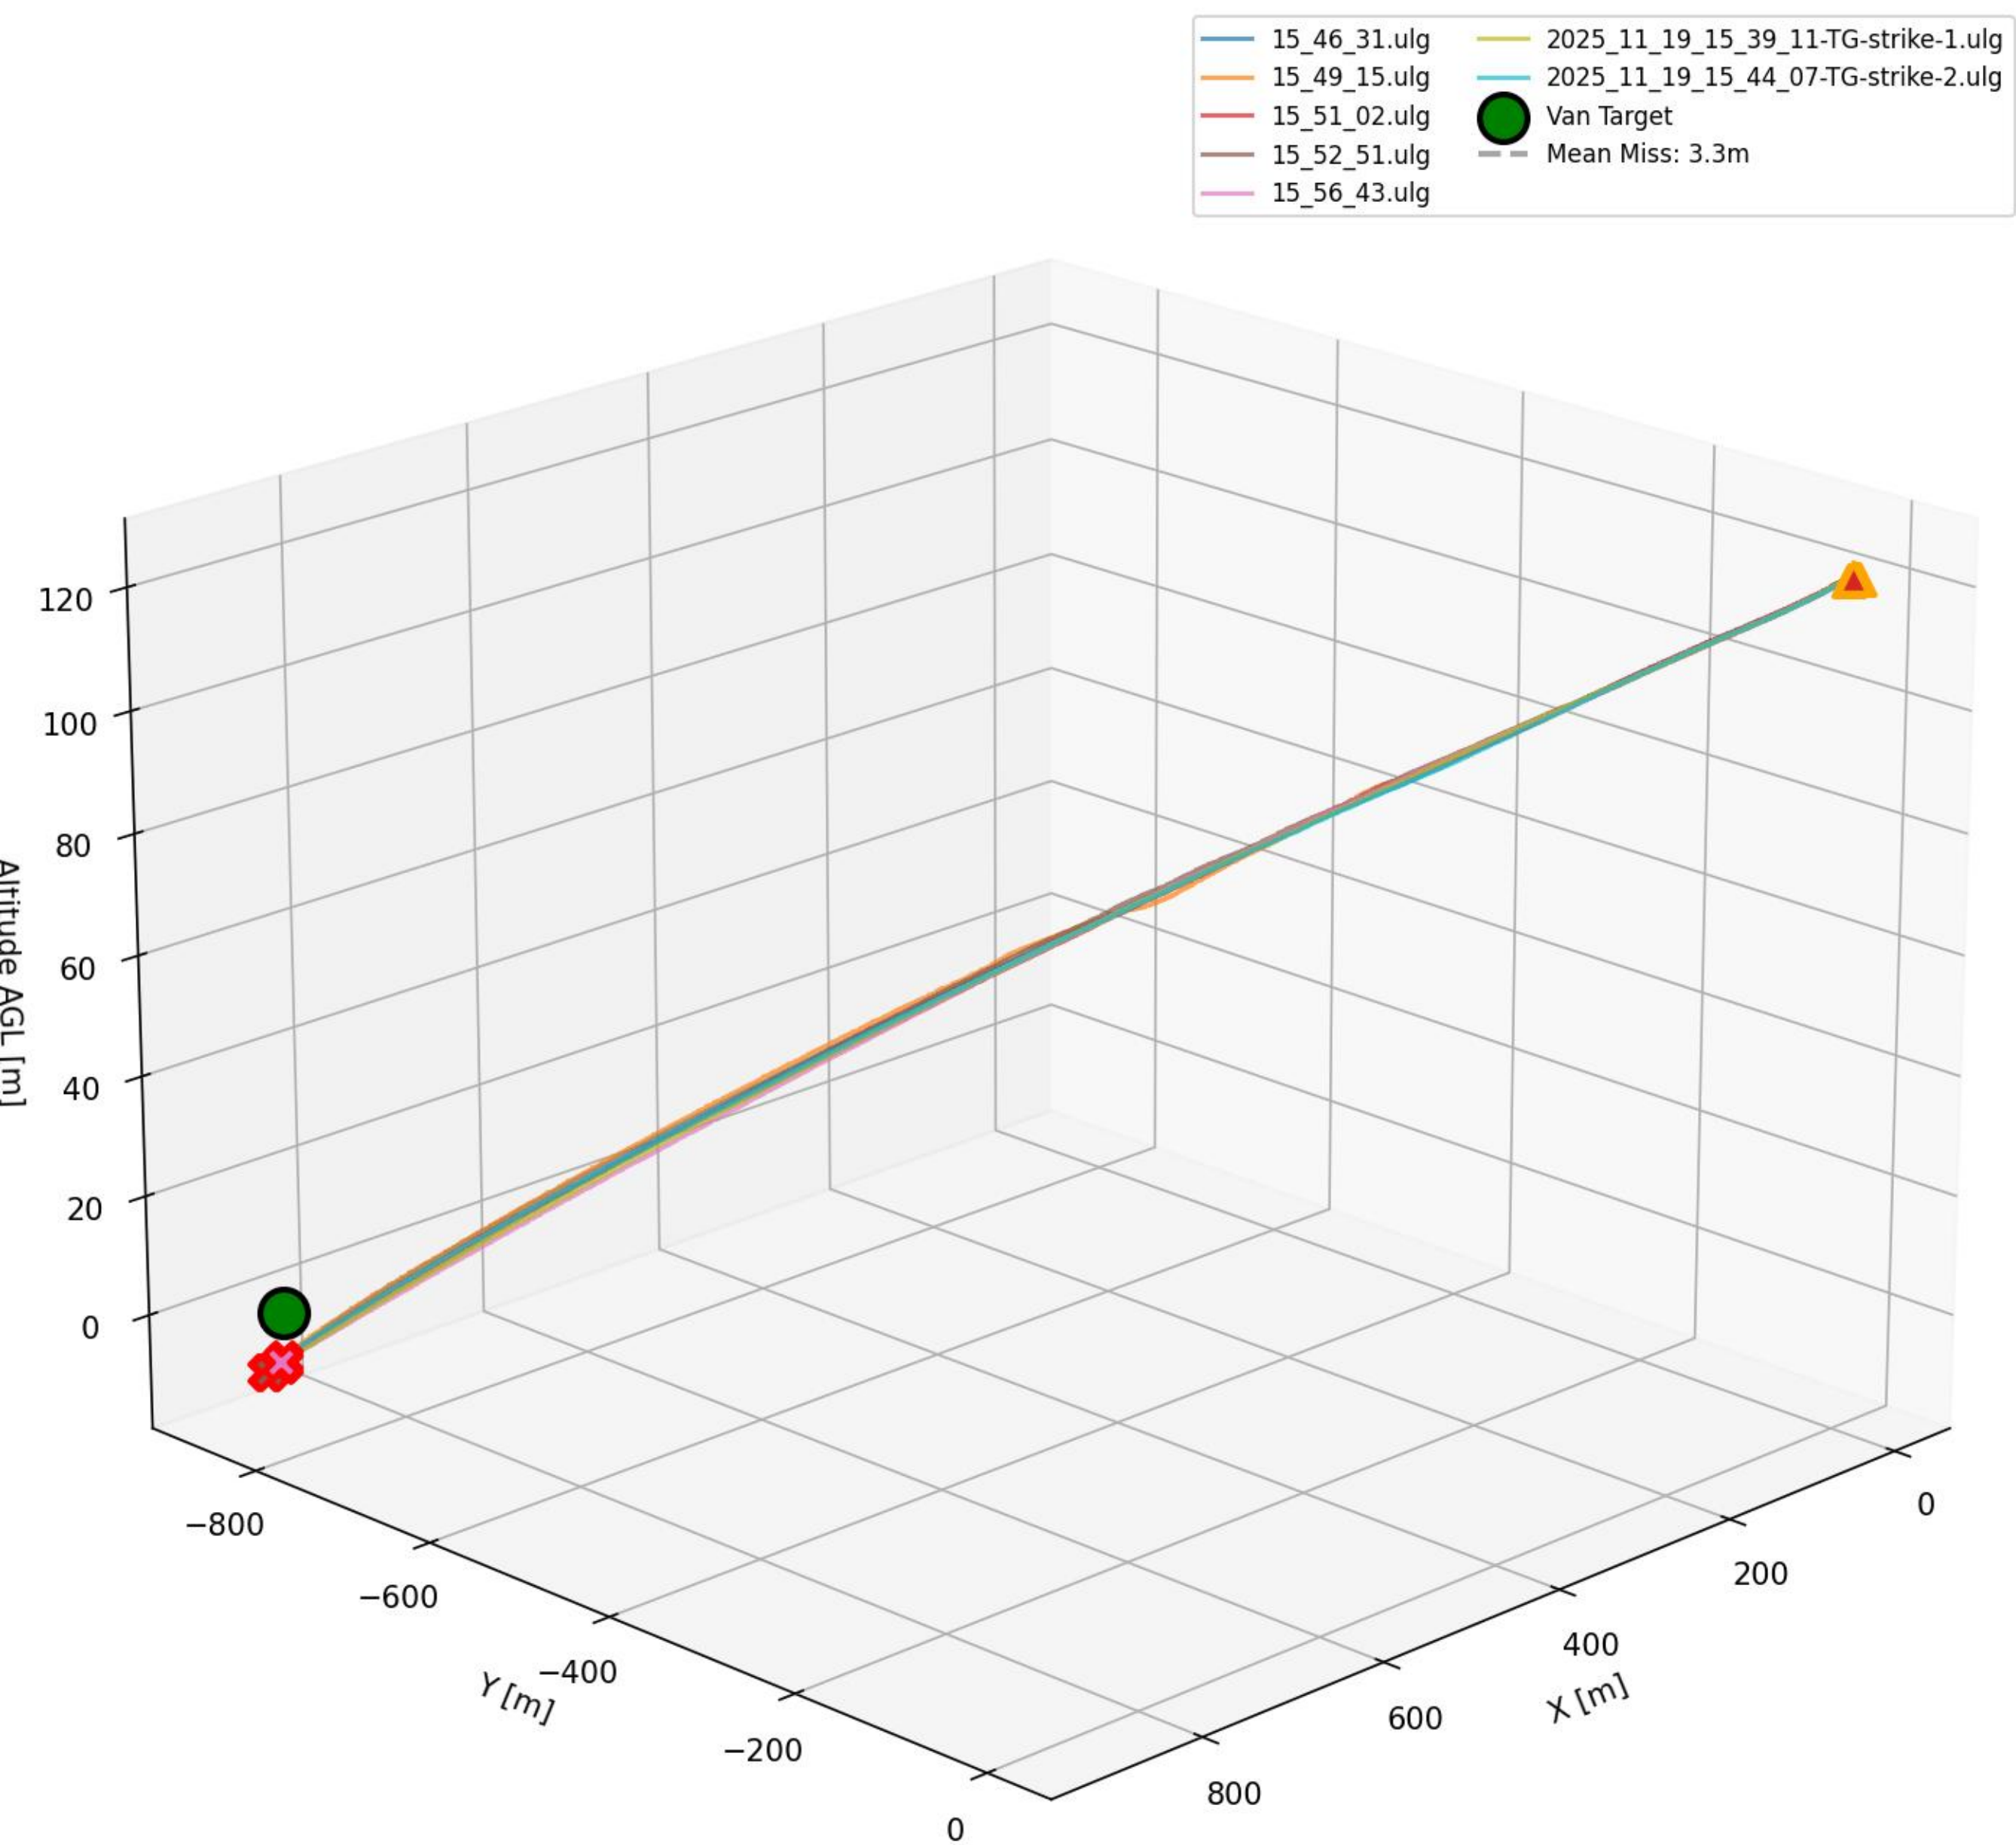
















3D Terminal Engagement Trajectories (Target: Van)

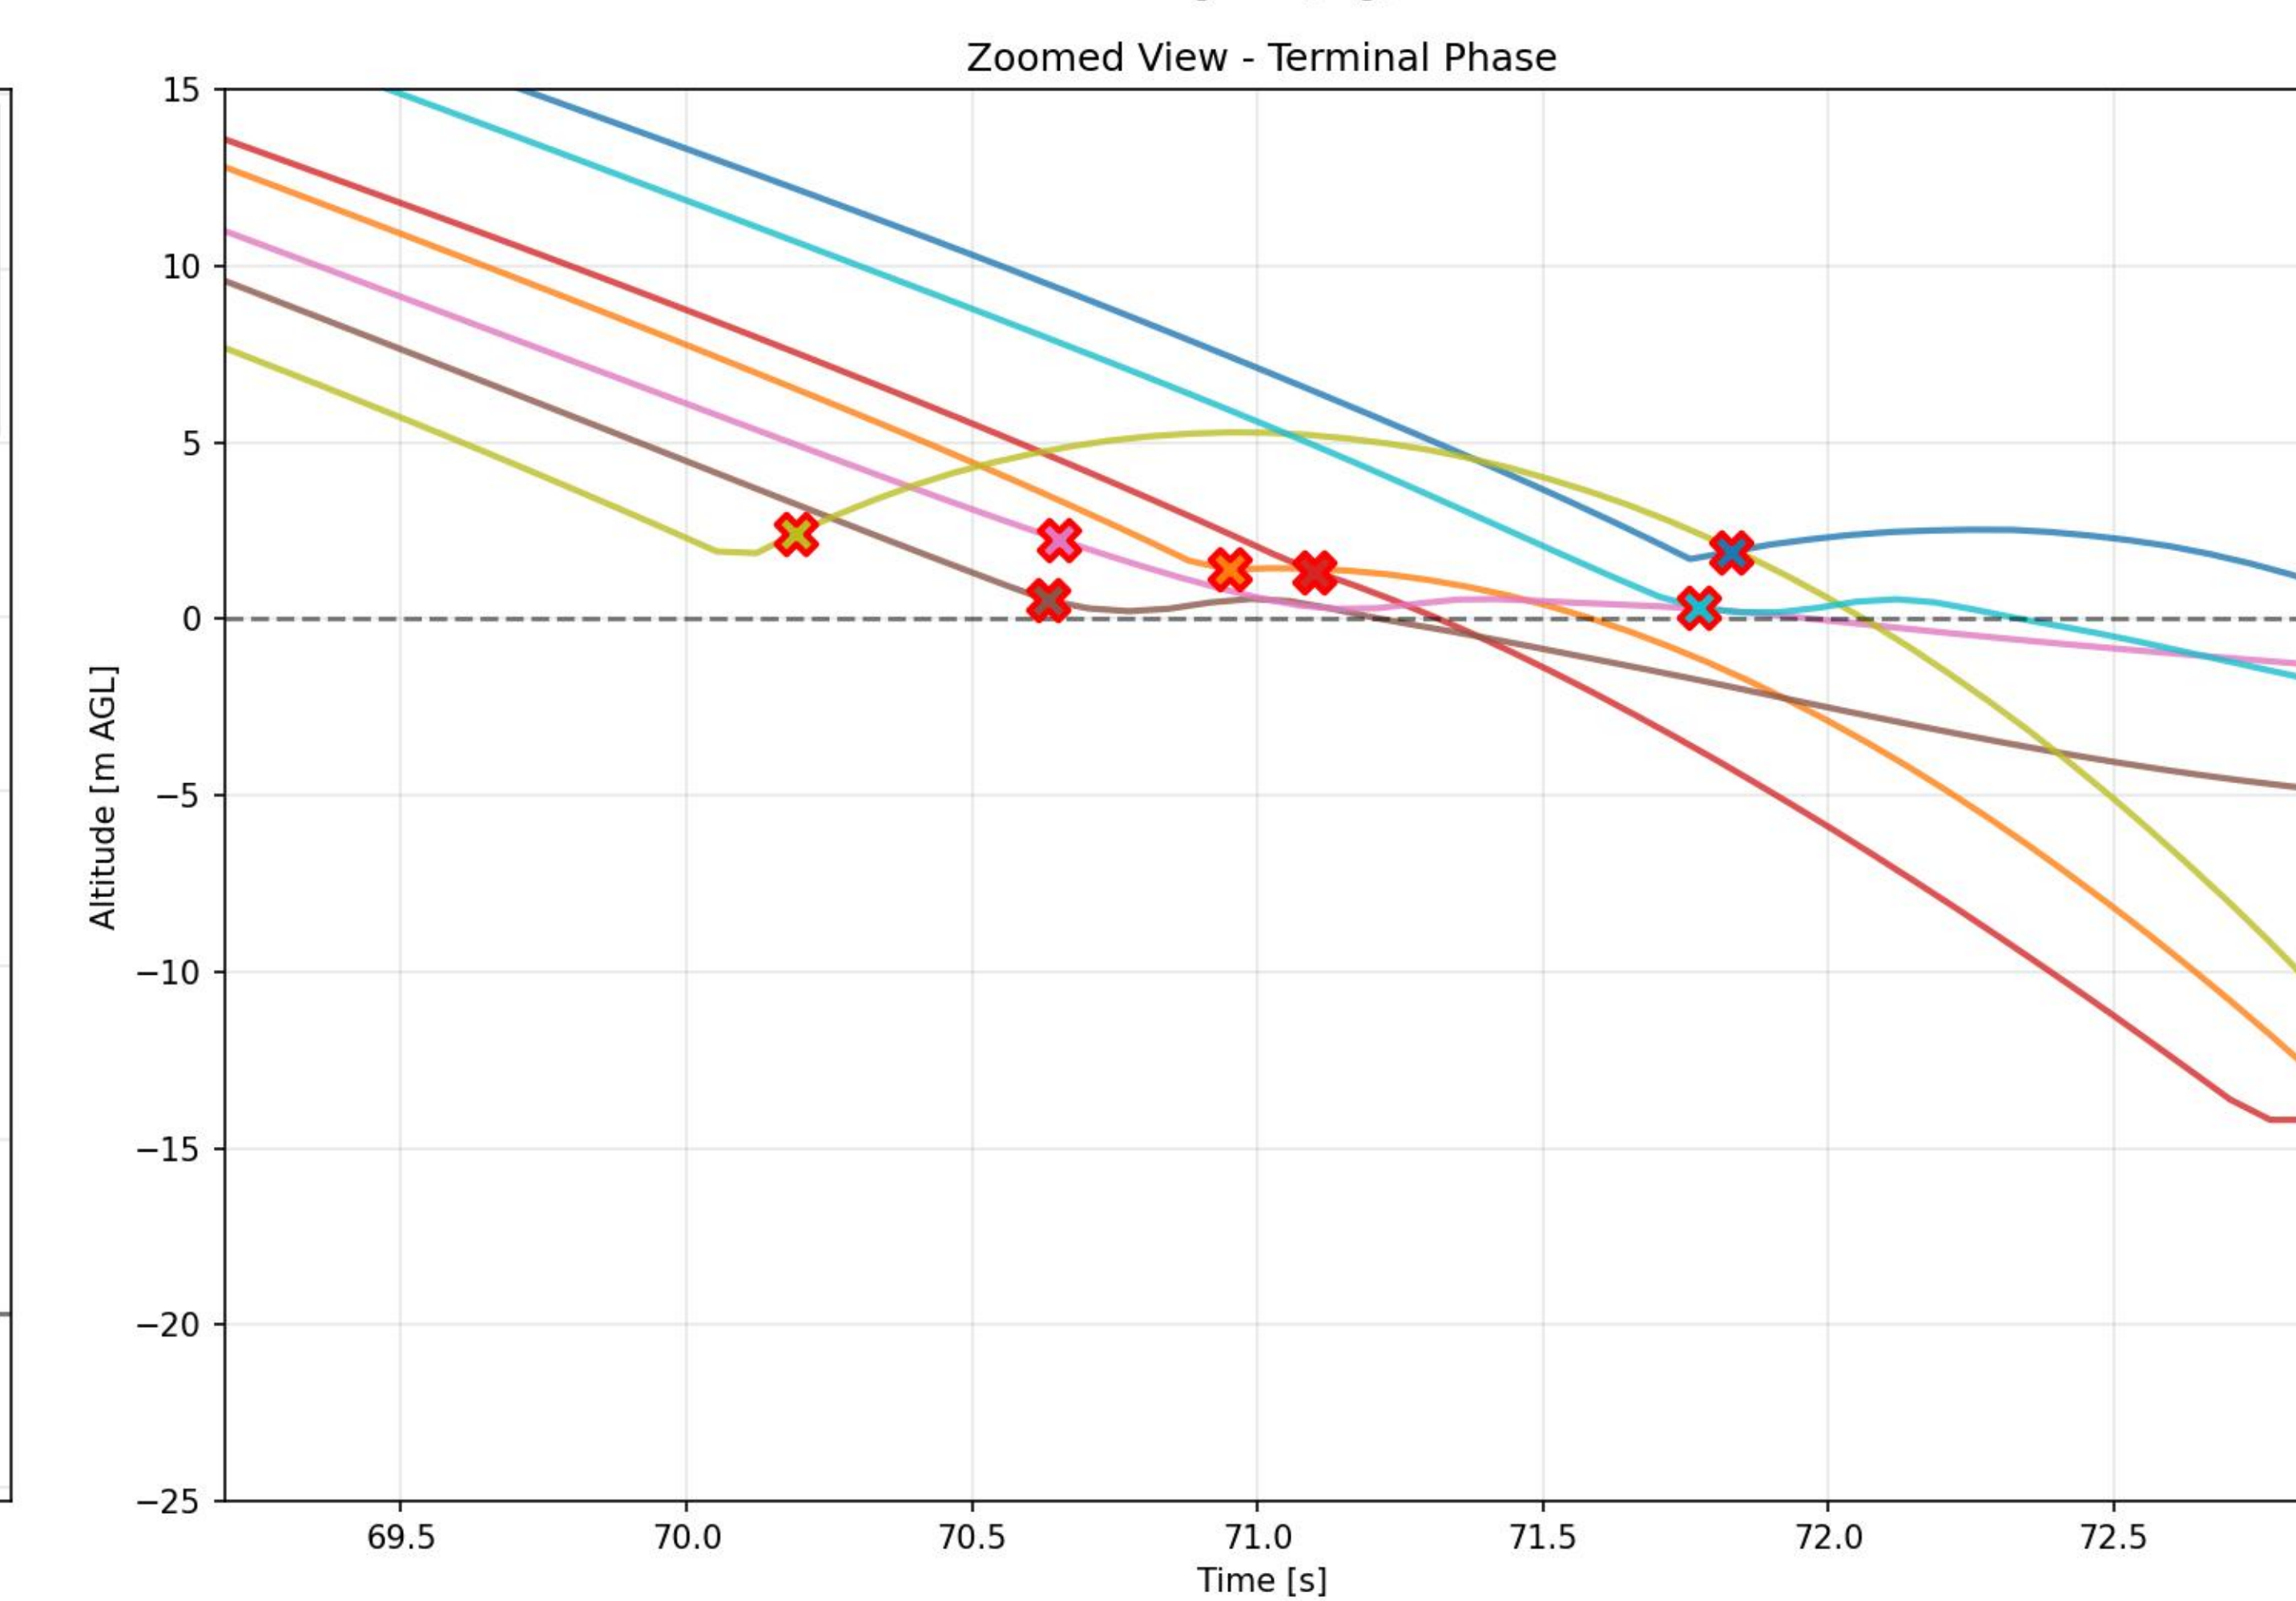







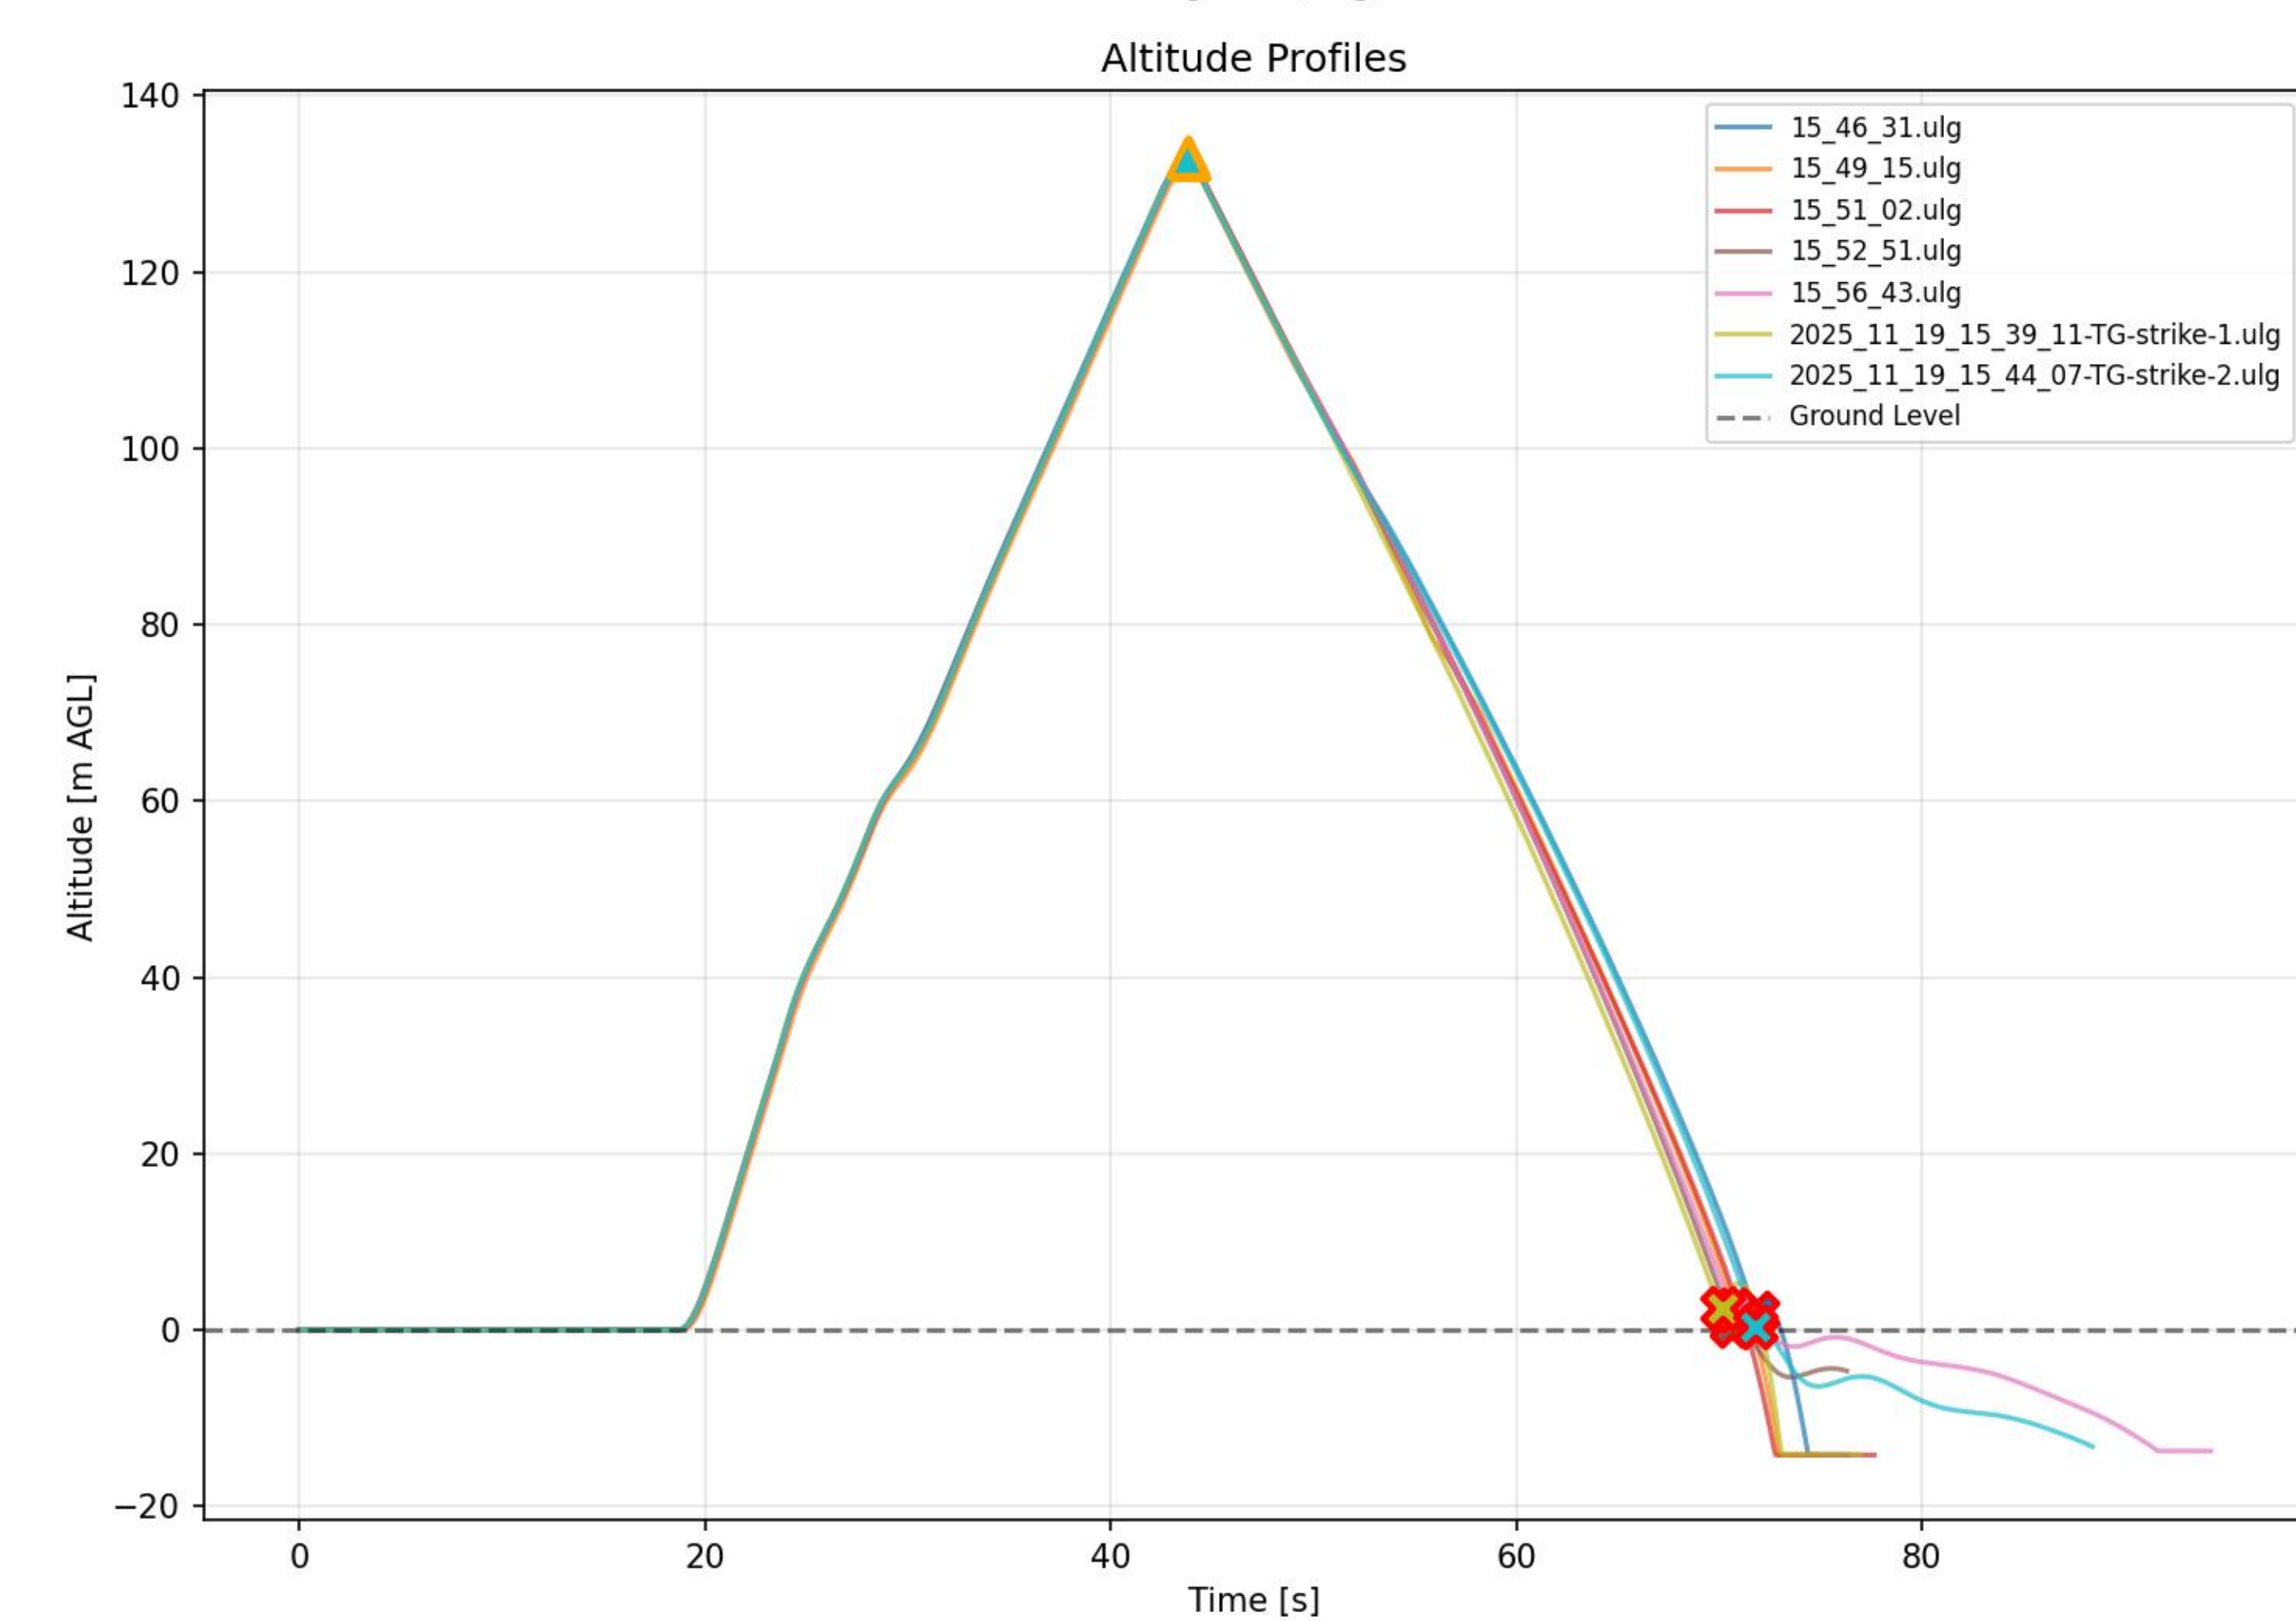


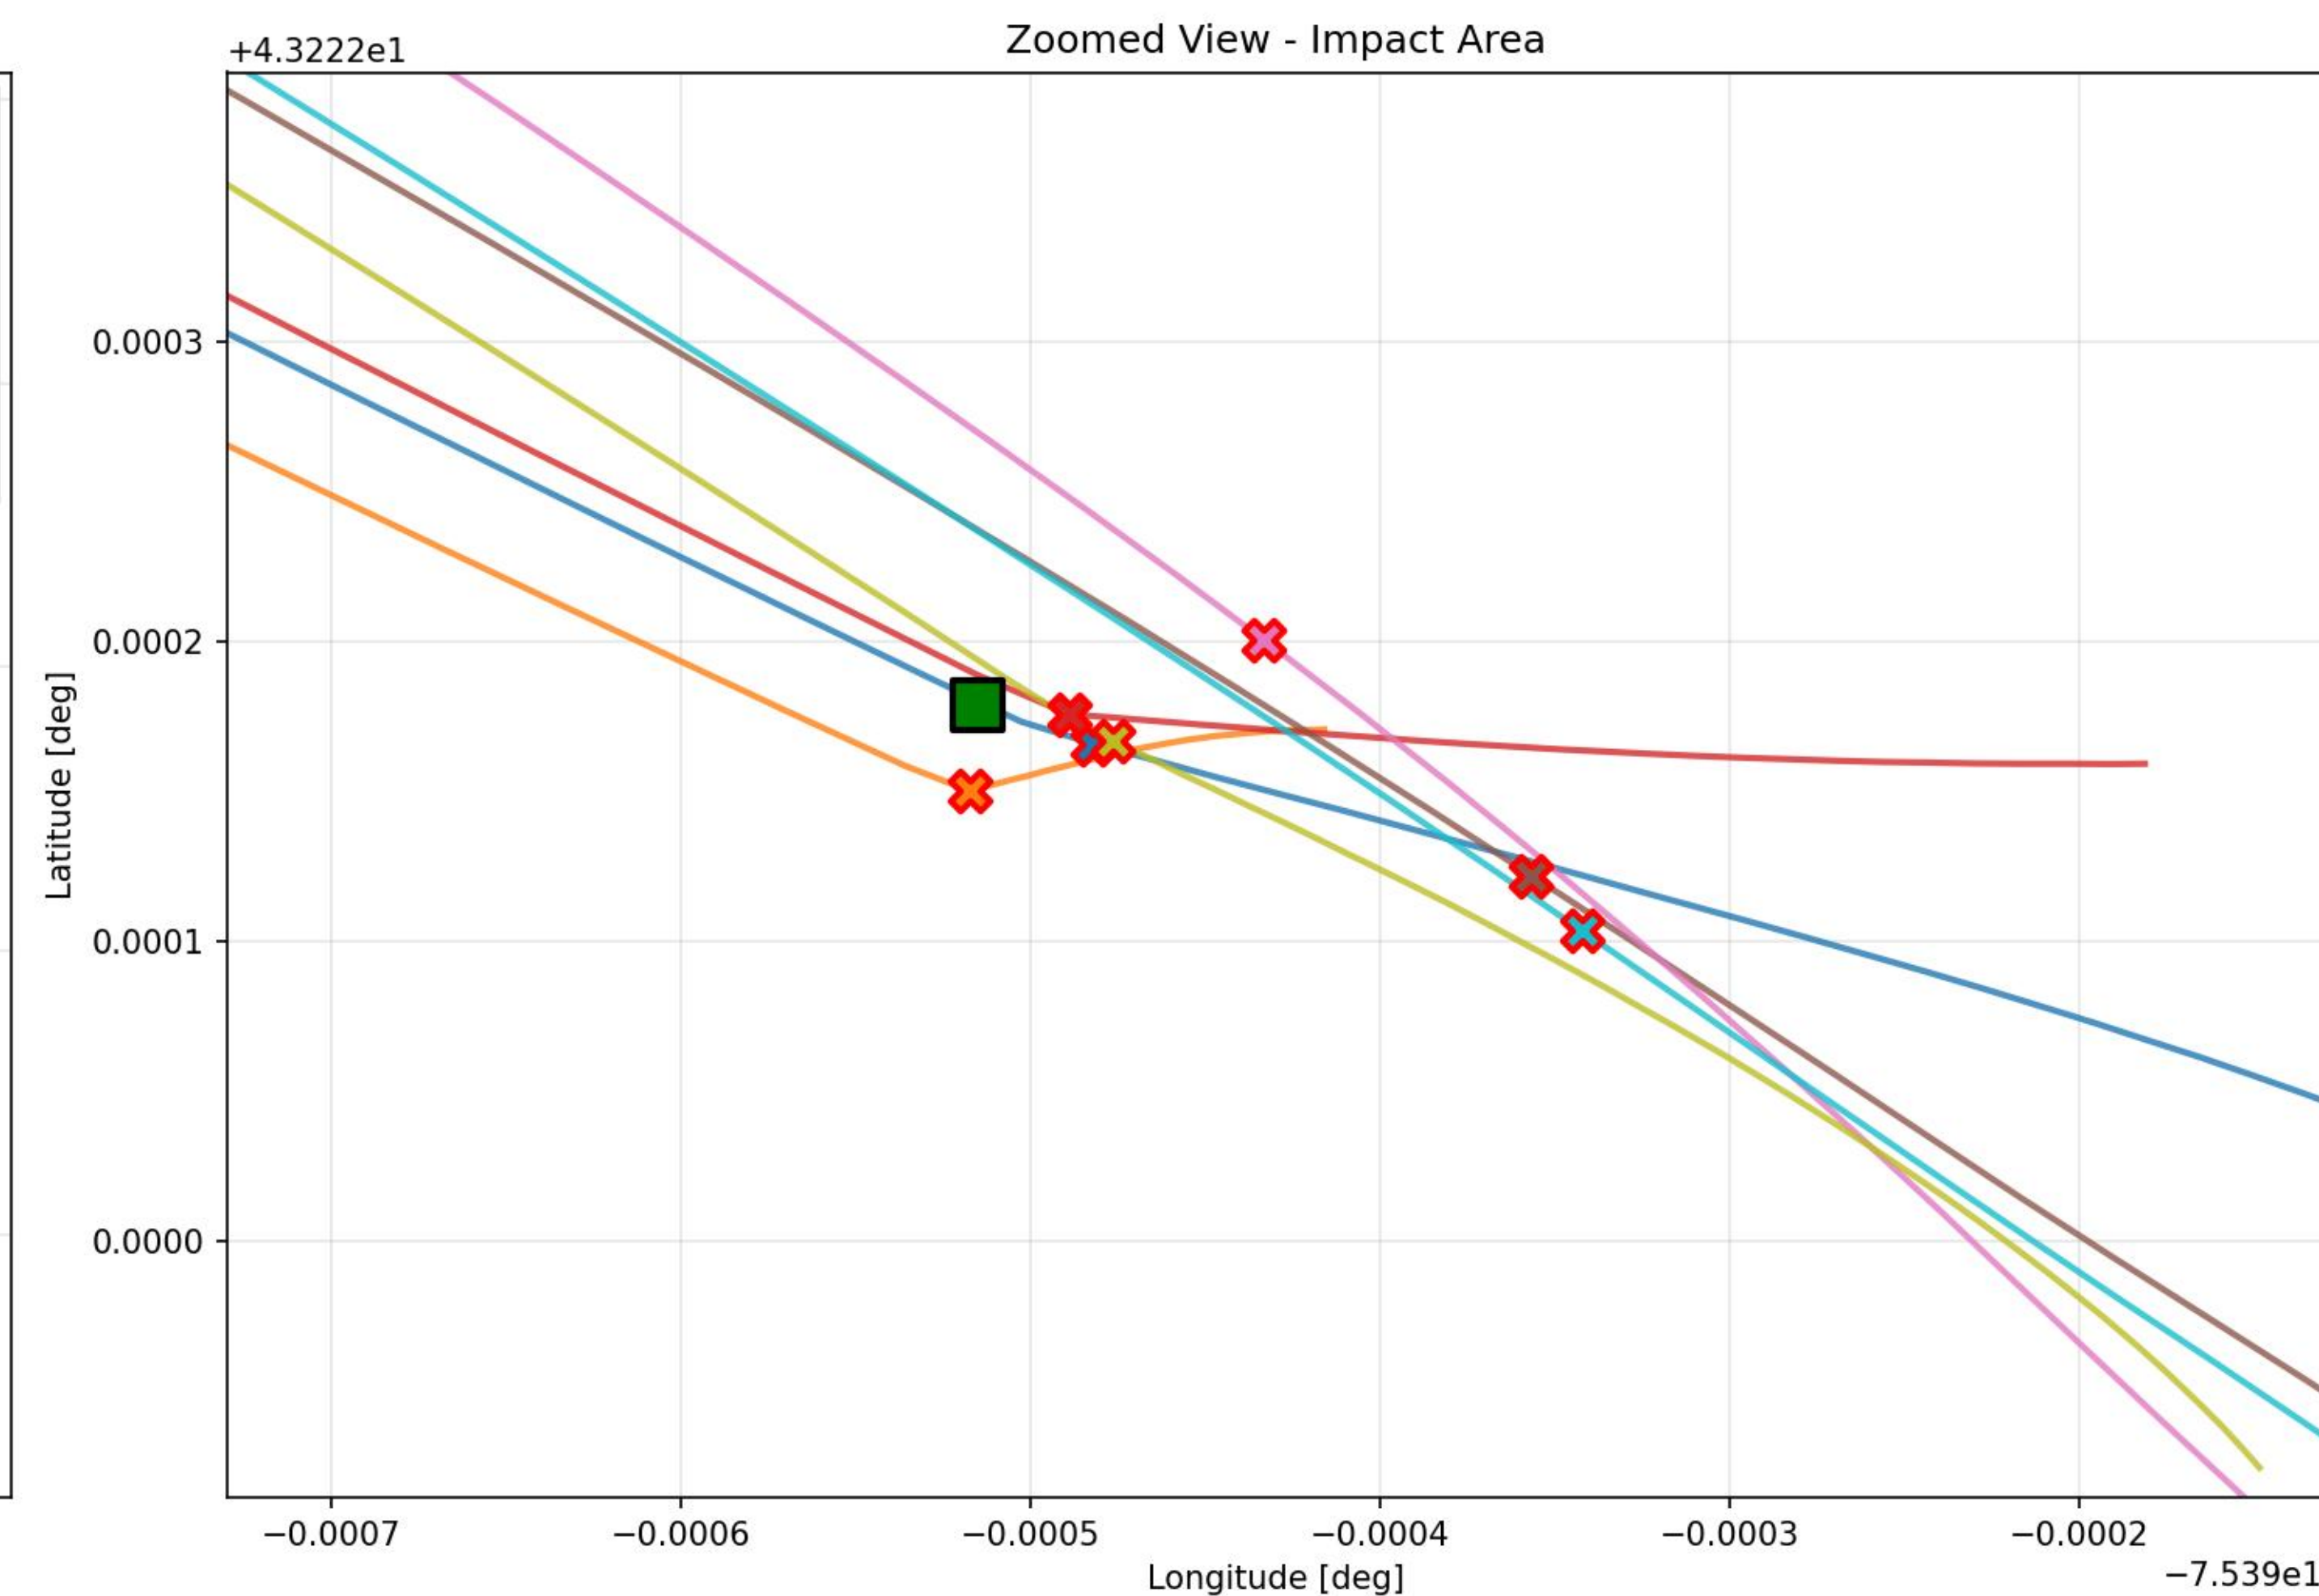







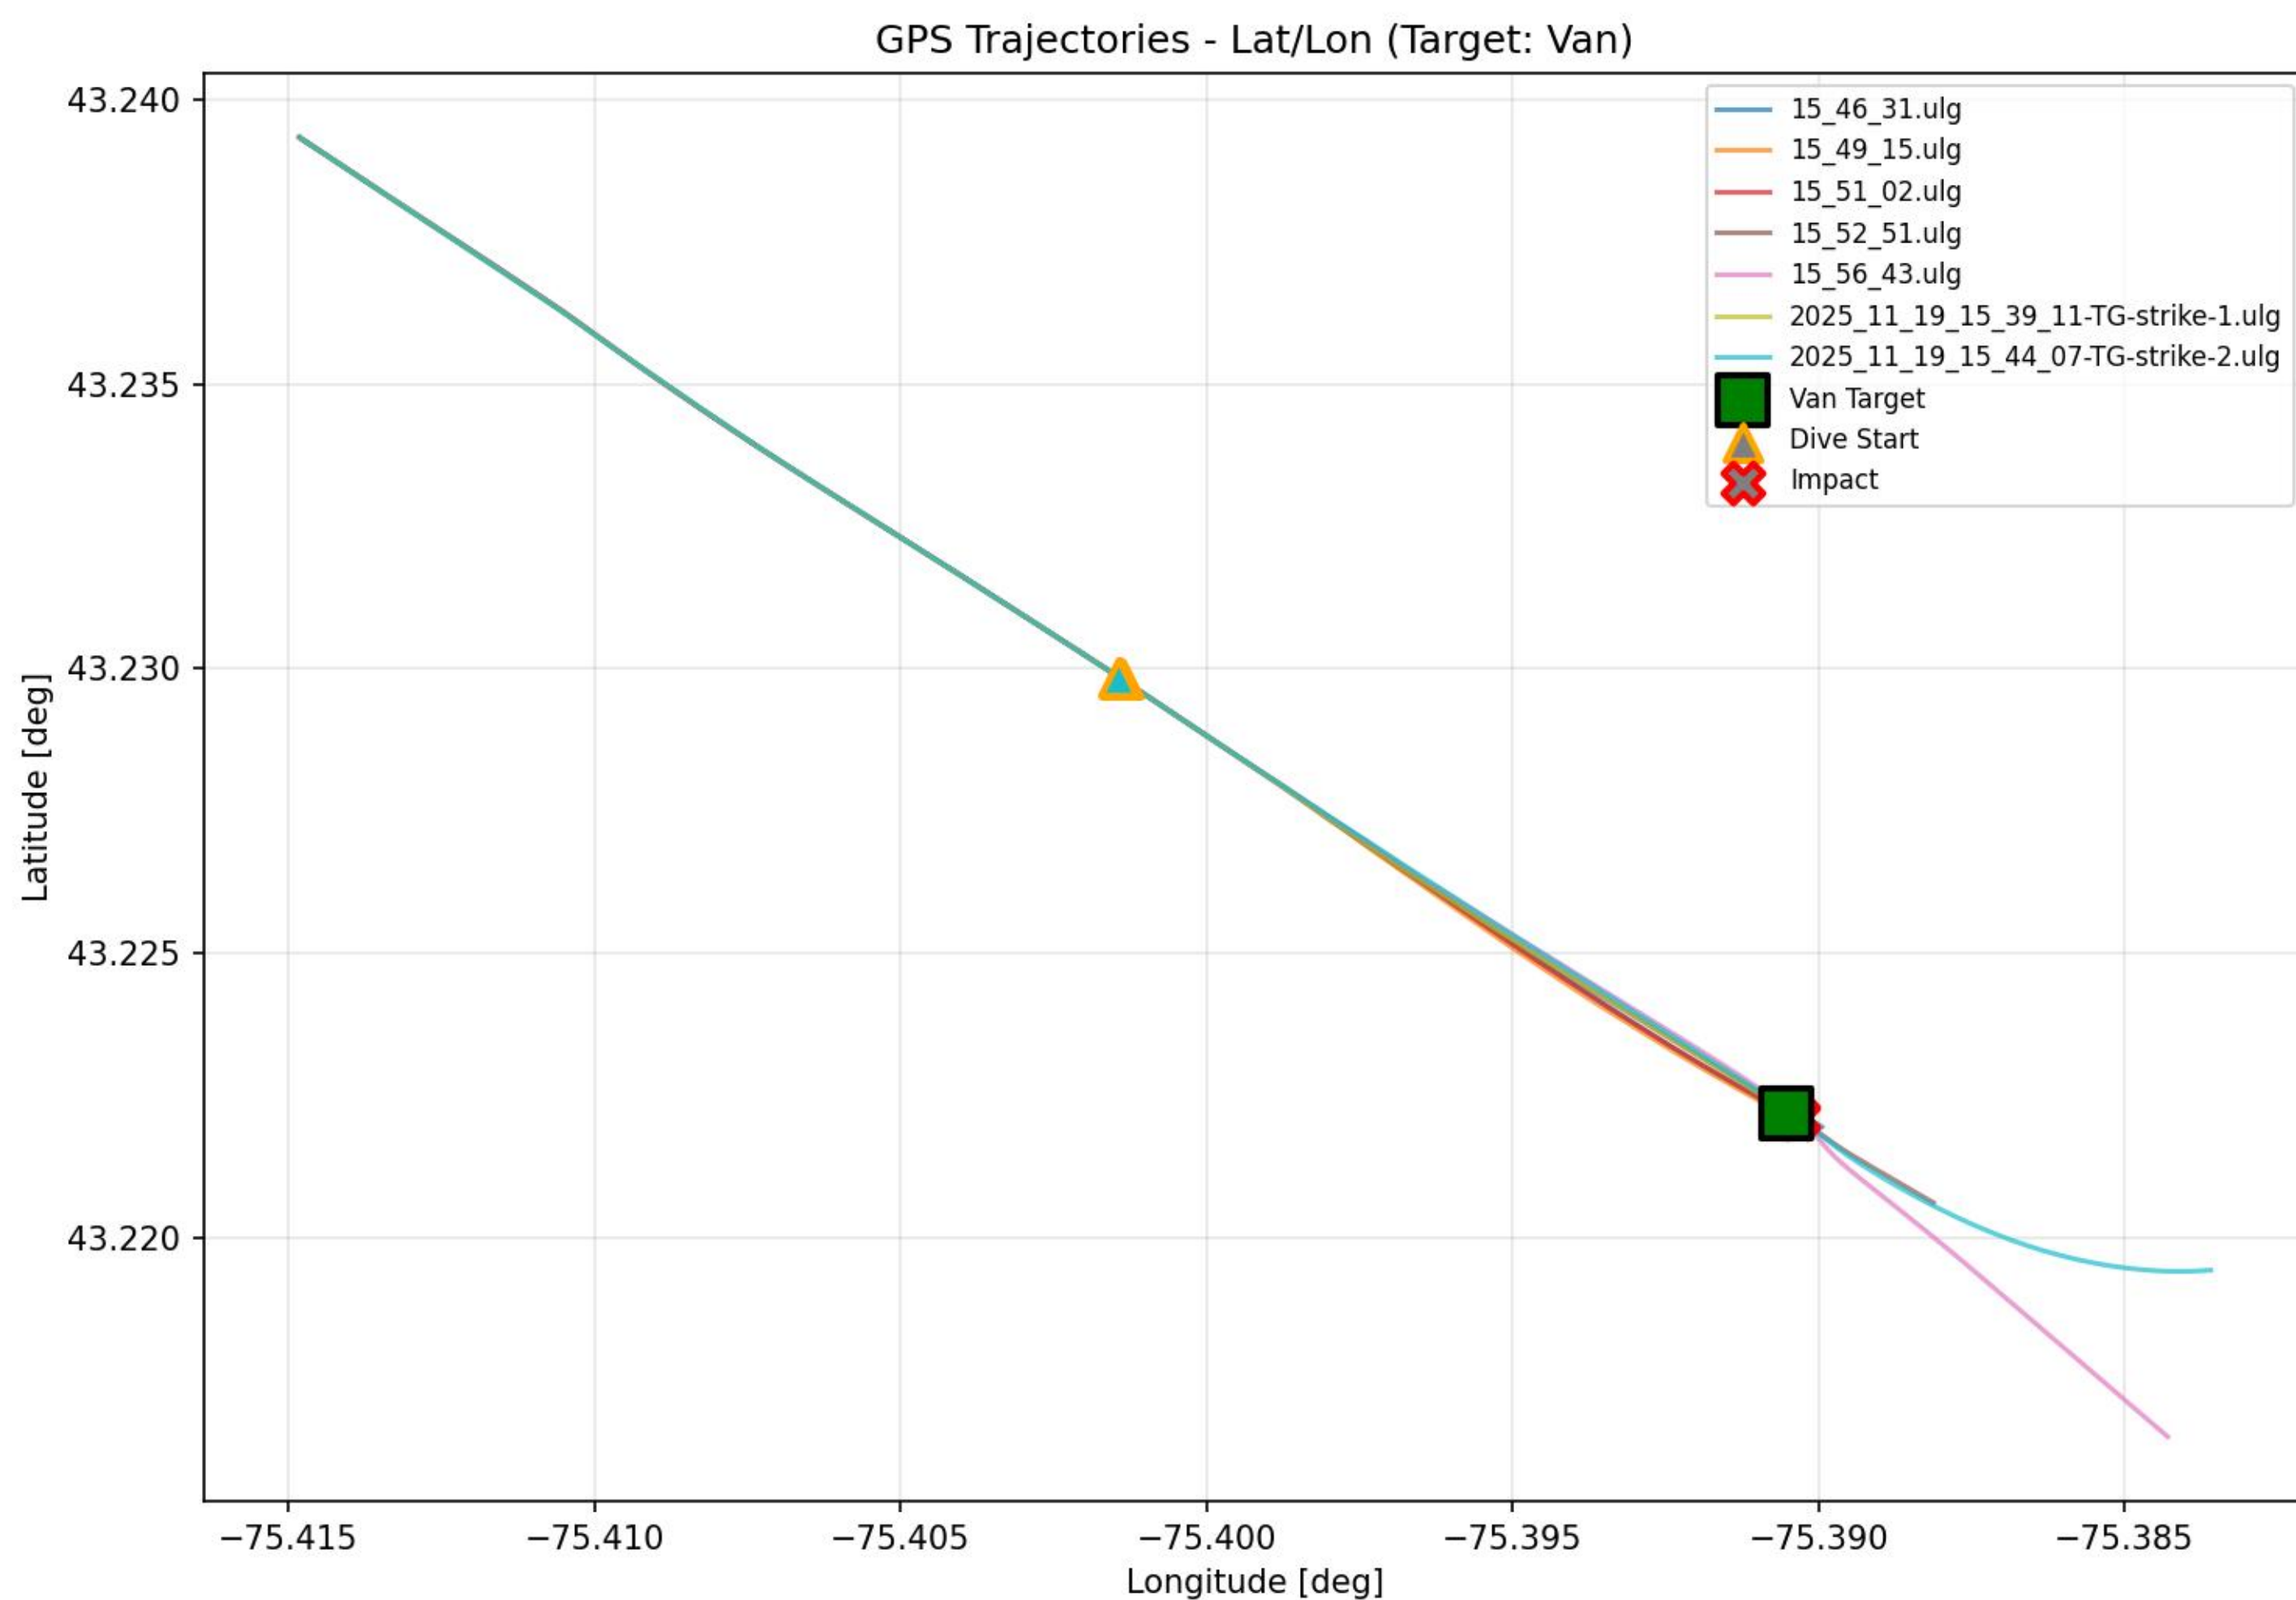


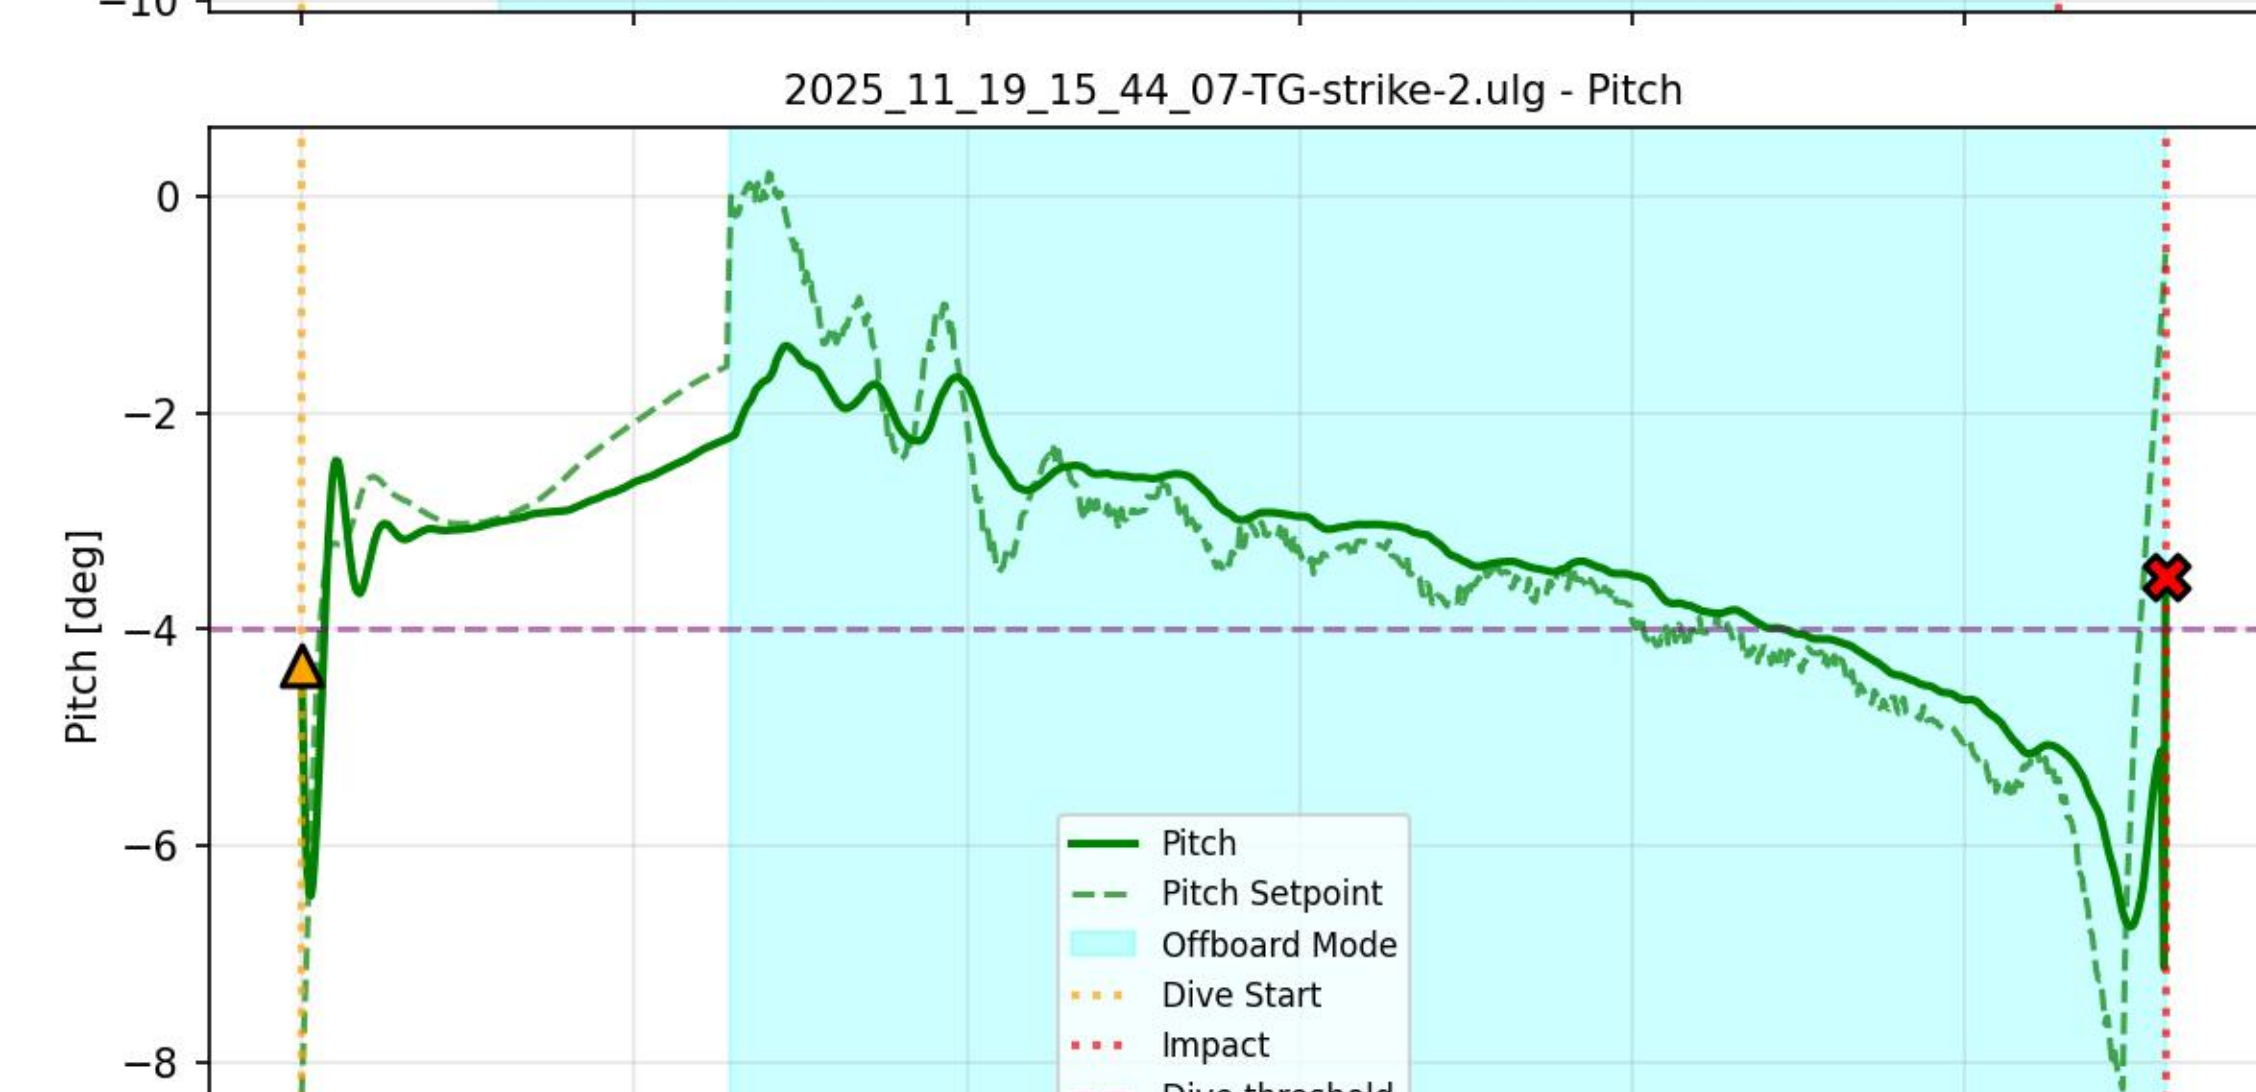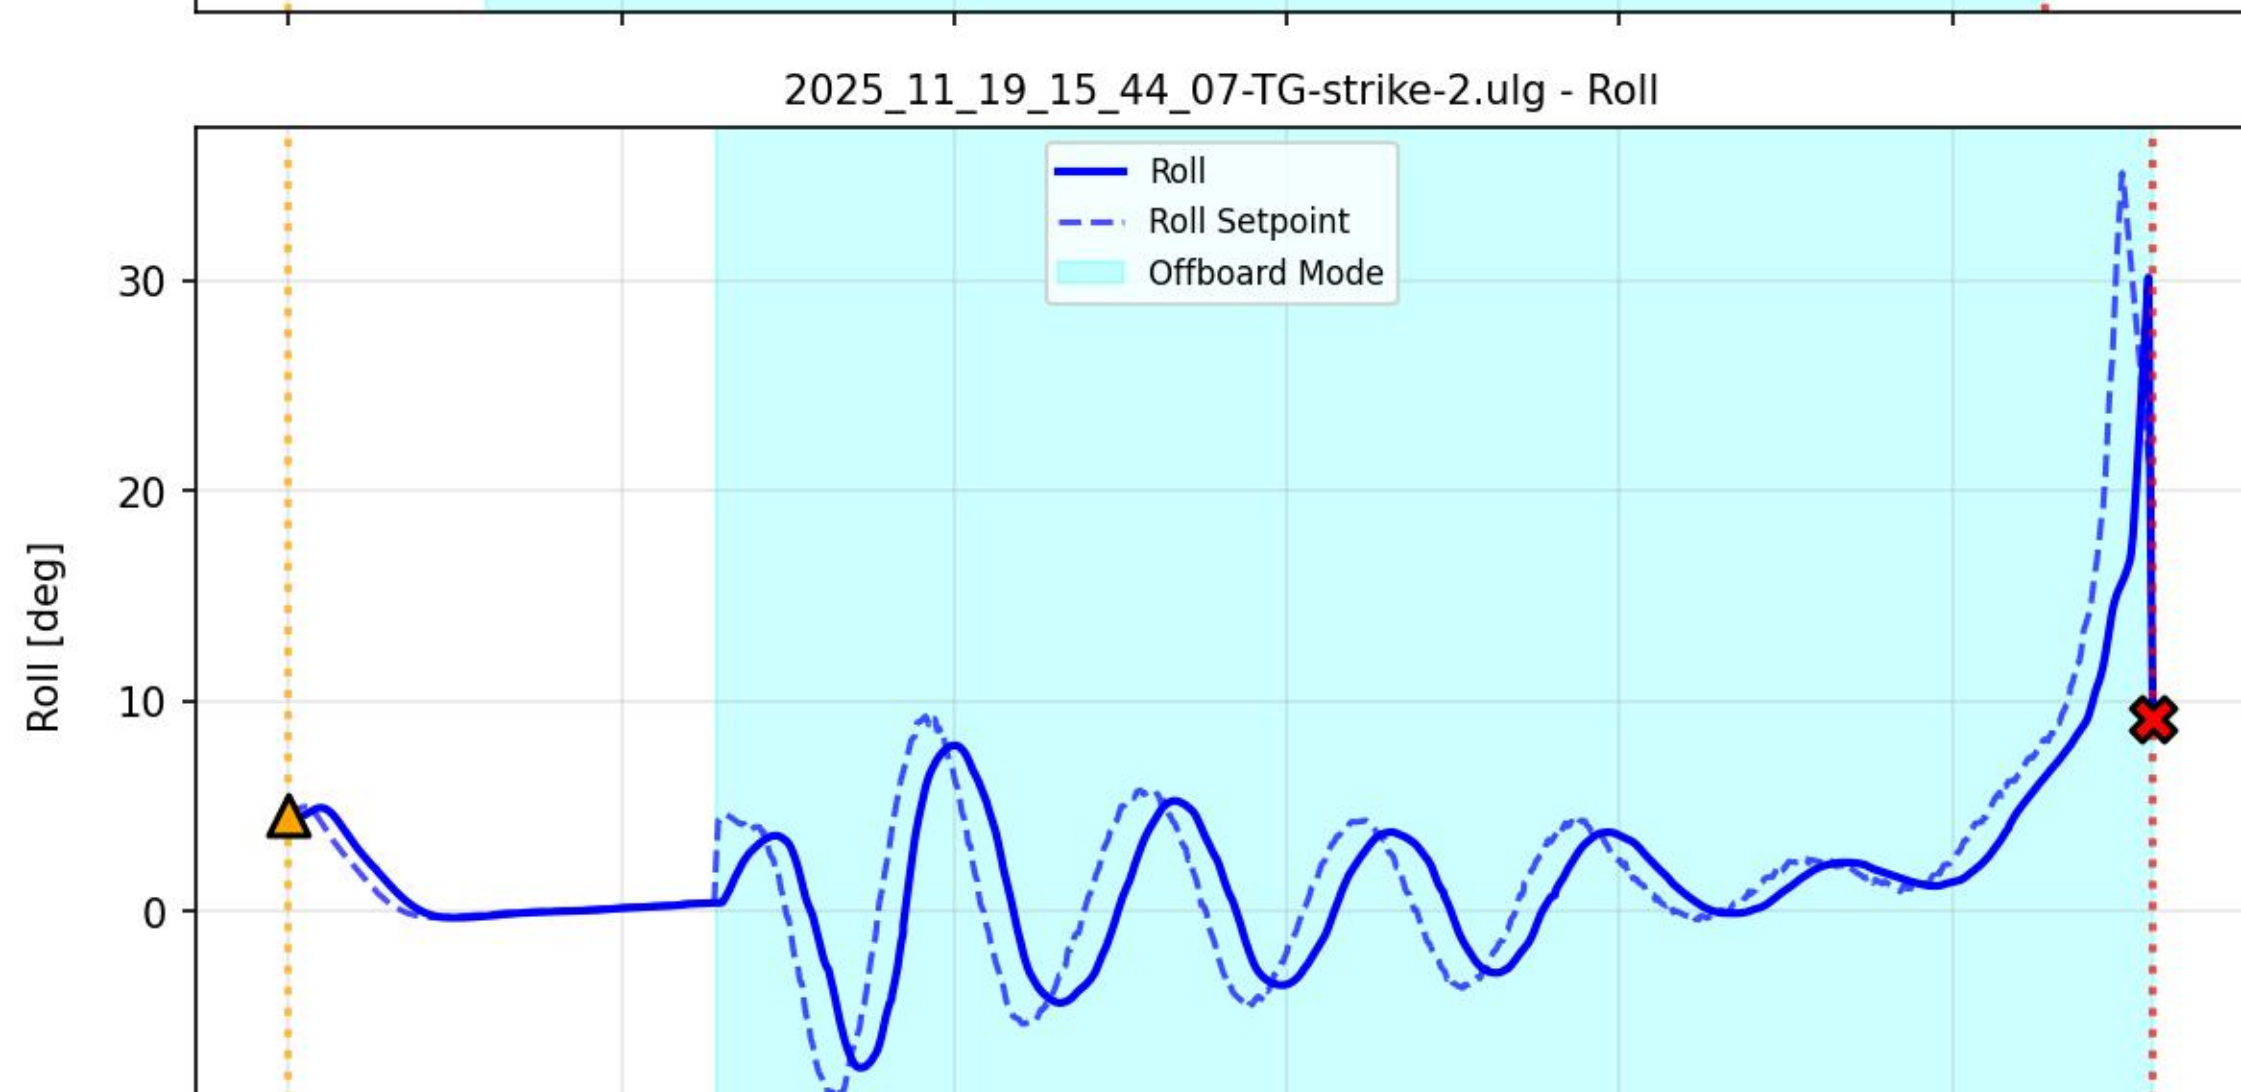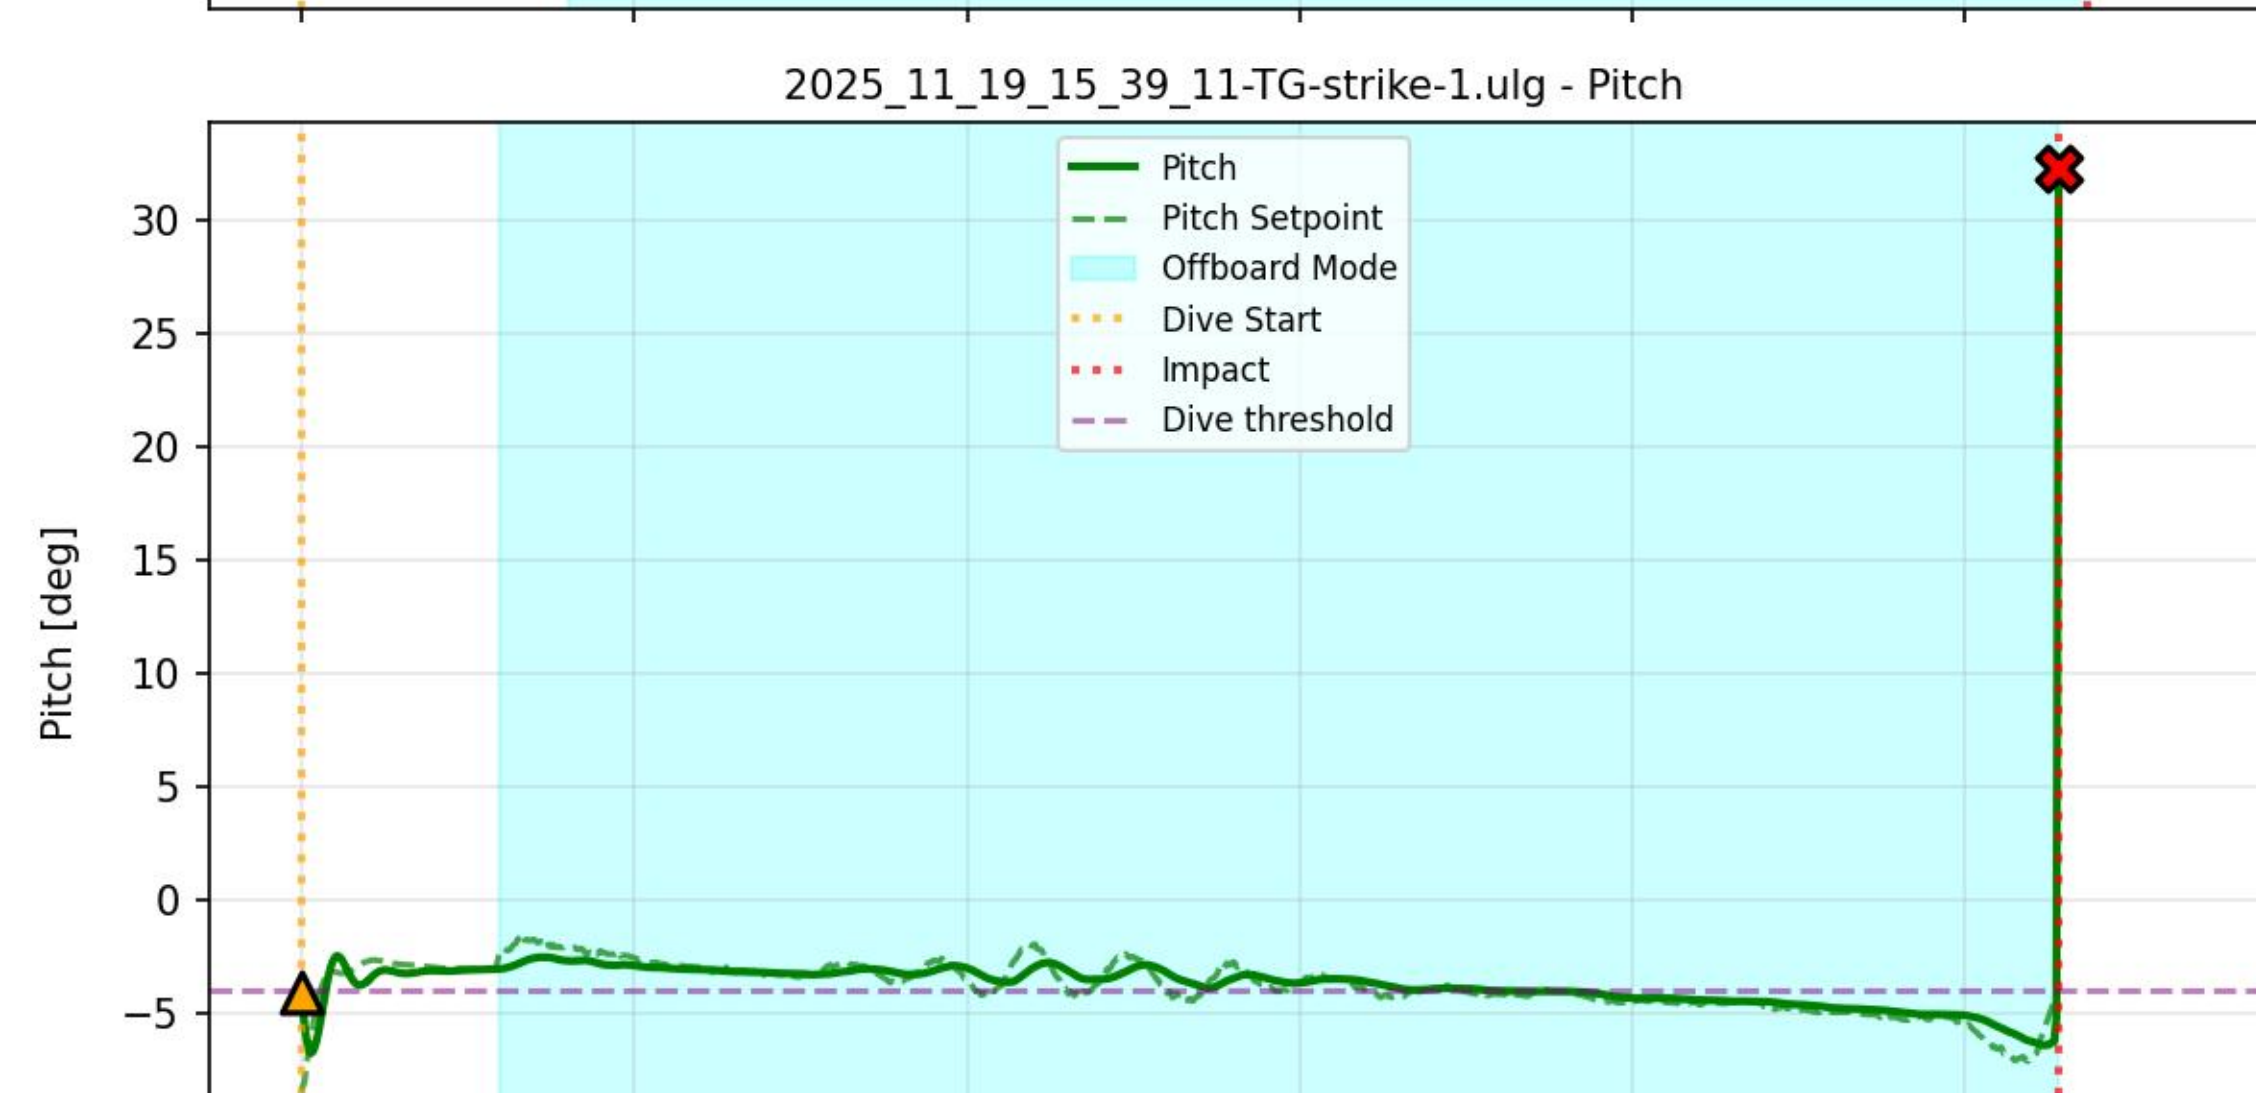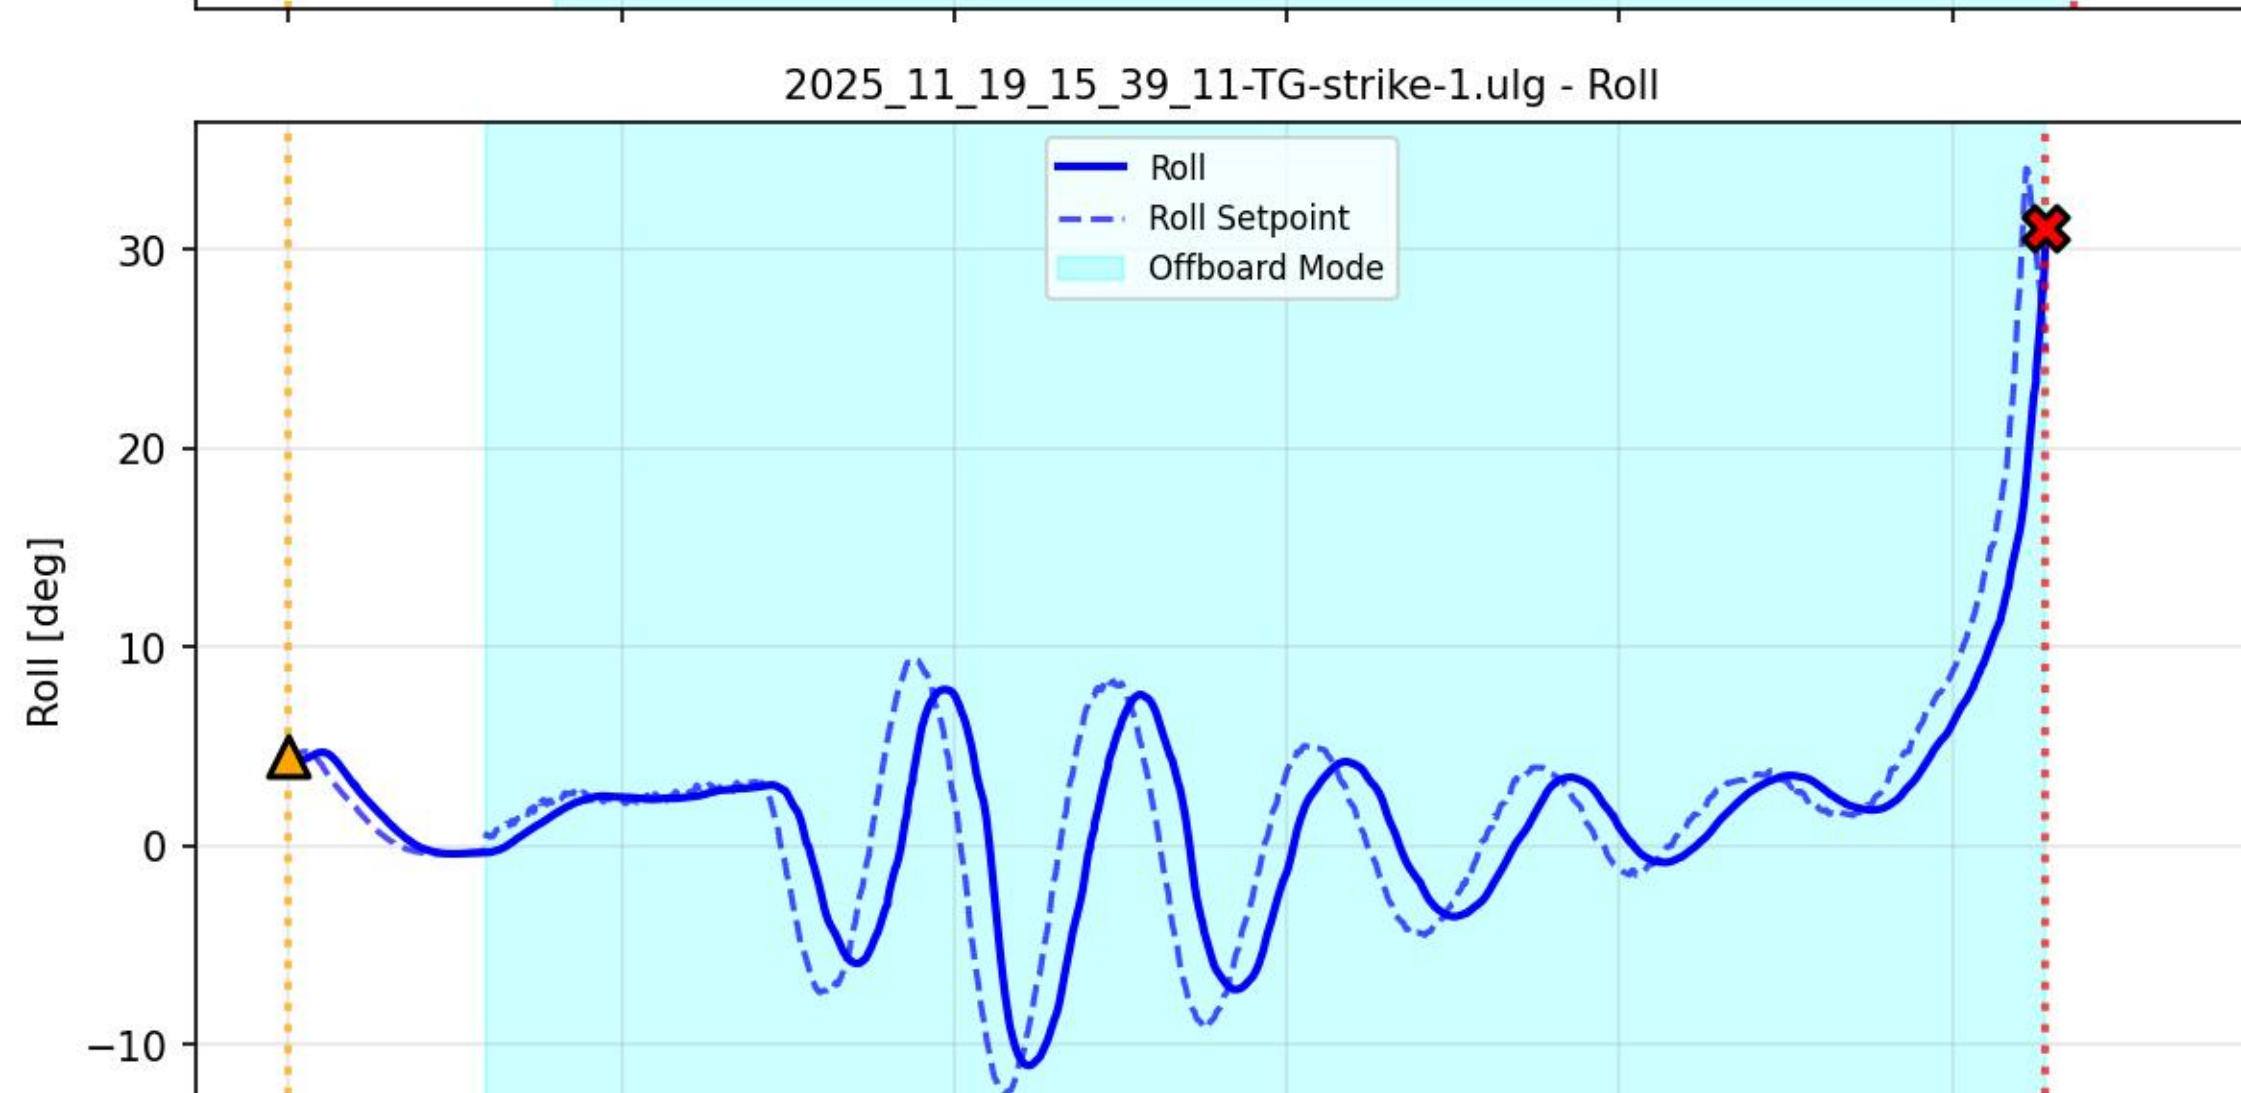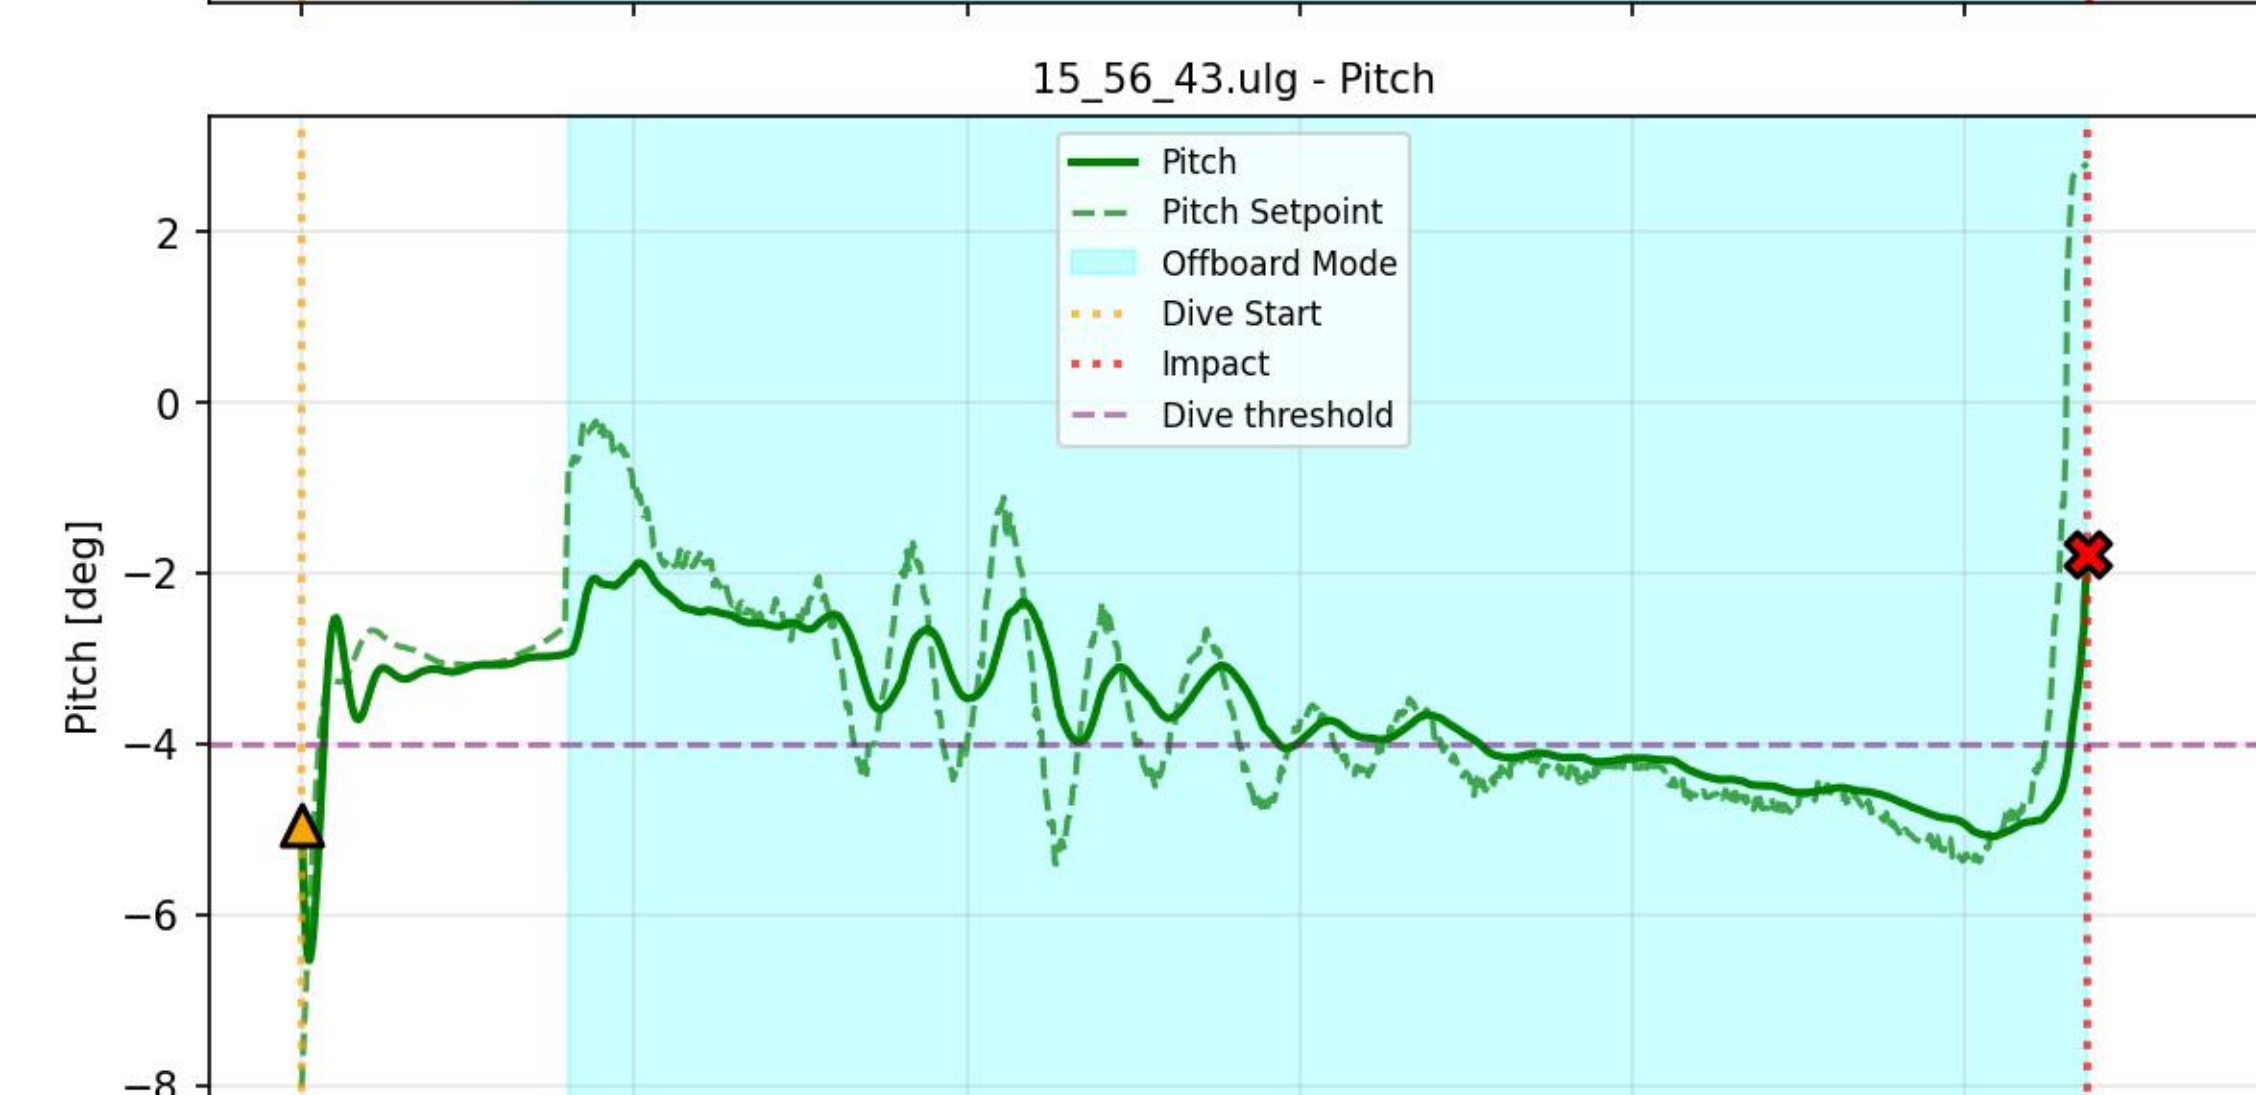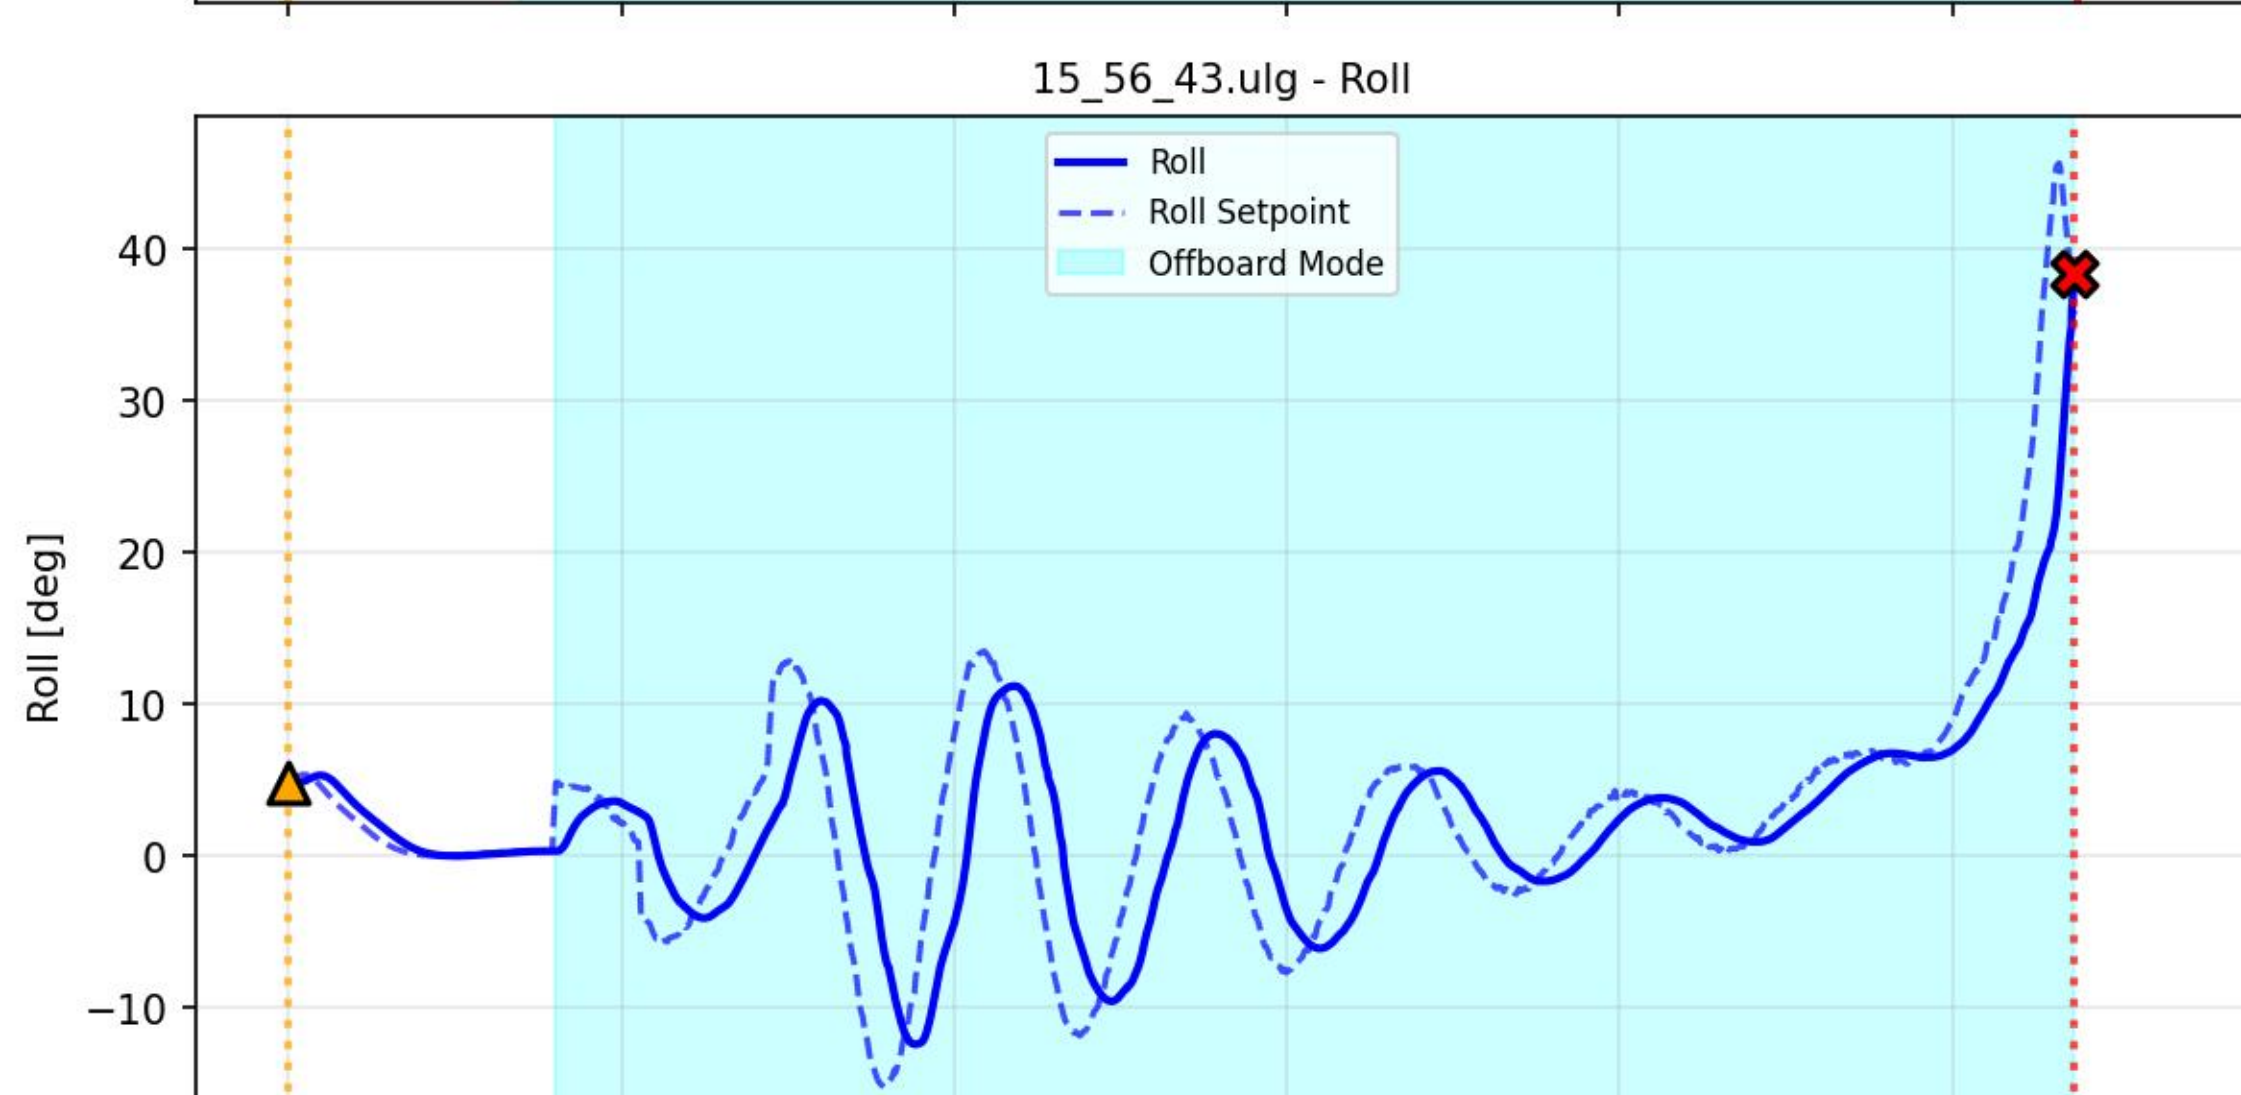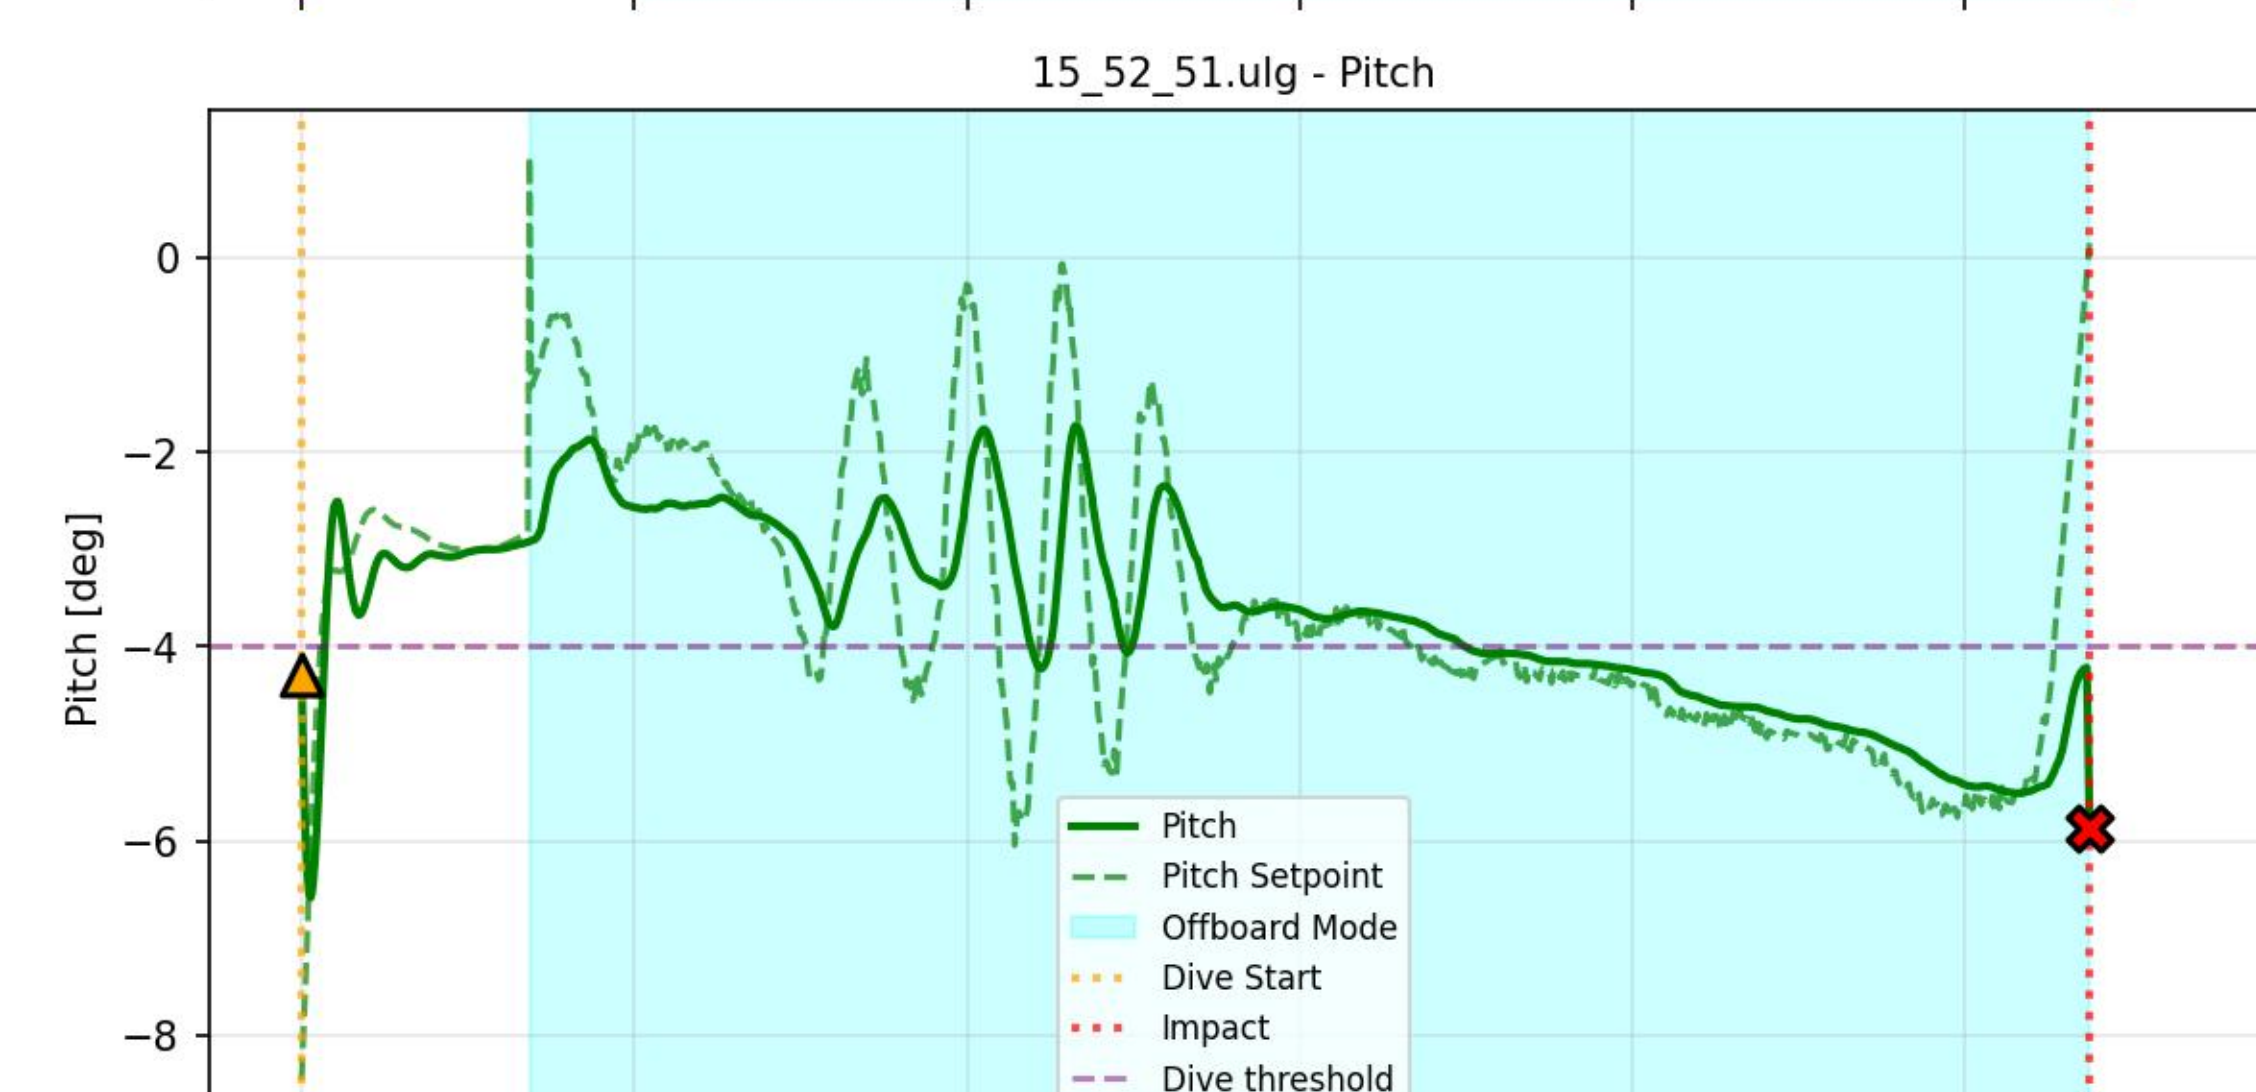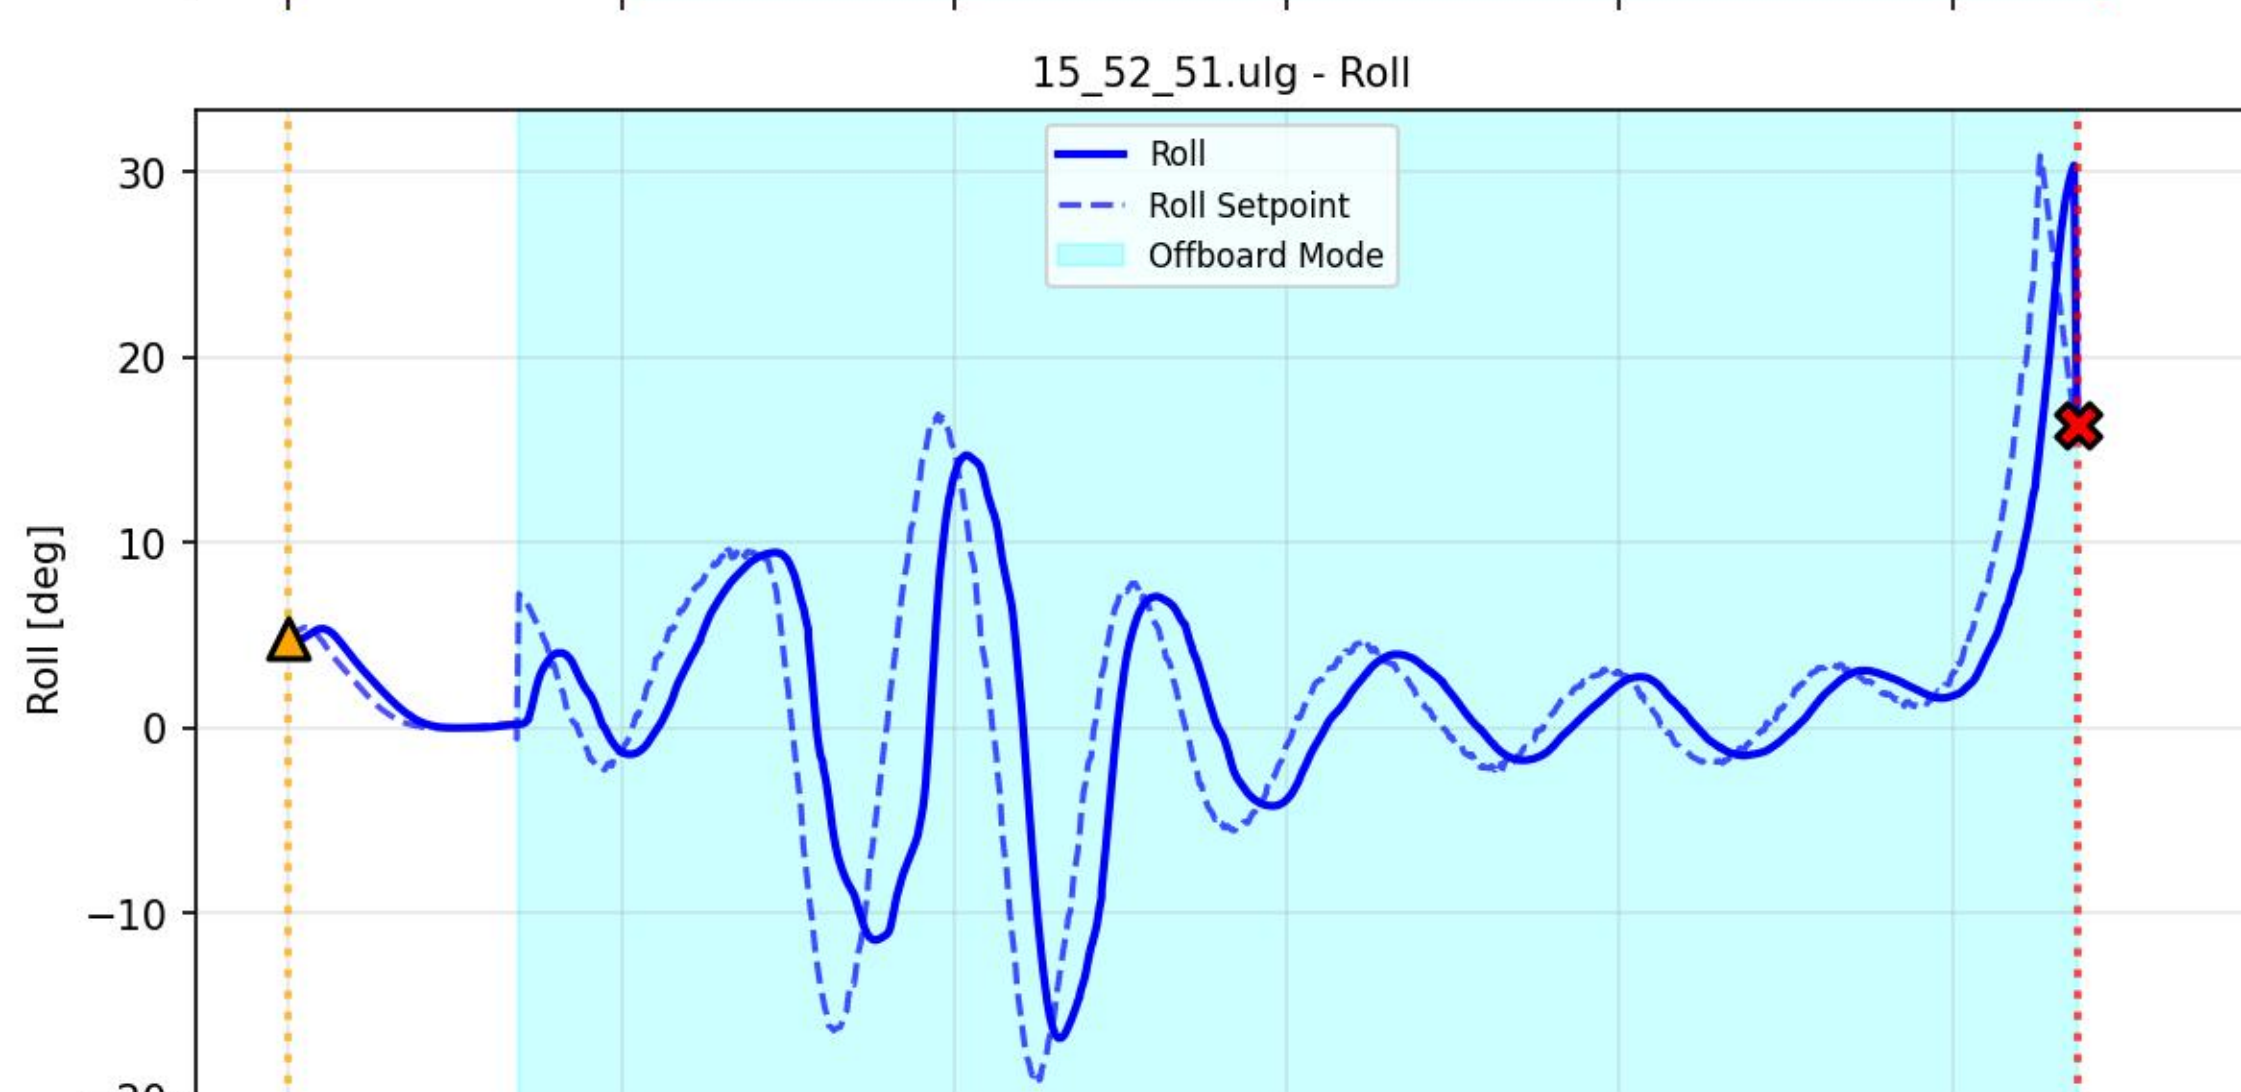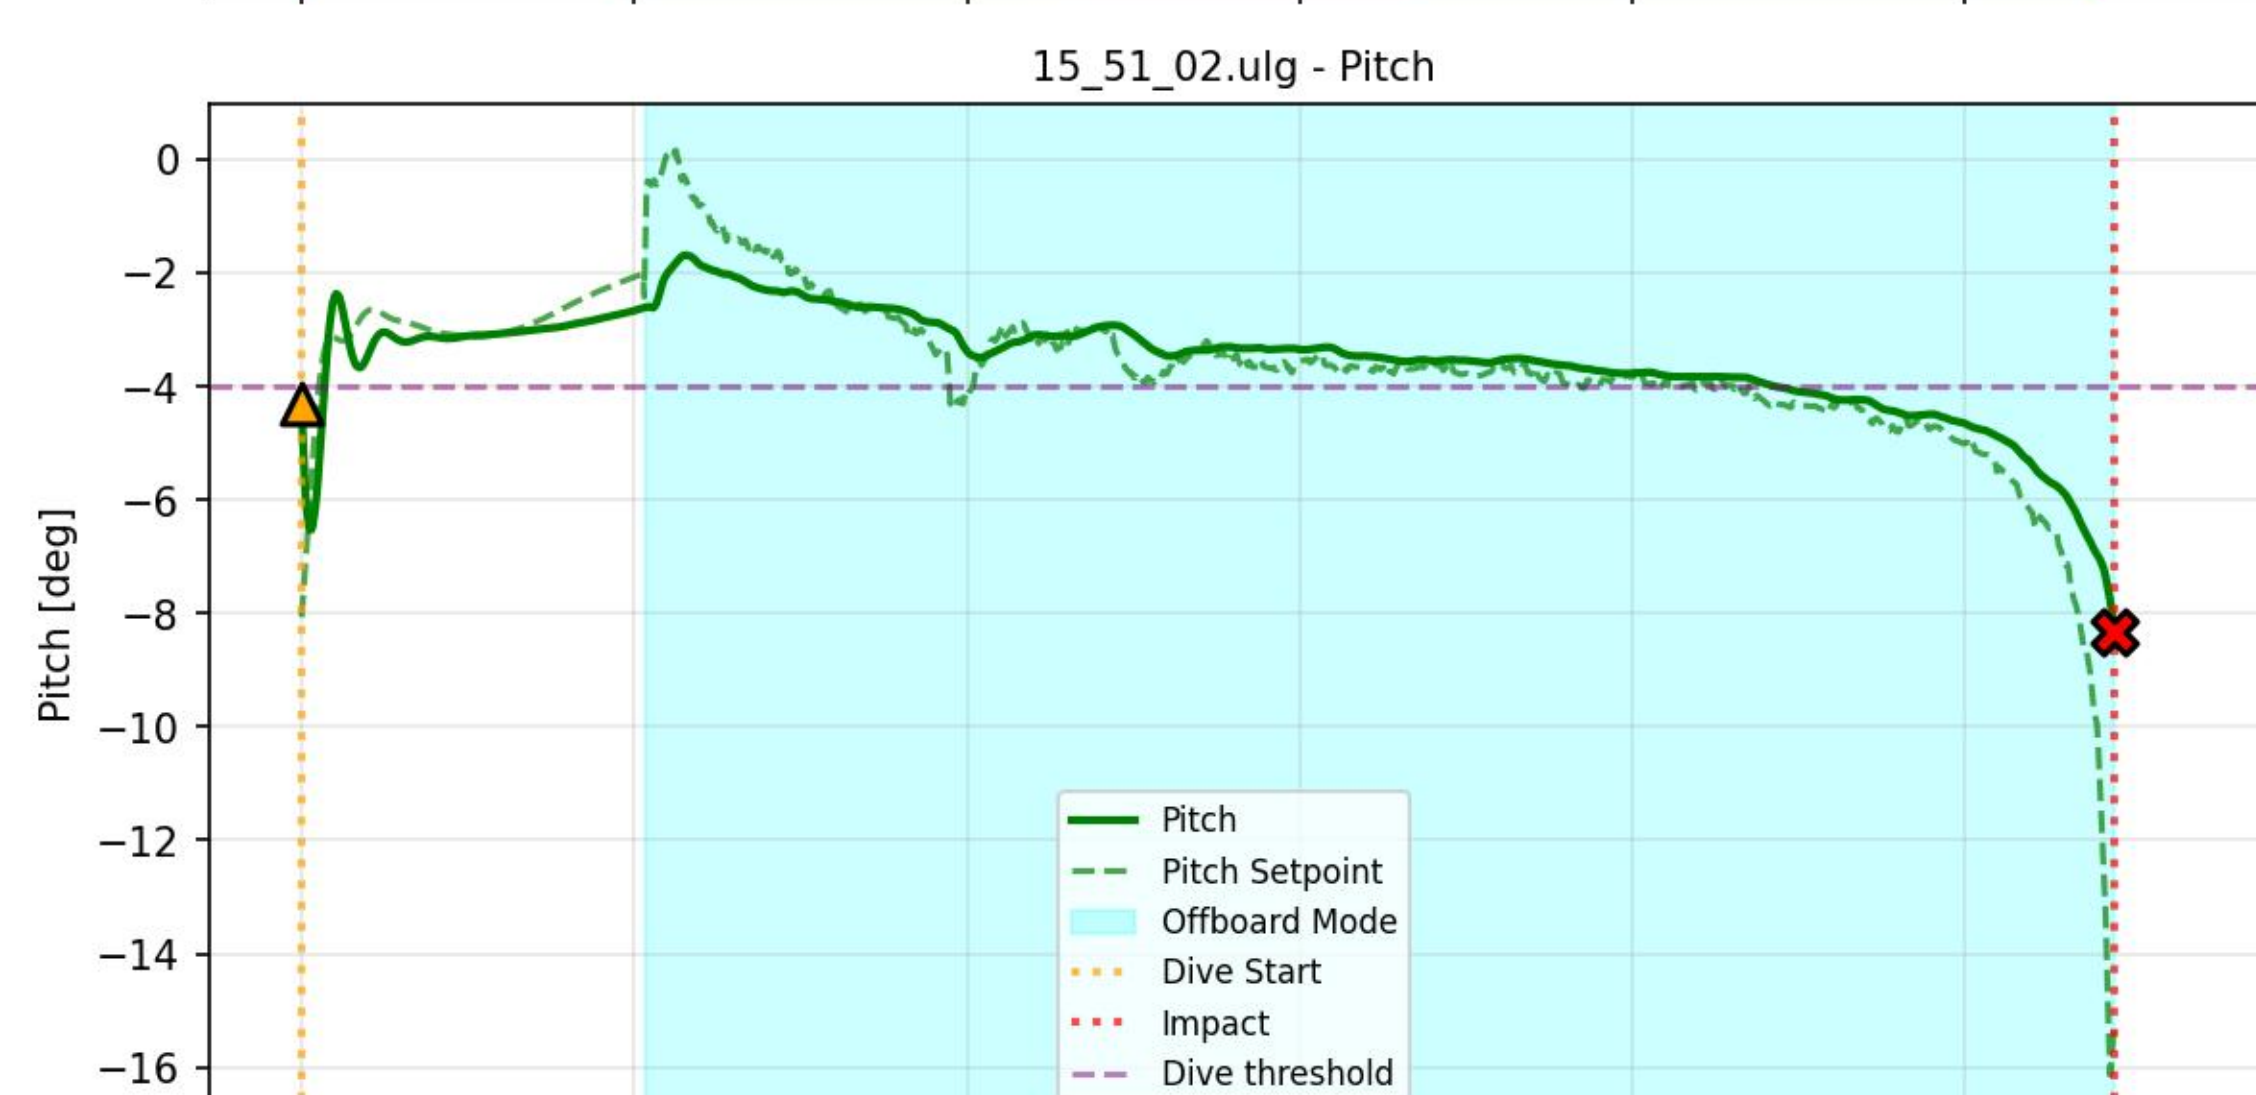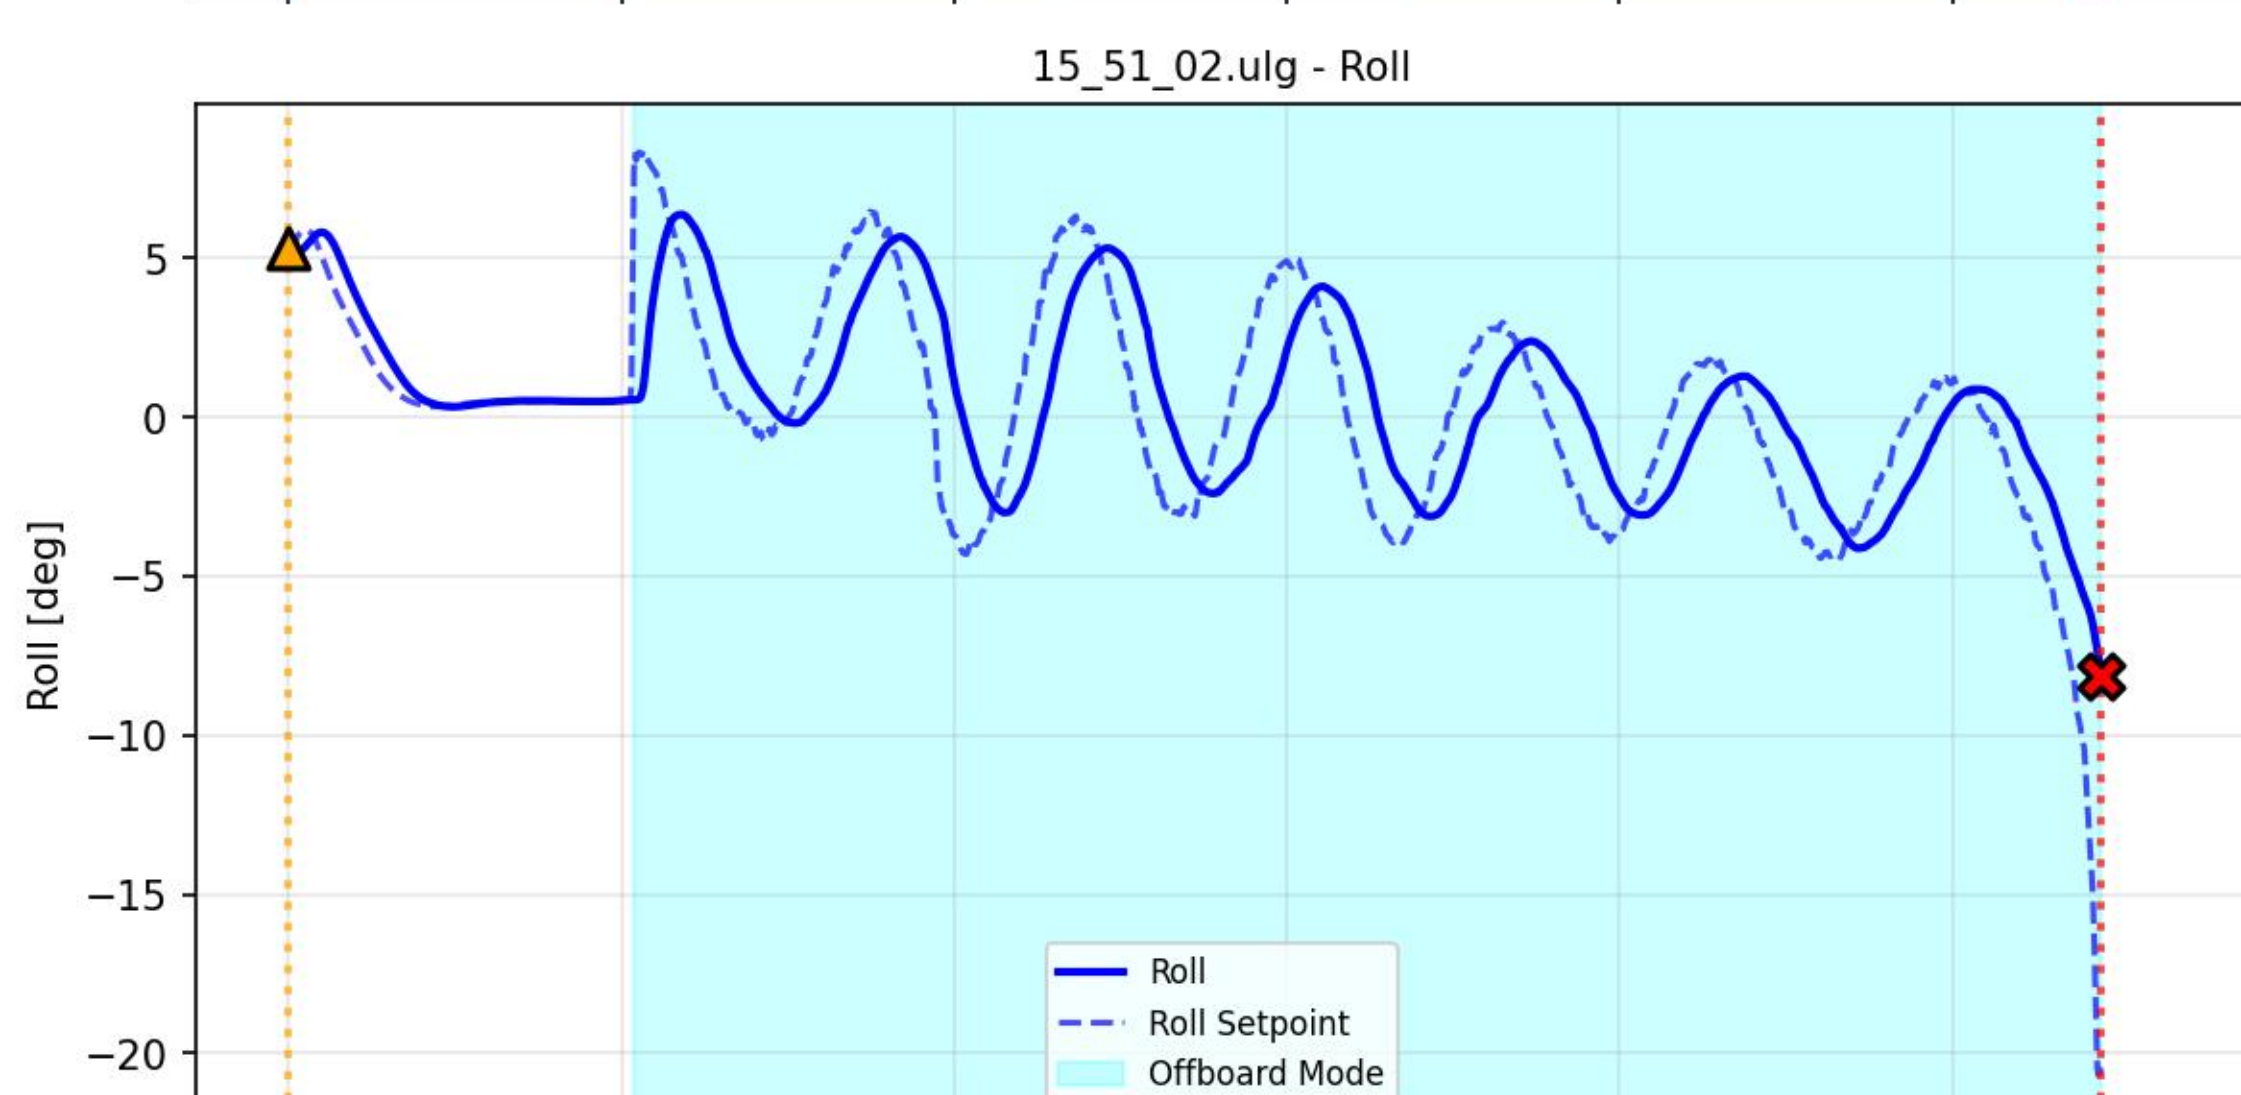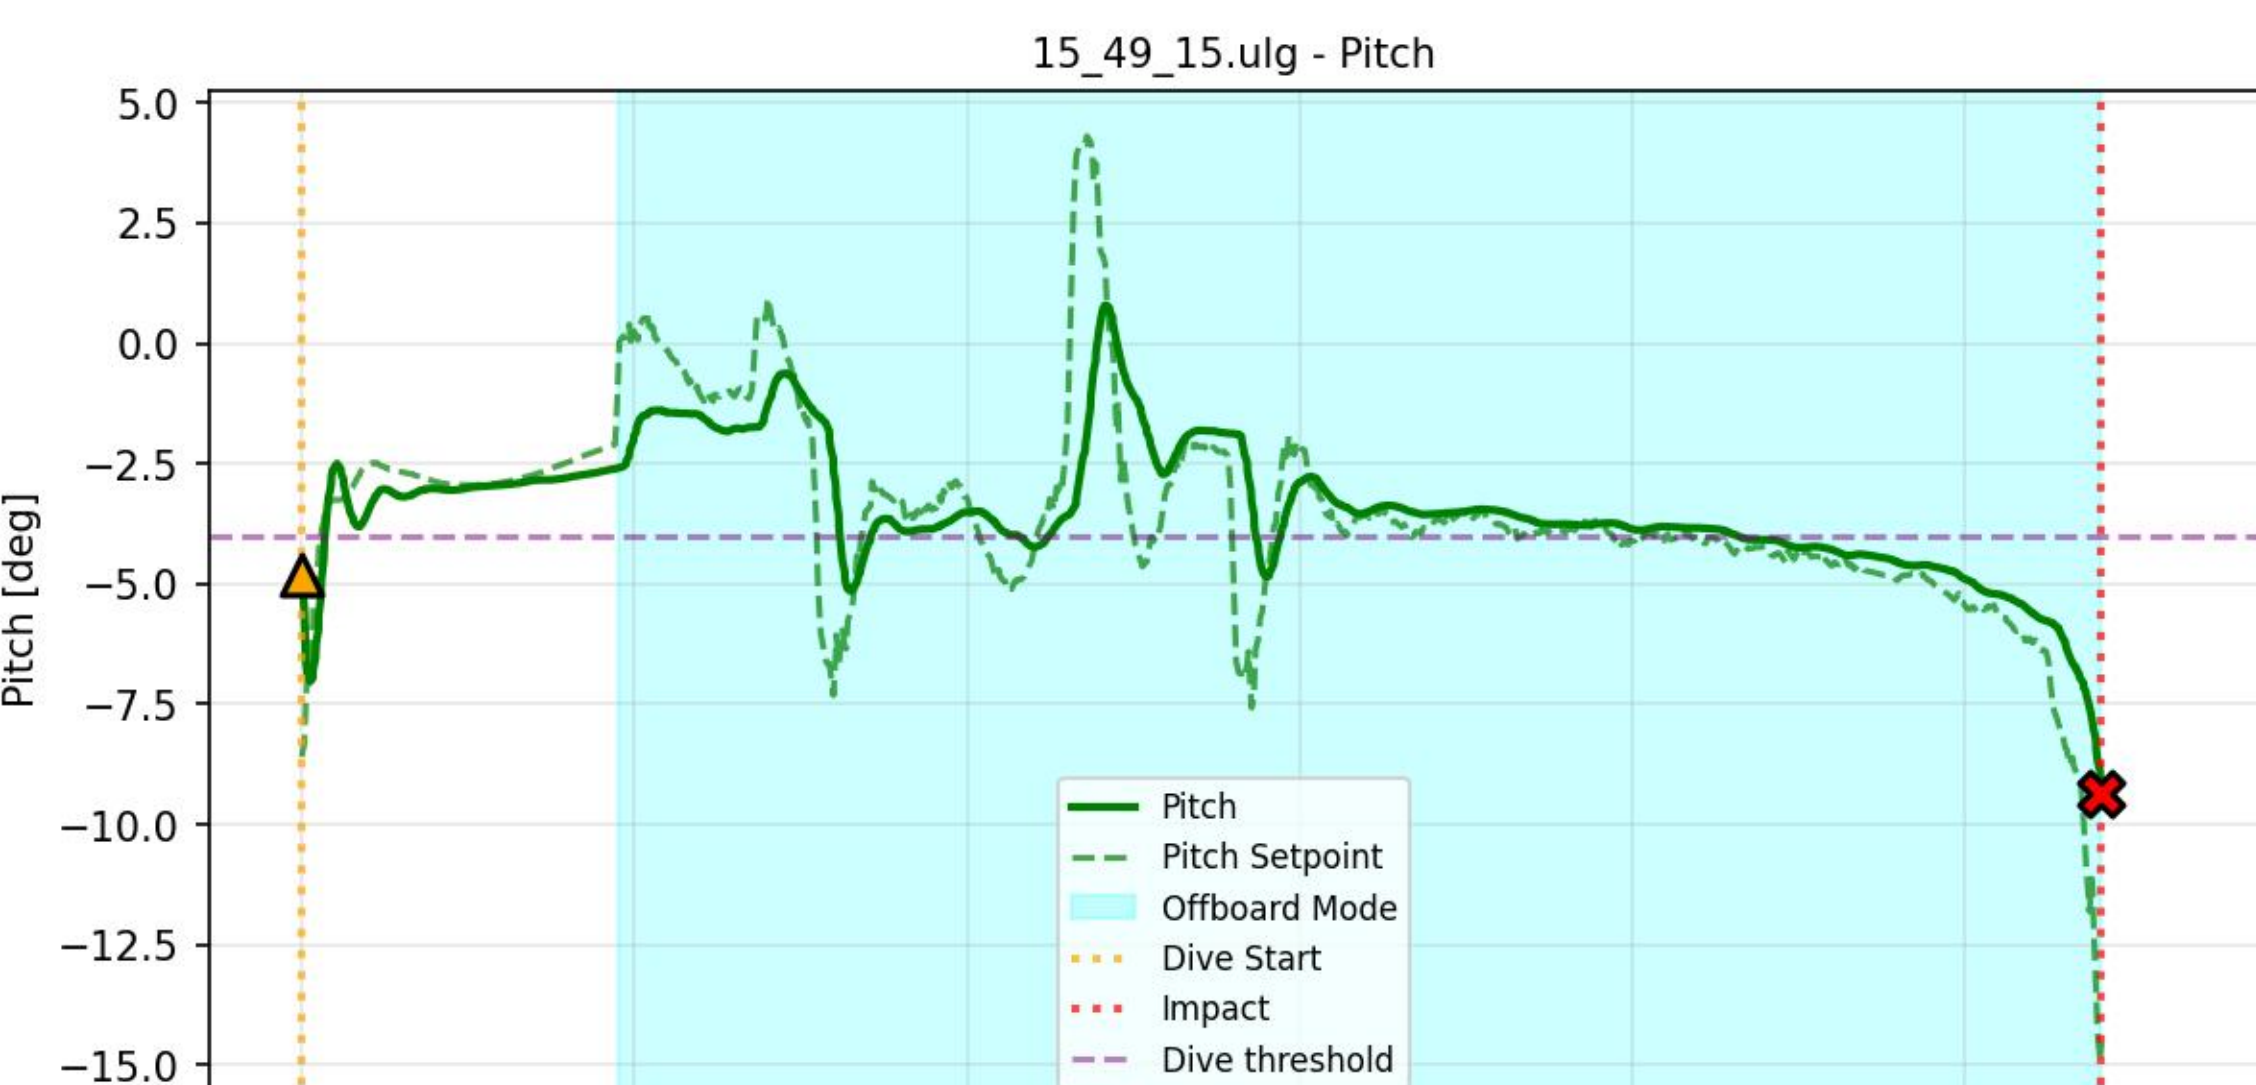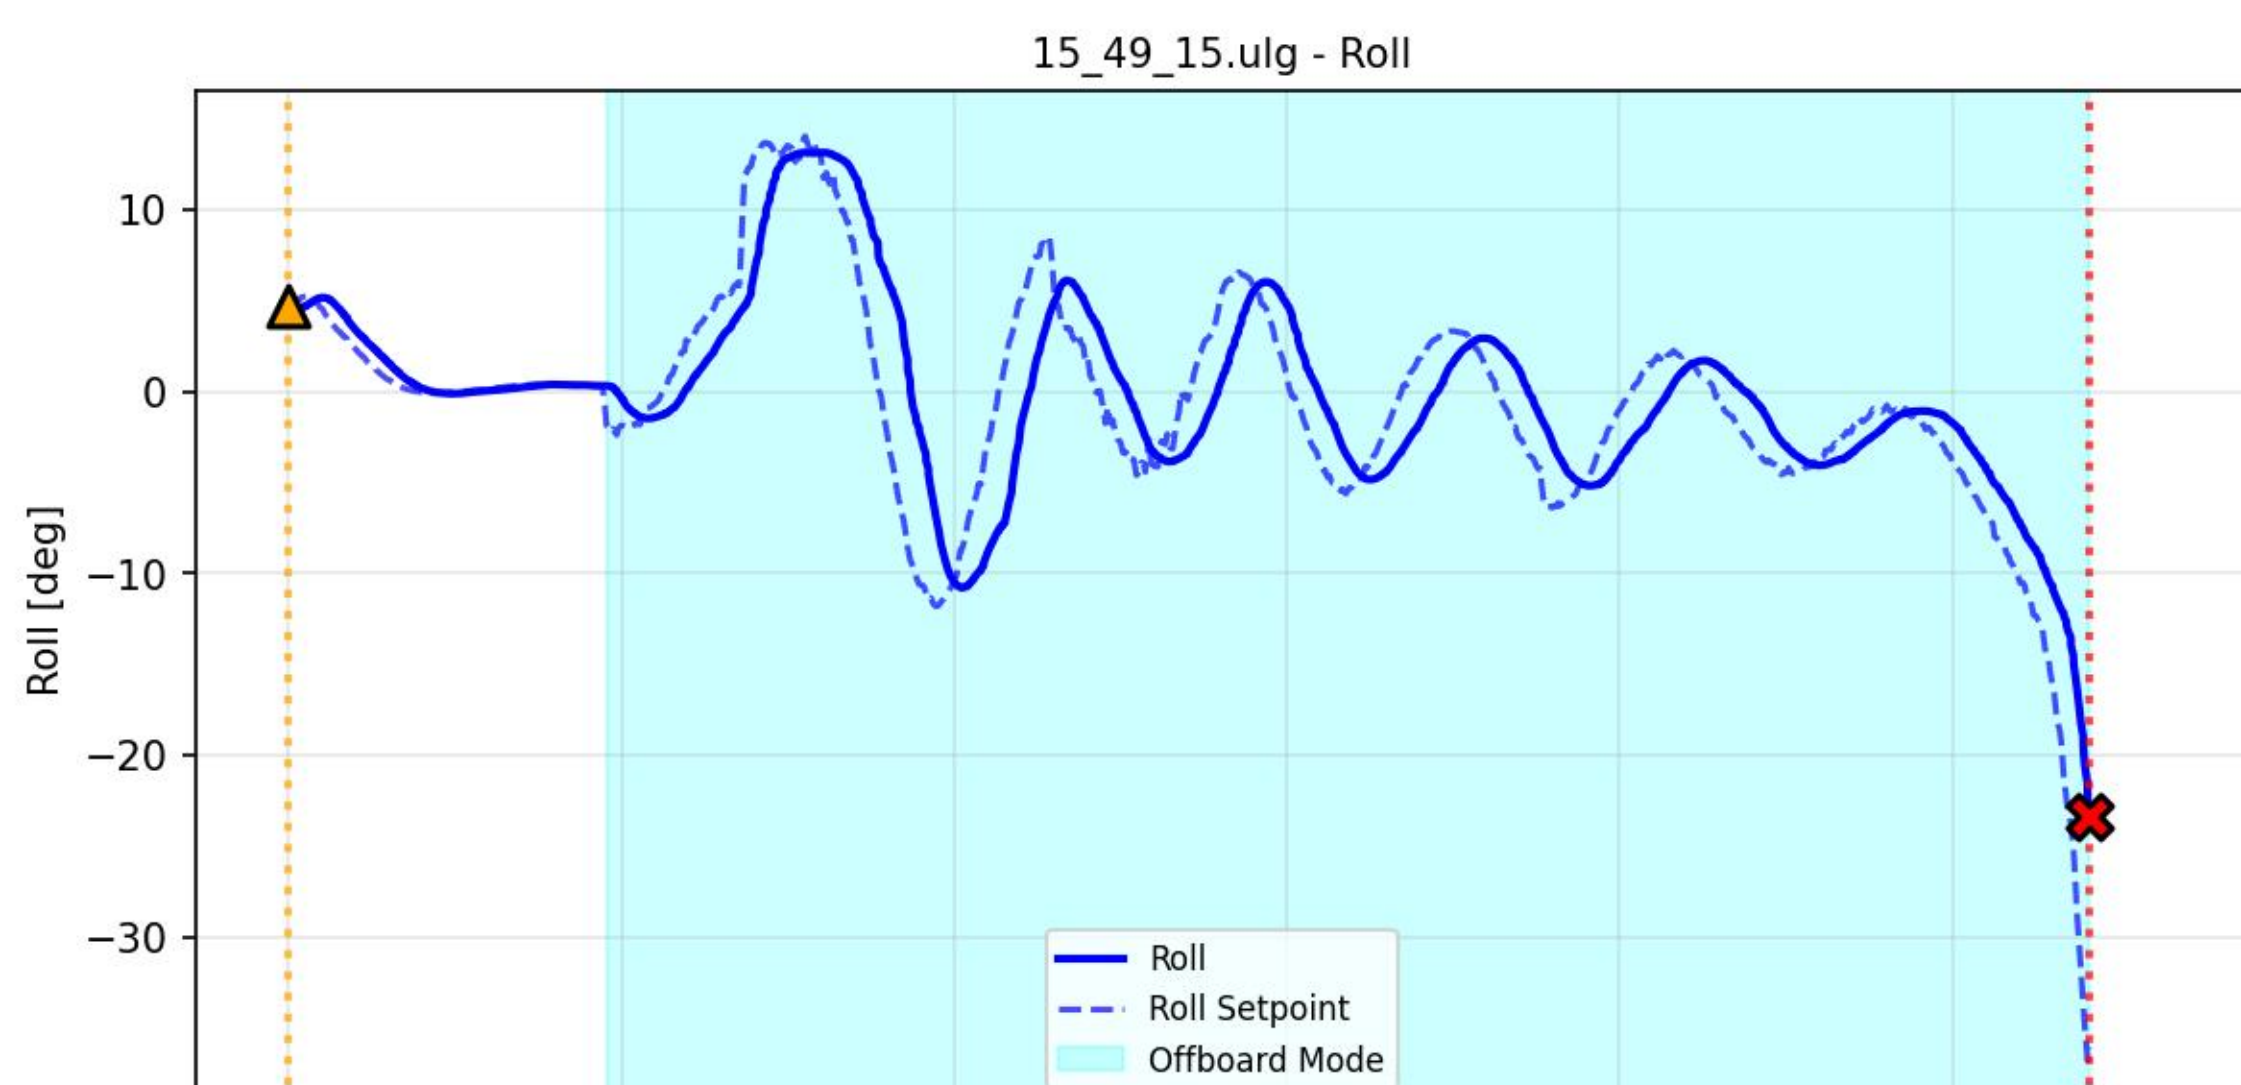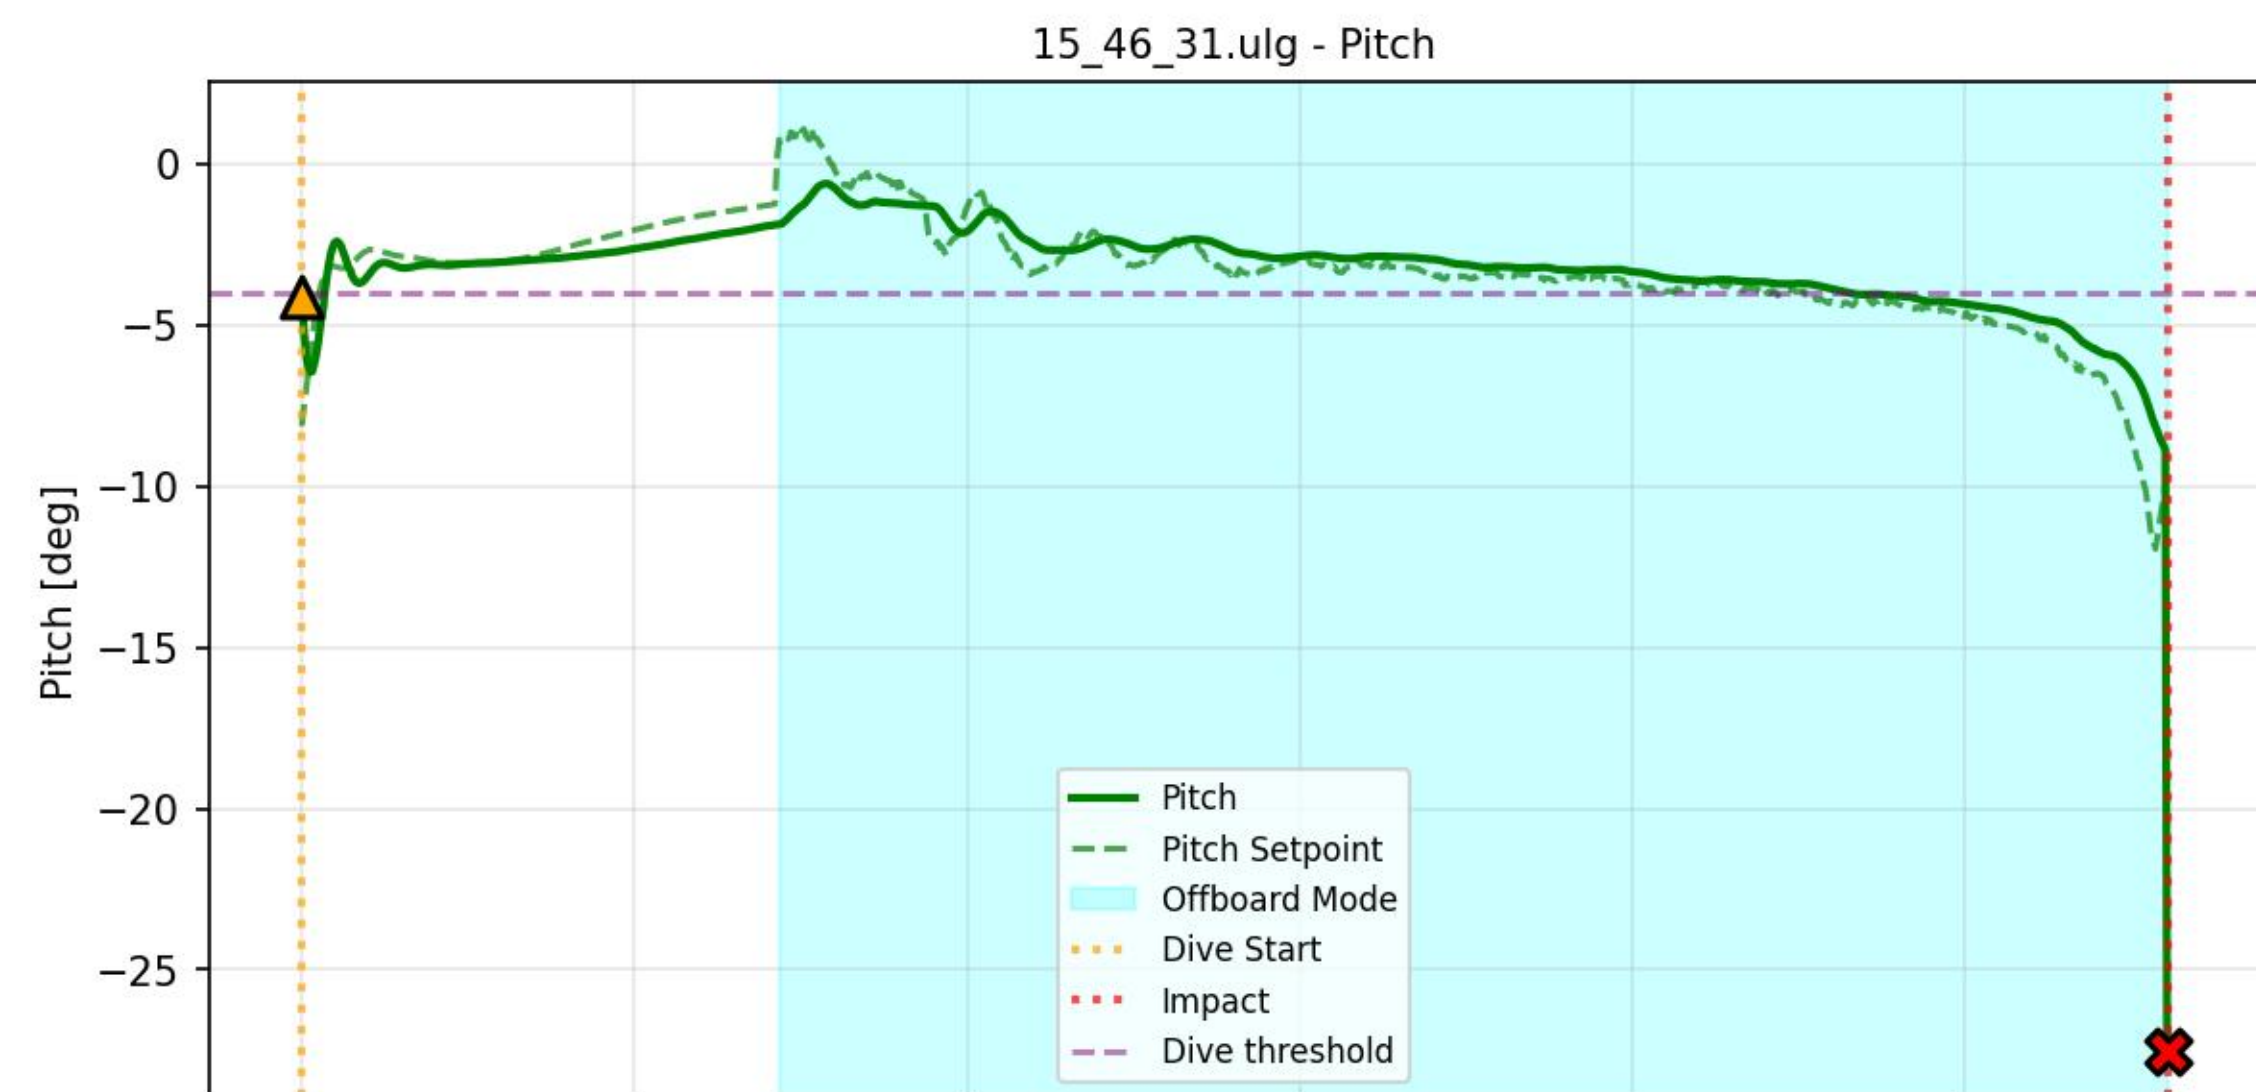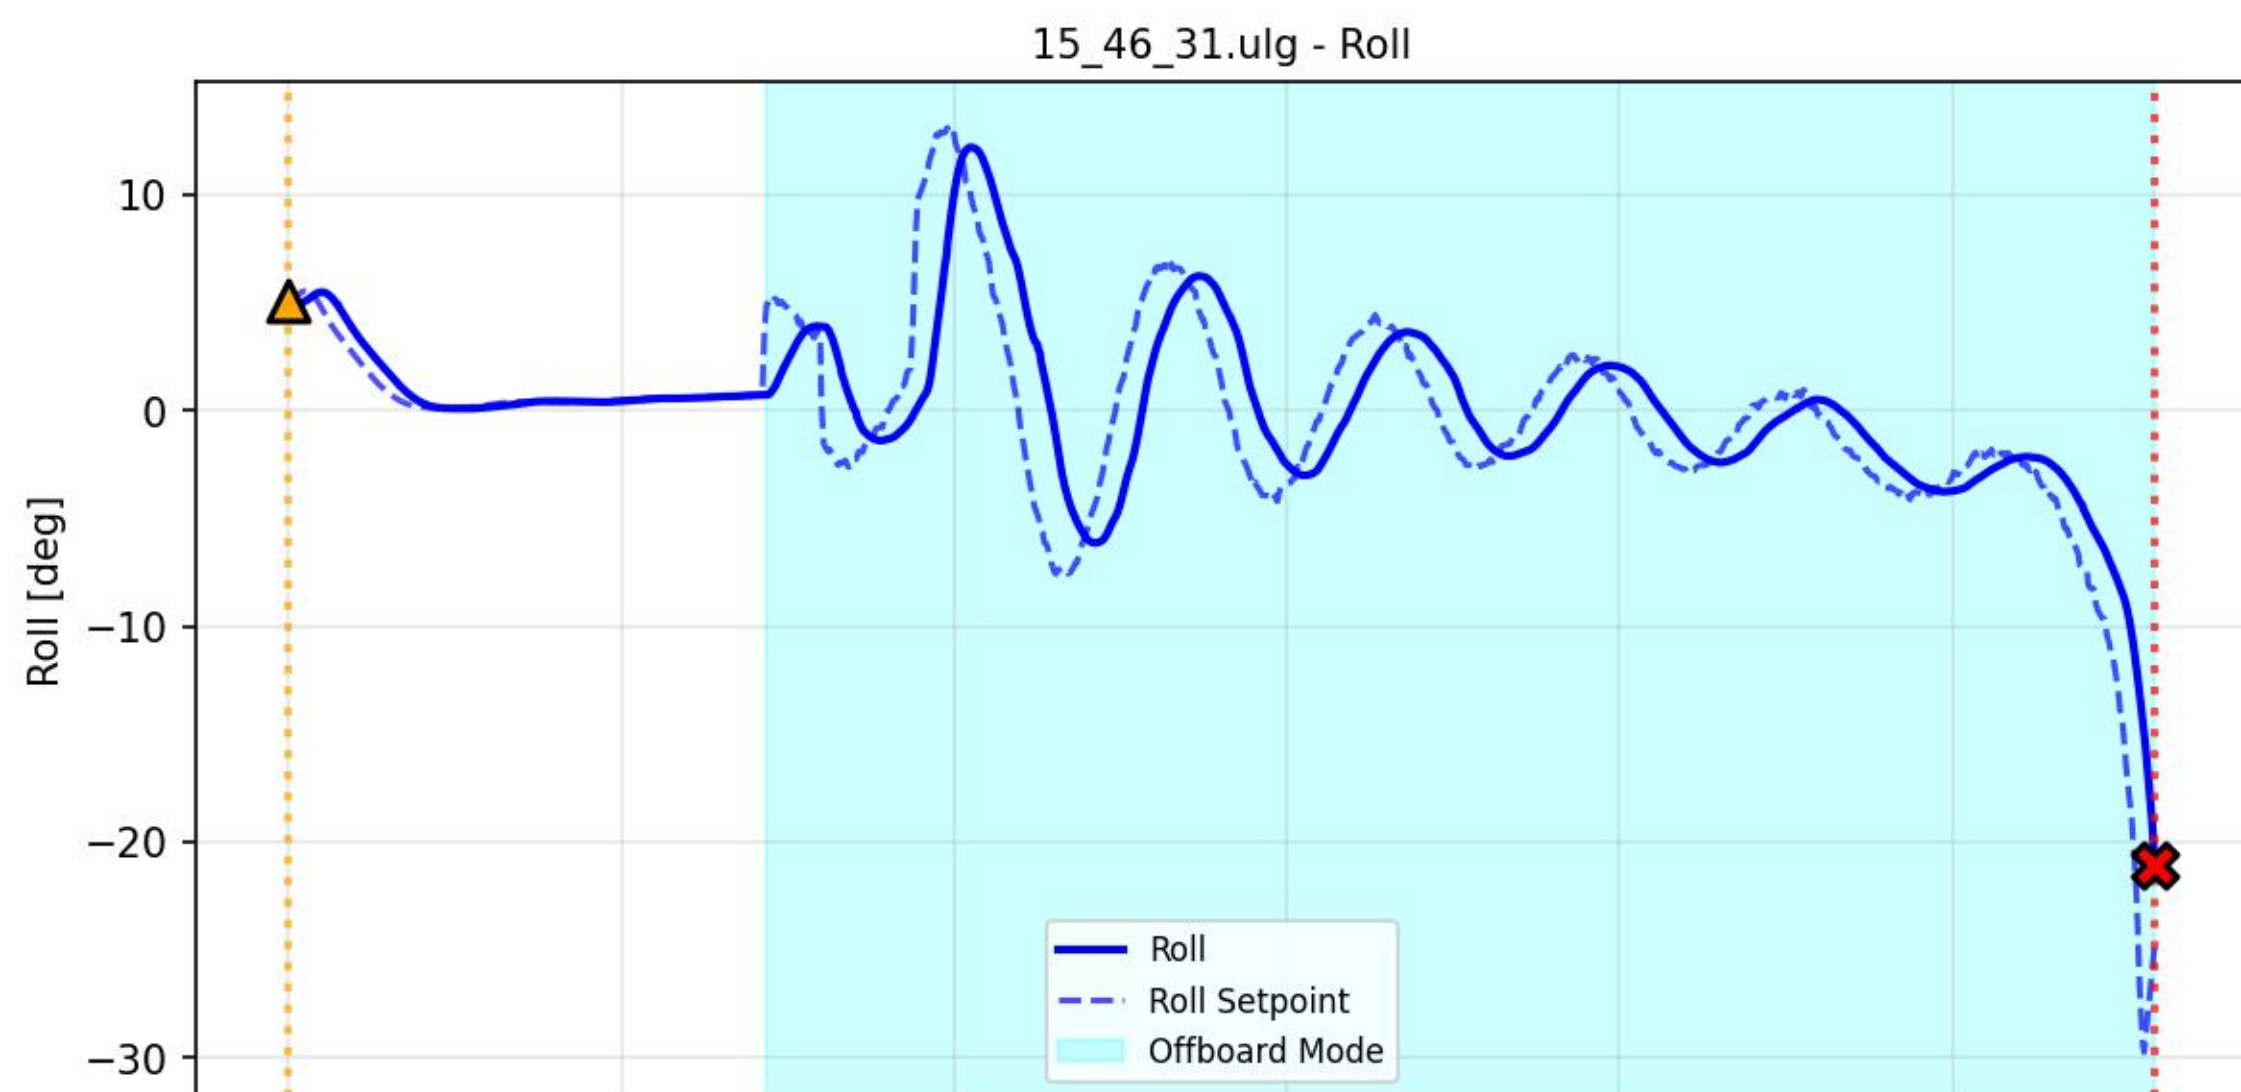



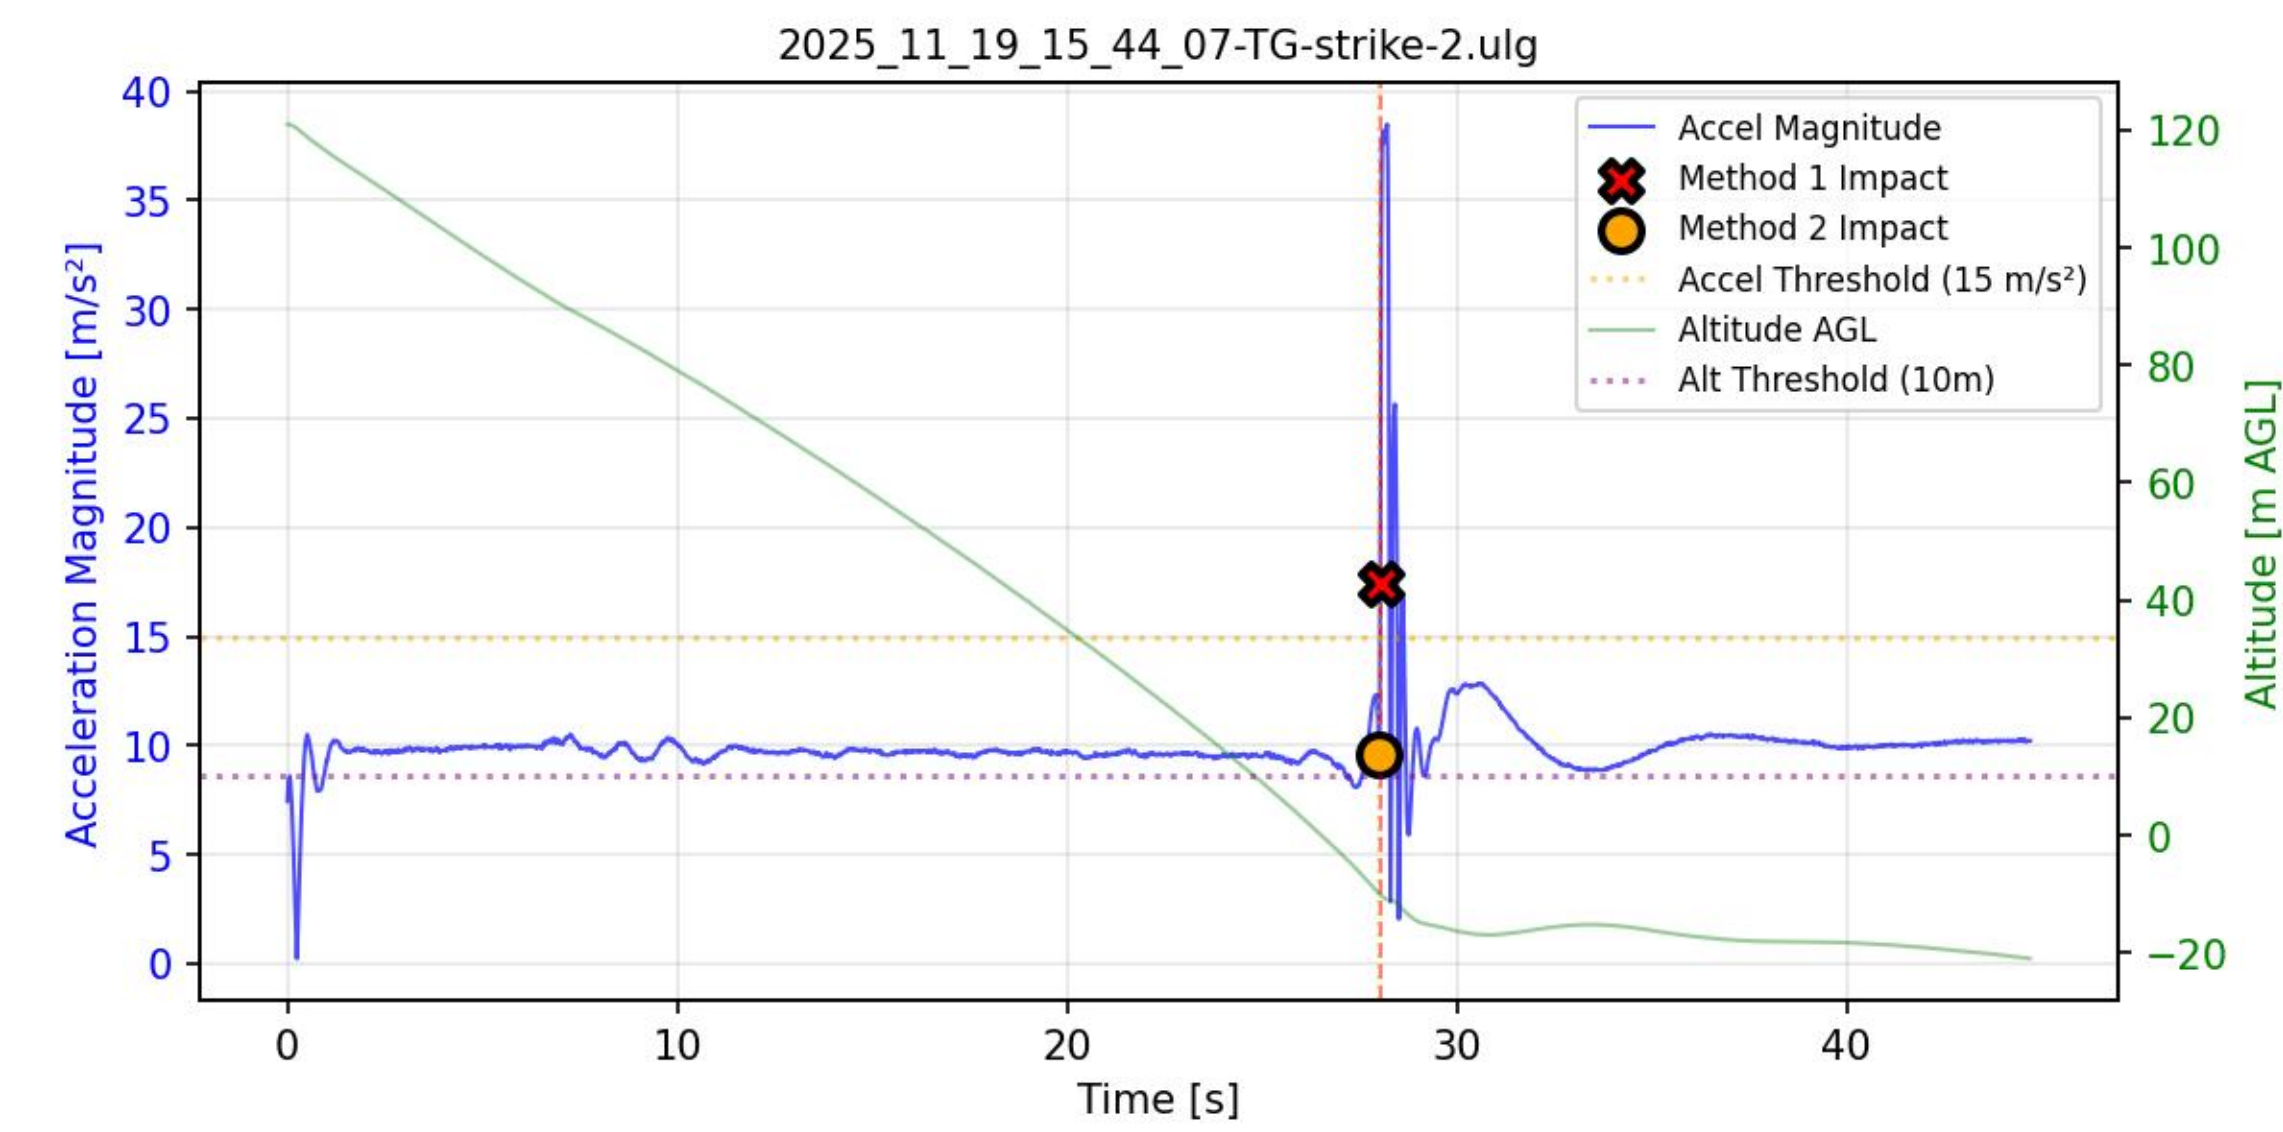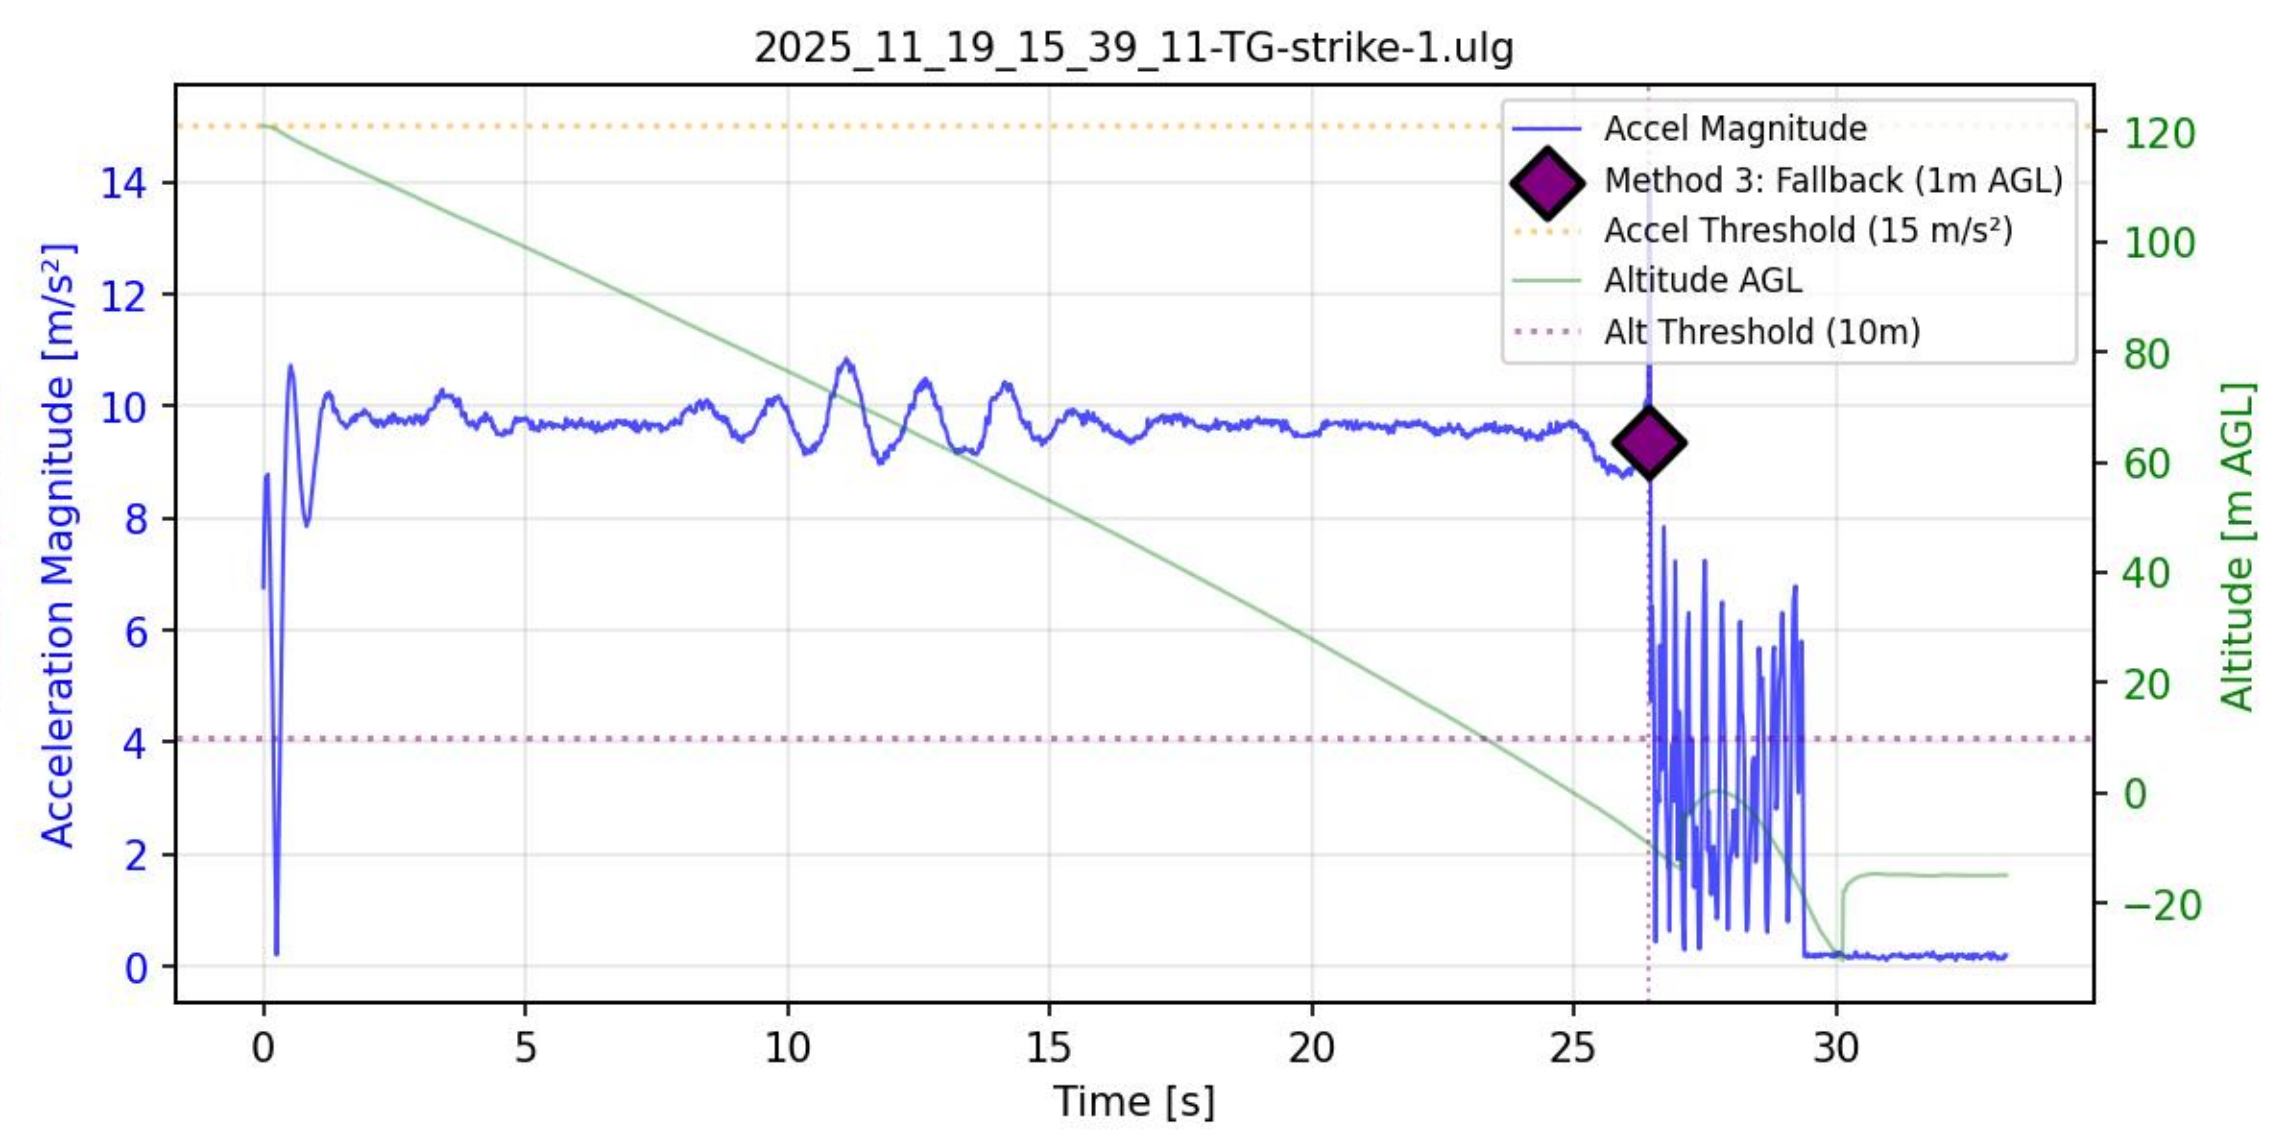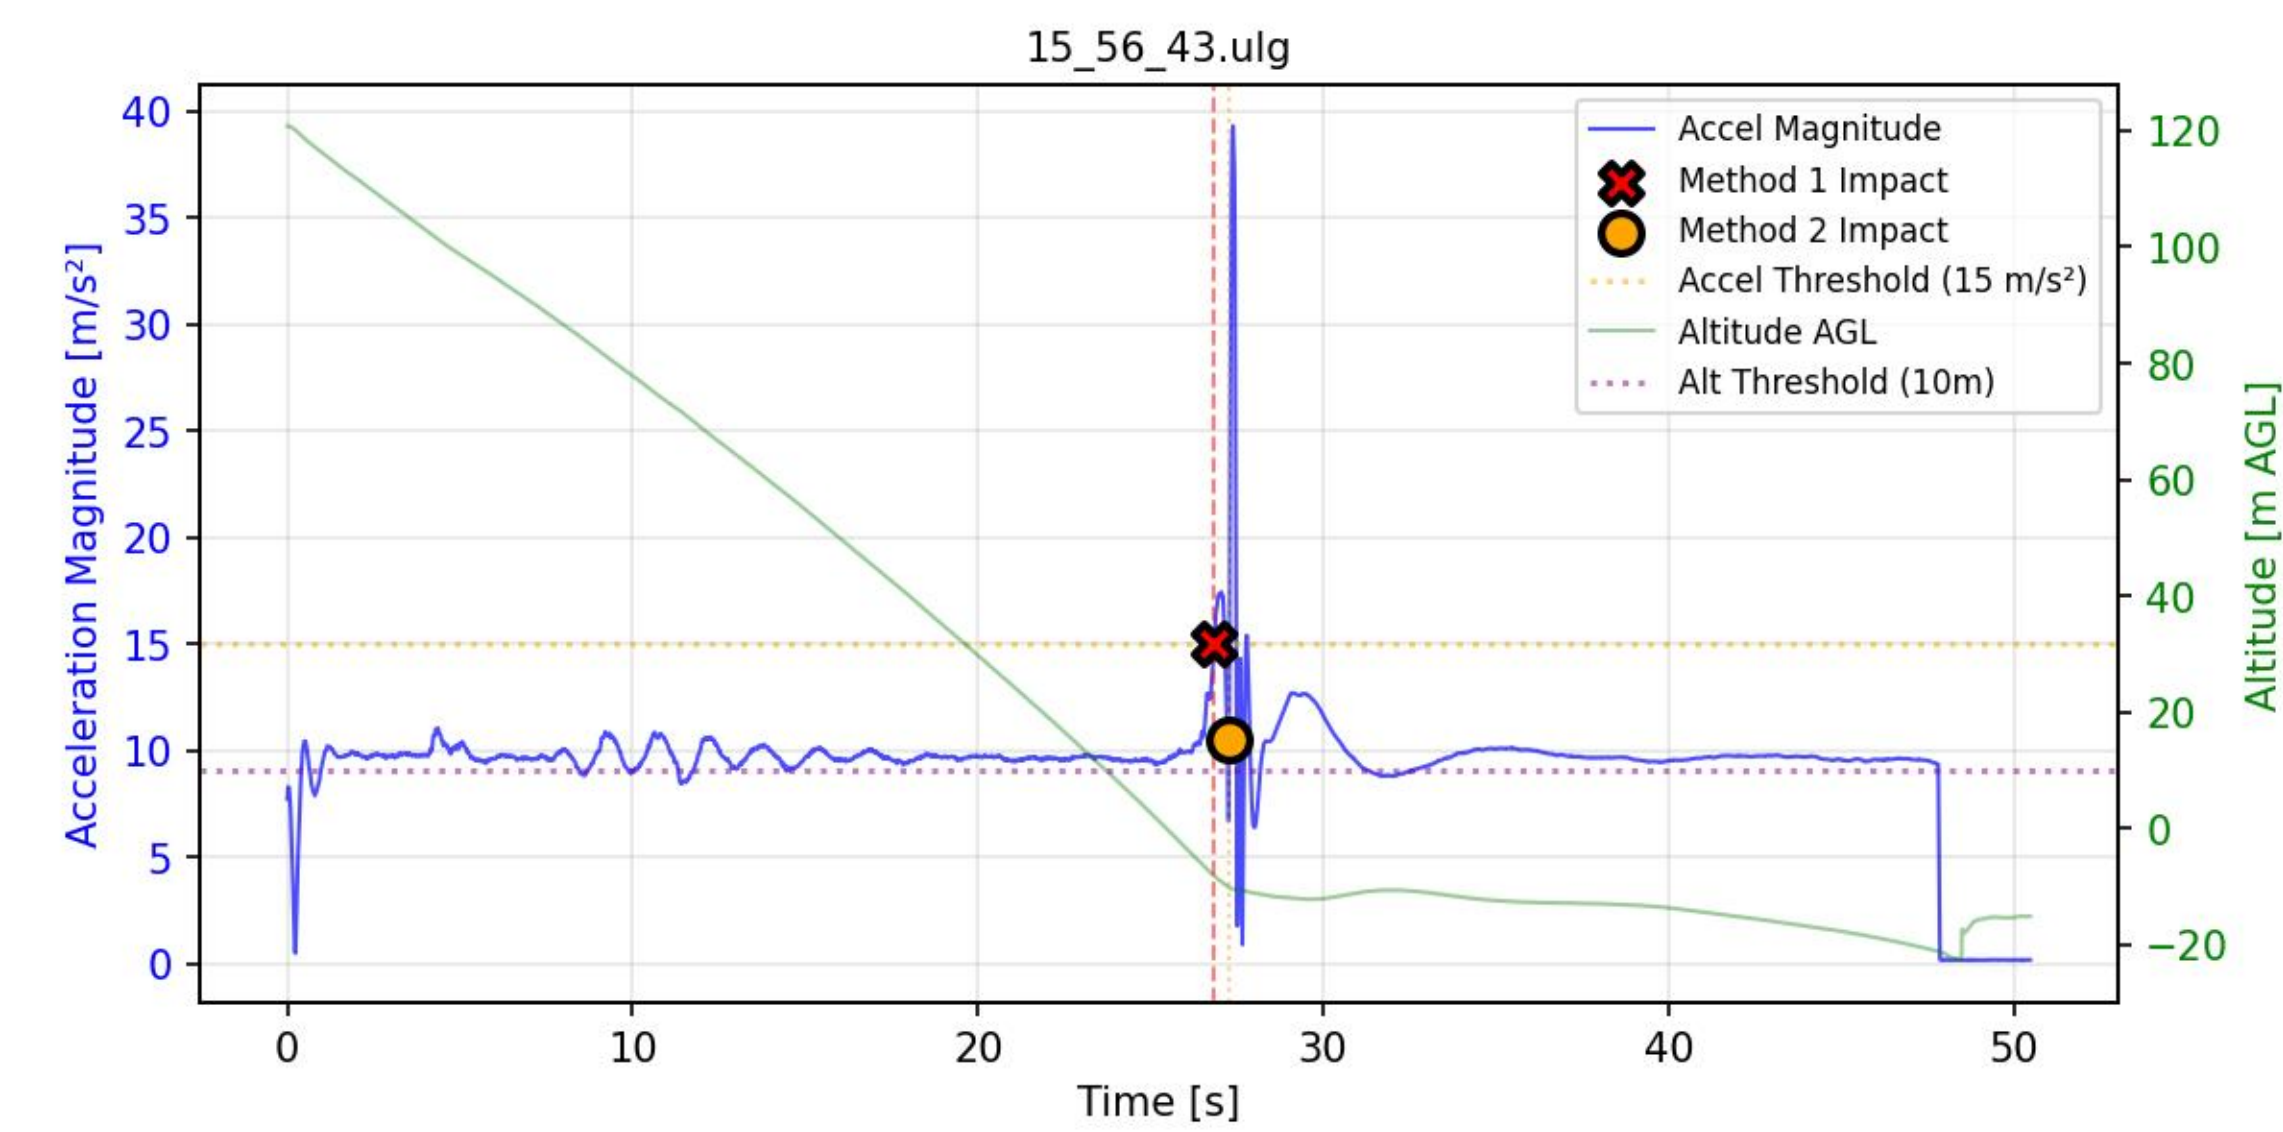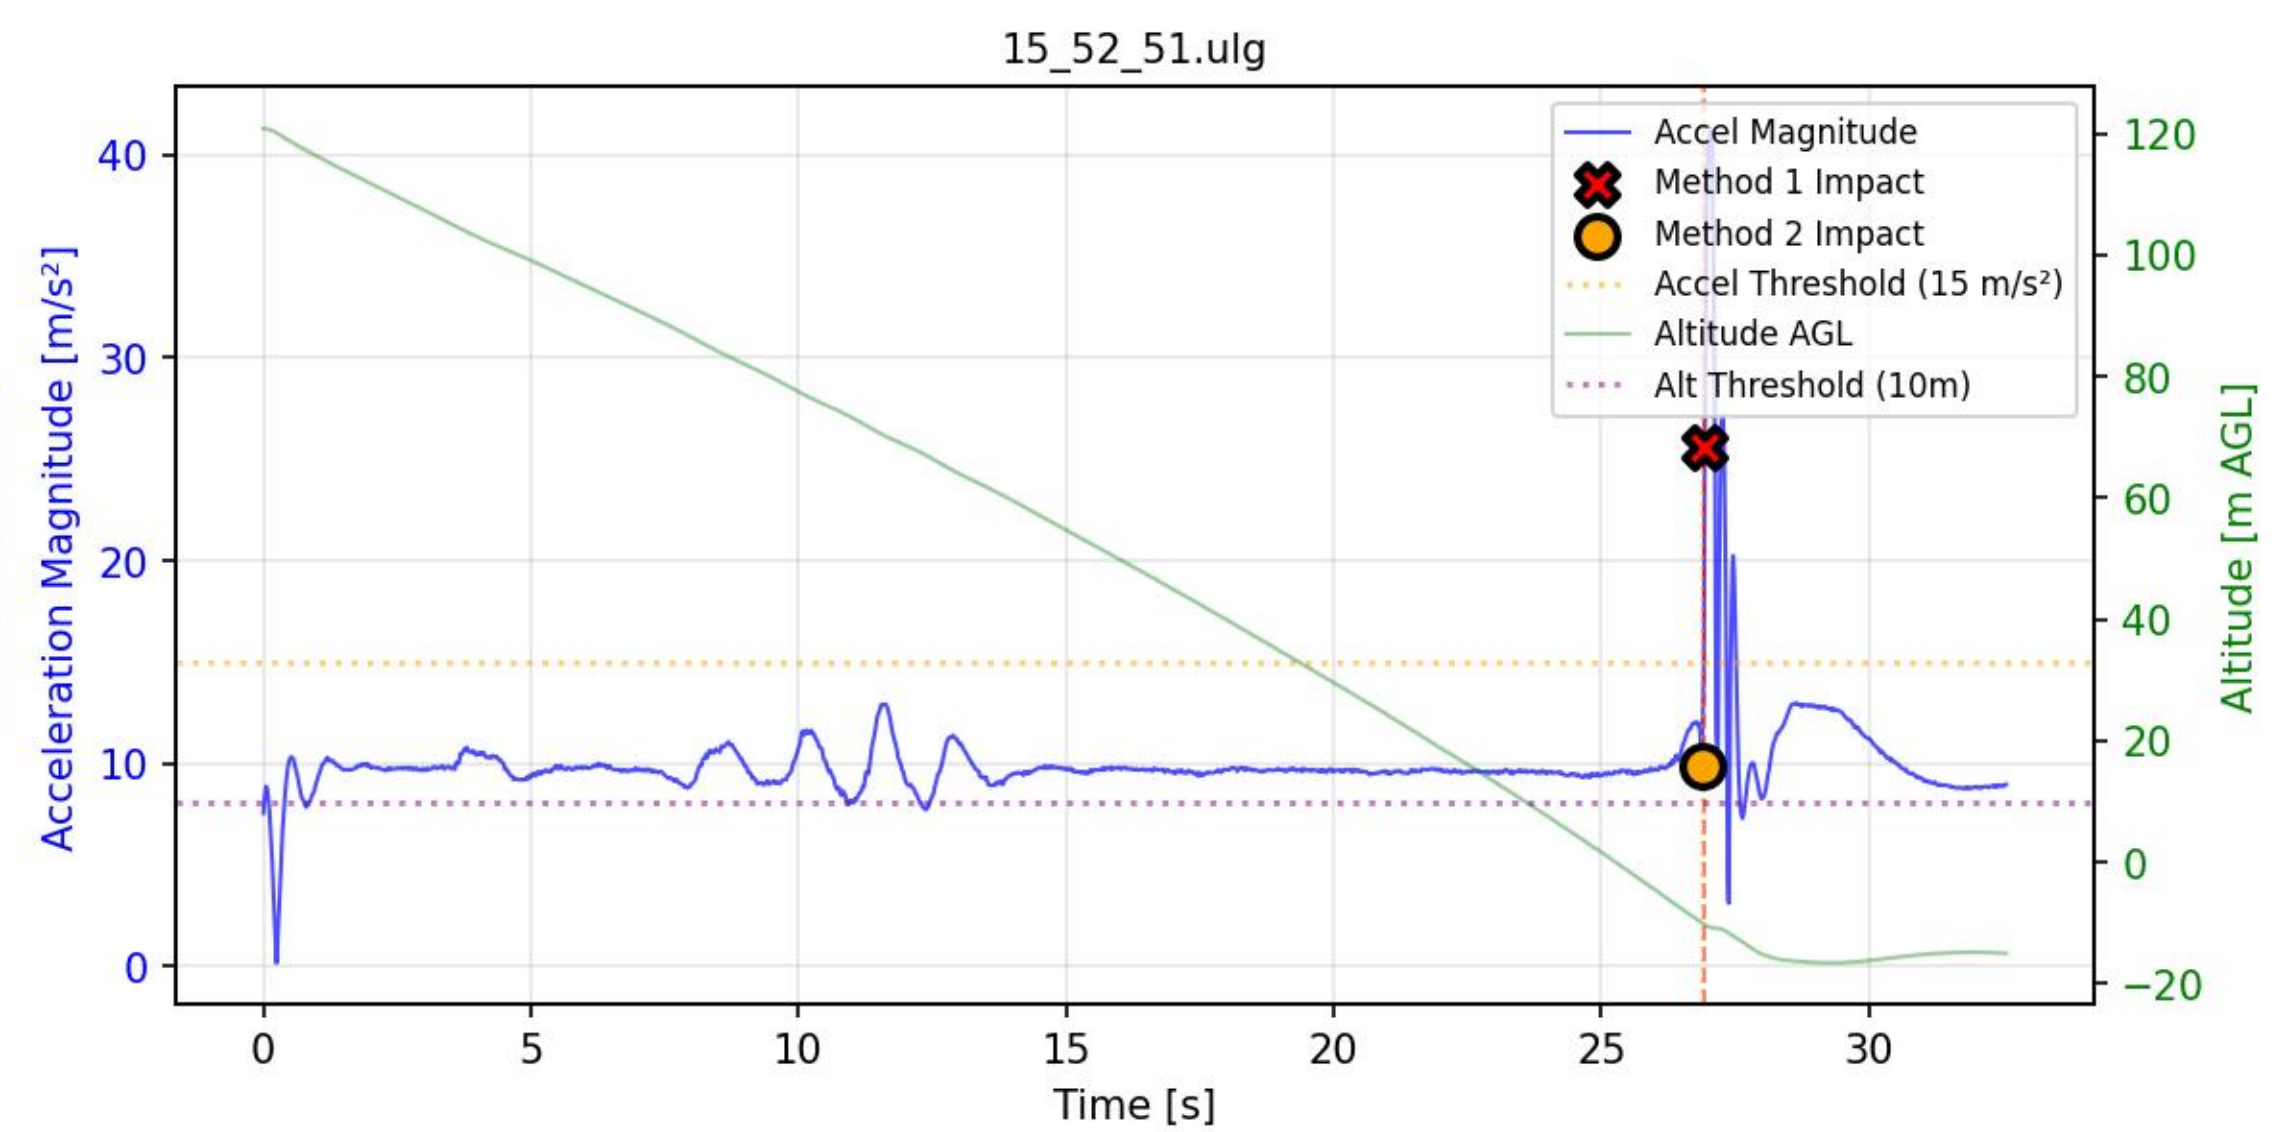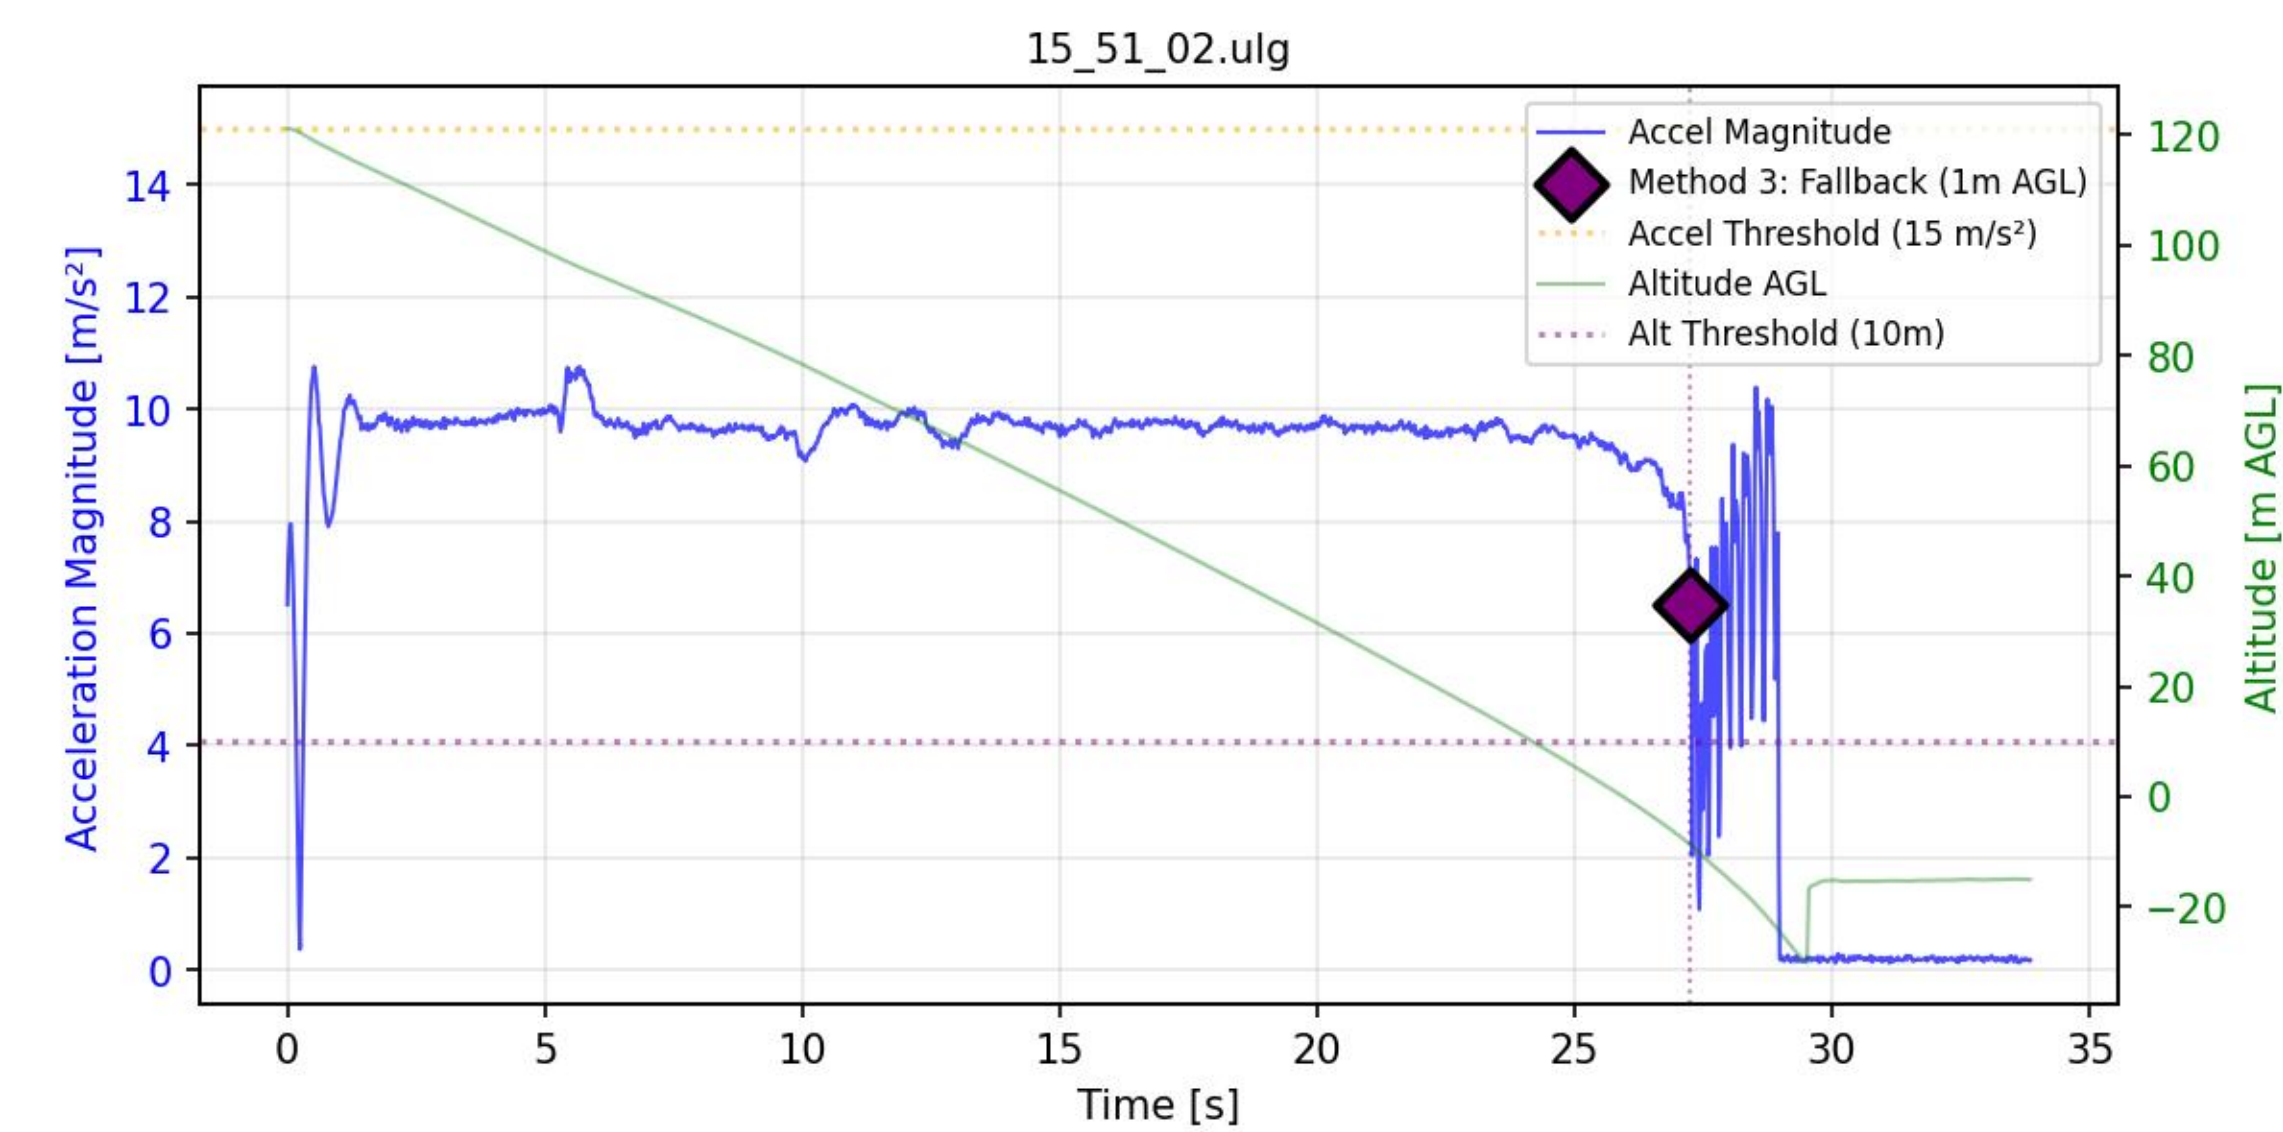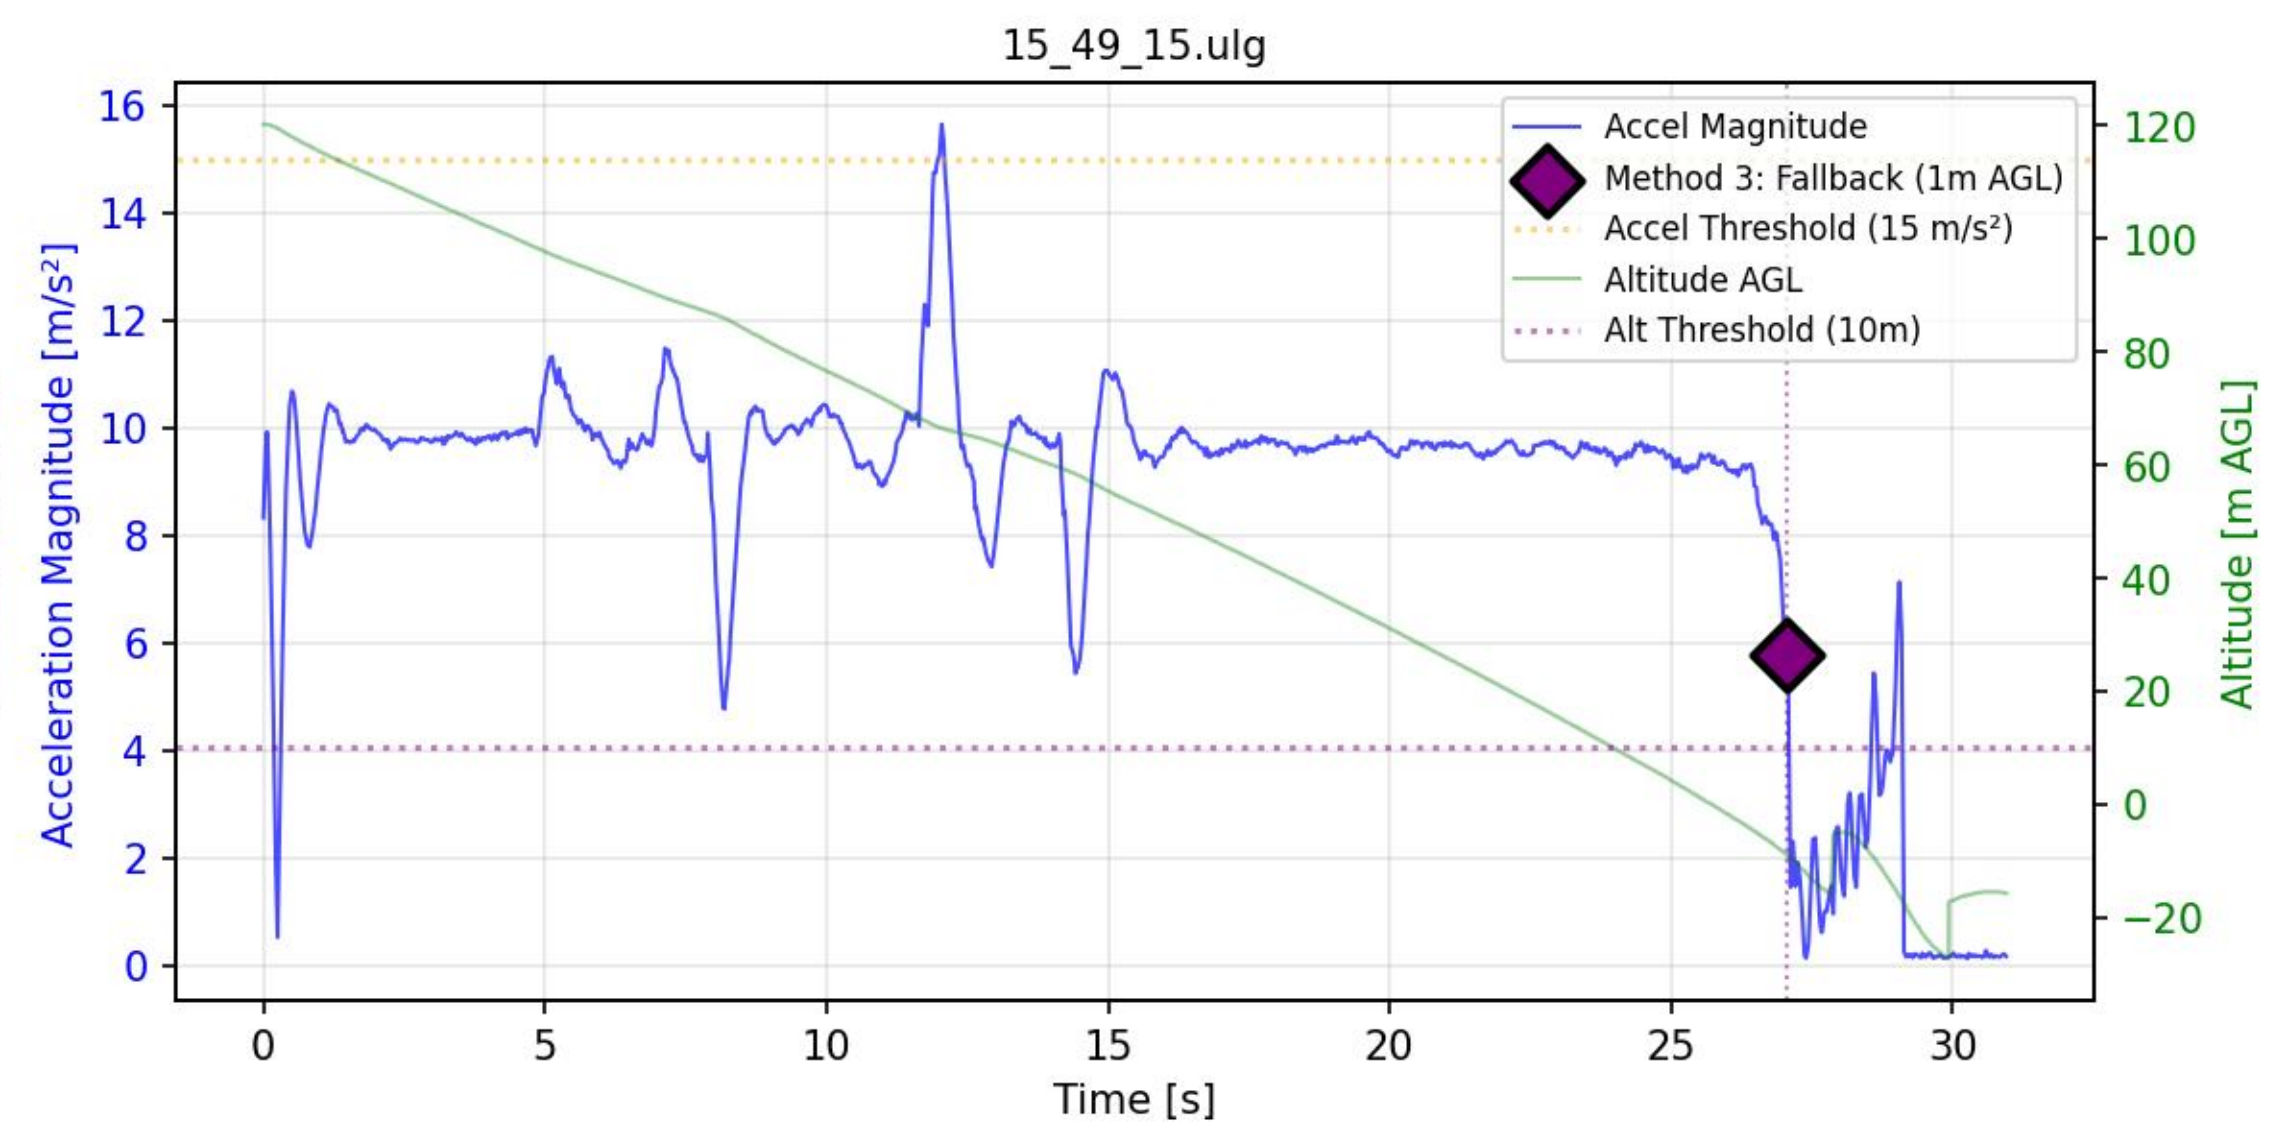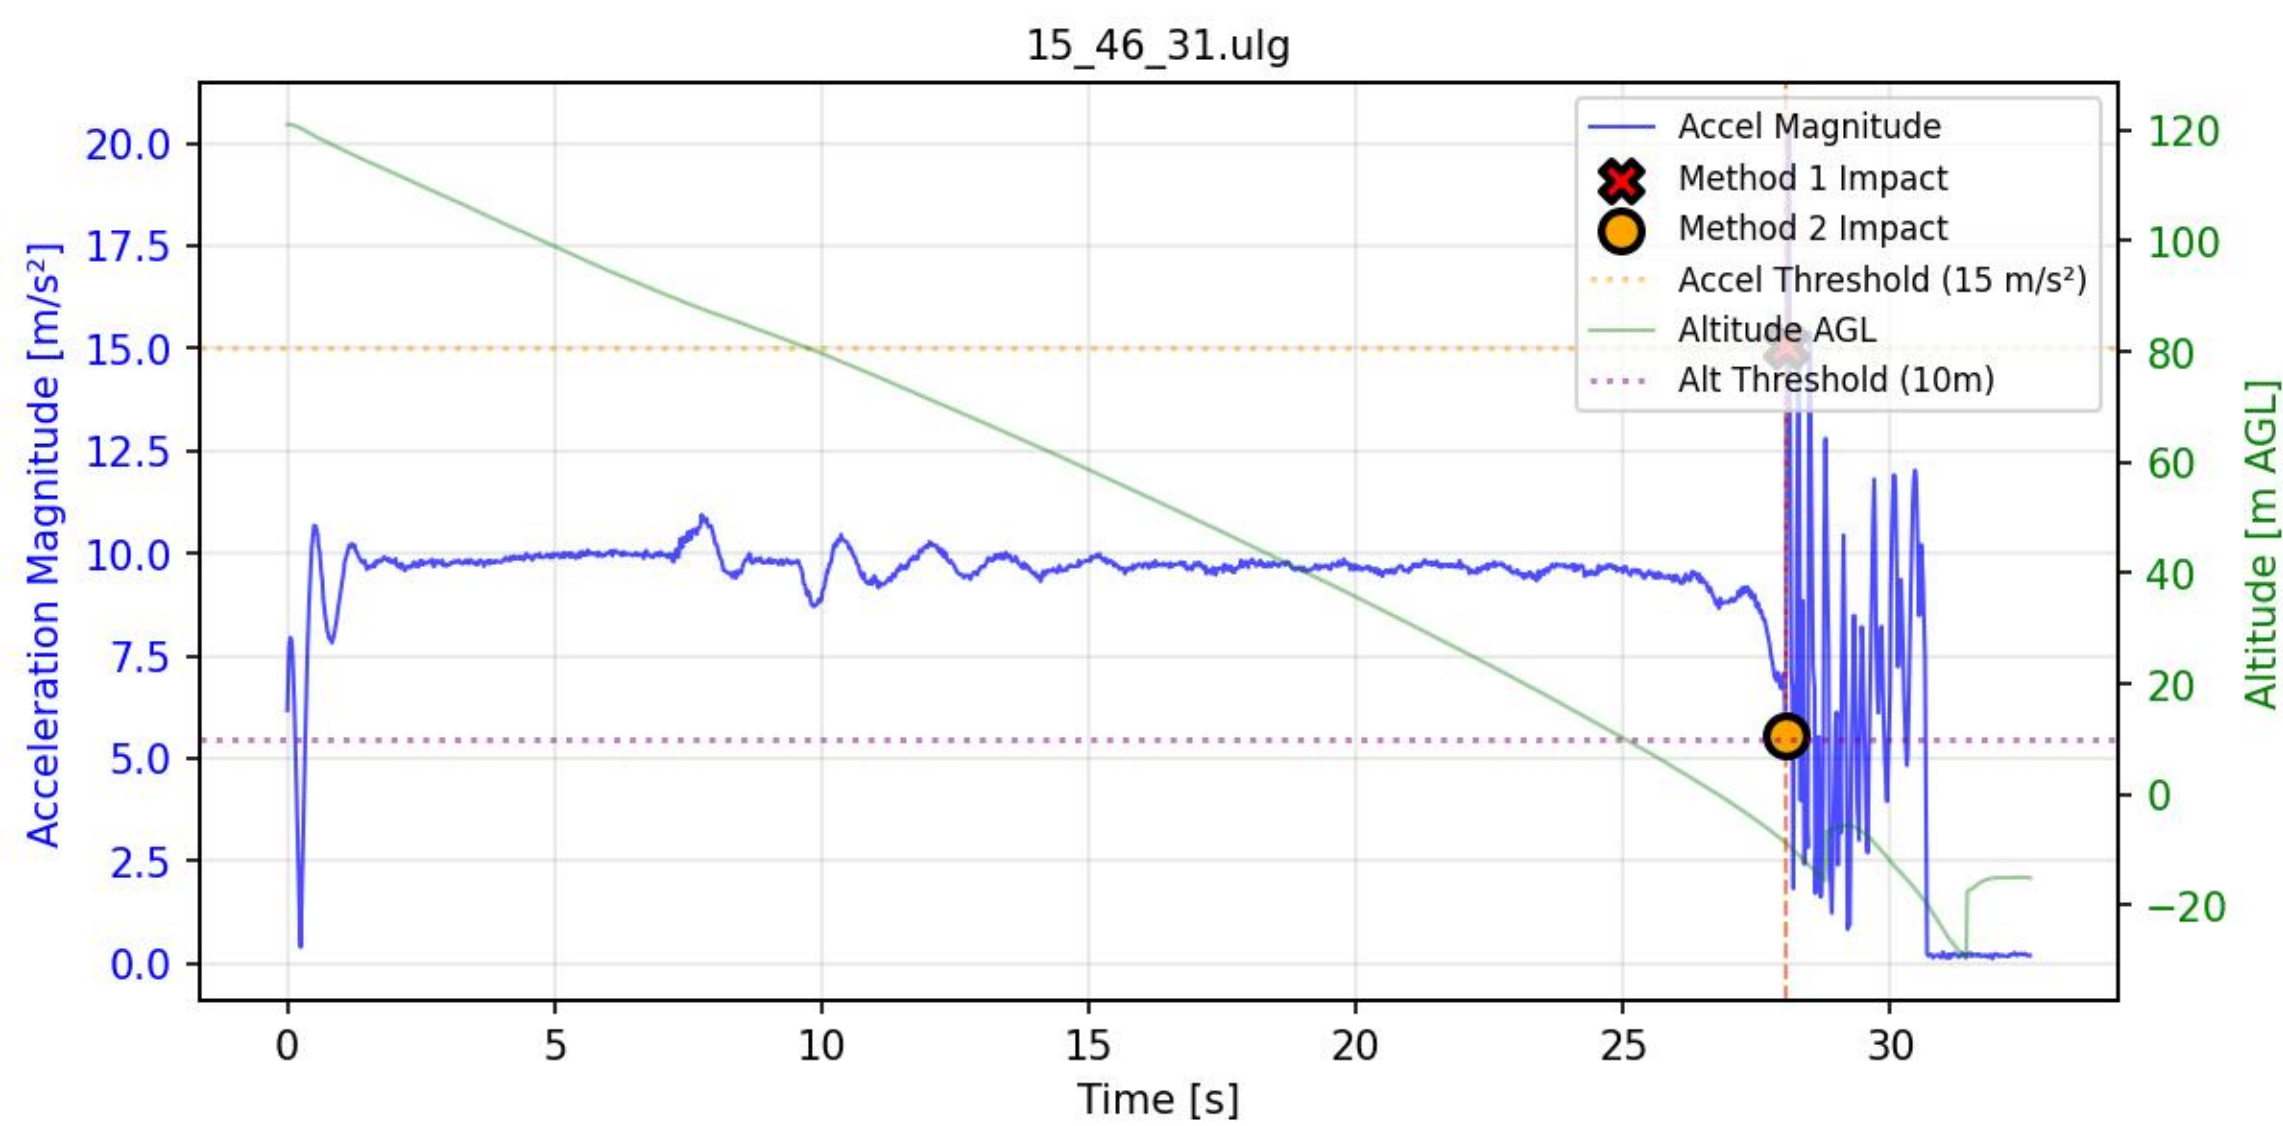




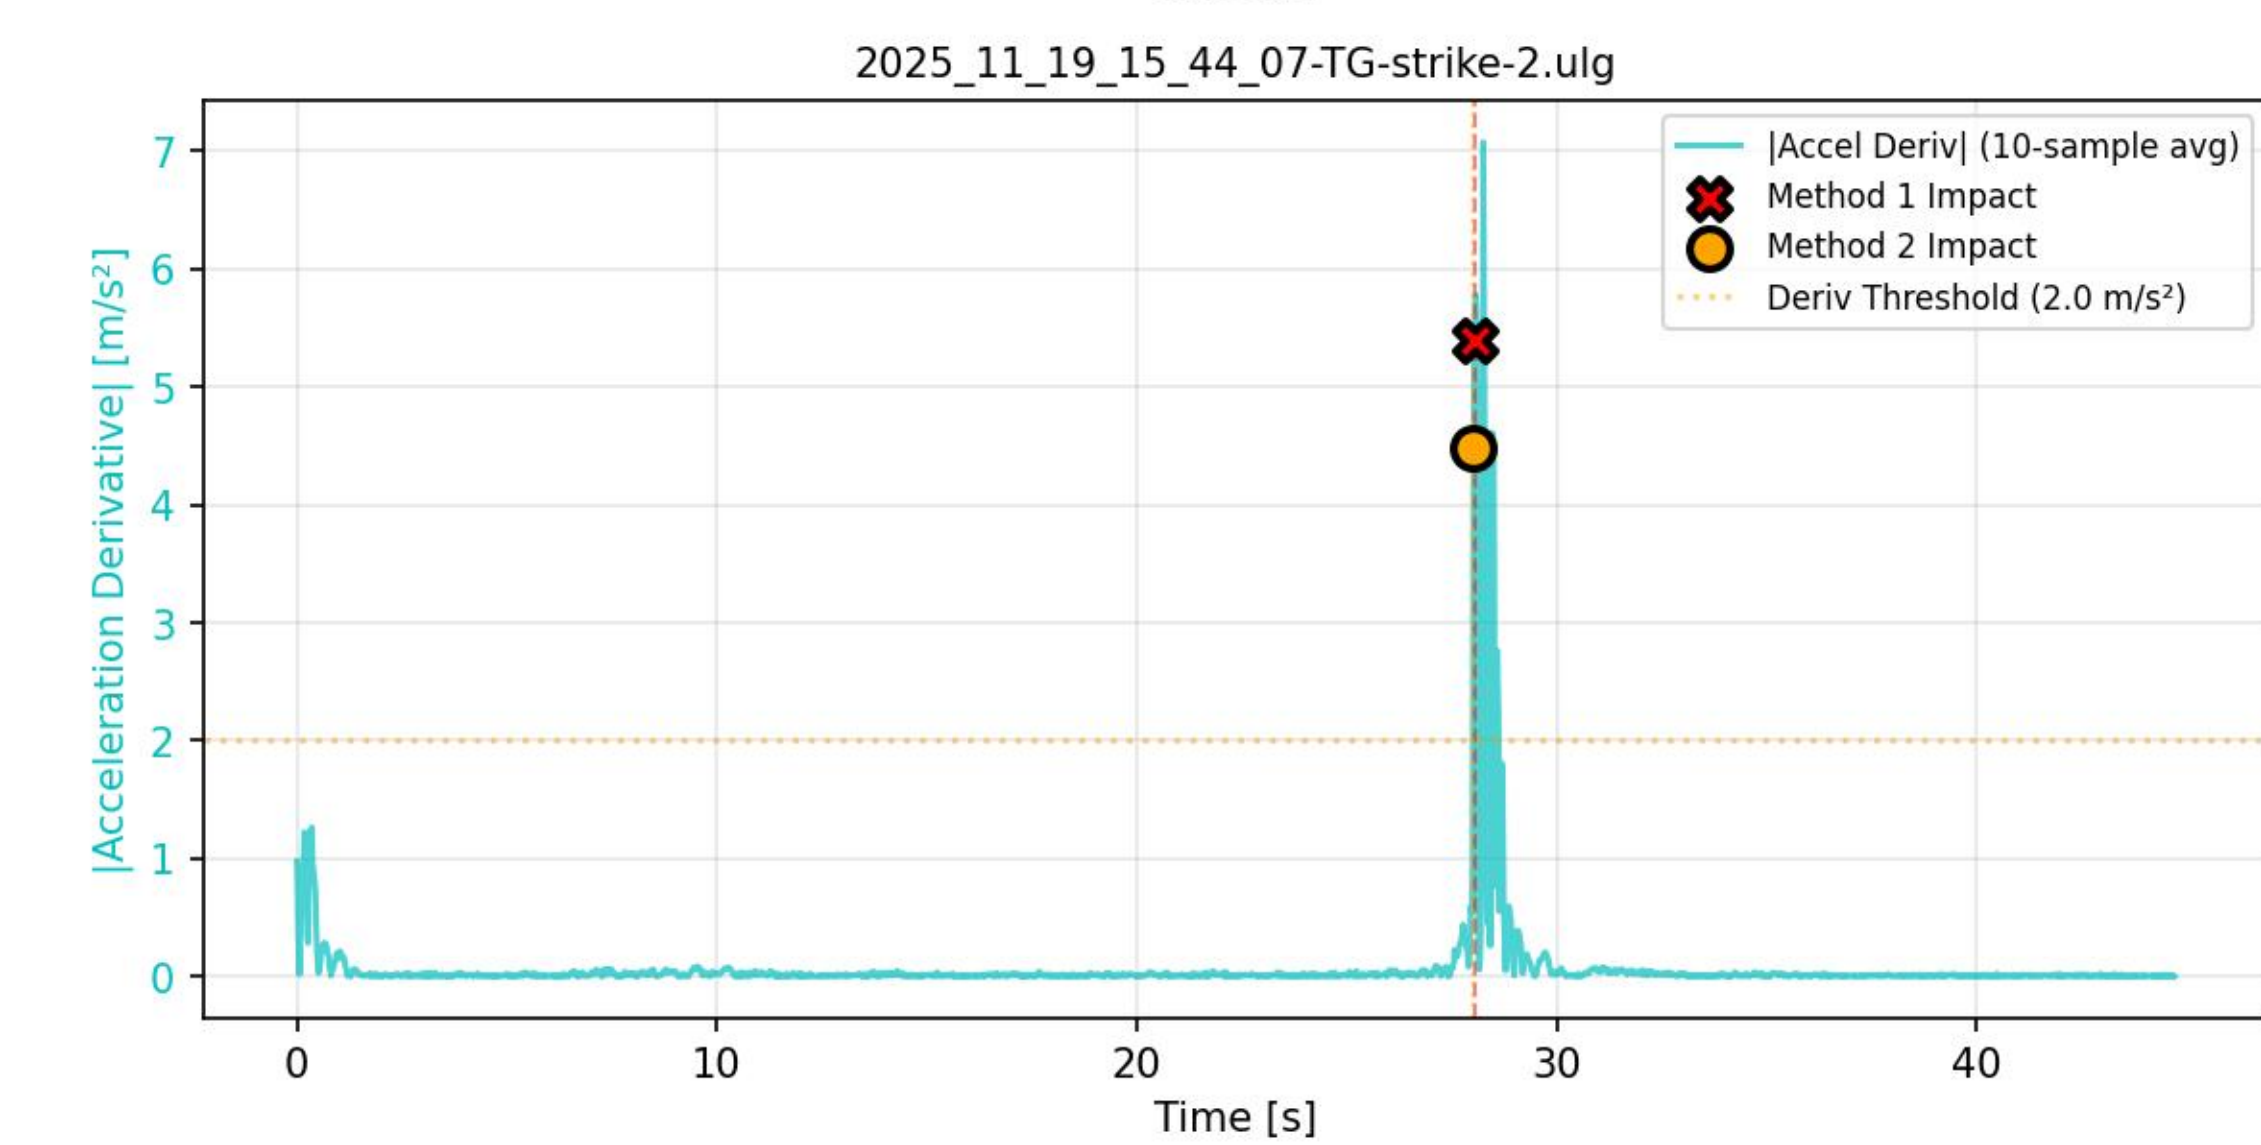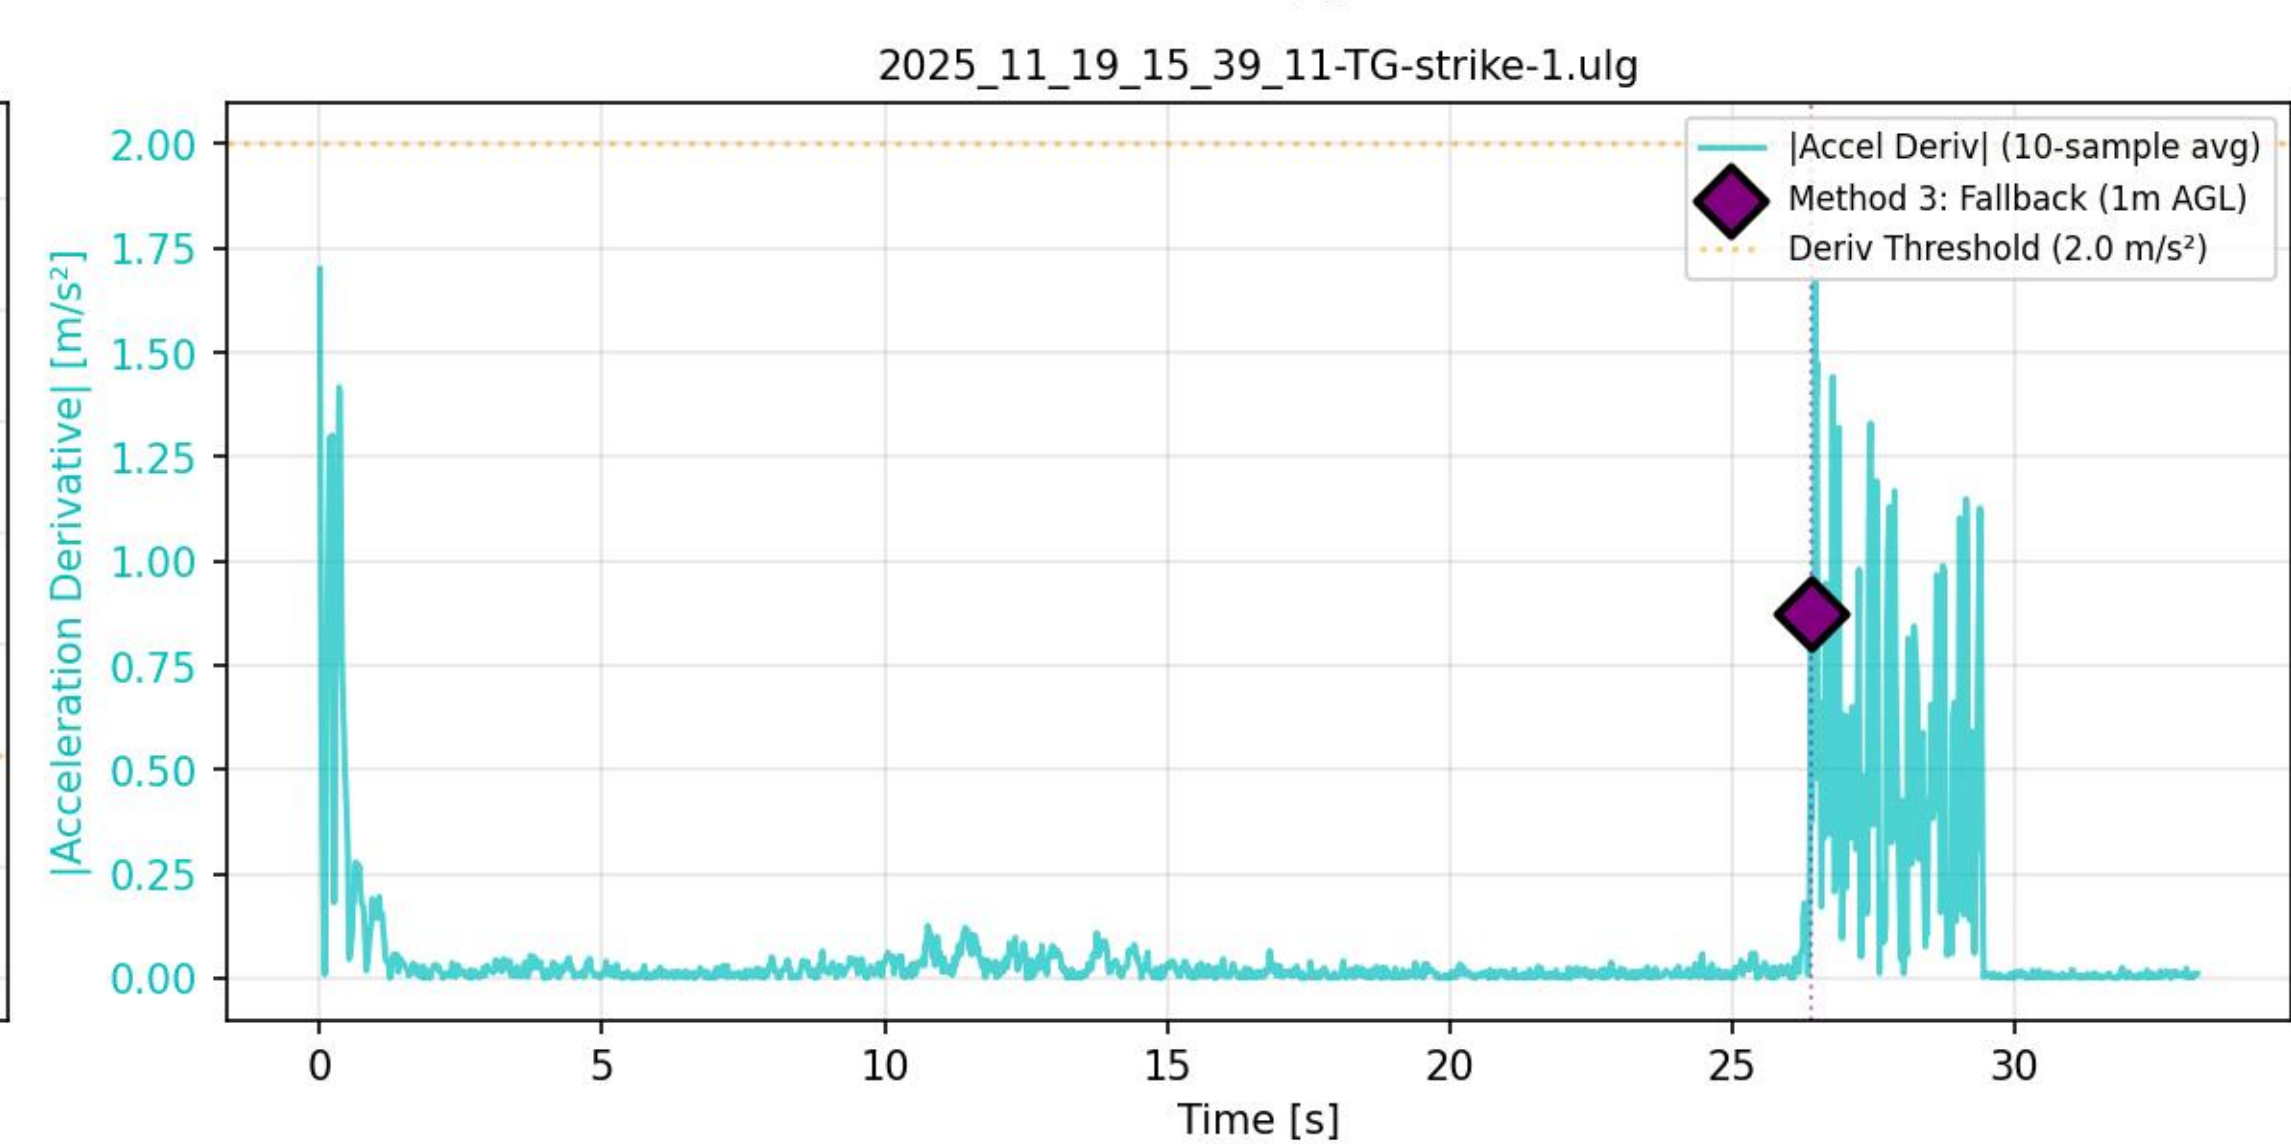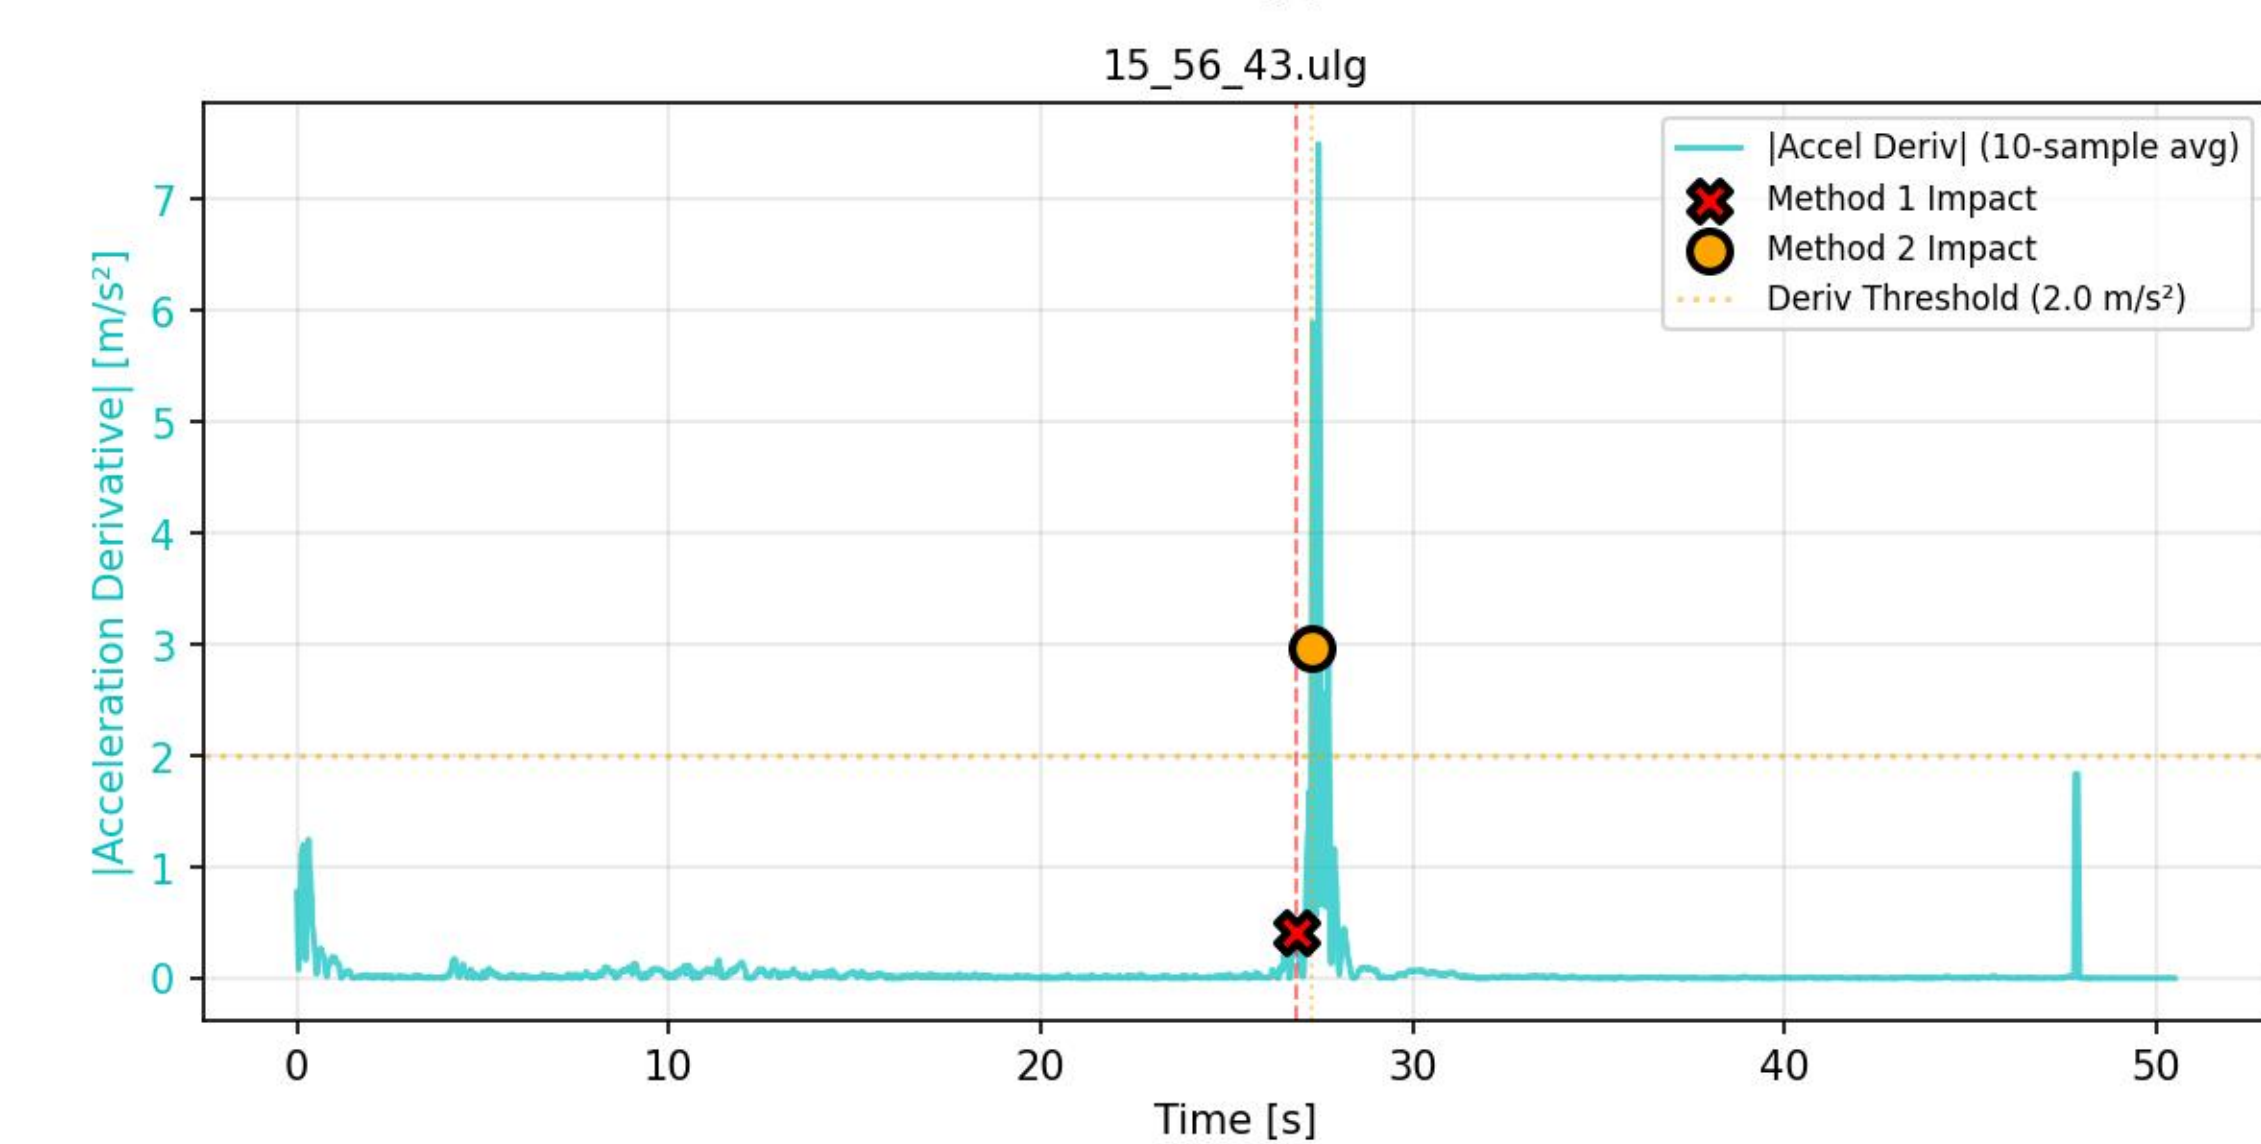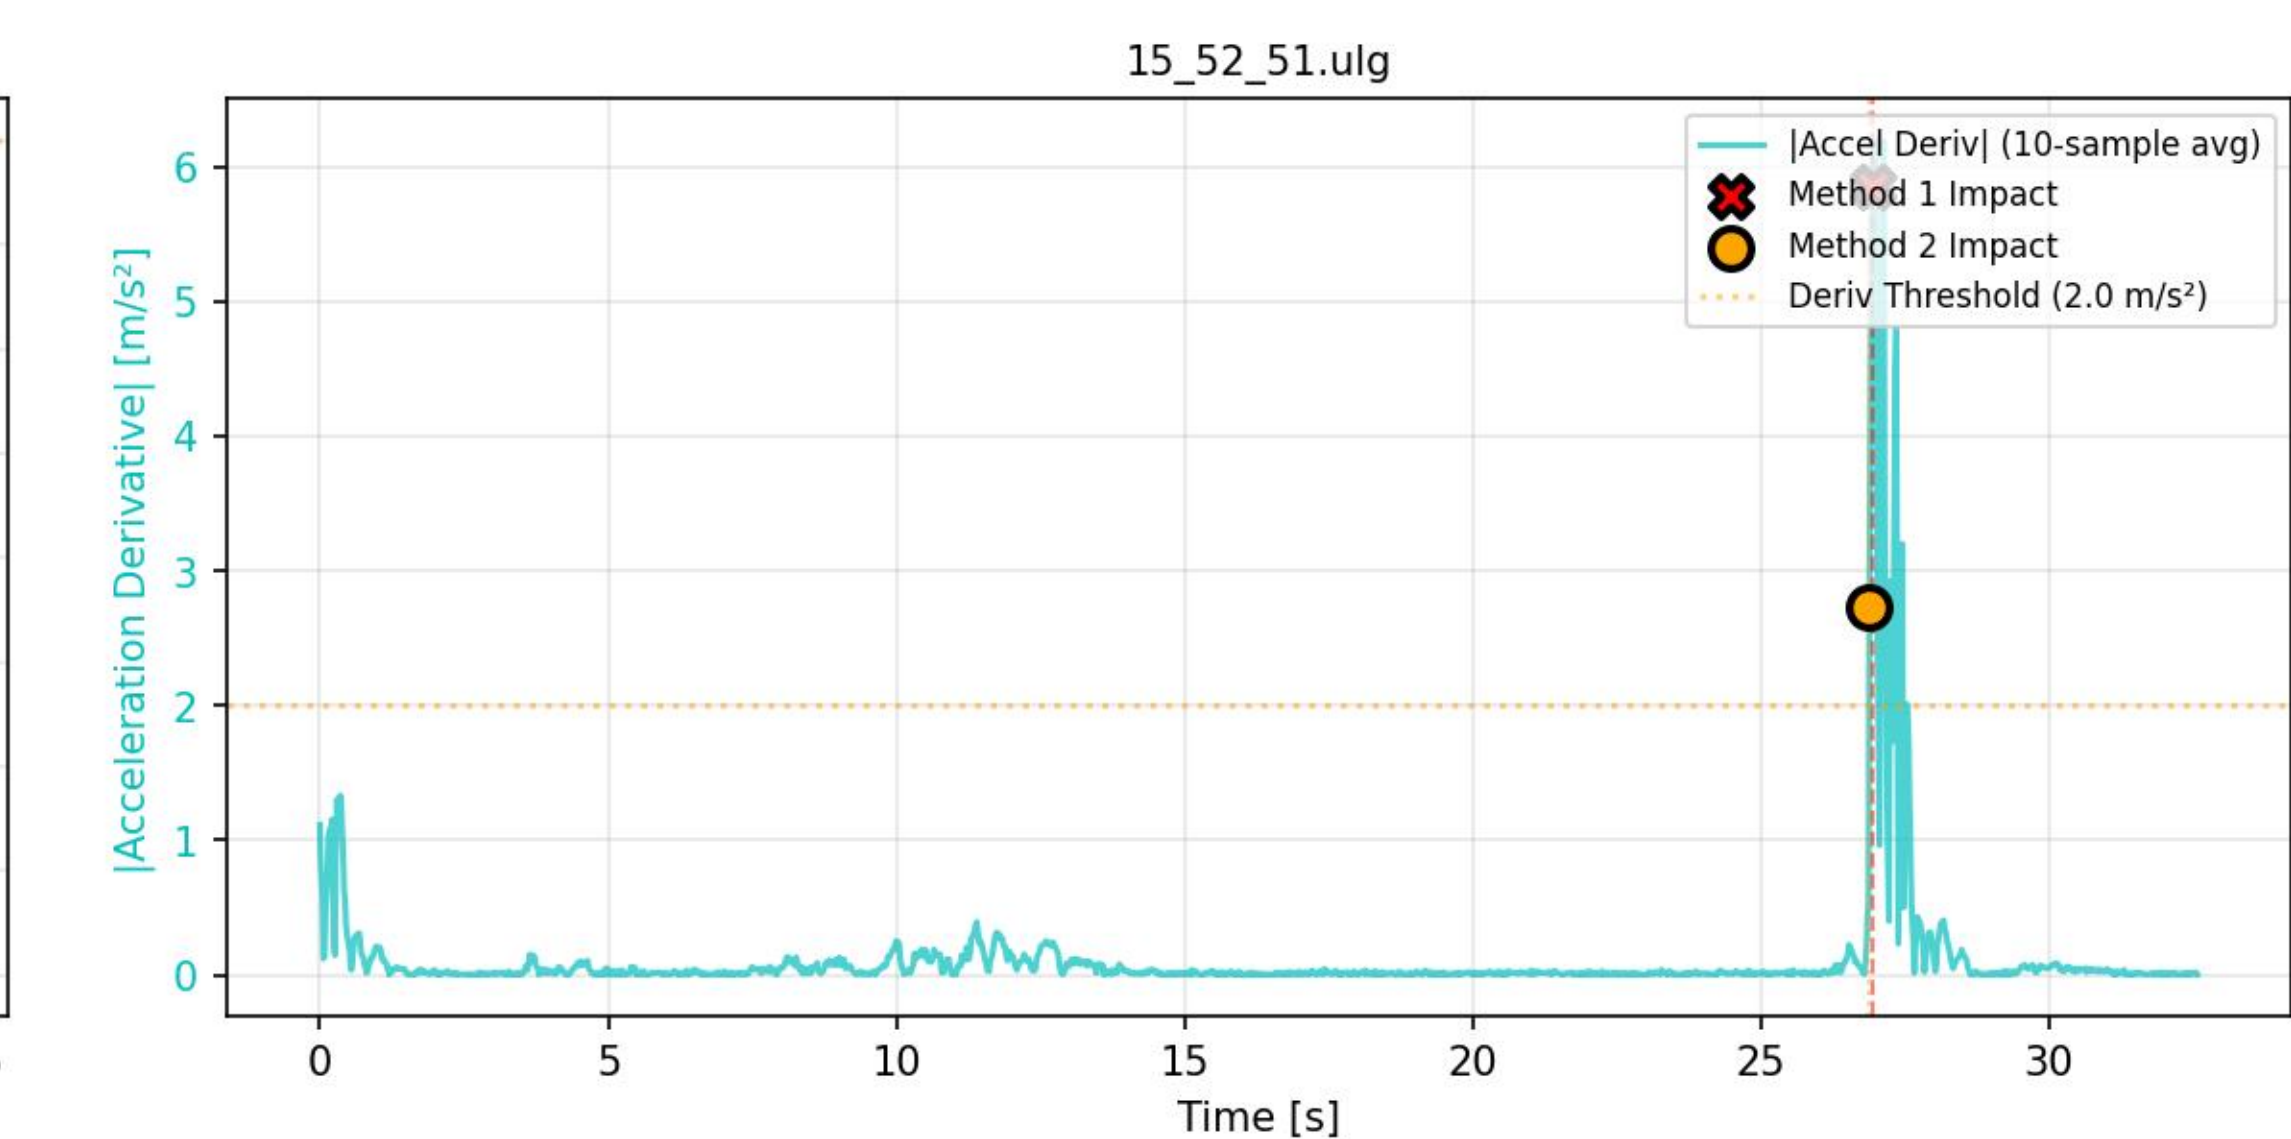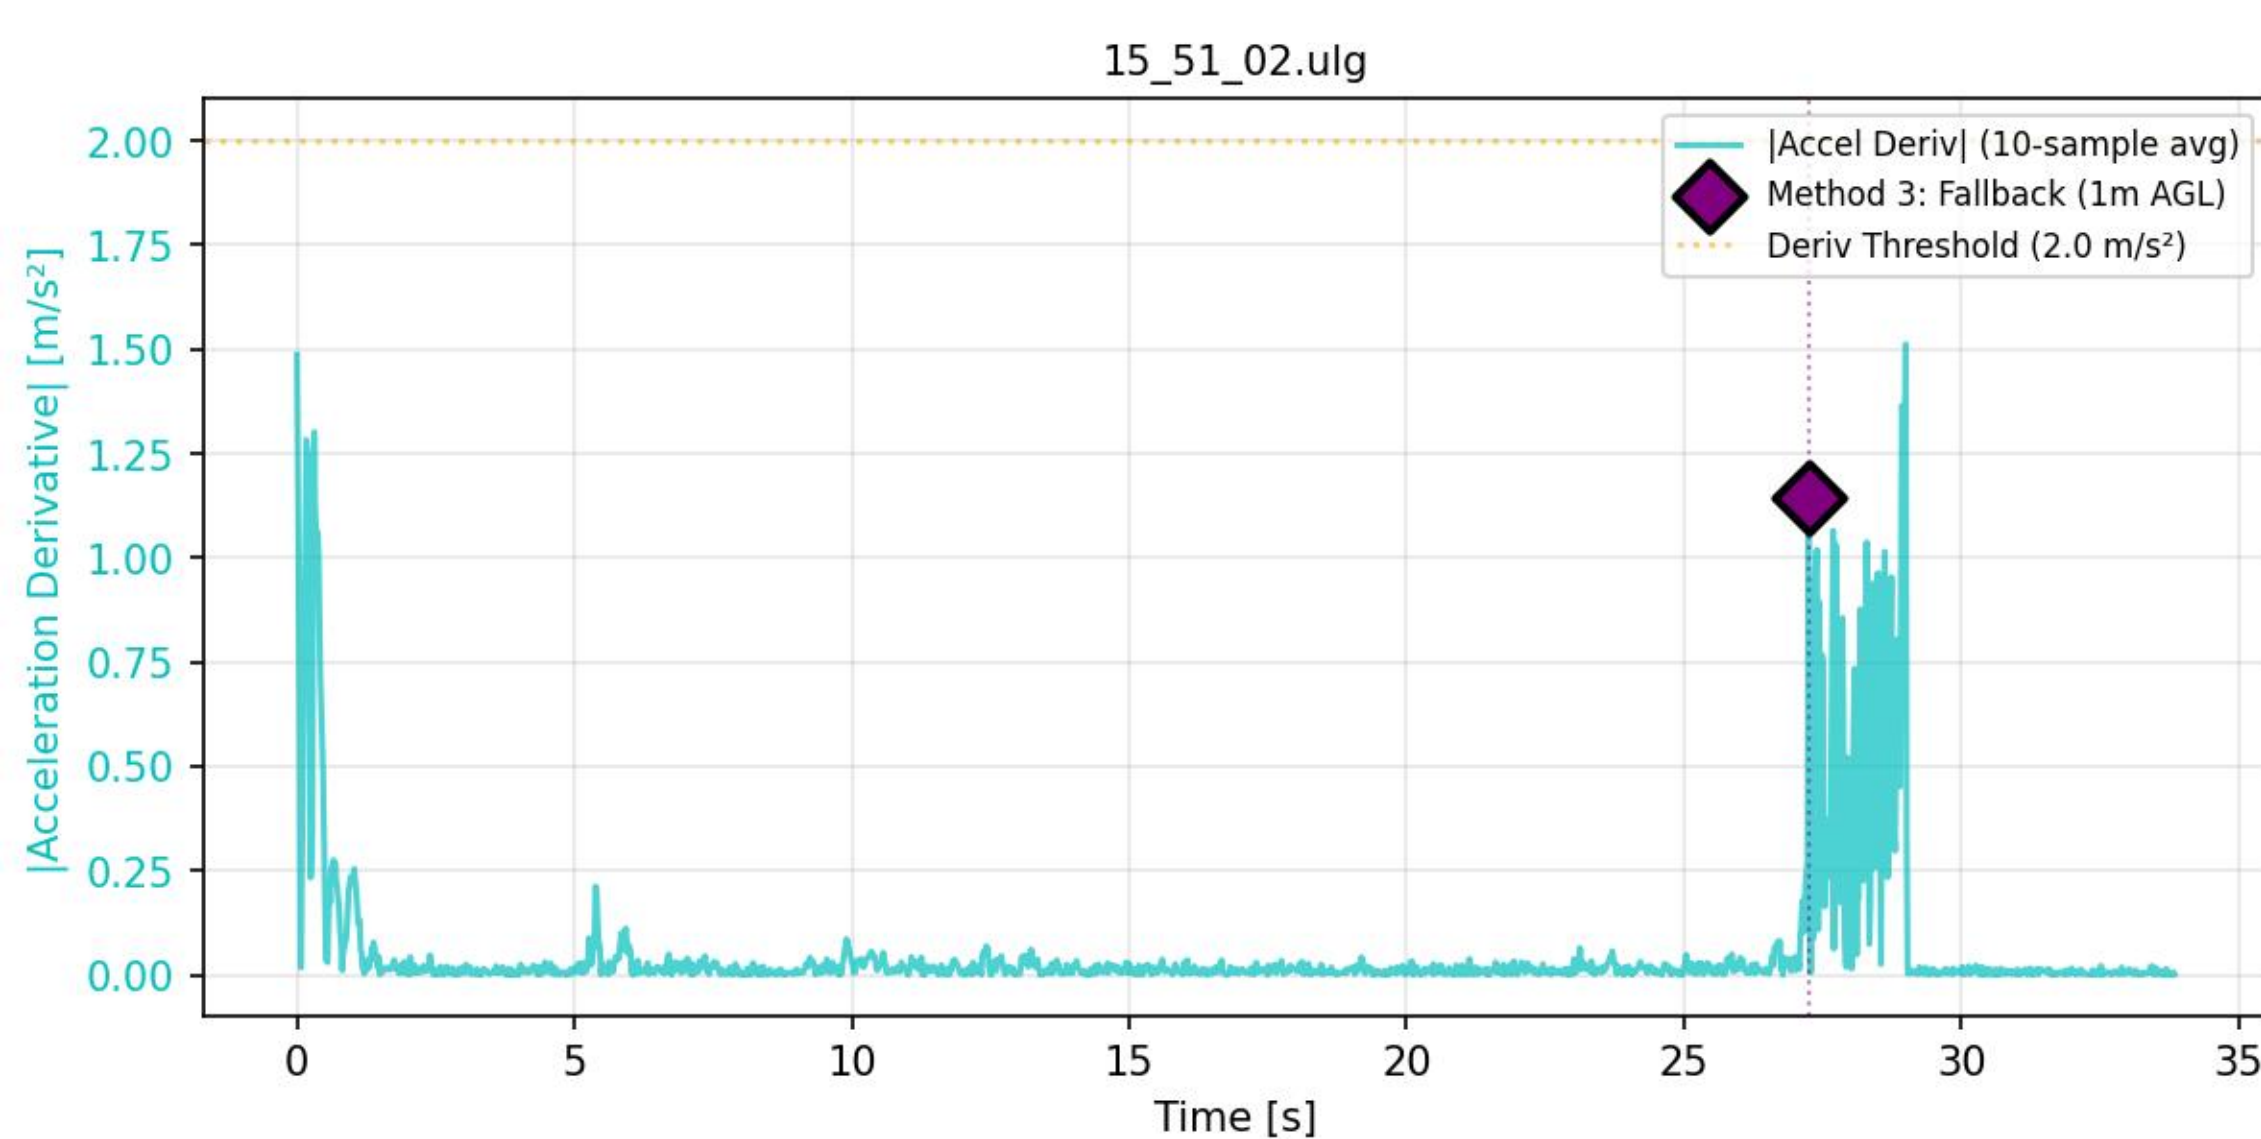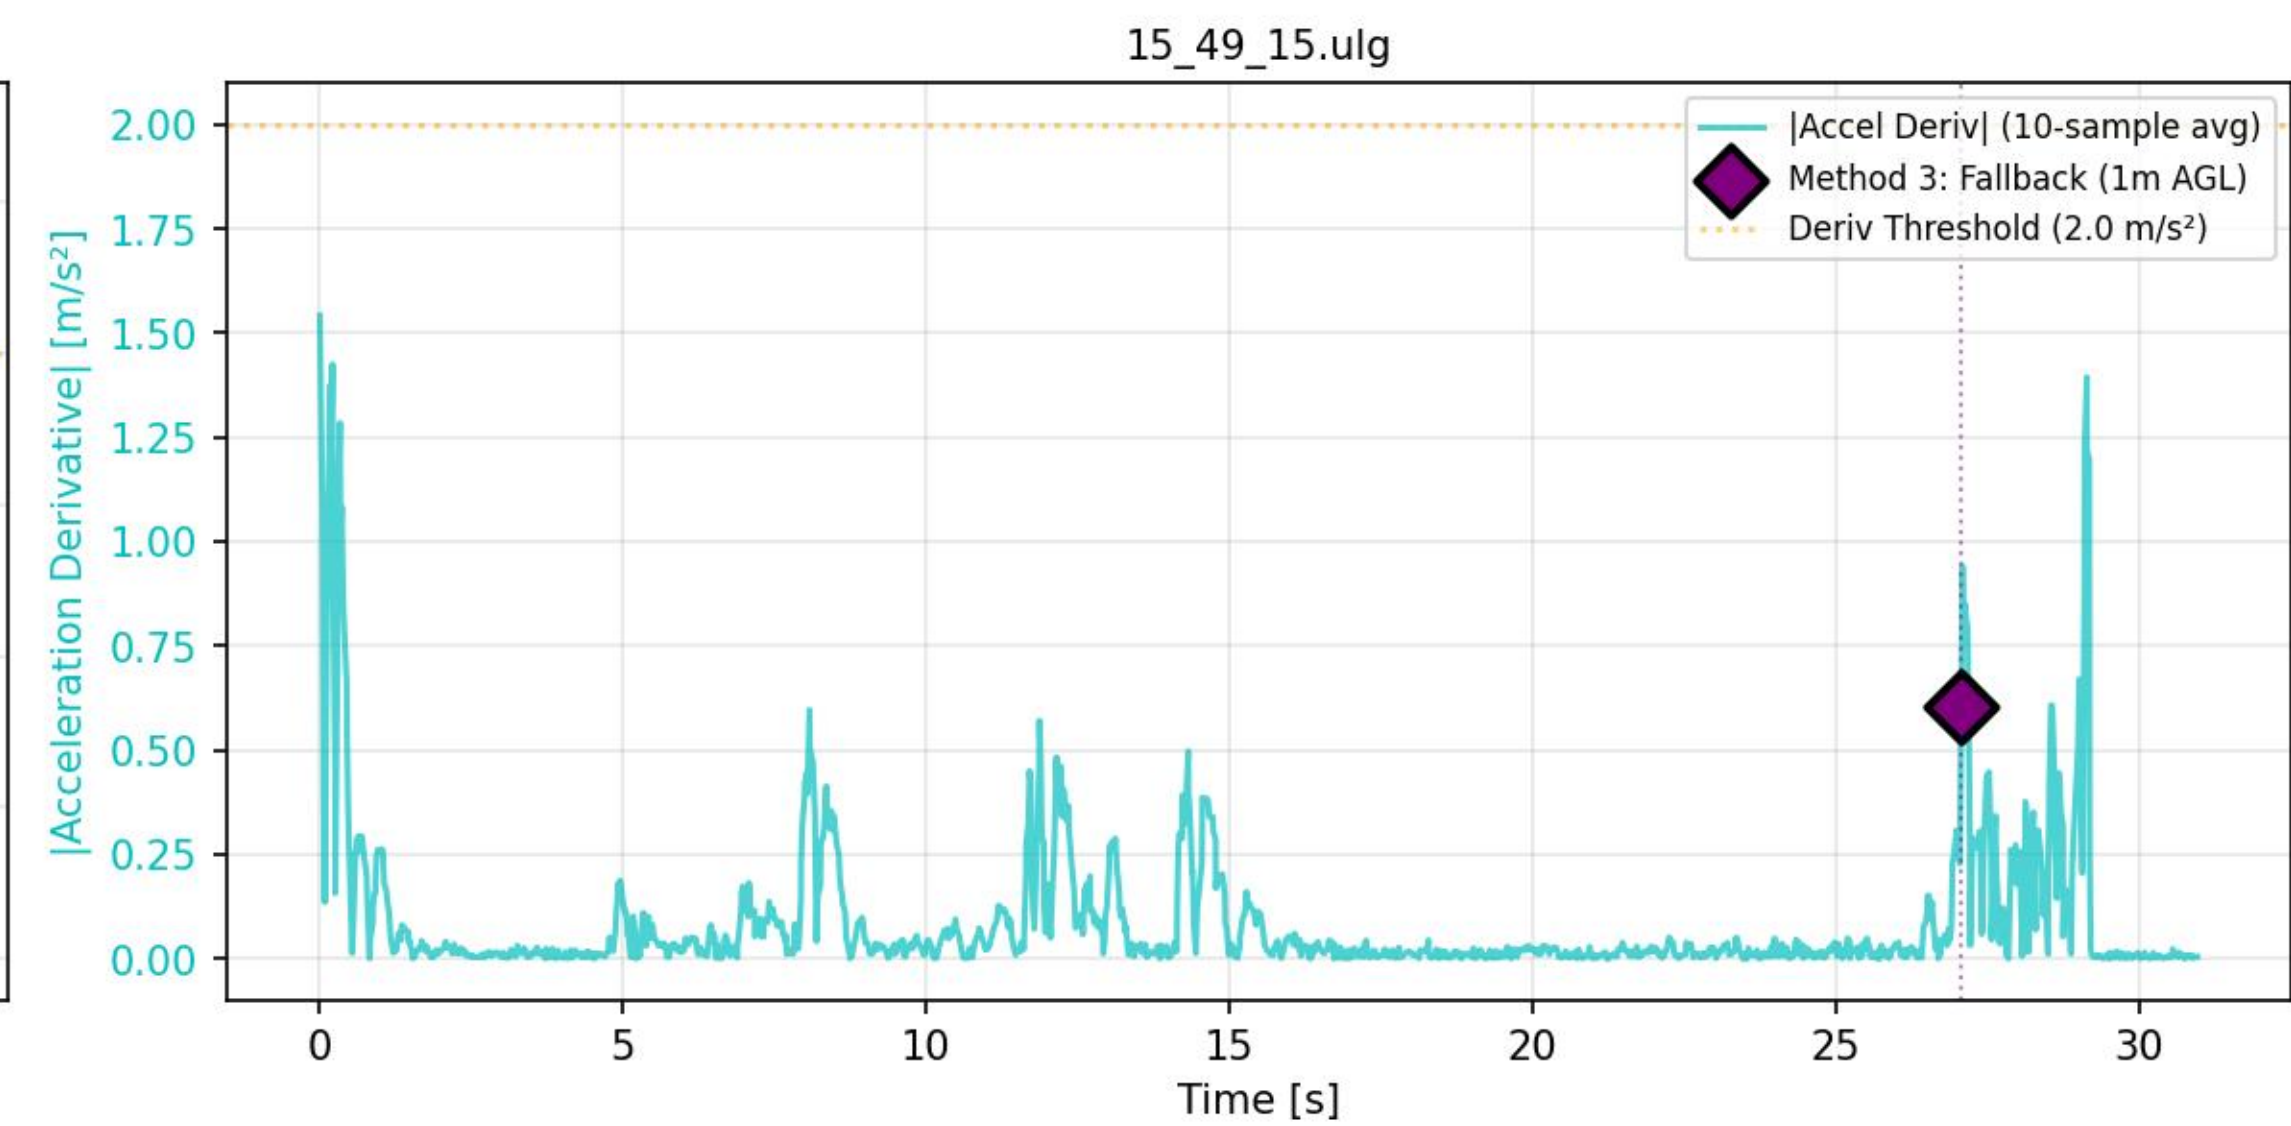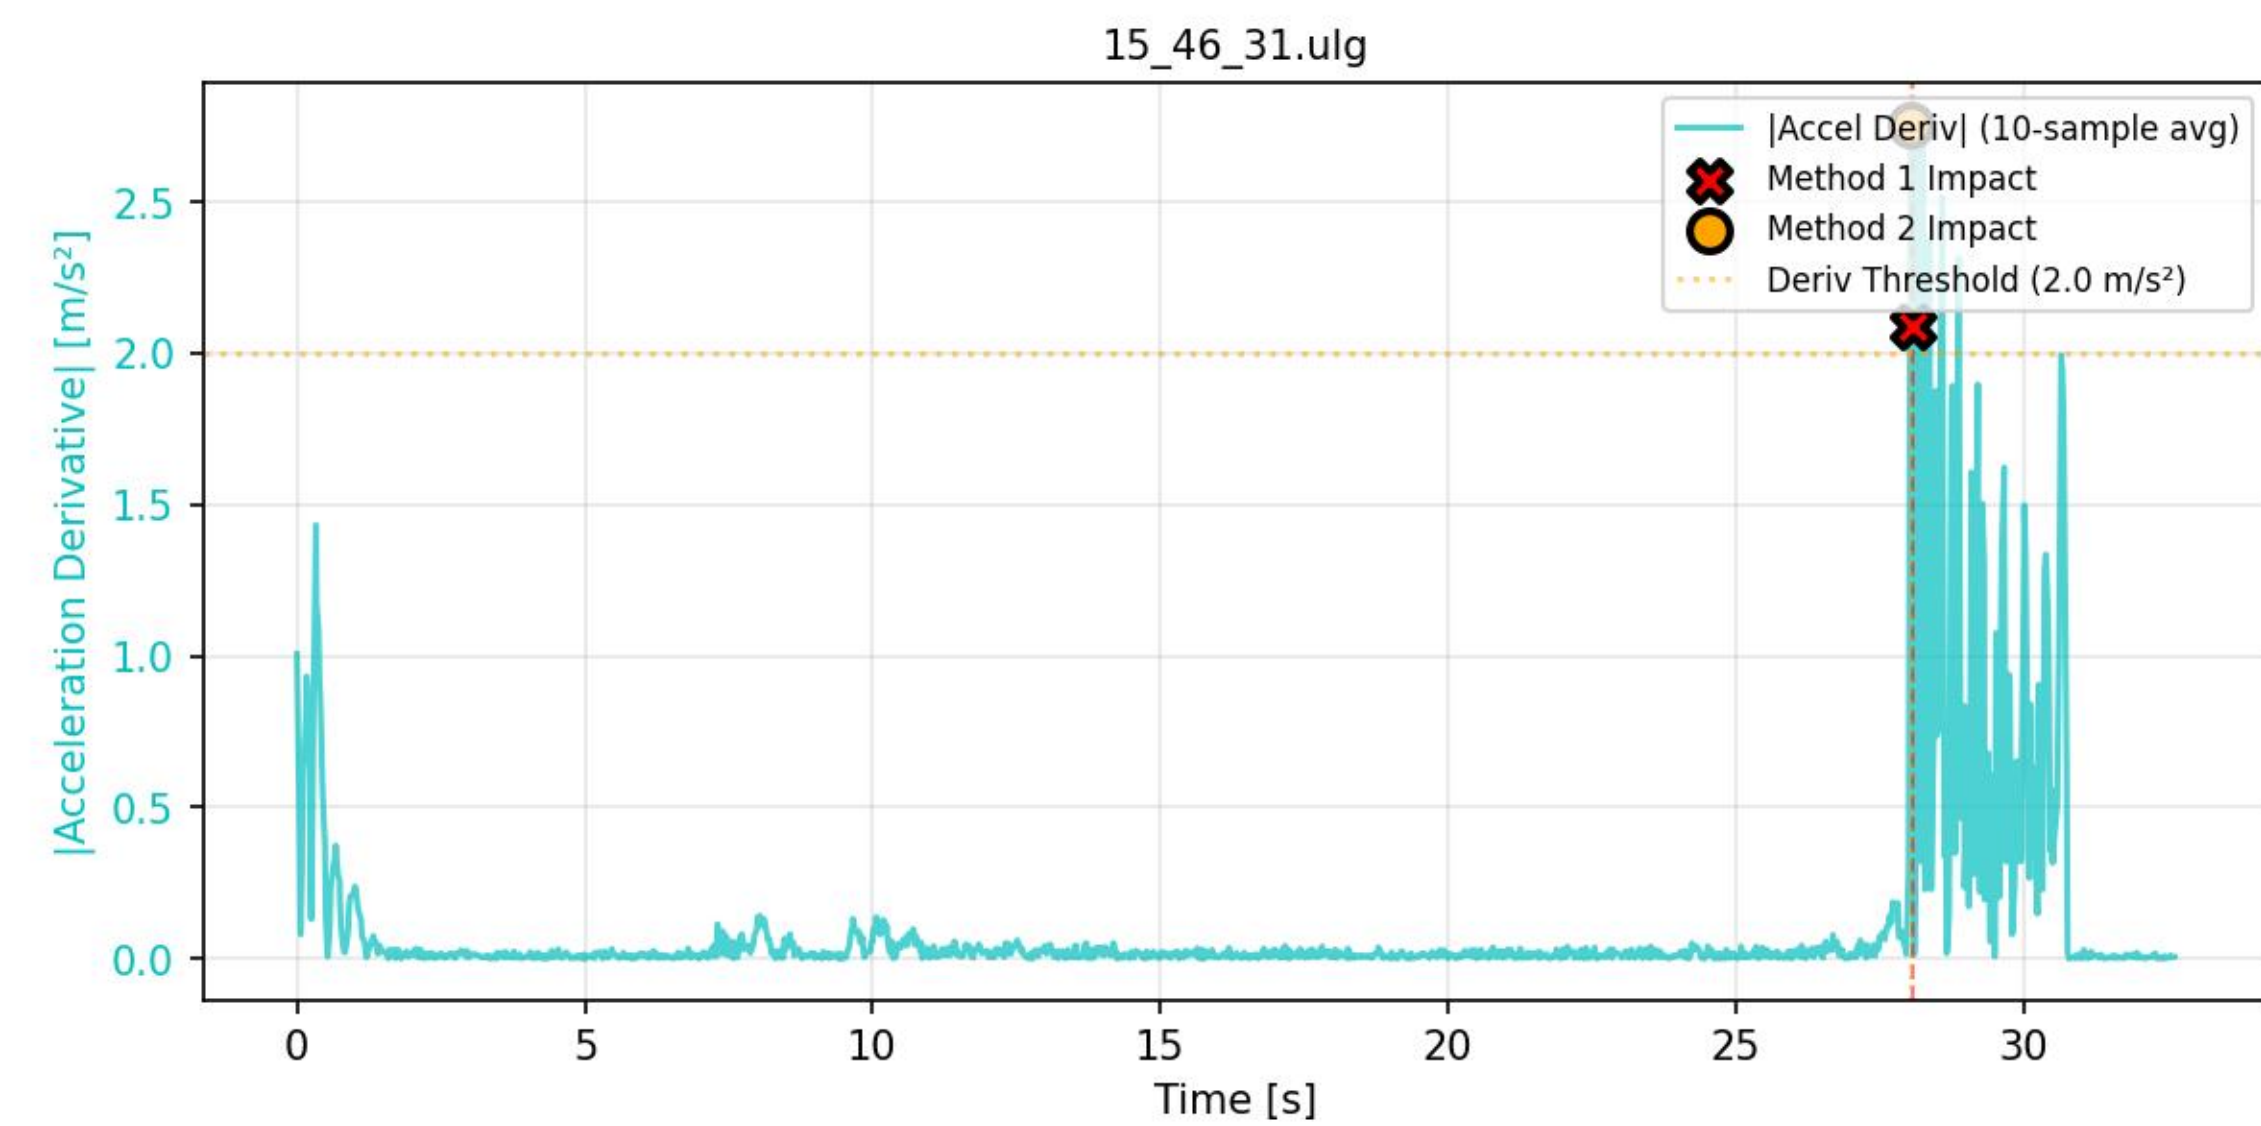



# Impact Point Miss Distance Distribution

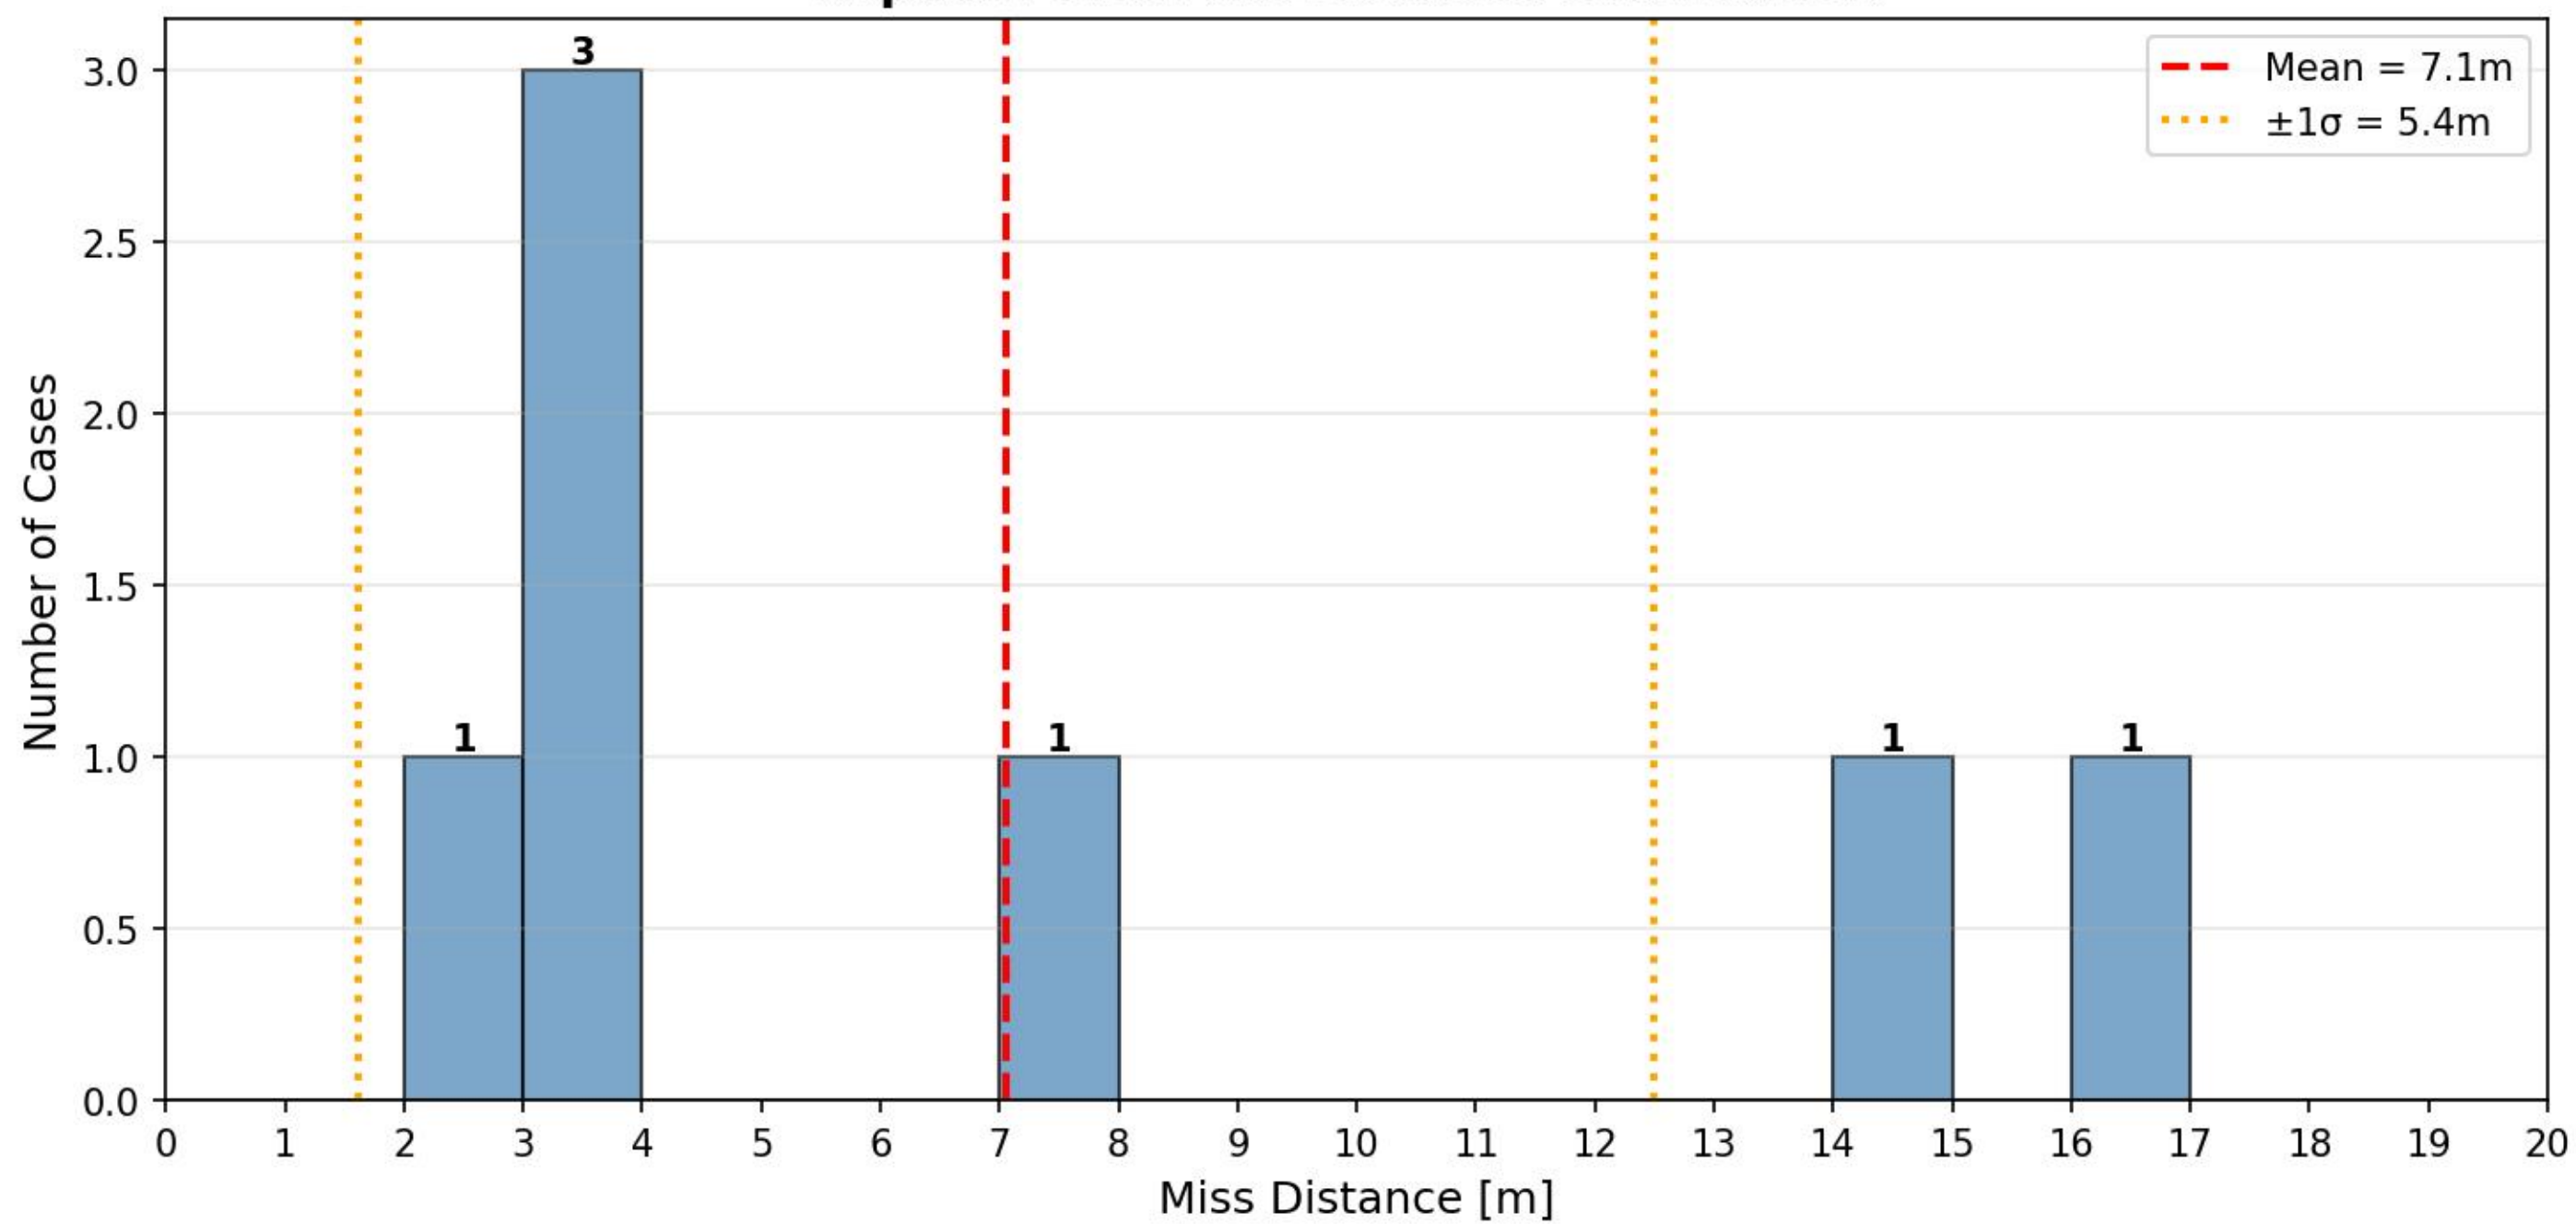

# Closest Point of Approach (CPA) Miss Distance Distribution

