



SHATAMI


PSone Installation pictures

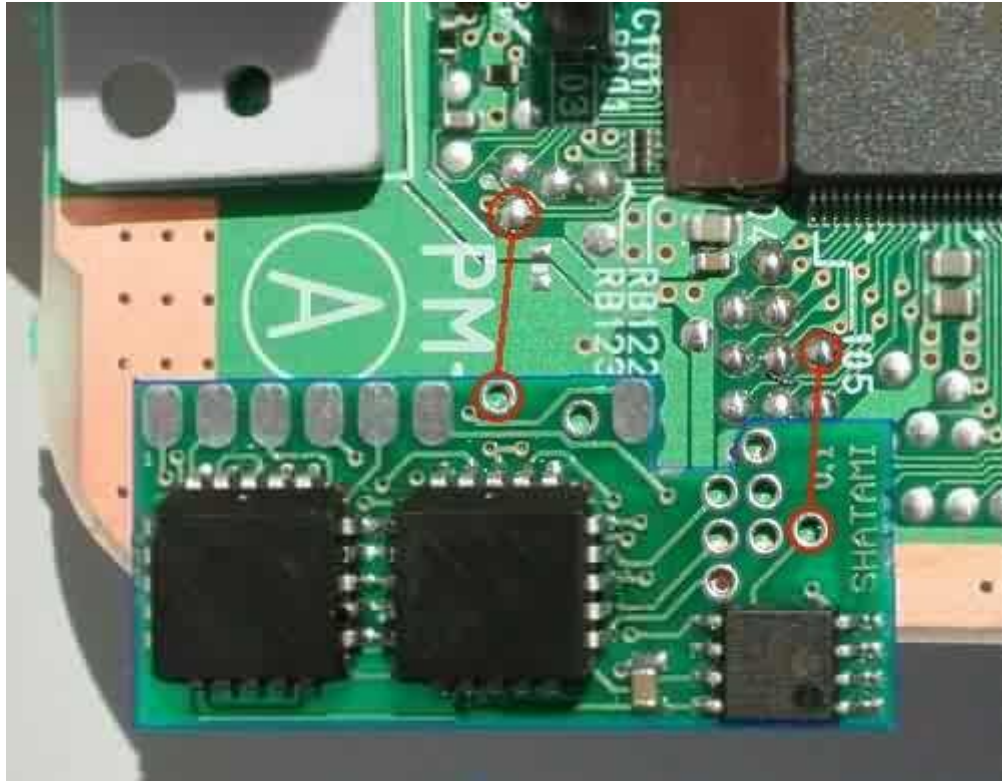


Place the Shatami chip-set on the corner of PSone board,
red marked holes and pads must overlap.

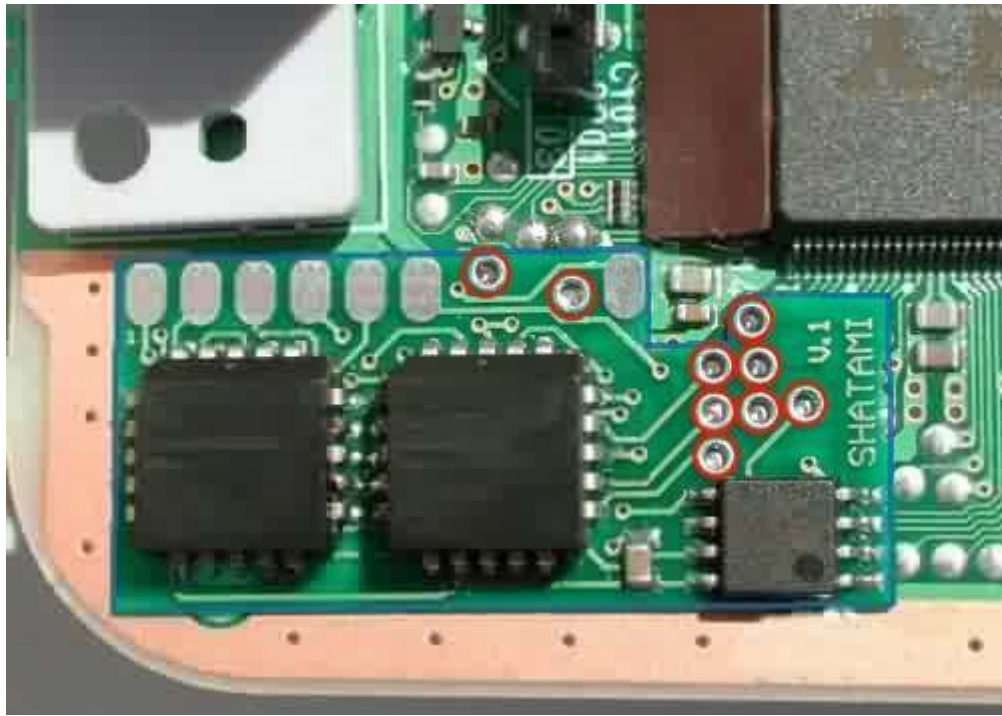

Verify that all 9 holes are aligned with relative pads

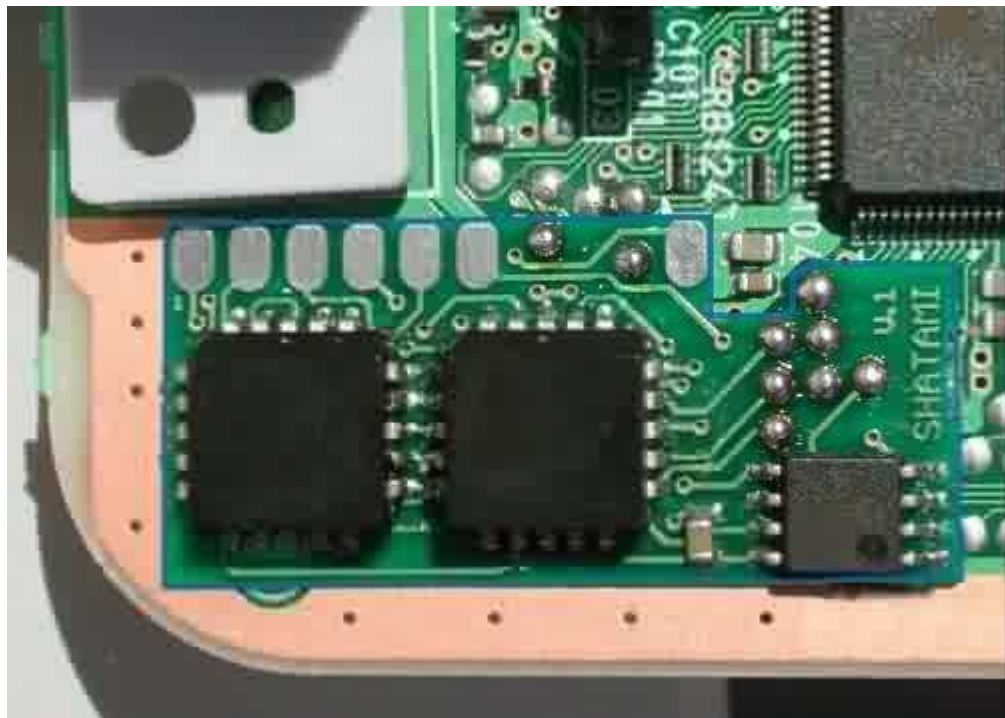

with a small solder connect the first pad on the left,
verify alignment again and then connect all 9 pads

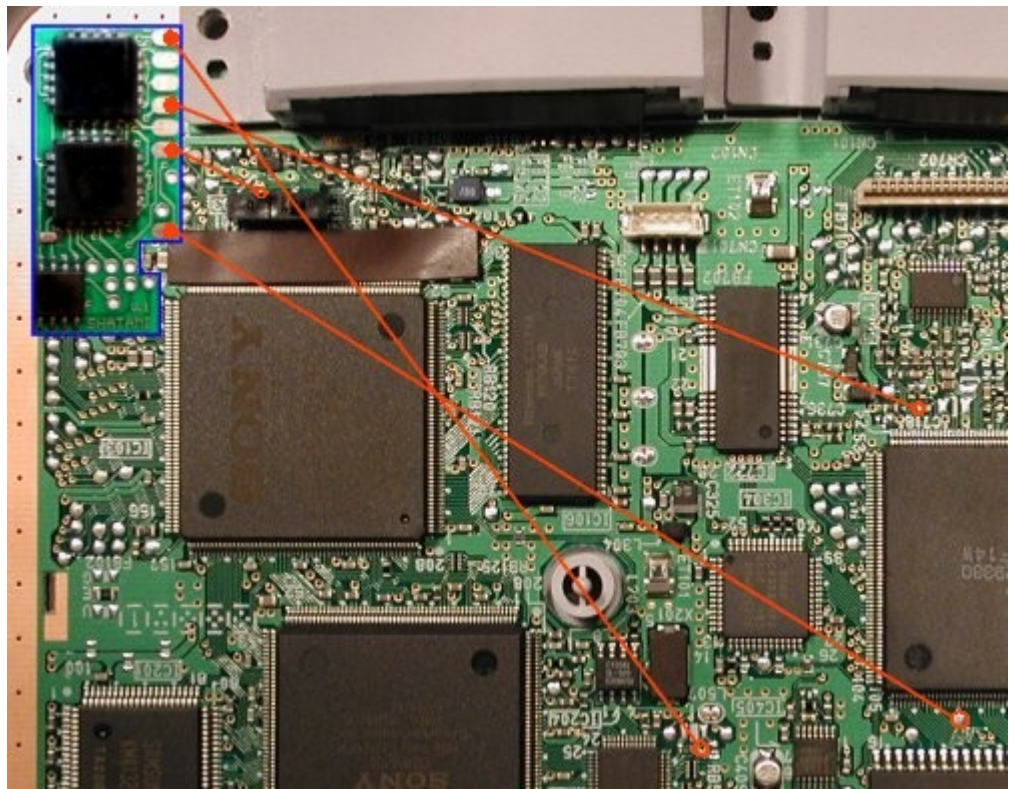

[now you can connect the 4 wires \(click to enlarge\)](#)
