

ESPpresenceLD




Presence Detection Device based on LD2410C mmWave



First Time Configuration

NOTE: Make sure you have ESPHome addon installed on you Home Assistant before starting

- Connect the device to a power supply using the USBC connector
- Go to your Home Assistant and you should have a message that a new device has been discovered, click on it!
- You can otehrwise go to Settings/Device and you will find it there
- Click on the CONFIGURE button and you will be prompted to enter you WiFi credential (SSID and password) please do it
- Click on CLOSE
- Now go to your ESPHome addon web interface
- You should have a new device ready to be “adopted”
- Click on ADOPT
- Give to the device the name of your choice and click again ADOPT
- You will be prompted with this device encryption key, if you can please copy and save it, i twill be easier if in the future you need to recover this device in case of Home Assistance / ESPHome reinstallation
- Press on INSTALL to begin download, compile and install the updated firmware for your device
- Wait for process to be completed and if all is ok click on STOP to close the window
- As last step go to Home Assistant “Settings/Devices” and you should see a new ESPHome device discovered with the name you just choose, click on its CONFIGURE button then click enter
- Congratulations, the setup is complete and you can start using your new Presence Device

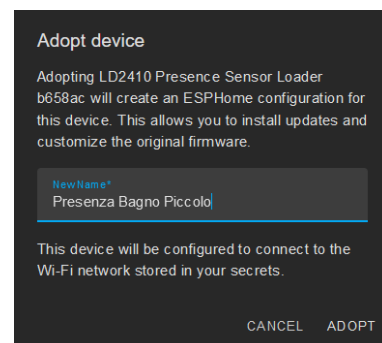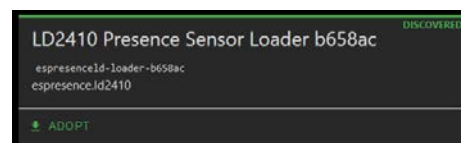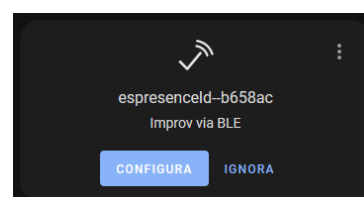

compatible with
Home Assistant

Powered by



ESPHome