
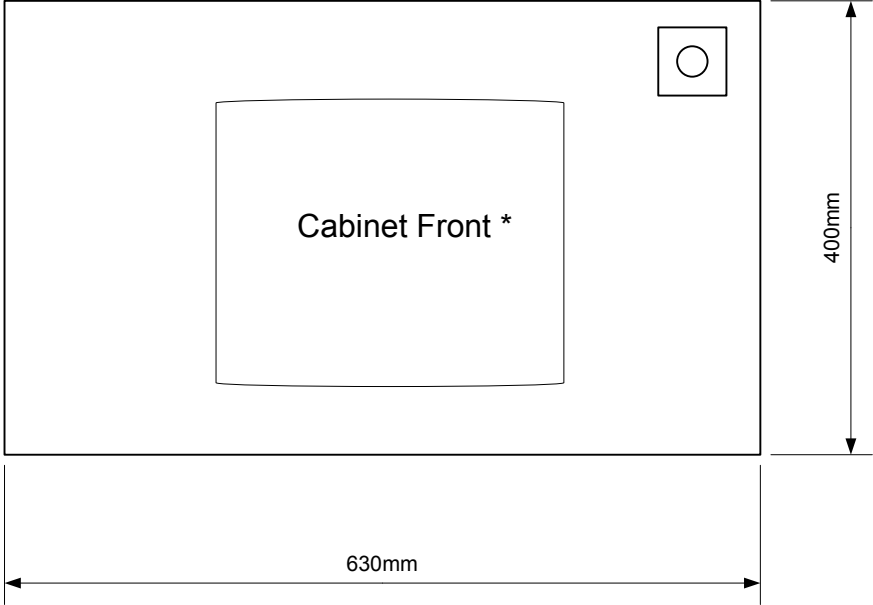
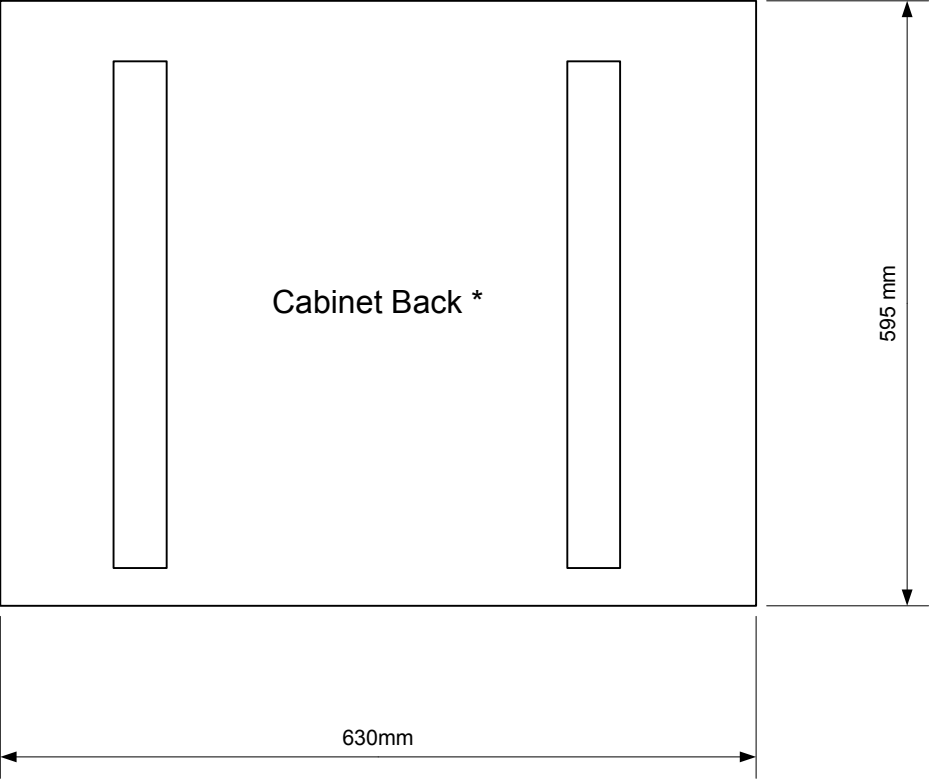


[illegible]

***Note**
The inside edges of the cabinet front and rear faces should be cut at 45 degrees to meet with the front and back panels

Williams Widebody Cabinet Dimensions

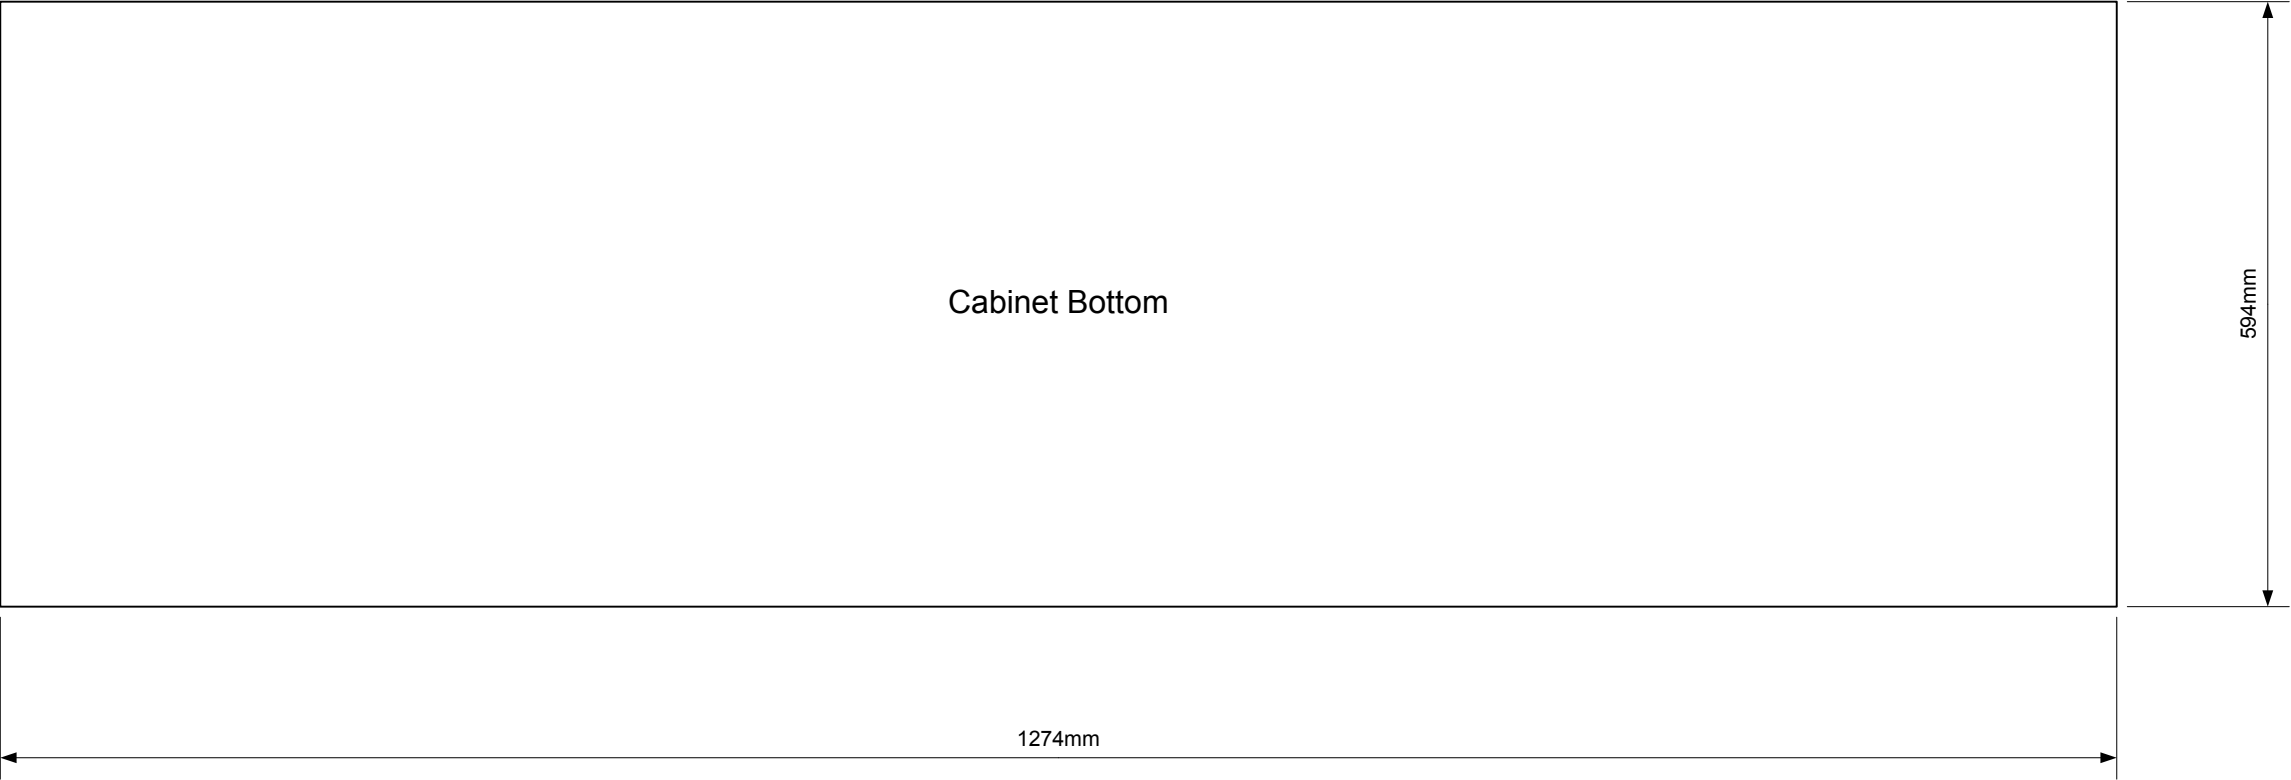

*Note
The inside
edges of the
cabinet front
and rear
panels should
be cut at 45
degrees to
meet with the
cabinet side
panels