

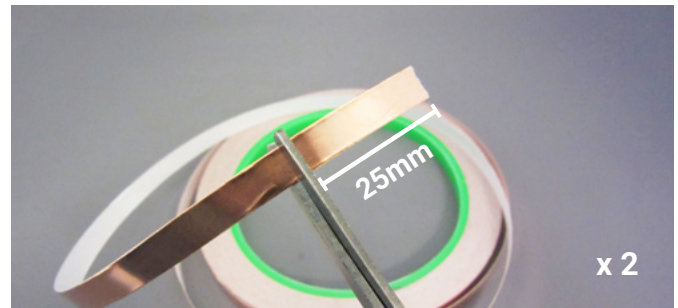


Battery Interrupt


ASSEMBLY MANUAL

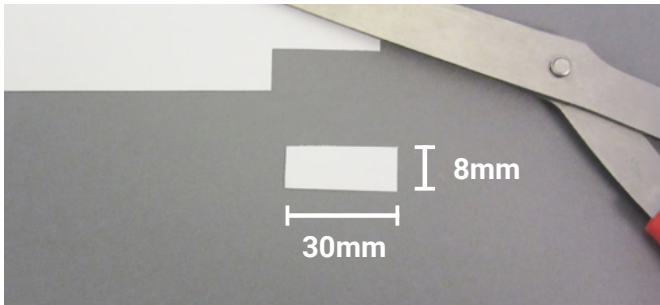


01. 




02.

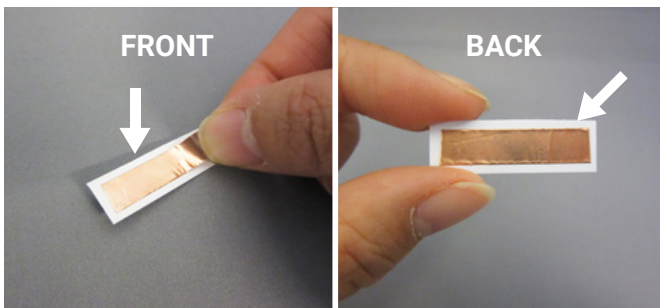


03. Adhere the copper tape on both sides of the paper in the centre.

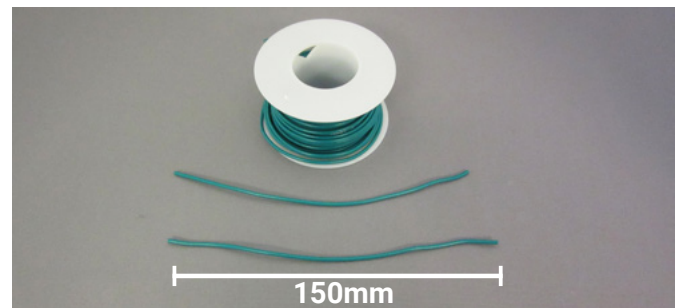


04.

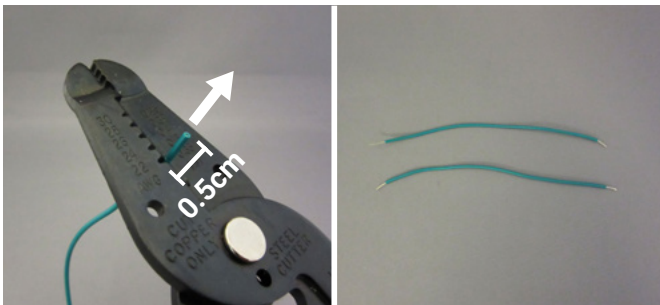


05.

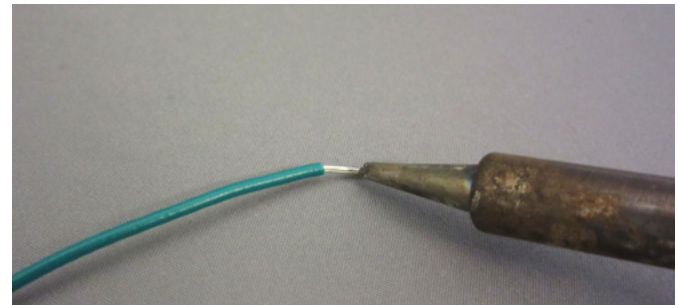

06. Tin all four wire ends with solder.

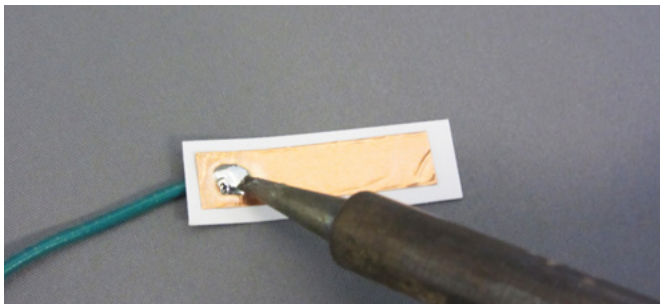


07. Add a drop of solder onto the copper tape on one end. Repeat for the other side on the same end.

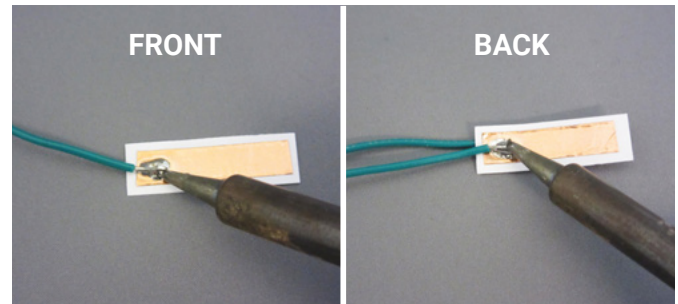


08.

Battery Interrupt


ASSEMBLY MANUAL

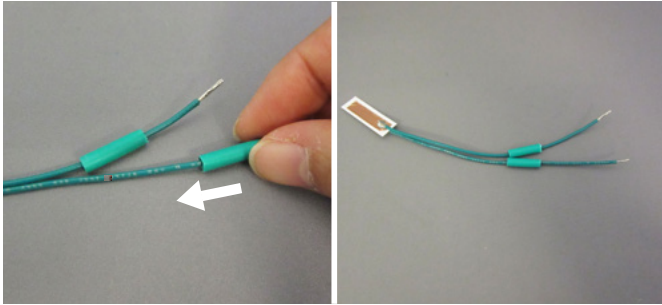


09.

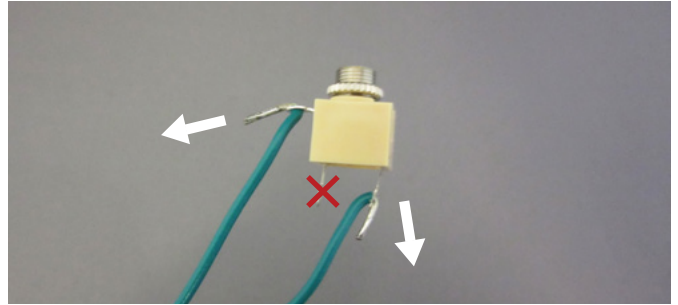


10.

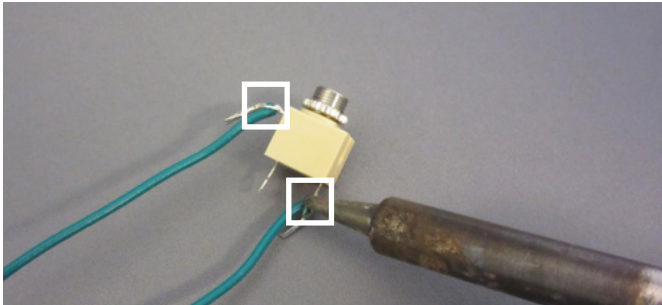


11.

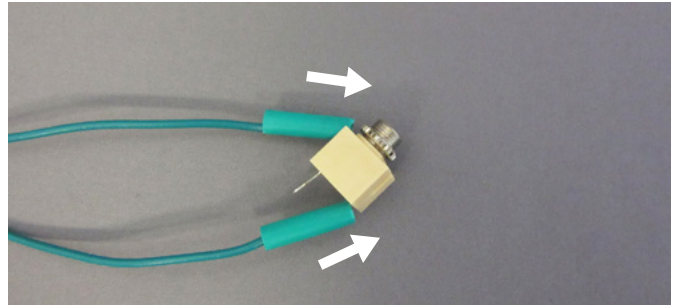

12. Slide the heat shrink tubing to the end.

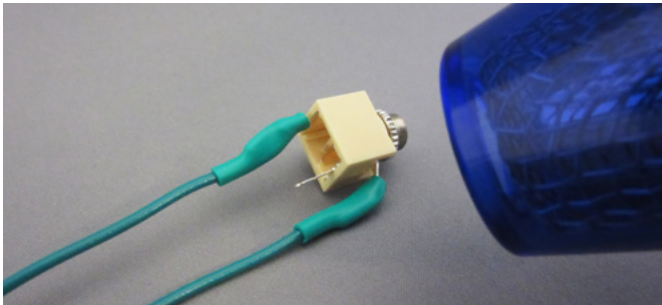

13.

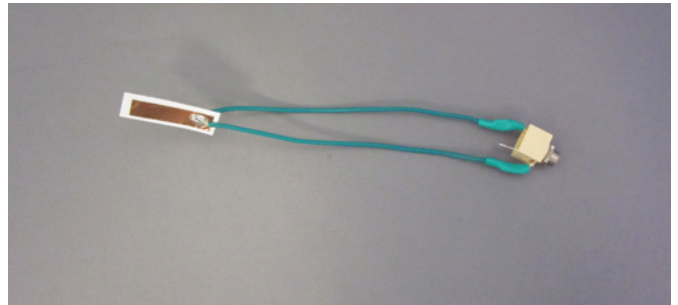

14.