


PAMS: Camera Quick Clamp


ASSEMBLY GUIDE

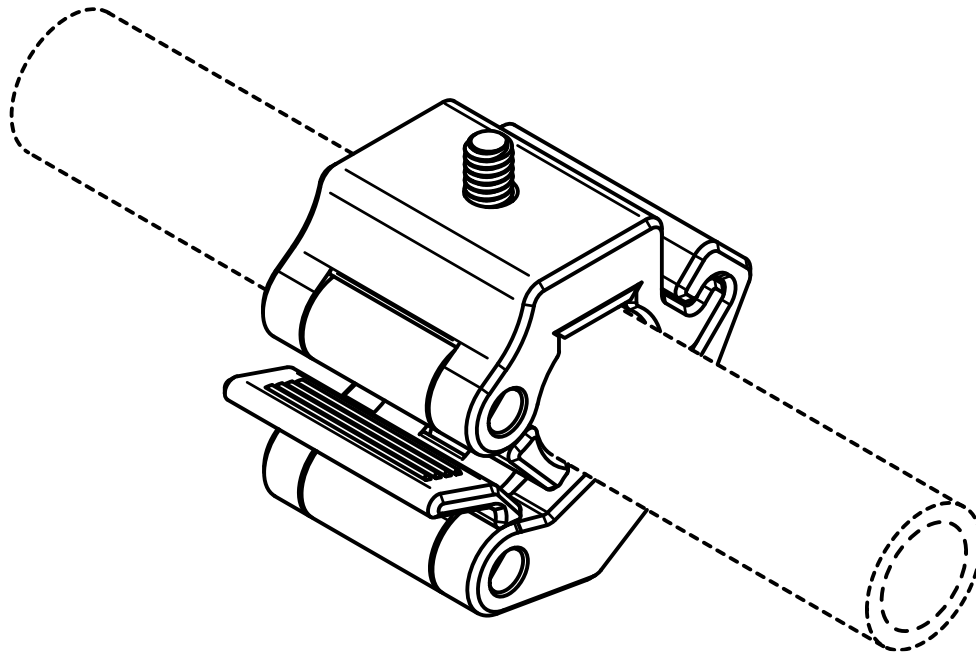

PAMS: Camera Quick Clamp

ASSEMBLY GUIDE

PARTS


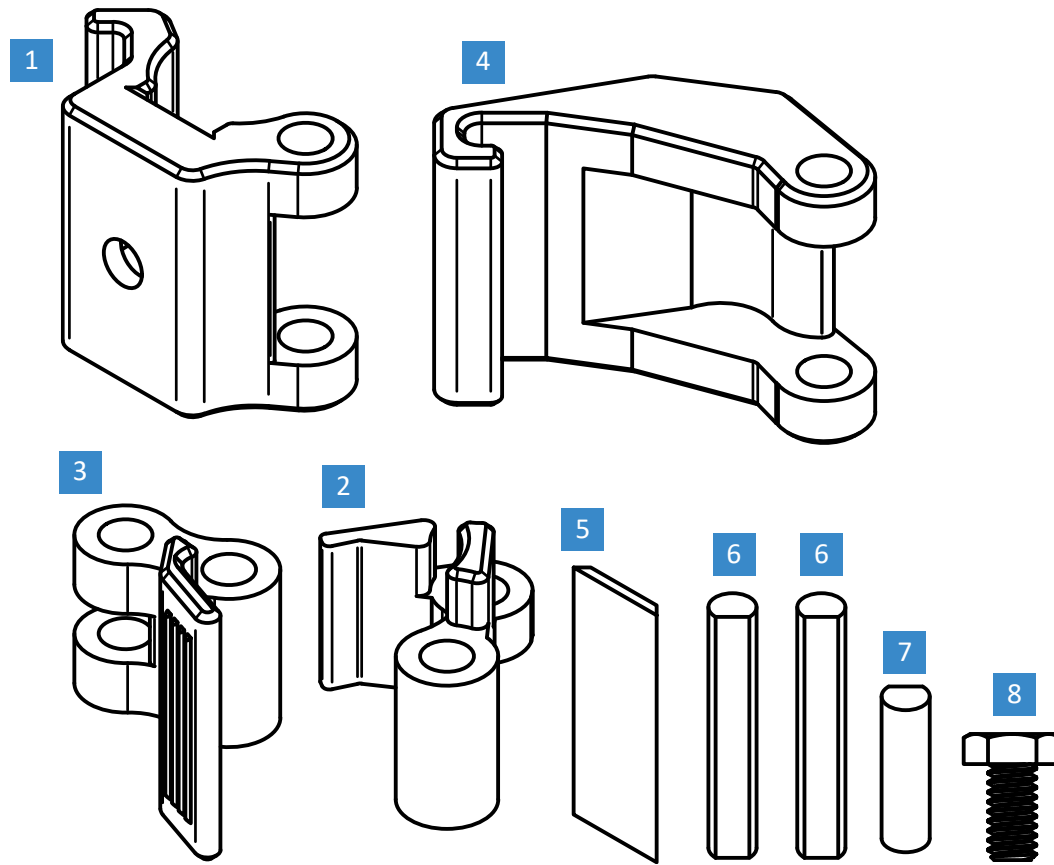


ID	Description	QTY
1	Main Body, 3D printed	1
2	Secondary Body, 3D printed	1
3	Lever handle, 3D printed	1
4	Latch Arm, 3D printed	1
5	Bolt cover, 3D printed	1
6	Long Pin, 3D printed	2
7	Short Pin, 3D printed	1
8	Bolt, 1/4" - 20 UNC x 0.5 in. length	1

PAMS: Camera Quick Clamp

ASSEMBLY GUIDE

TOOLS AND SUPPLIES

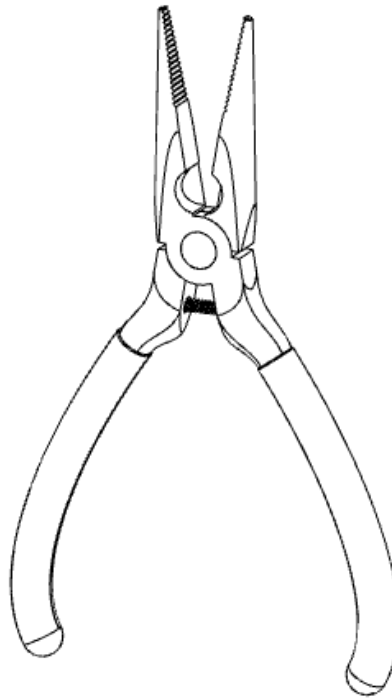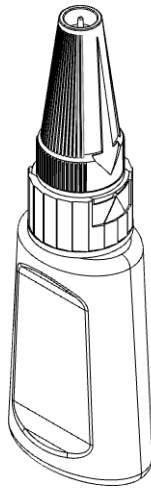


Description

Superglue


Needle nose pliers (Optional)

PAMS: Camera Quick Clamp


ASSEMBLY GUIDE

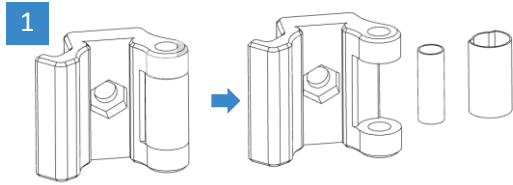


01. Remove built-in support material from main body.

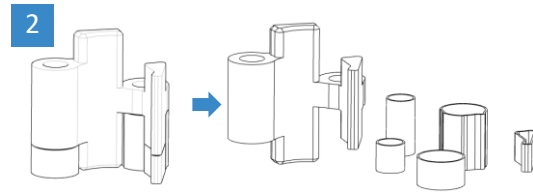


02. Remove built-in support material from secondary body.

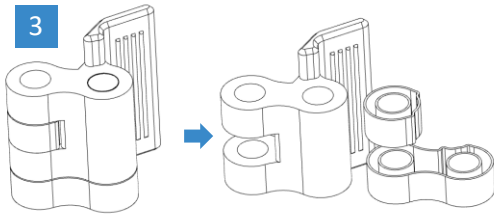


03. Remove built-in support material from lever handle.

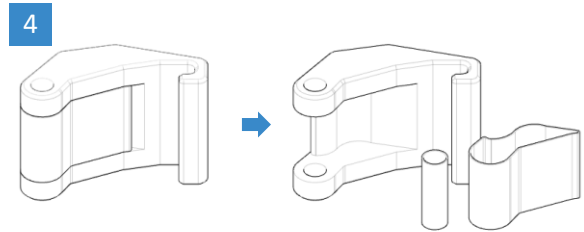


04. Remove built-in support material from latch arm.

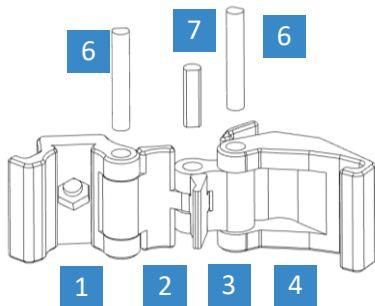


05. Assemble main body, secondary body, lever handle and latch arm as shown with long and short pins.

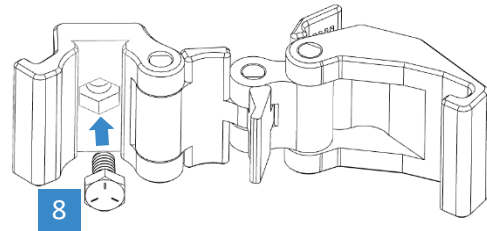

06. Insert bolt into main body.

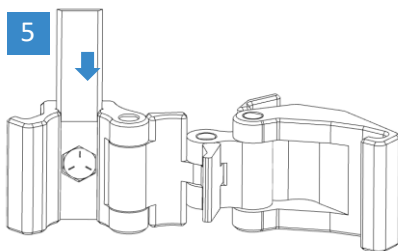

07. Slide bolt cover into slot in main body.

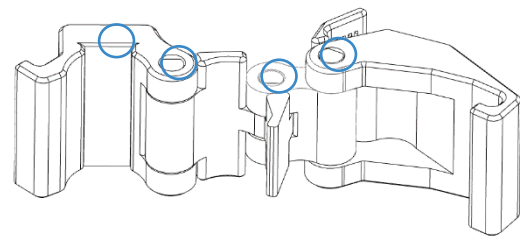

08. Use a drop of superglue on each of the pins and the bolt cover slot.