
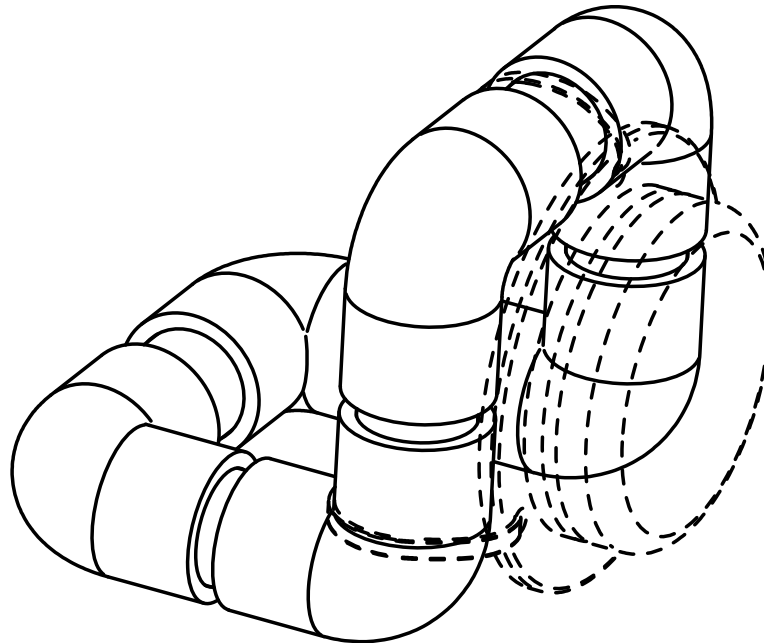


# PAMS: Small Button Mount


## ASSEMBLY GUIDE

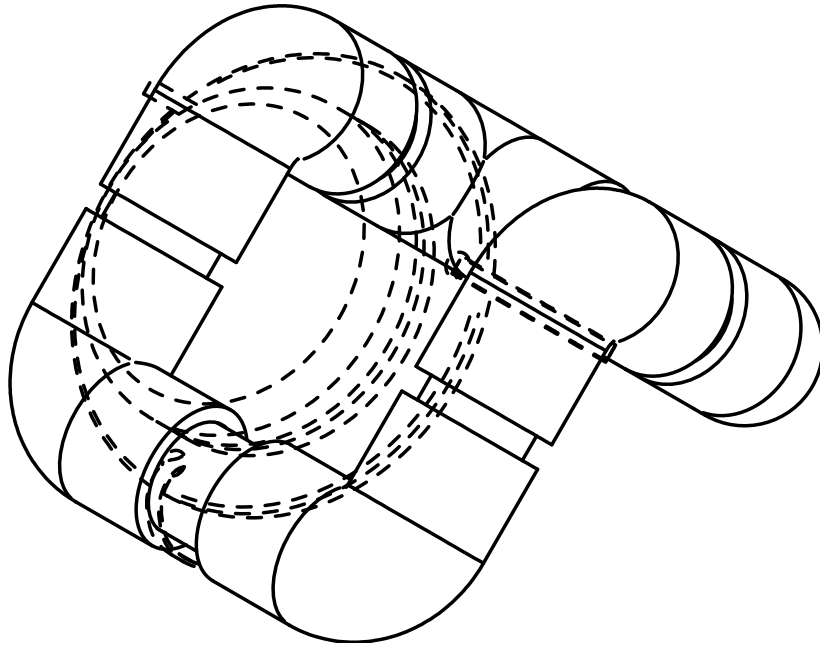

# PAMS: Small Button Mount

## ASSEMBLY GUIDE

### PARTS


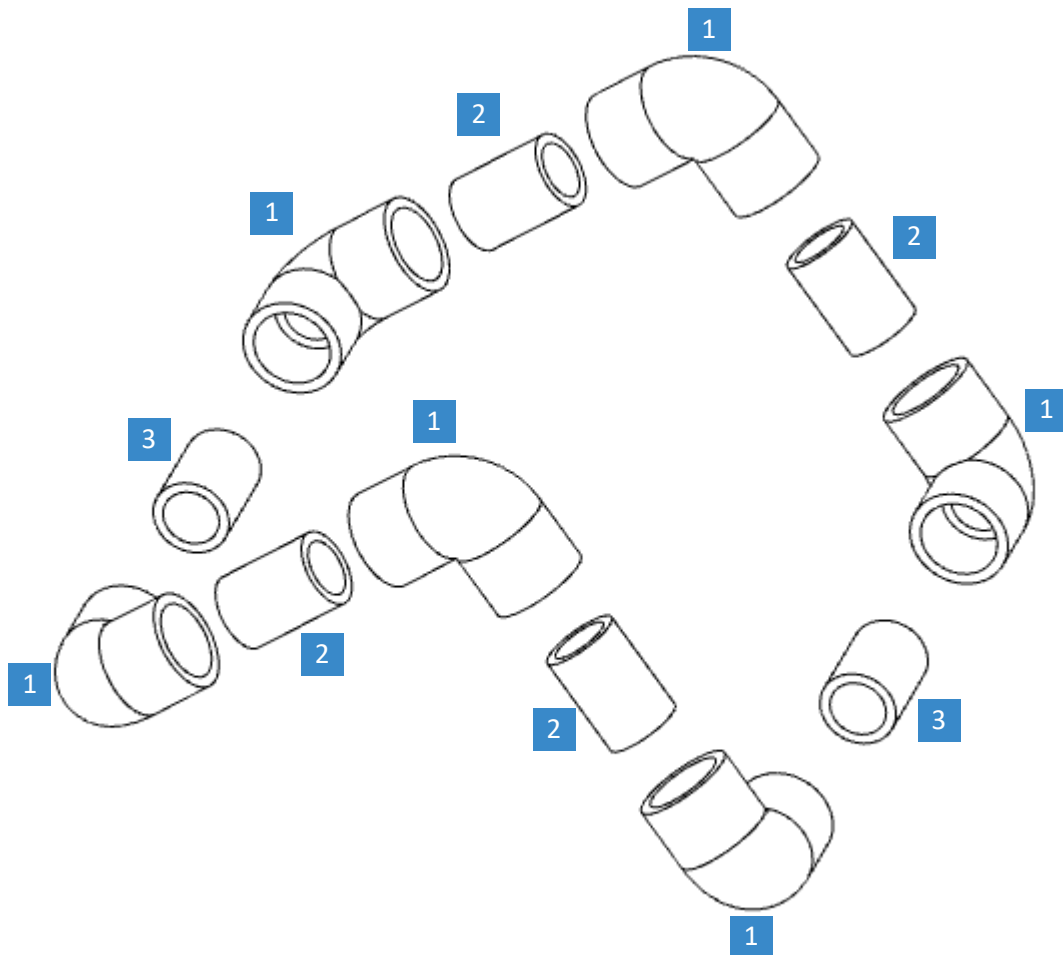


ID	Description	QTY
1	PVC Elbow 90 deg, 1/2"	6
2	PVC Pipe, 1/2", 30 mm length	4
3	PVC Pipe, 1/2", 30 mm OR 70 mm for use with Quick Clamp	2

# PAMS: Small Button Mount

## ASSEMBLY GUIDE

### TOOLS AND SUPPLIES

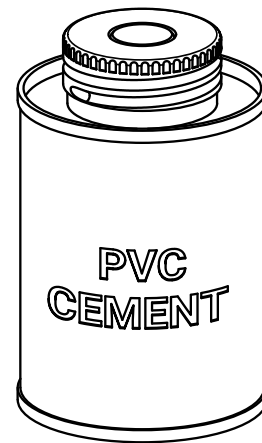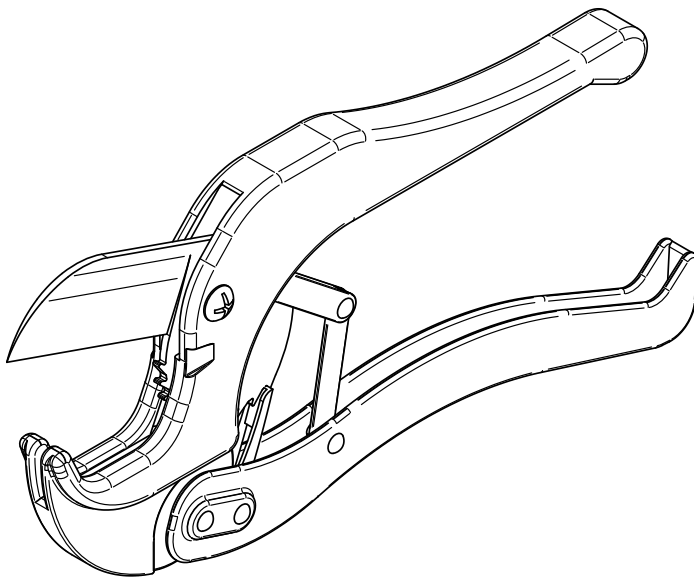


#### Description

PVC Cutters OR Hacksaw


PVC Cement (Optional)

# PAMS: Small Button Mount


## ASSEMBLY GUIDE

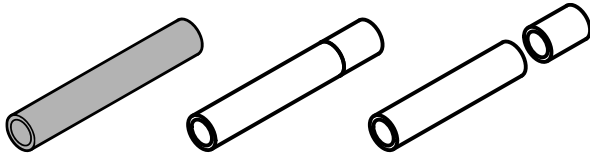


**01.** Use the PVC cutters or hacksaw to cut the PVC pipe to length.

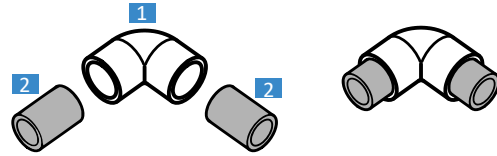


**02.** Insert two short PVC sections into an elbow.

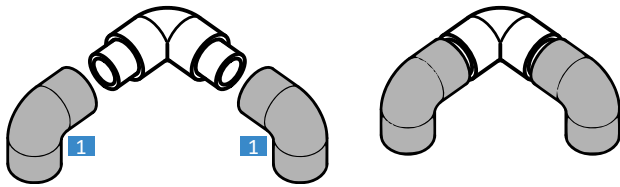


**03.** Insert an elbow onto each pipe section.

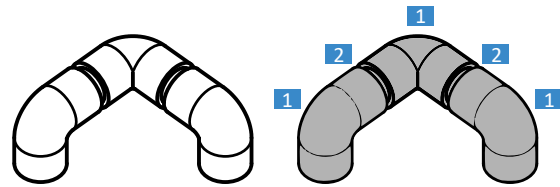


**04.** Repeat Steps 2 and 3 to create a second side.

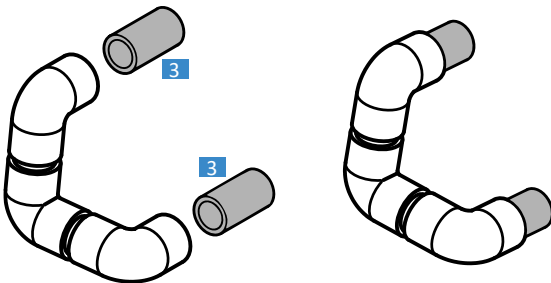


**05.** Insert longer PVC section into elbows.

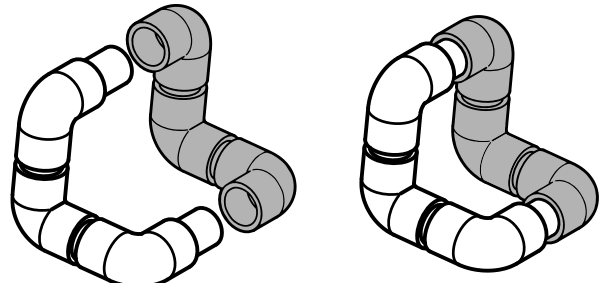

**06.** Connect second side.

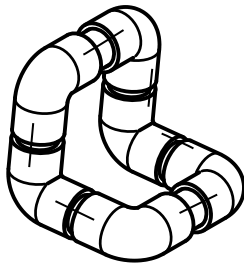

**07.** (Optional) Use pencil to mark lines across joints.

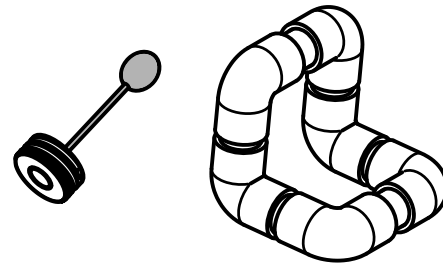

**08.** (Optional) Disassemble and reassemble with PVC cement. Erase pencil marks.