


UART TX/RX are from the point of view of the ESP32!

All GNDs have to be connected between devices

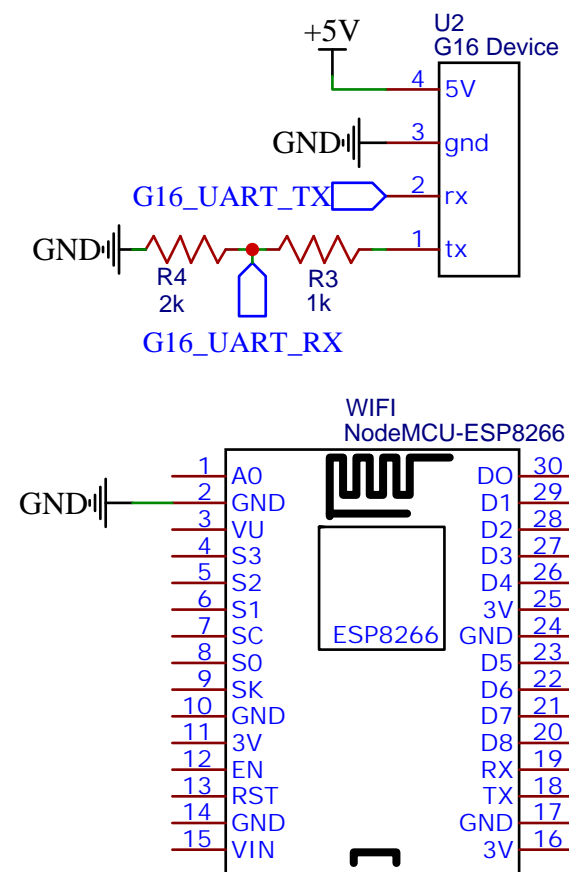

Use either hardware or software serial on the ESP8266 side. Only has 1 full UART (and one TX-only). Hardware UART hardwired to serial debug output