


### Epoxy Casting:

1. Pour in one layer about 2mm thick with clear epoxy
2. Let it harden (one day)
3. Pour in a second layer about 1-2mm but also brush the hexagons with epoxy and place them inside the table
4. Let all harden
5. Pour the color layer to max hexagon height



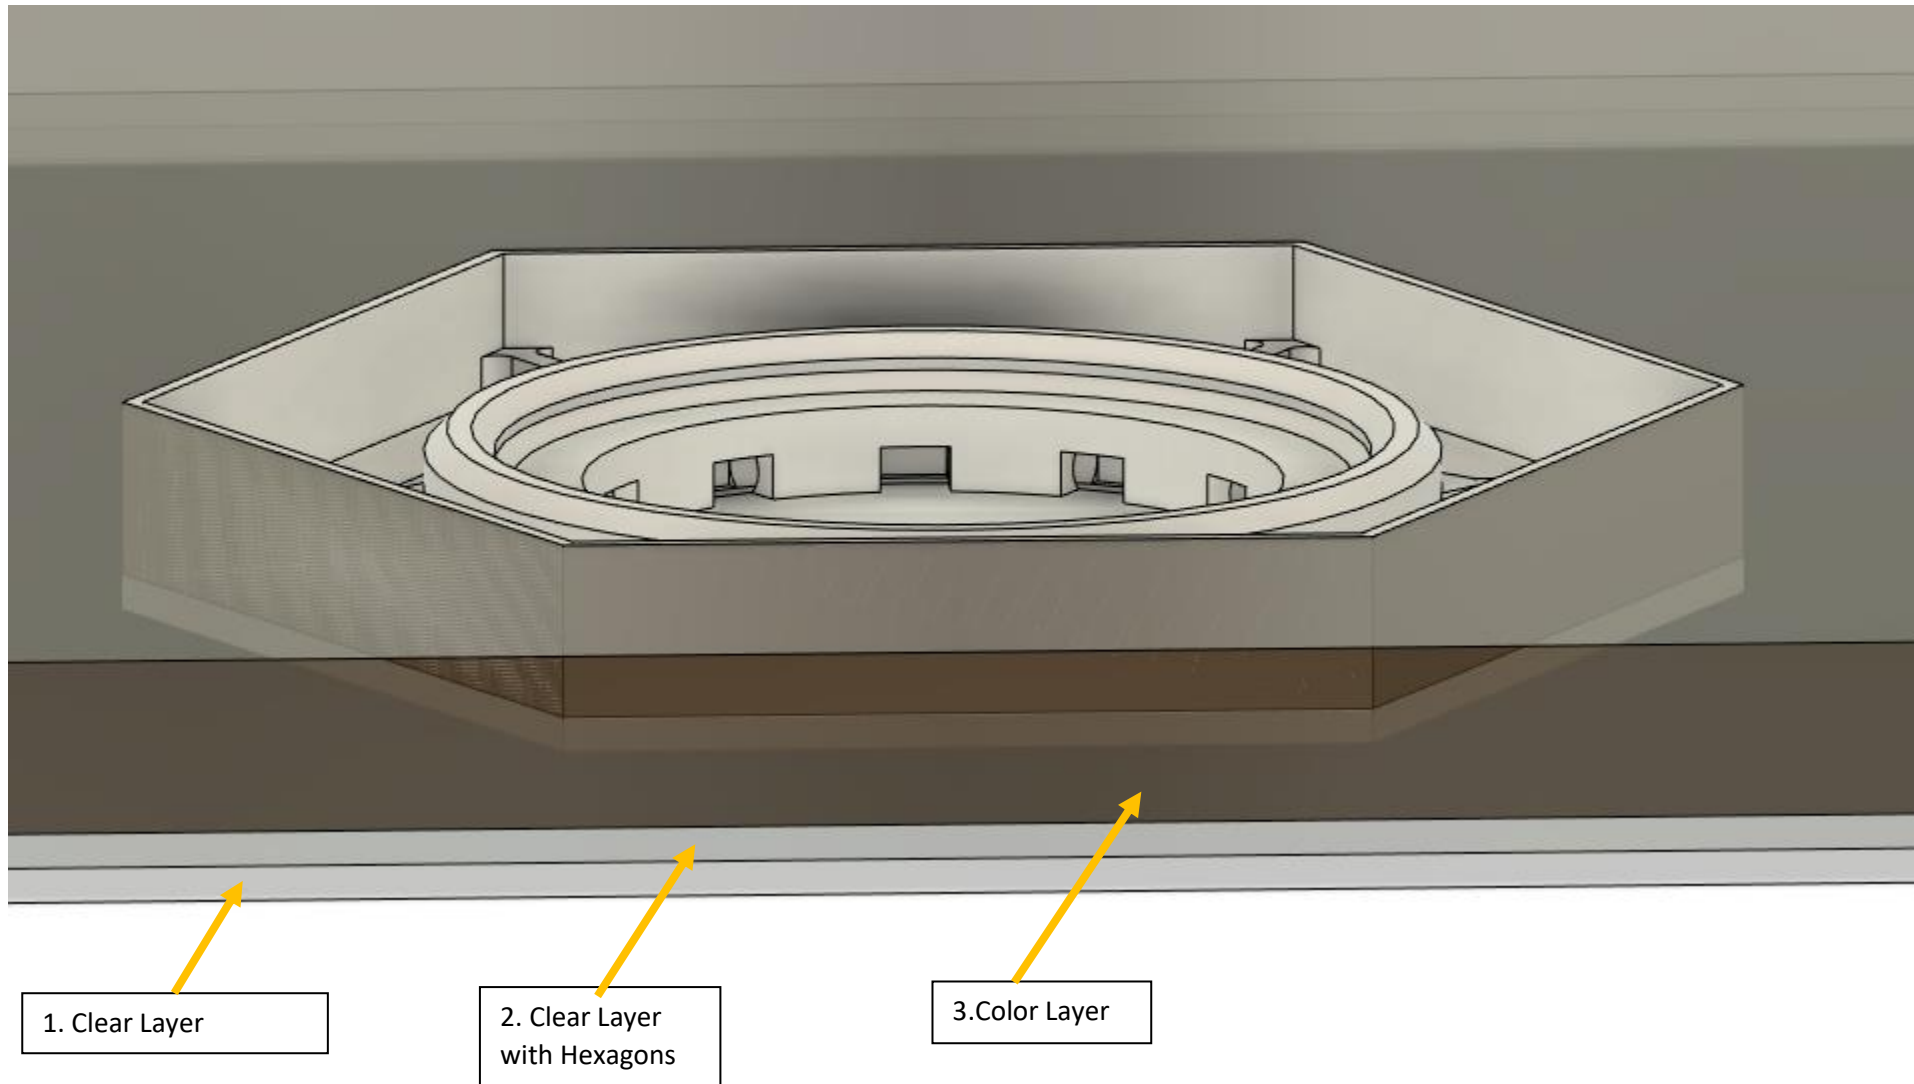

Clear Layer

Clear Layer with  
Hexagons

Color Layer