


Thank you for selecting our product. To ensure that your installation goes smoothly, please read these instructions carefully and review the recommended materials and tools before you begin.

- Verify that your vanity top is free from defects. If damaged, please contact our Customer Service department.
- Observe all local plumbing codes and building codes.

**Questions?** Call our Customer Service Department at 1-855-995-5578 or email [contactus@magickwoods.com](mailto:contactus@magickwoods.com).

## INSTALLATION

- 1) Ensure the vanity base surface is flat, level, and clean.
- 2) Put a small bead of silicone on the vanity base edge.
- 3) Place the top on the vanity base and assure it is aligned on all edges.
- 4) Leave for 3 hours to let the silicone set.
  - a. If any warpage is obvious, put a weight on top of a towel over the high points and leave over night for the top to settle.
  - b. Hand tighten all plumbing fittings; if necessary only  $\frac{1}{4}$  turn with a wrench.
  - c. Use 100% silicone instead of plumbers putty between all rubber gaskets and O-rings.

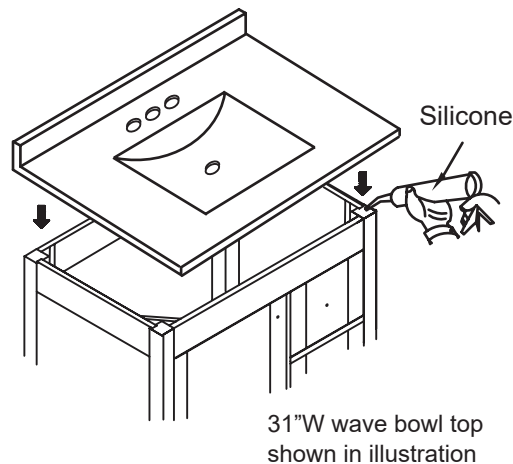

## CARE & MAINTENANCE

- Do not use water that exceeds temperatures of 140°F/46°C.
  - Do not place any sharp or abrasive objects on the bare surface of the top.
  - Clean the top only with non-abrasive cleaners or mild detergents - do not use powder cleansers.
- For extremely stubborn stains, use a small amount of acetone on a cloth and gently rub out the stain.

**Failure to follow the above instructions will void all warranty claims.**


Gracias por seleccionar nuestro producto. Para asegurar su instalación sin inconvenientes, por favor lea detenidamente estas instrucciones y revise los materiales y herramientas recomendados antes de comenzar.

- Verifique el lavabo del tocador está libre de defectos. Si está dañado, póngase en contacto con el servicio de atención al cliente.
- Observe todos los códigos locales de plomería y de construcción.

¿Preguntas? Llame a nuestro Departamento de Servicio al Cliente al 1-855-995-5578 o escribanos a [contactus@magickwoods.com](mailto:contactus@magickwoods.com).

## INSTALACIÓN

- 1) Asegúrese de que la superficie del tocador esté plana, nivelada y limpia.
- 2) Coloque una pequeña gota de silicona en el borde superior de la base del tocador.
- 3) Coloque el lavabo sobre el tocador y asegúrese de que esté alineado en todos los bordes.
- 4) Deje reposar por 3 horas para que la silicona se seque.
  - a. Si nota deformación, coloque un peso sobre una toalla encima de los puntos altos y deje reposar por una noche para que la superficie se asiente.
  - b. Apriete a mano todas las uniones de las tuberías de agua; de ser necesario, apriete con una llave sólo 1/4 de vuelta.
  - c. Use un producto 100% de silicona (en lugar de masilla de plomería) entre todas las juntas tóricas y de goma.

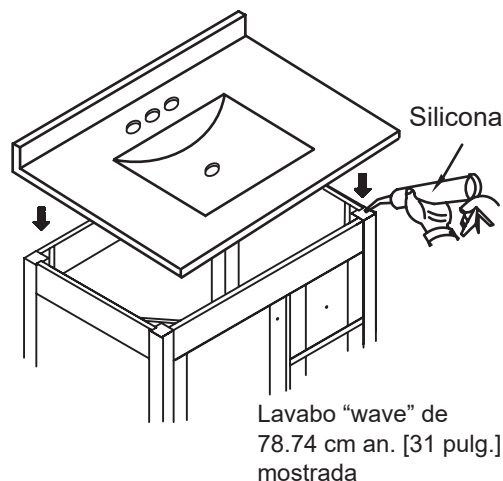

## CUIDADO Y MANTENIMIENTO

- No use agua a temperaturas superiores a los 140 °F/46 °C.
  - No coloque objetos afilados o abrasivos sobre la superficie desprotegida del lavabo.
  - Limpie sólo con limpiadores no abrasivos; no use productos tales como el Vim o limpiadores en polvo.
- Para manchas extremadamente difíciles, aplique una pequeña cantidad de acetona en un paño y frote suavemente la mancha para removerla.

**Si no se siguen las instrucciones anteriores, todas las garantías quedan anuladas.**