




exponential converter + sawtooth core I

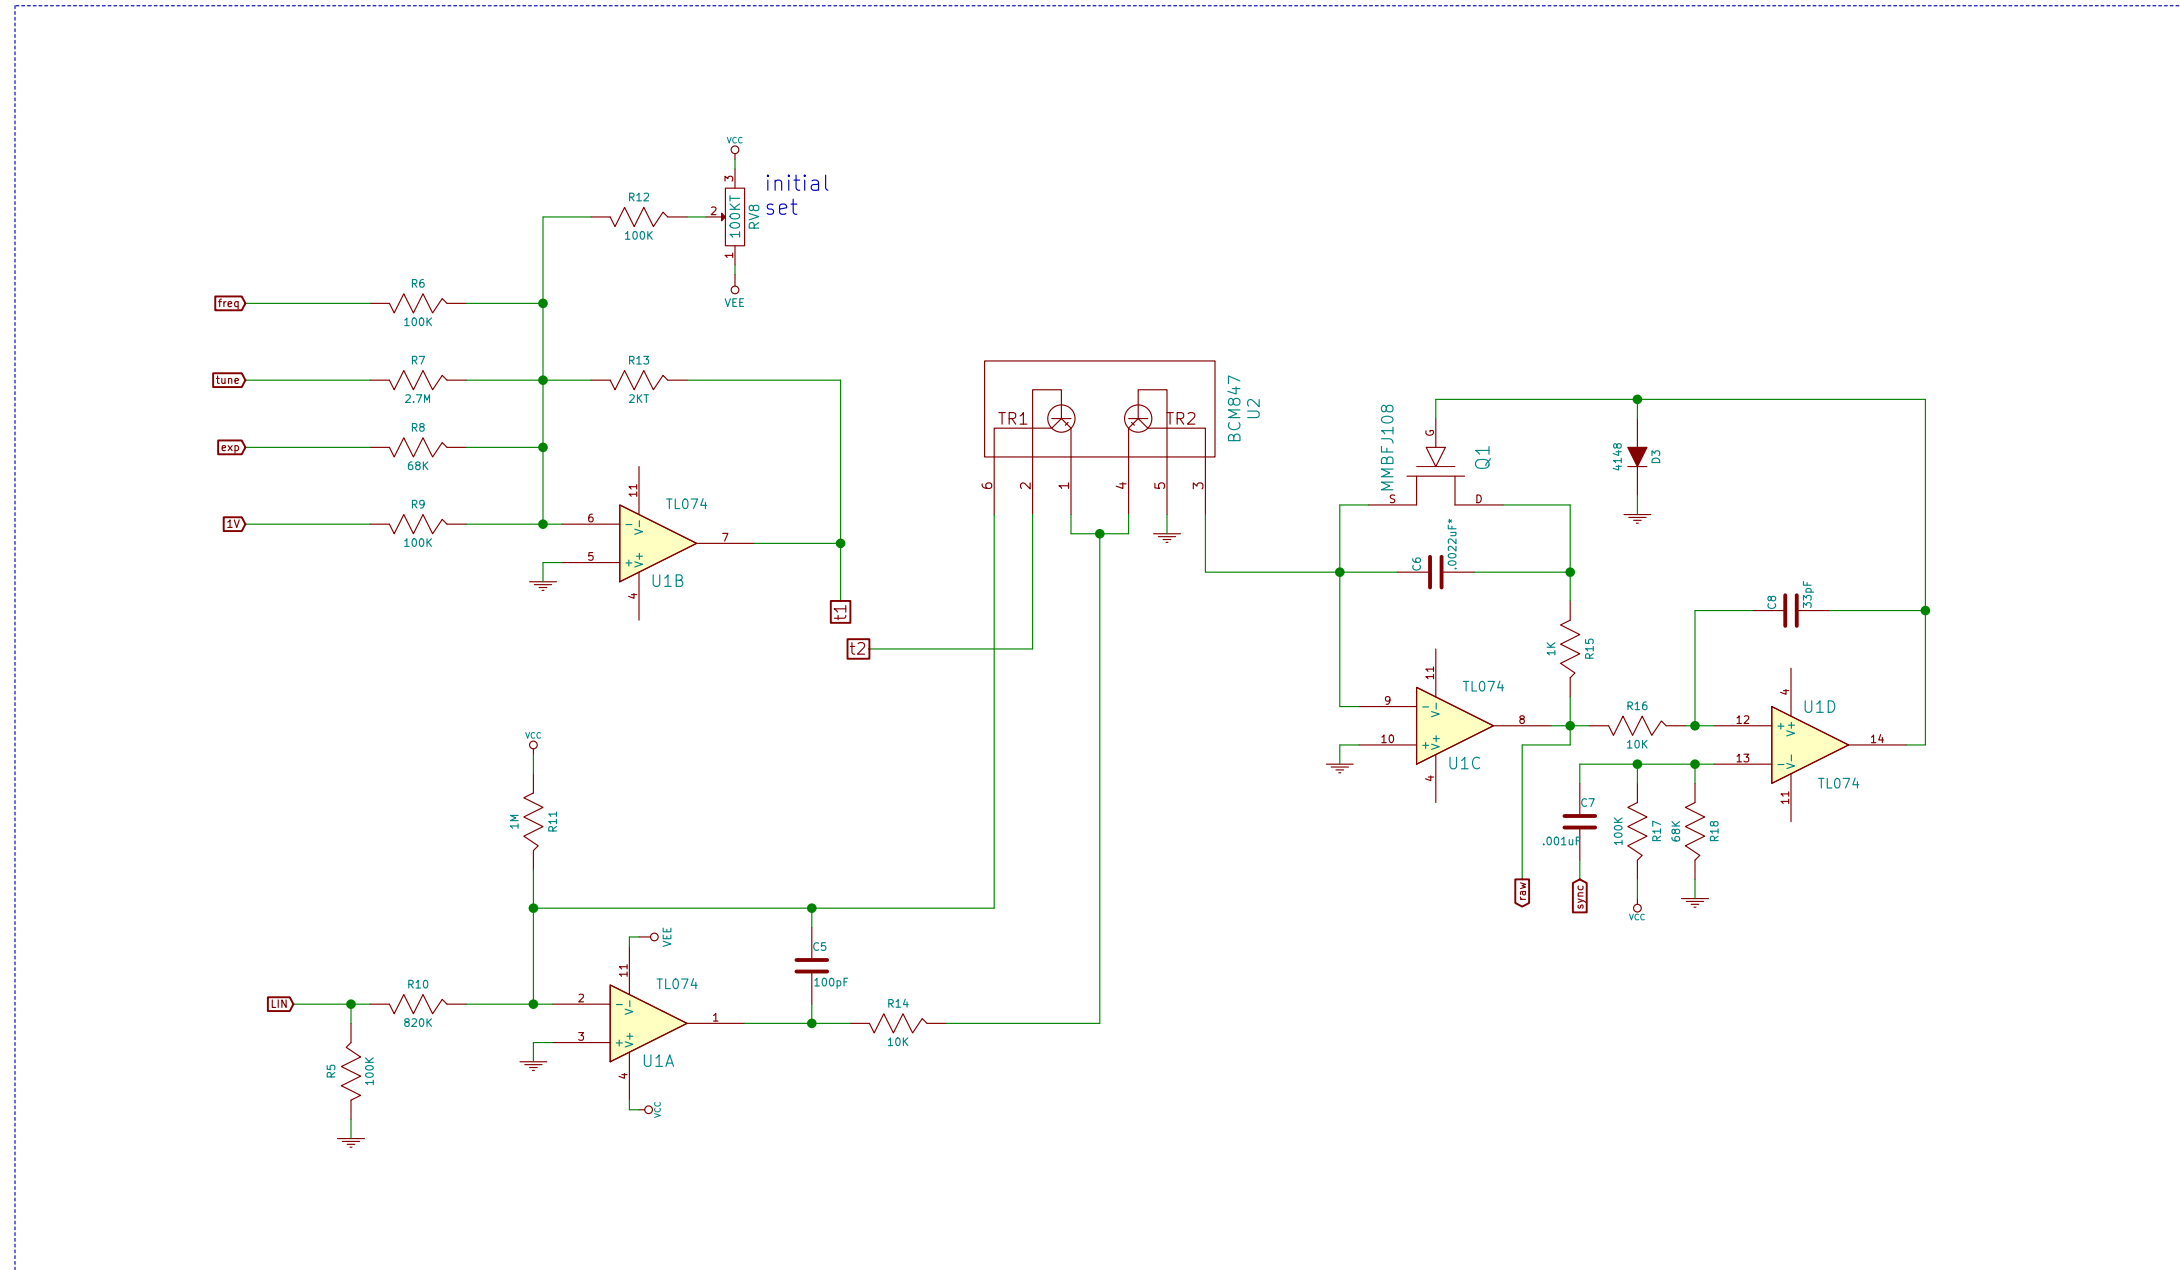


exponential converter + sawtooth core II + VCA (deamplify)

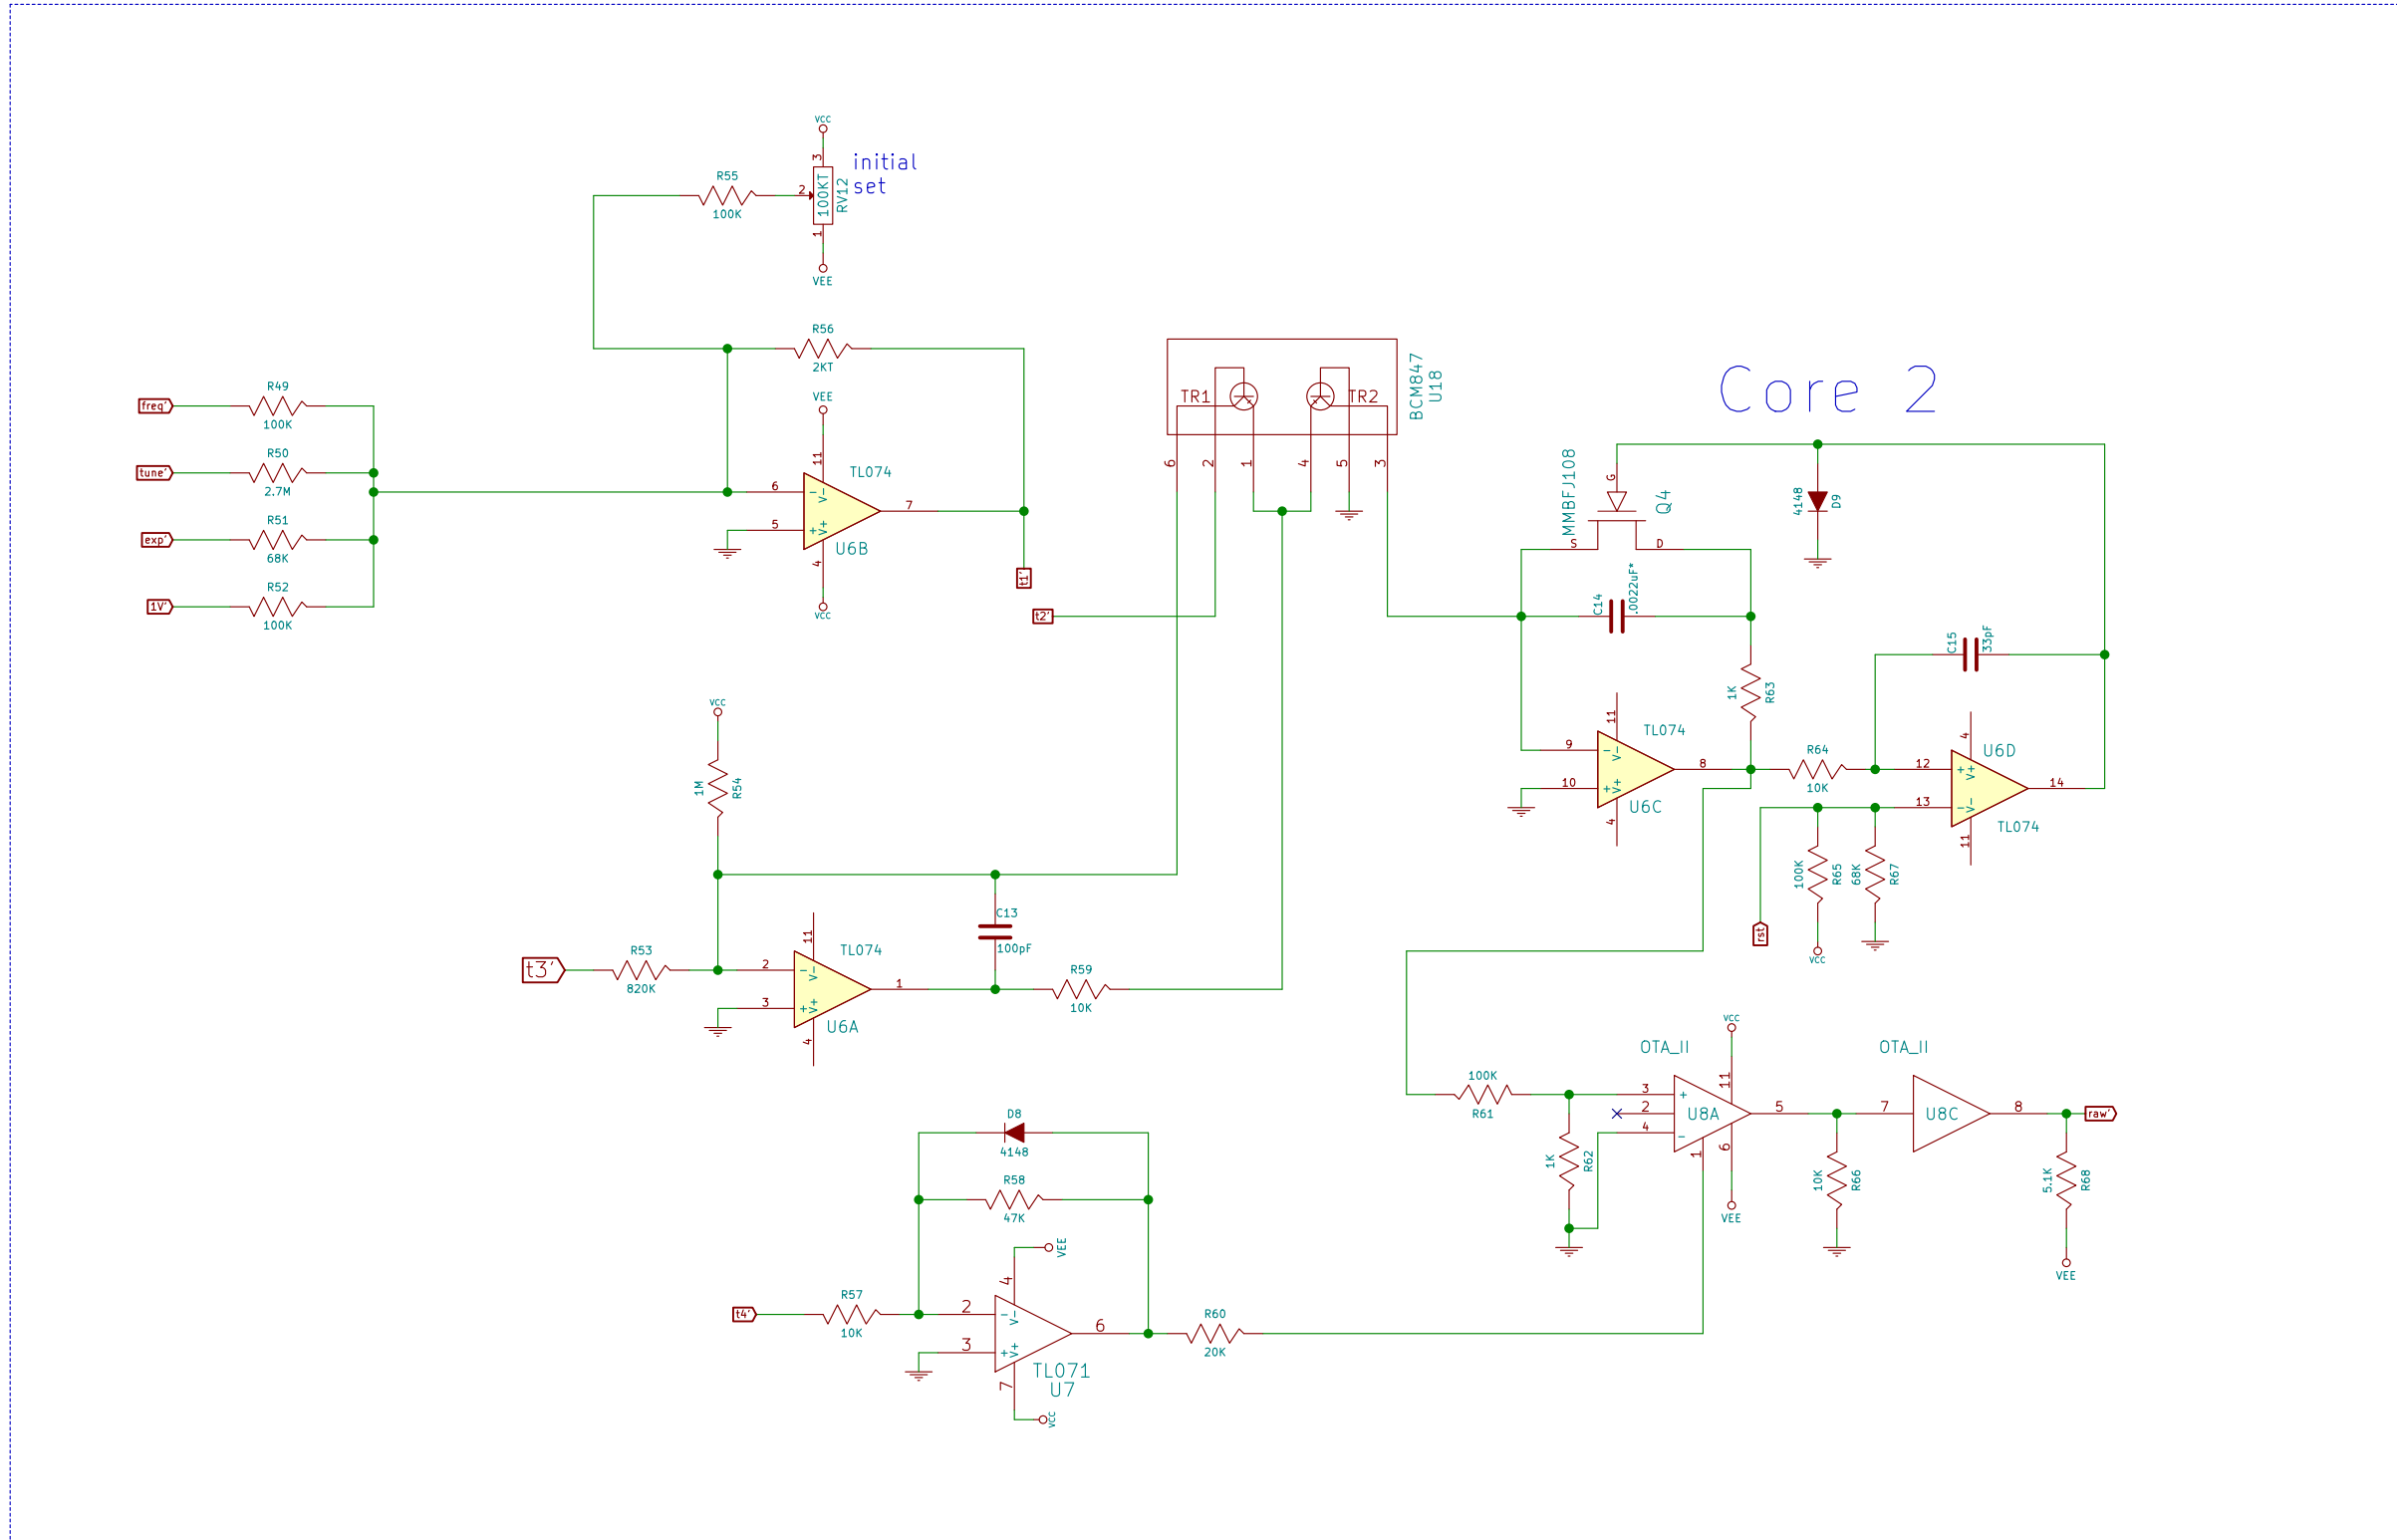


raw to normal saw + saw to triangle

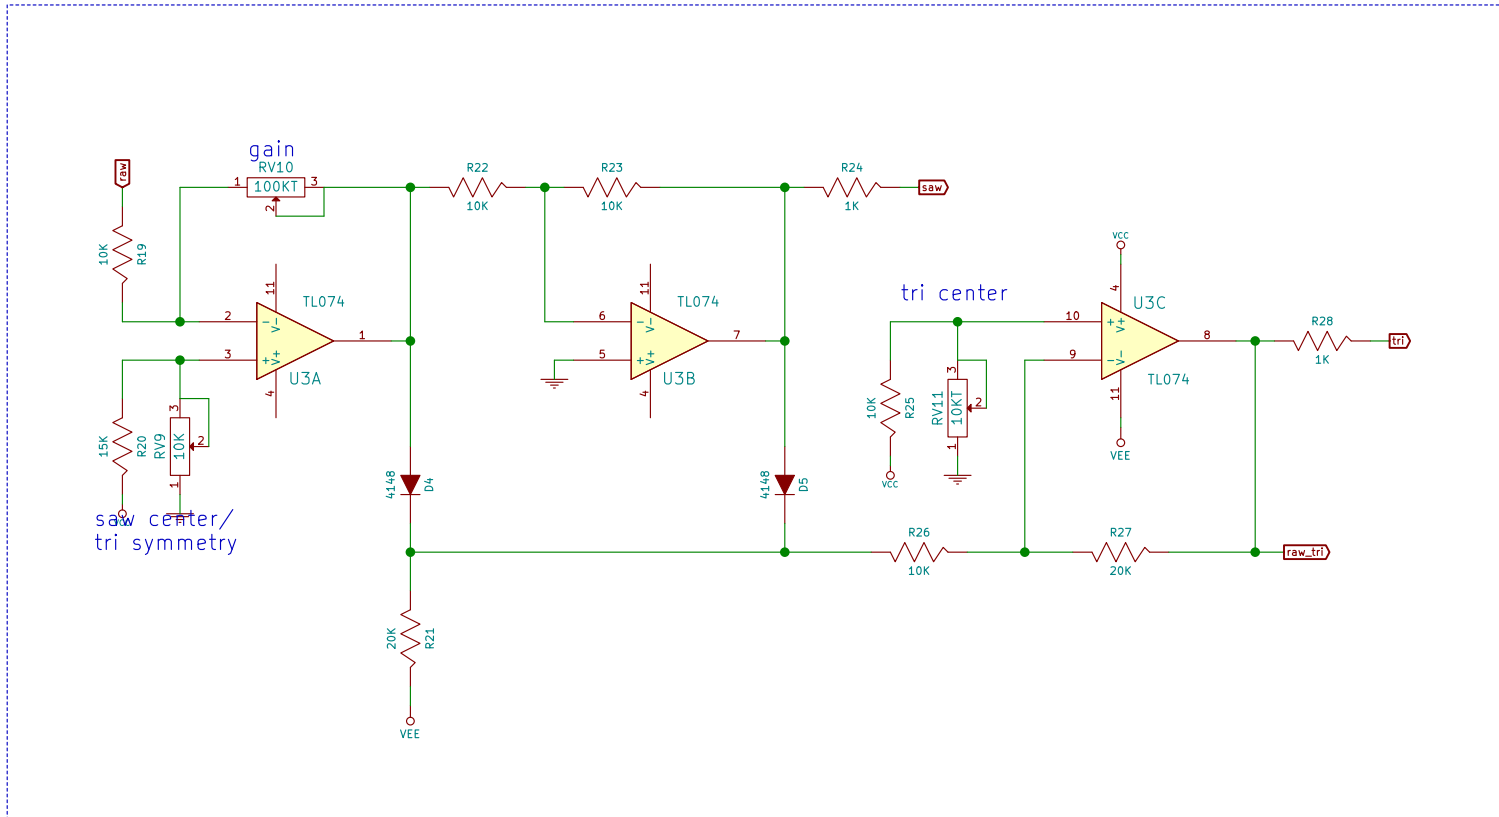


raw to normal saw + saw to triangle

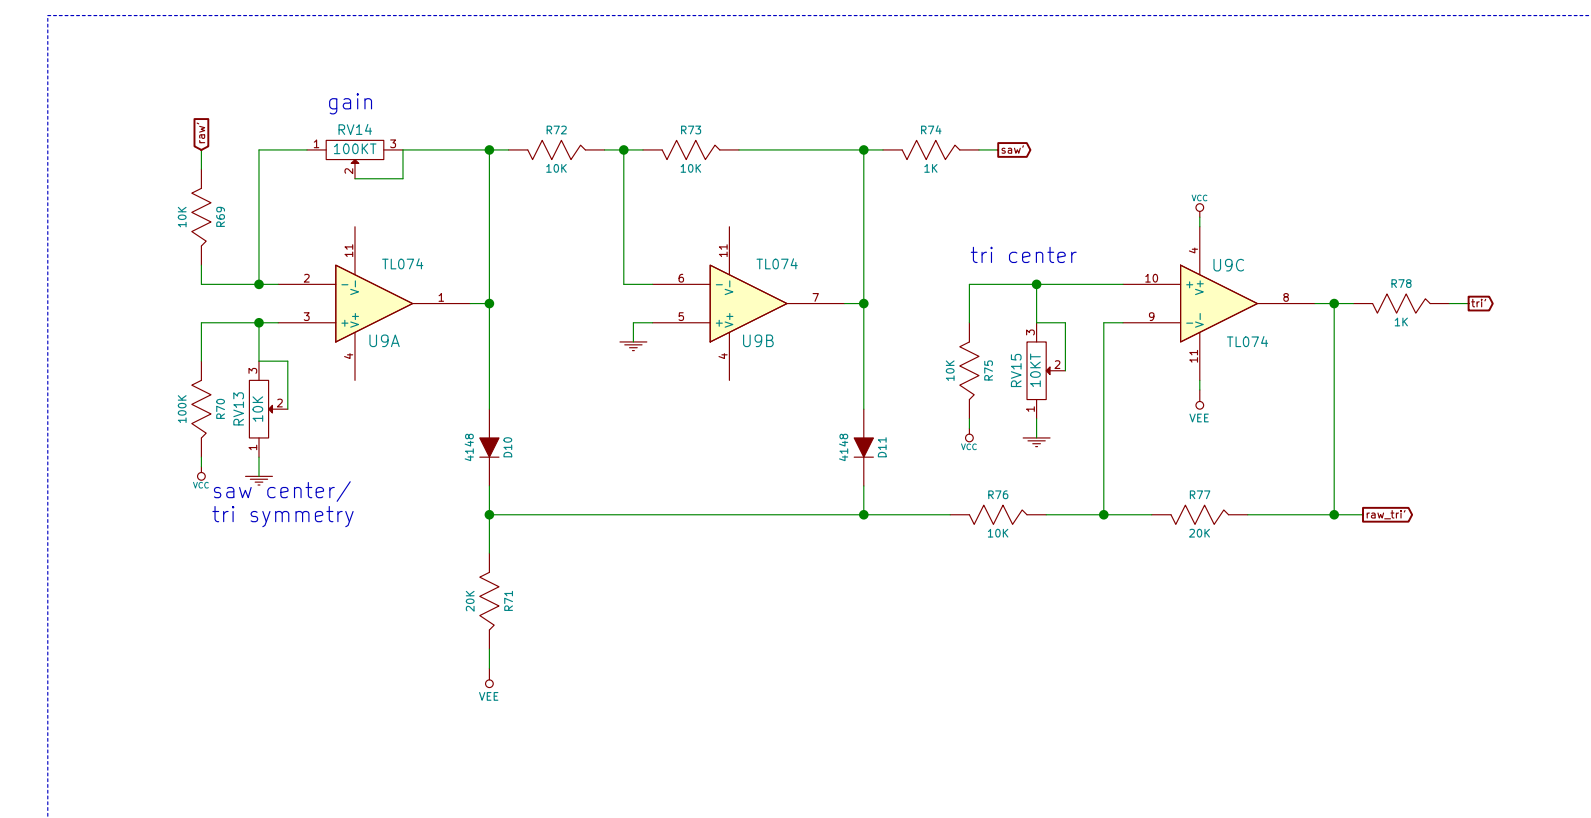


triangle wavefolder

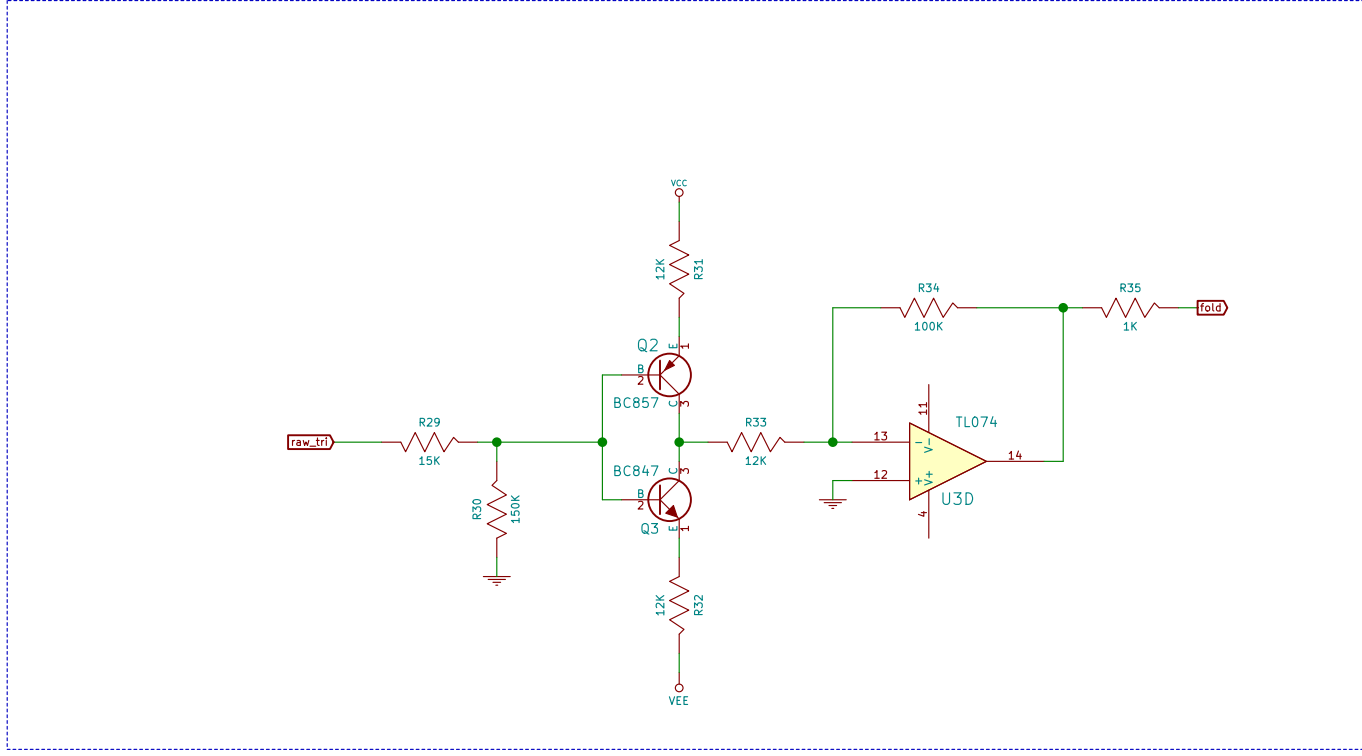


triangle wavefolder

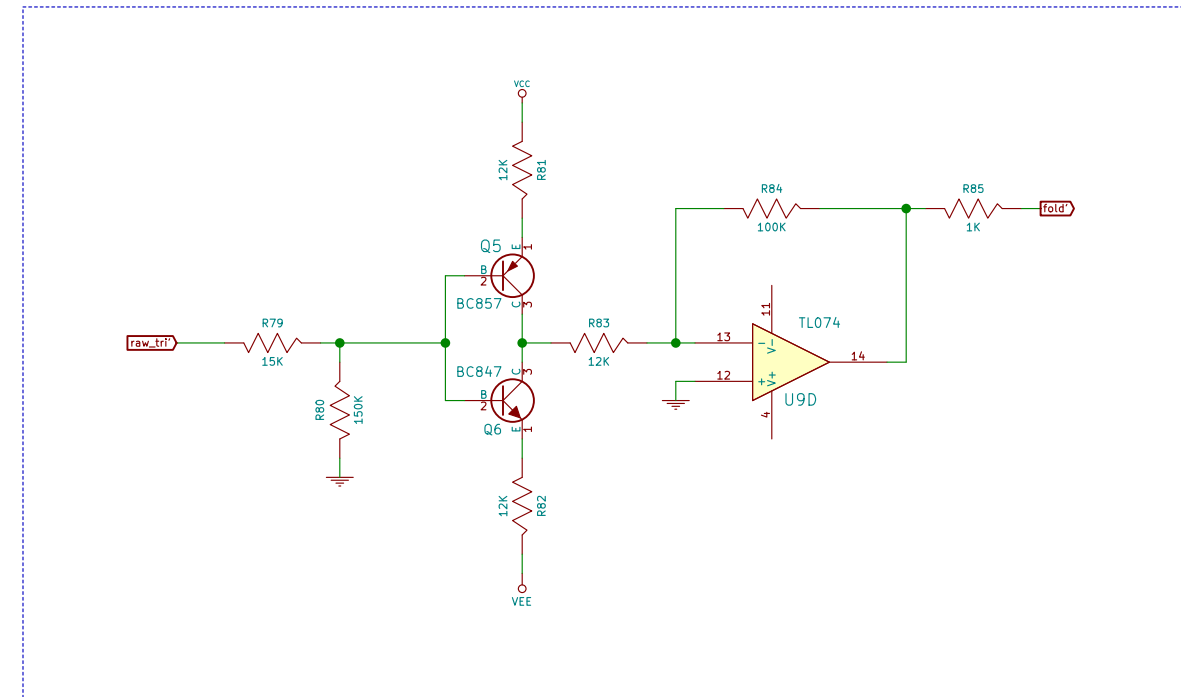


VCO 1 & 2 hardware interaction

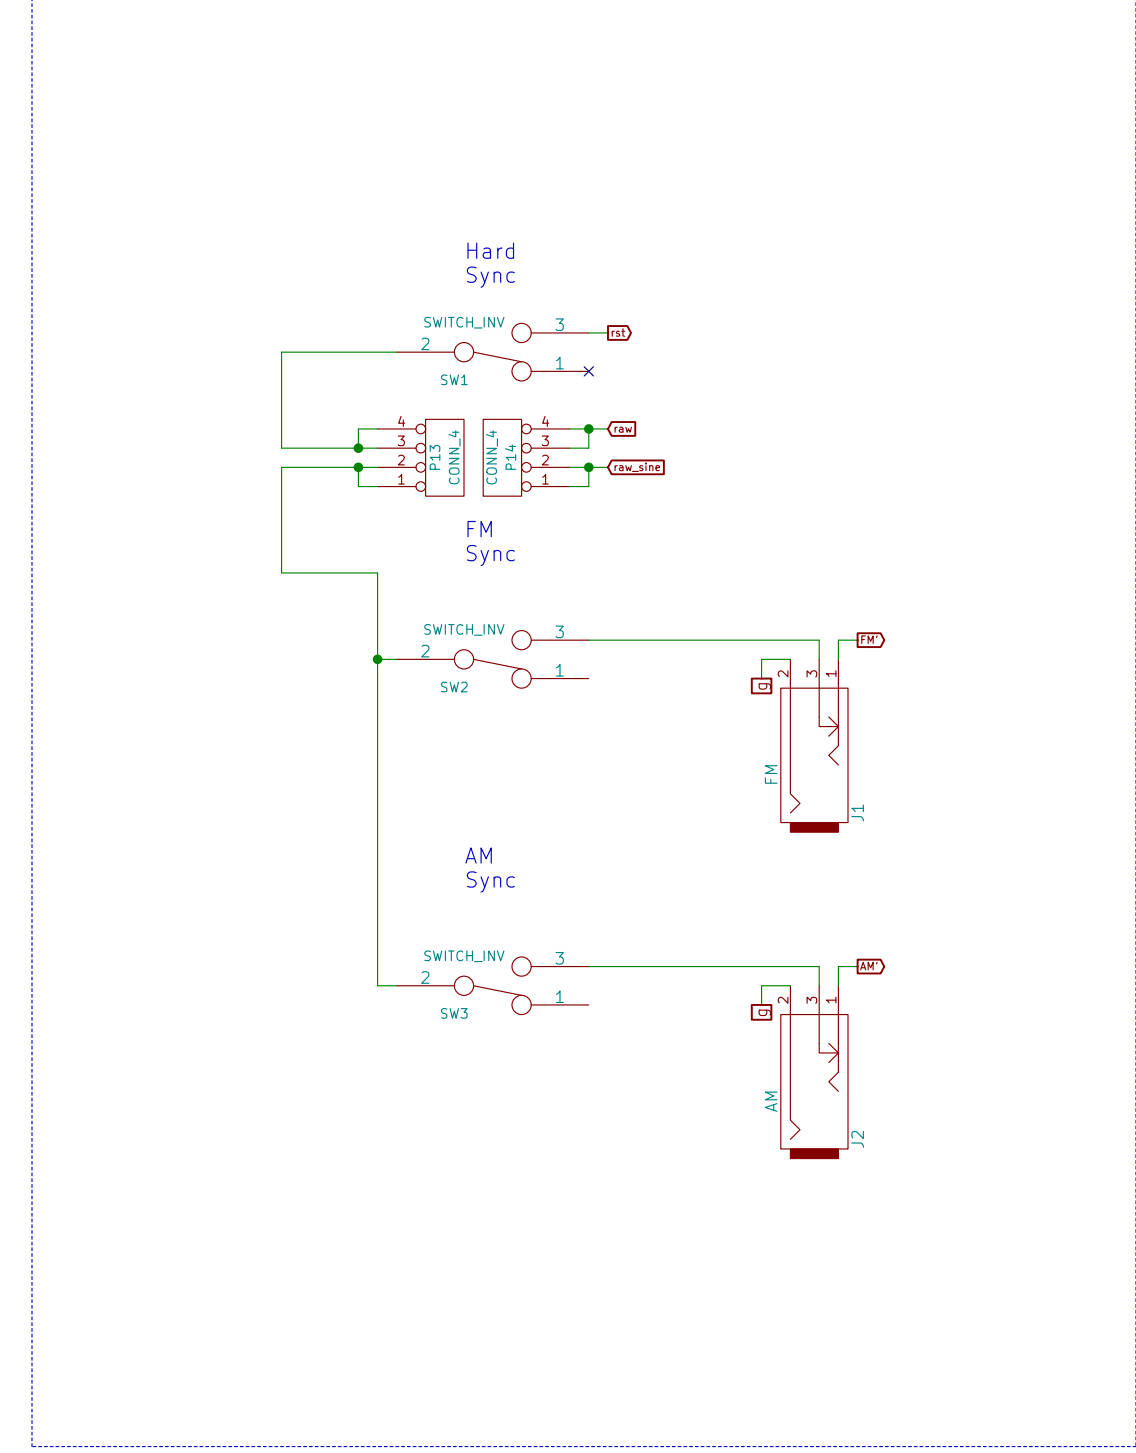


triangle to distorted sine wave

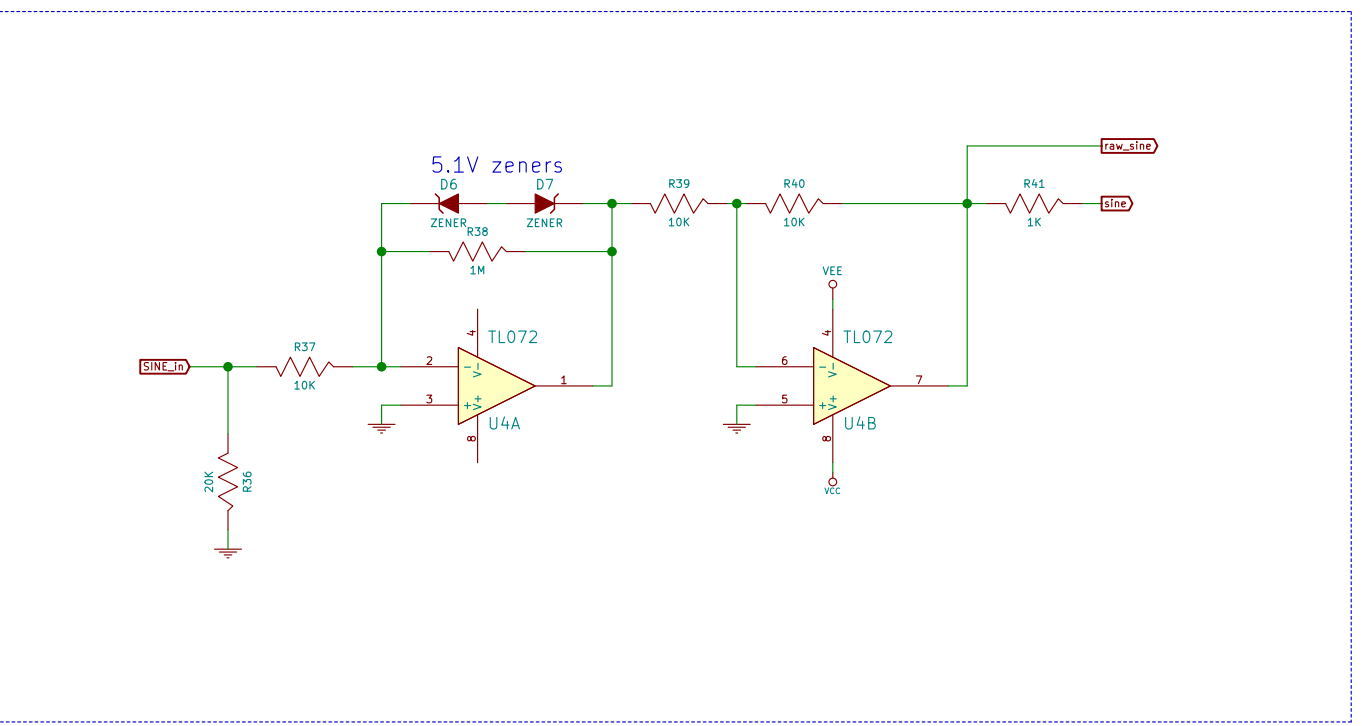


triangle to sine wave

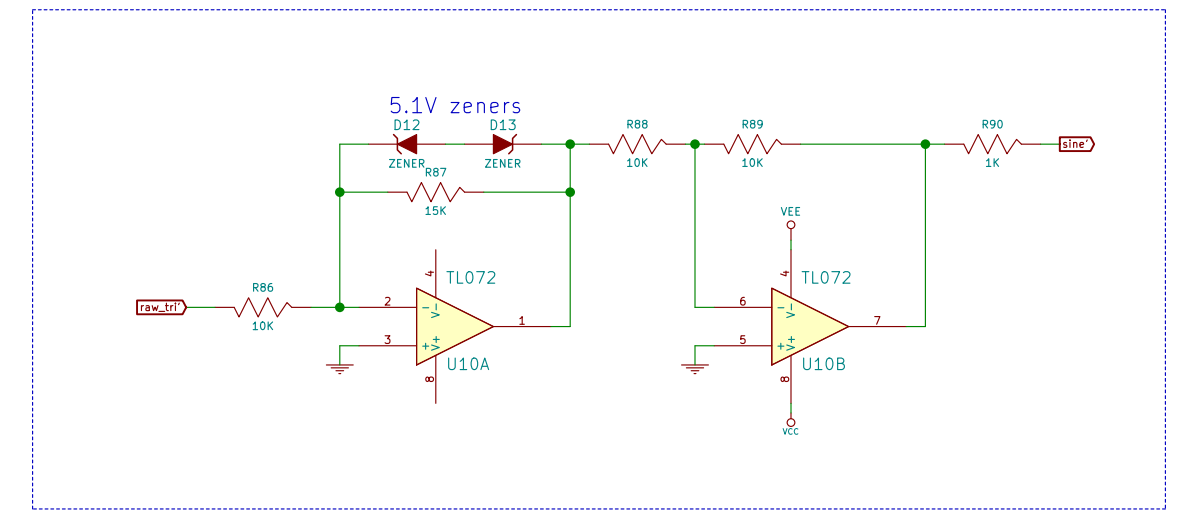

pulse wave generator

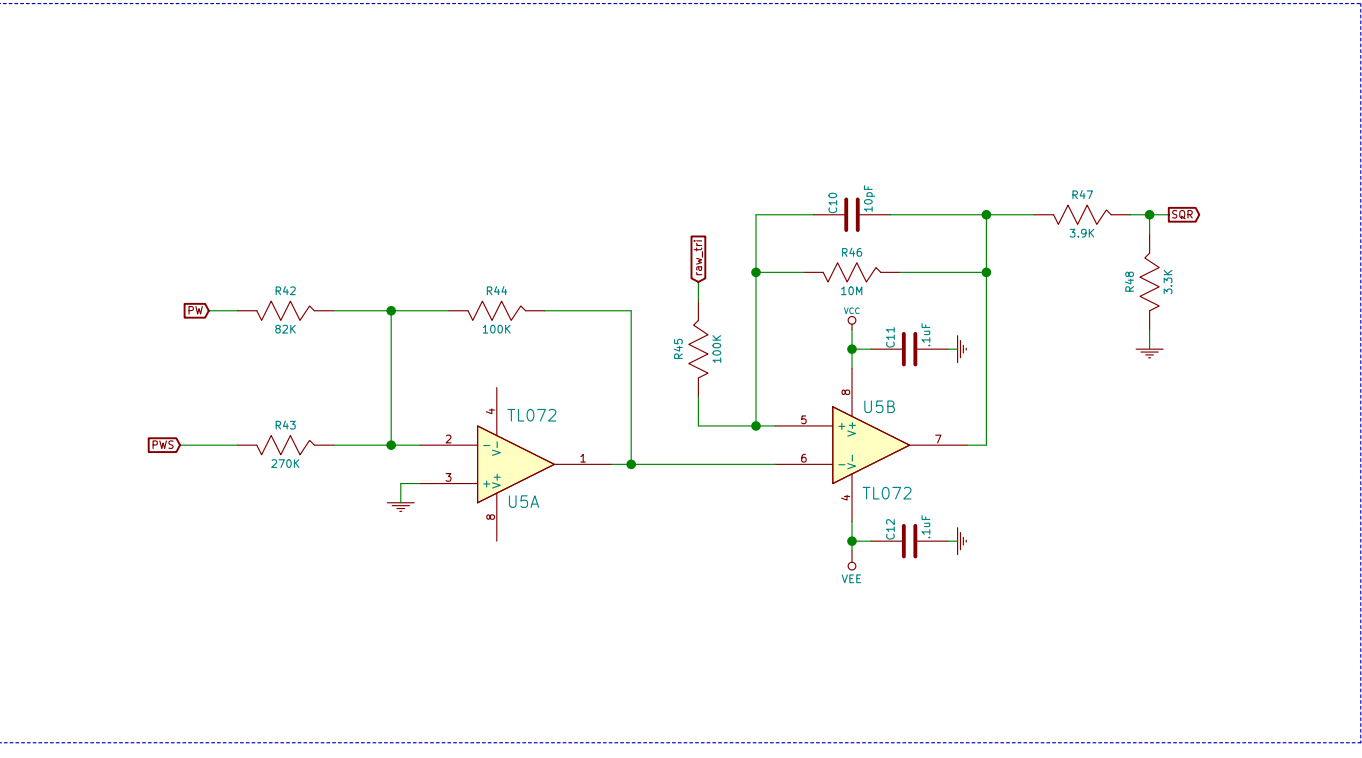

pulse wave generator

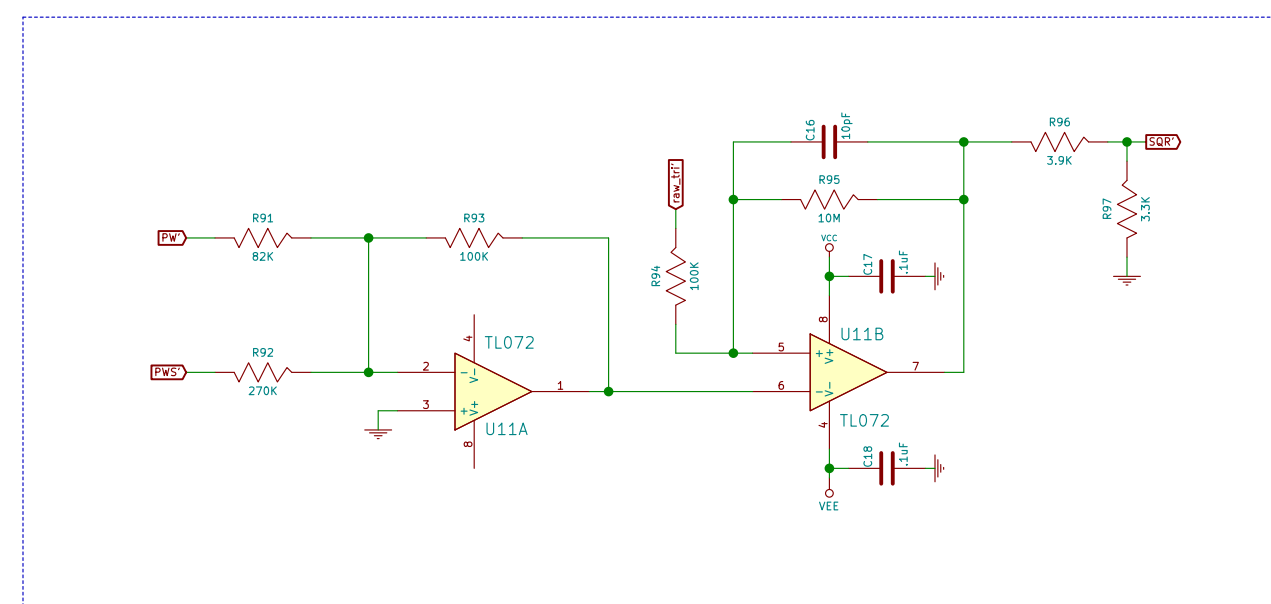

power input

