


Figure 14. STM32F103ZE(T6) microcontroller reference schematic

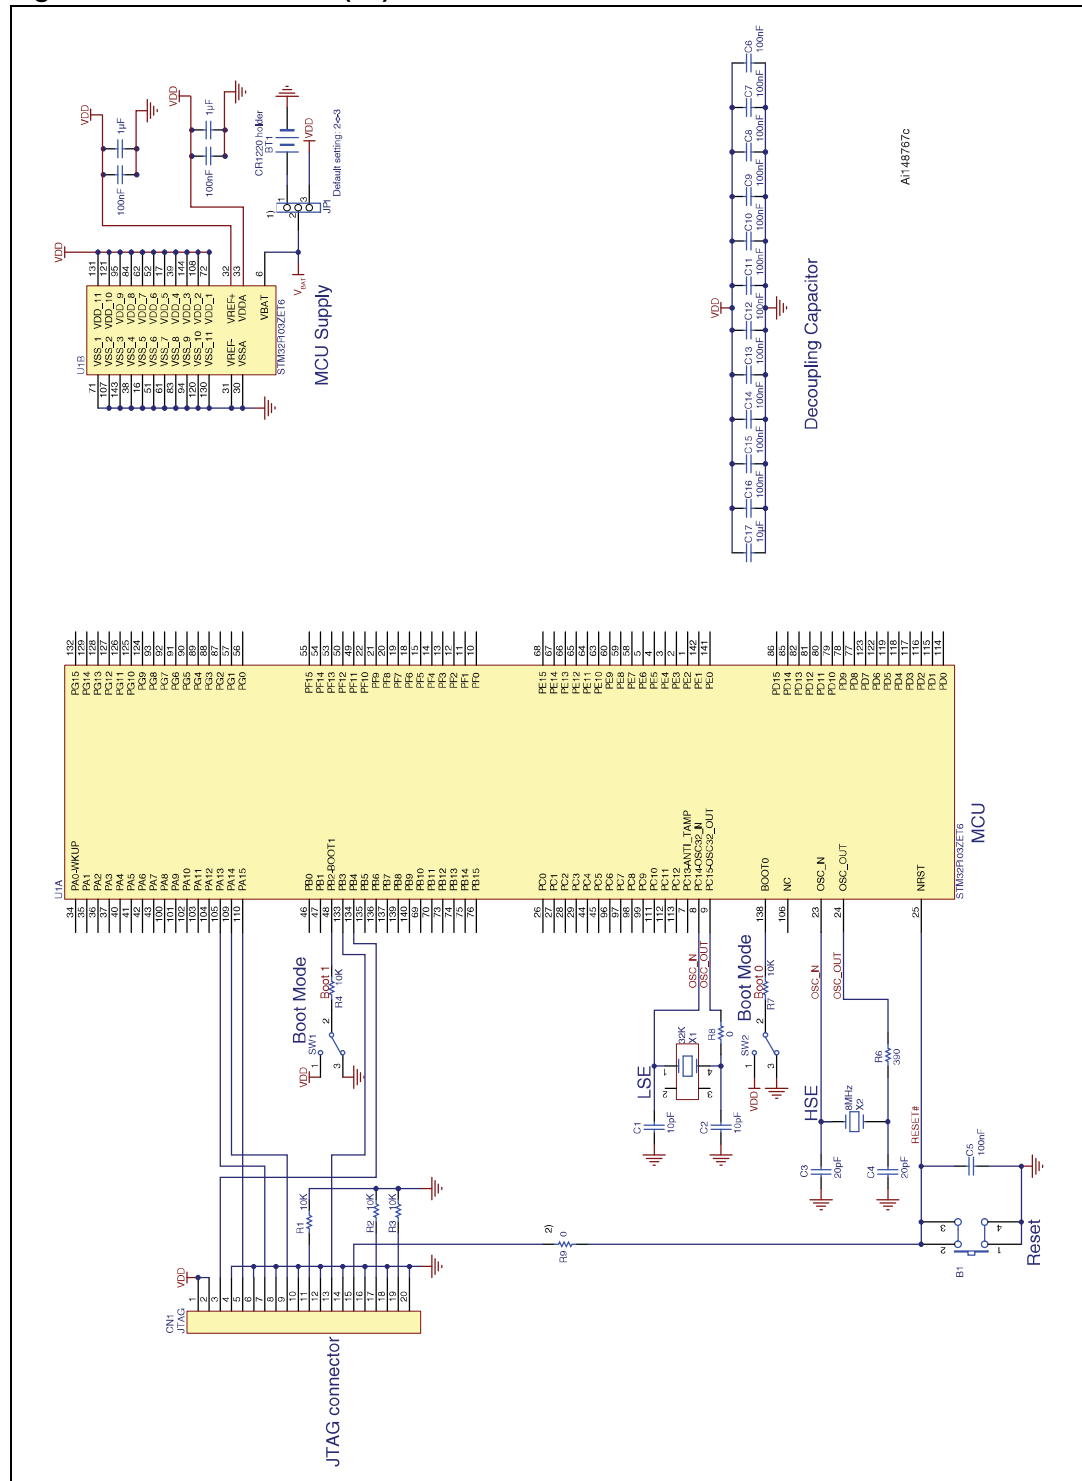

1. If no external battery is used in the application, it is recommended to connect V_{BAT} externally to V_{DD}.
2. To be able to reset the device from the tools this resistor has to be kept.