


carrier_board

2018-10-27 11:59 PM


Sheet: 1/5

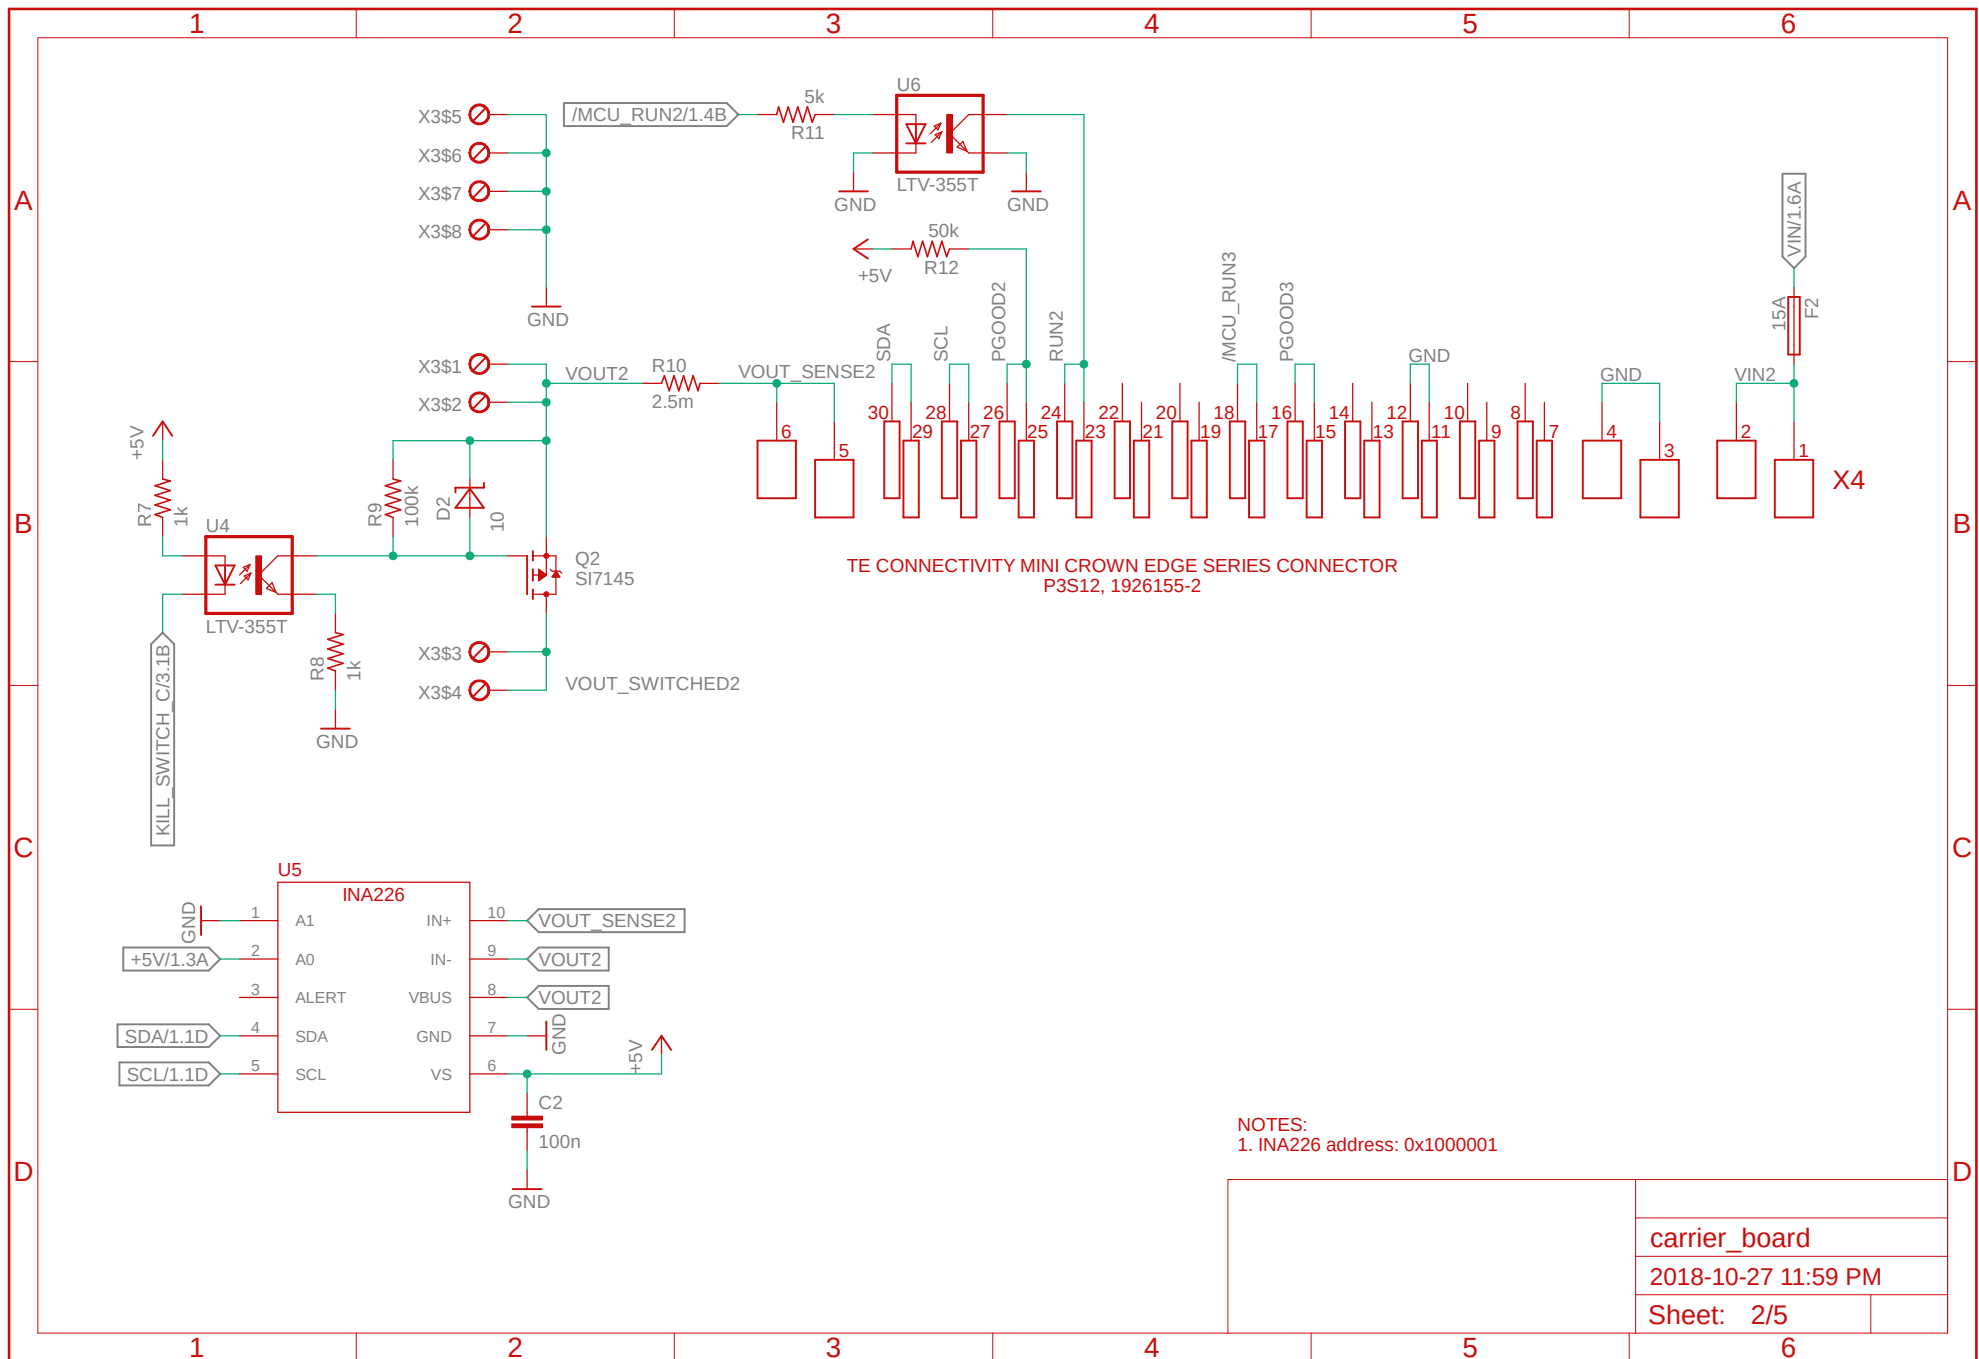



carrier_board

2018-10-27 11:59 PM

Sheet: 2/5

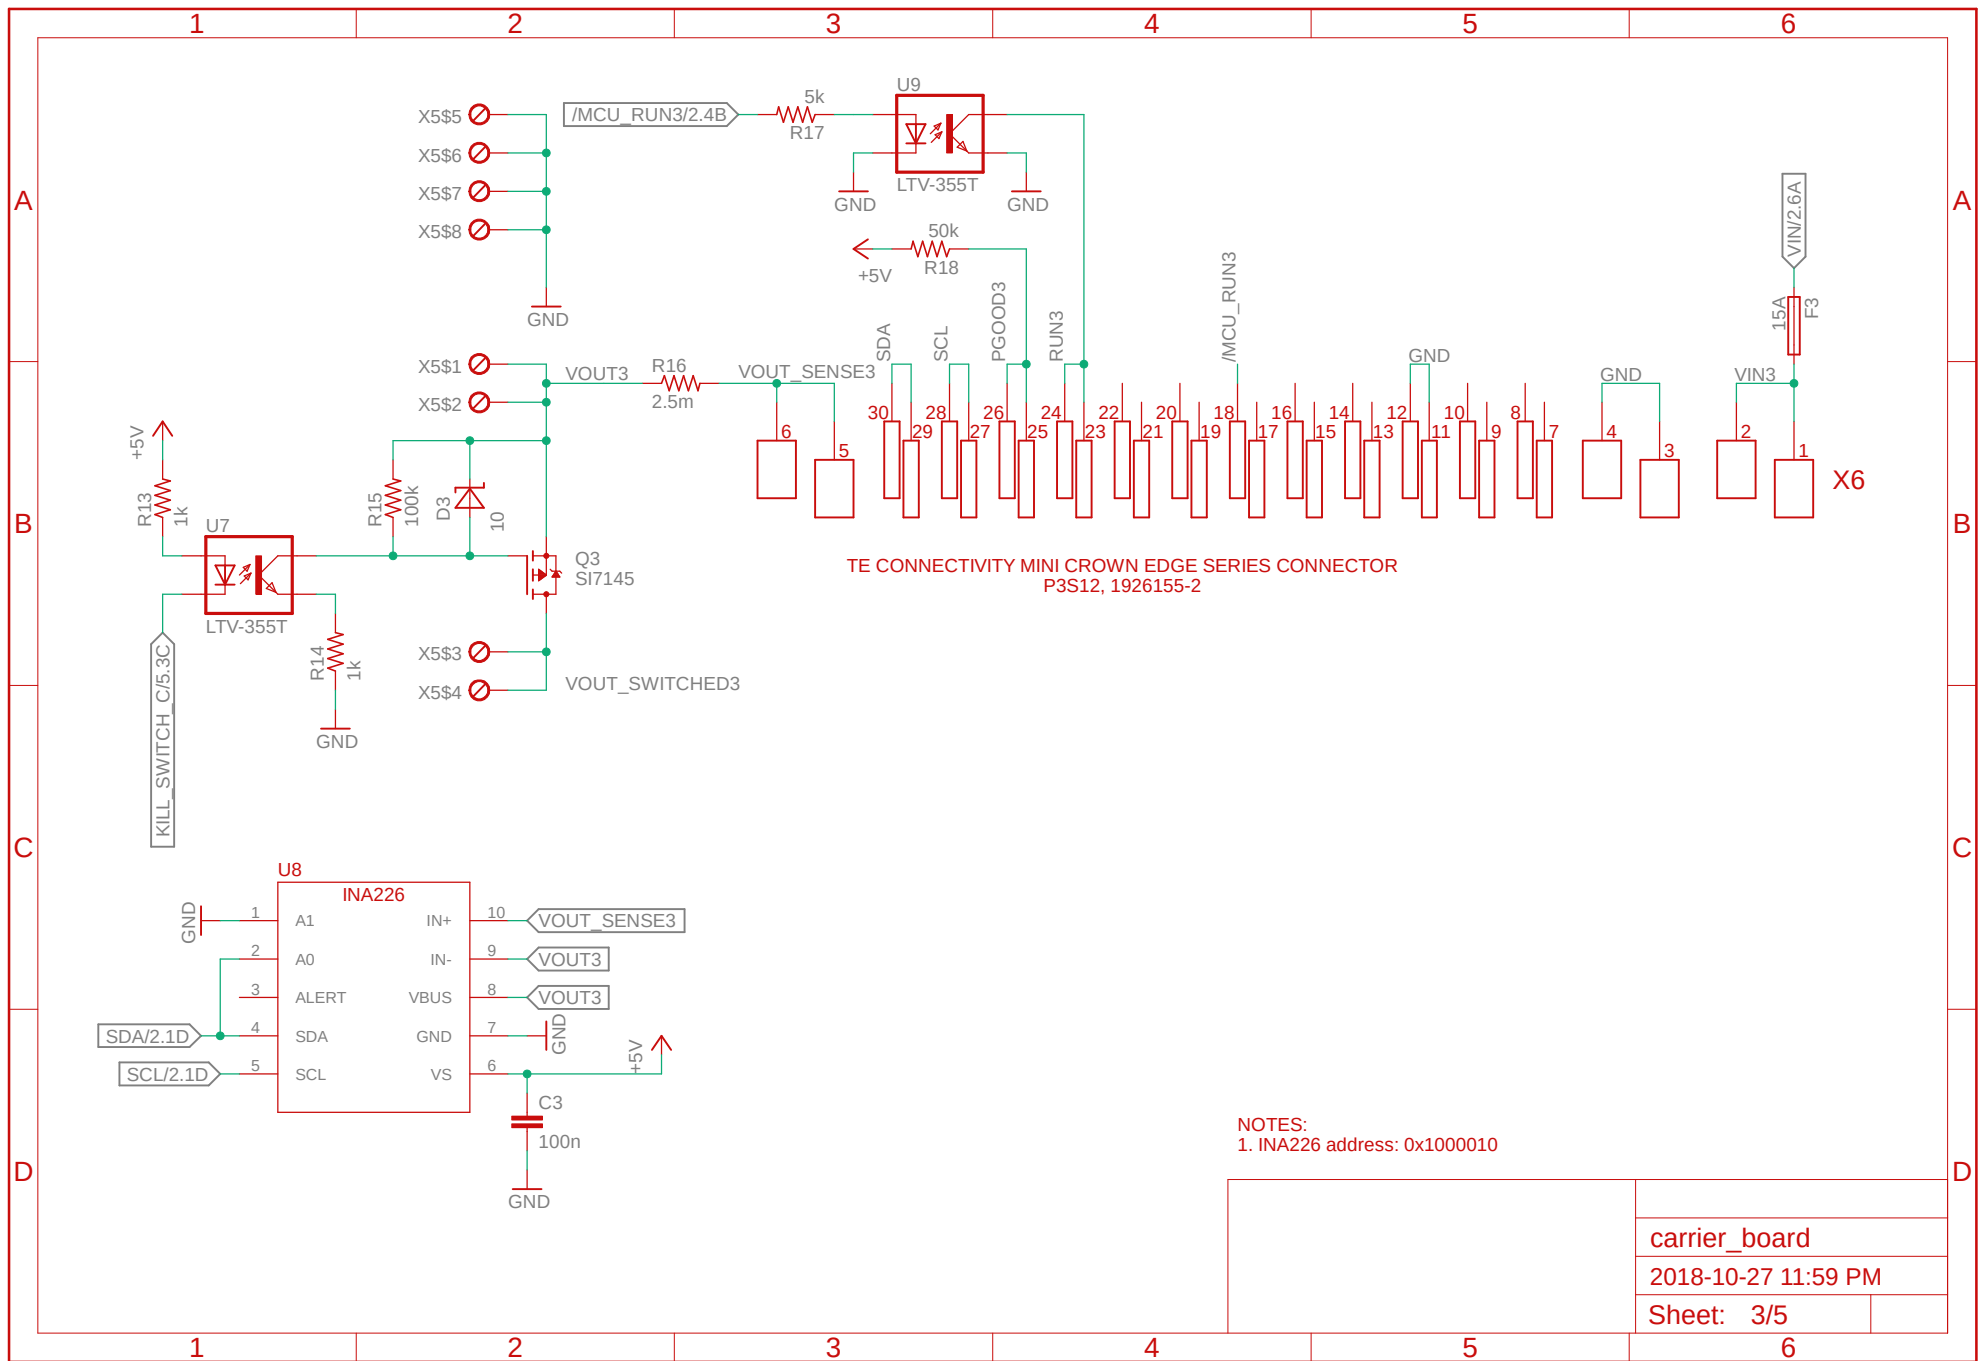

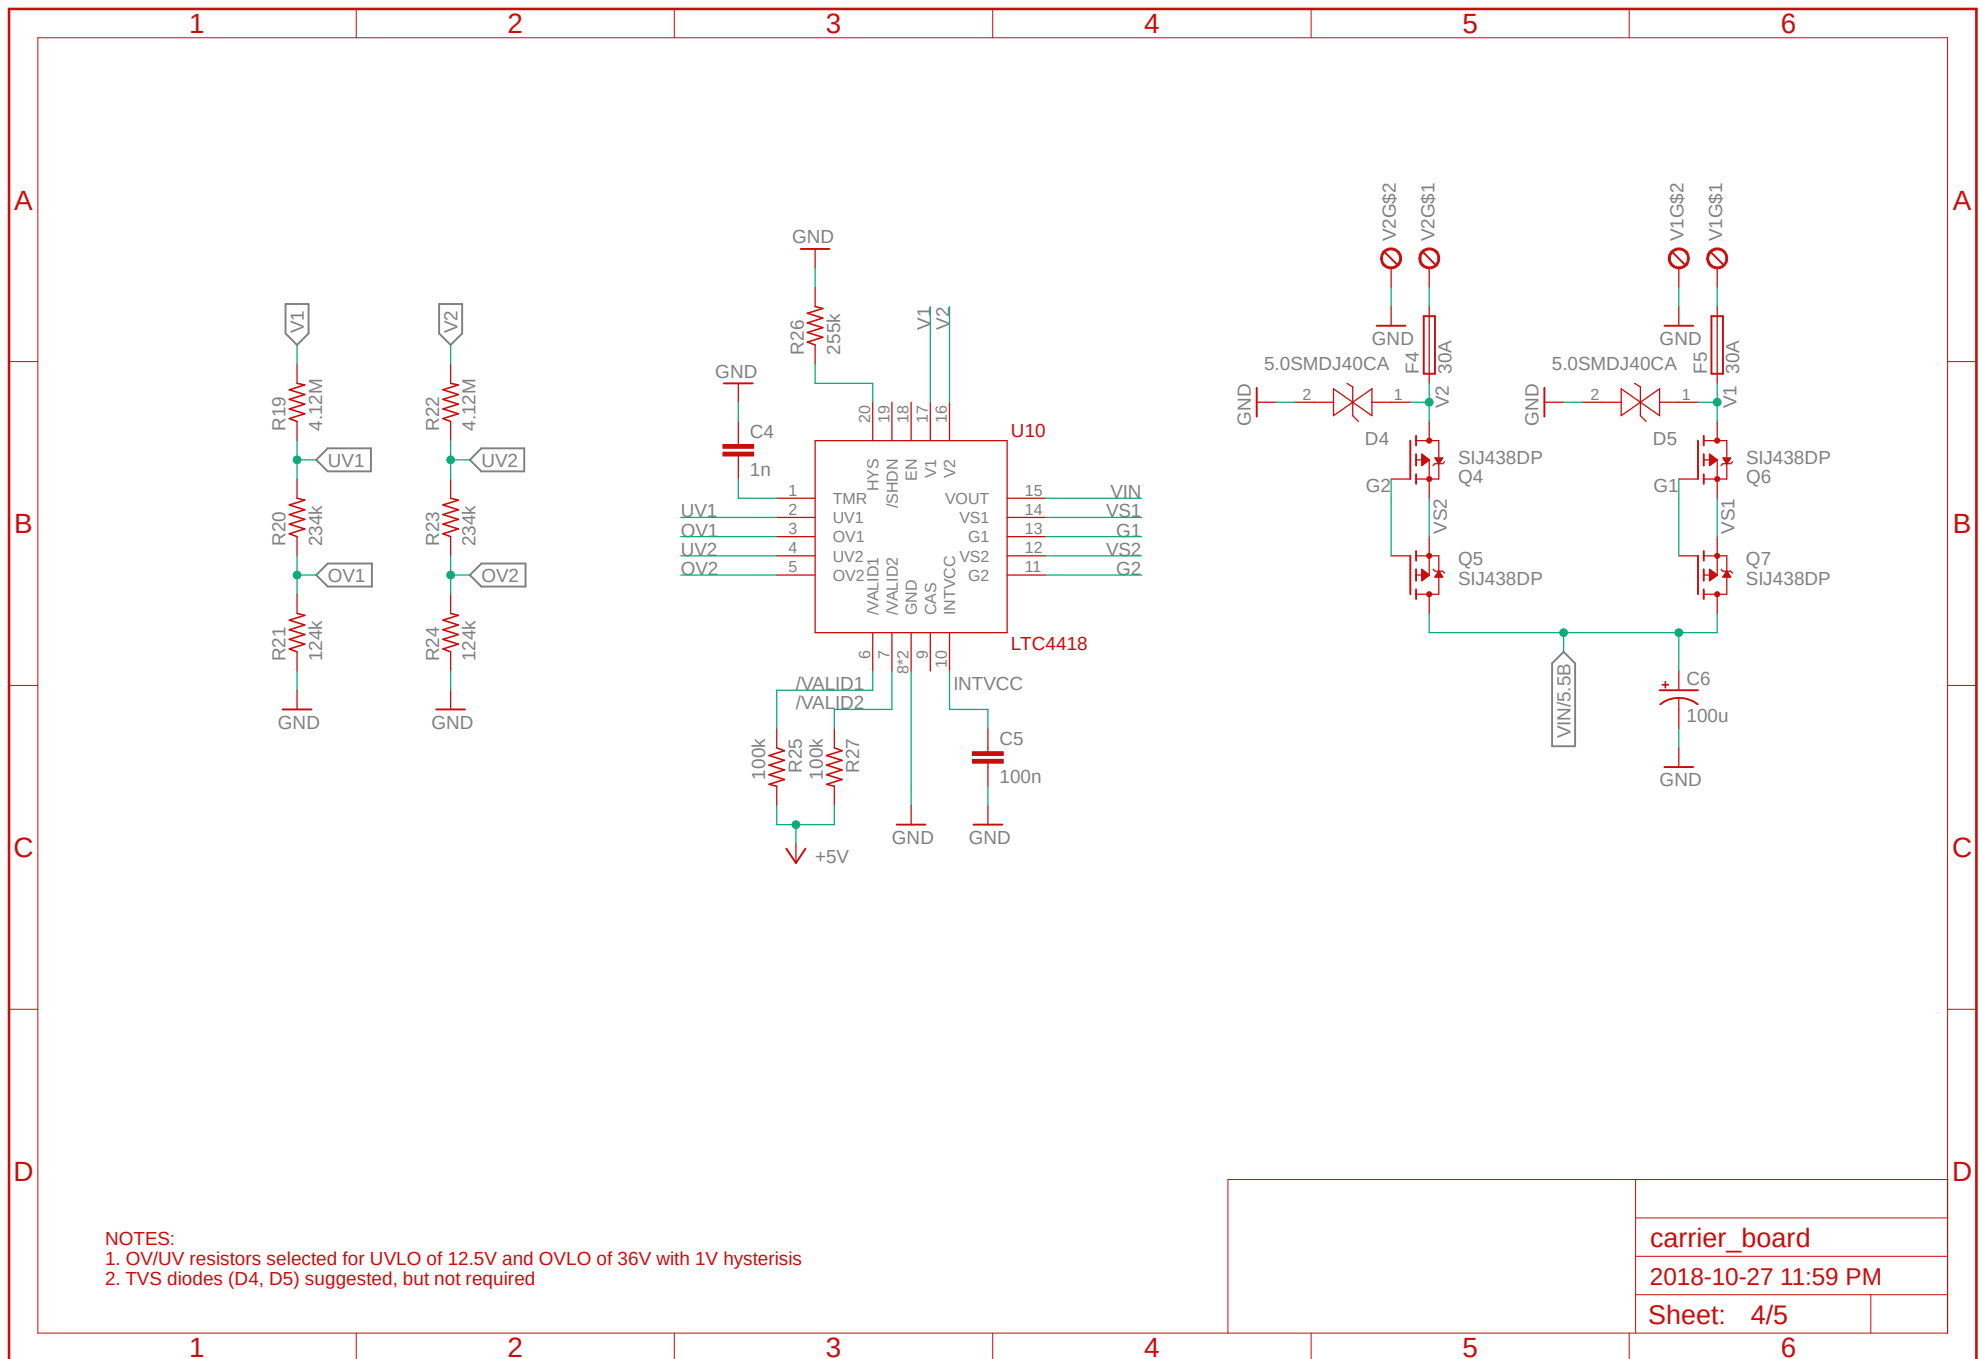

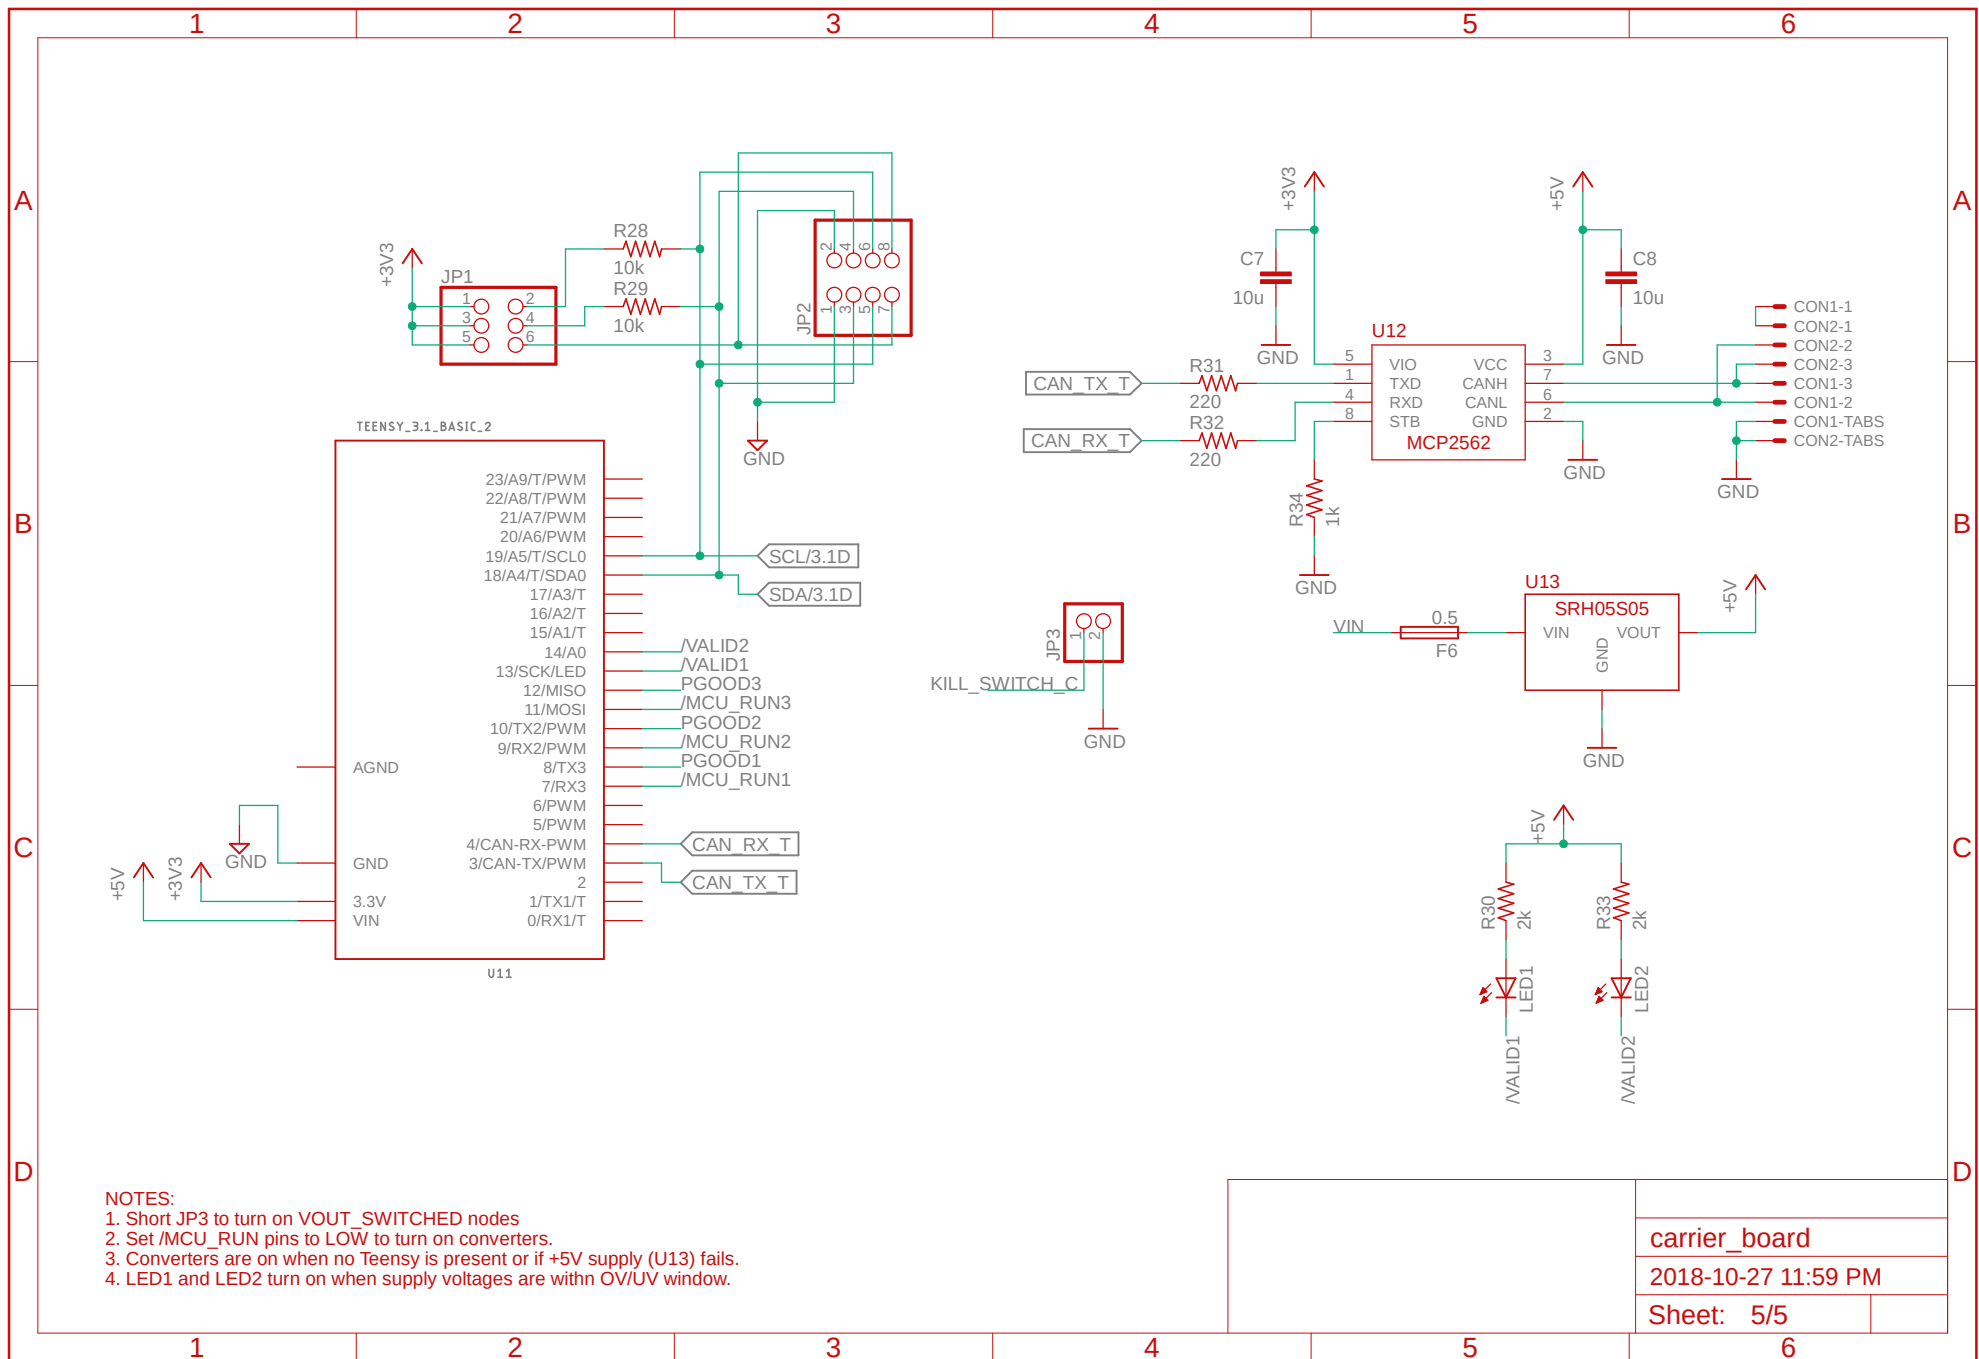

NOTES:

1. Short JP3 to turn on VOUT_SWITCHED nodes
2. Set /MCU_RUN pins to LOW to turn on converters.
3. Converters are on when no Teensy is present or if +5V supply (U13) fails.
4. LED1 and LED2 turn on when supply voltages are within OV/UV window.

carrier_board

2018-10-27 11:59 PM

Sheet: 5/5