


MEASUREMENT GUIDE


Important

Curtainly will make a curtain that when laid flat on the floor, will measure the width and height you have given.


Dimensional accuracy of the curtains will be ± 2 inches (5 cm).

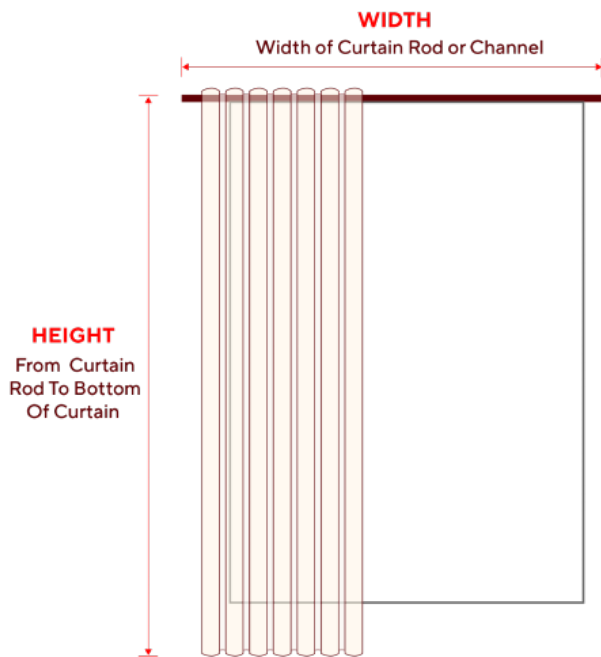


General Recommendations

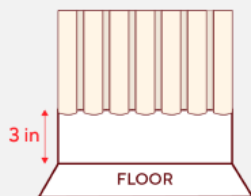

If making full height curtains, start the curtain about 3 inches (8cm) above the floor so that it does not get spoilt by wet mopping and brooming.

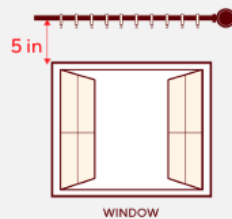

If installing new curtain rods, these should be mounted at least 5 inches (13cm) above the top of the window.

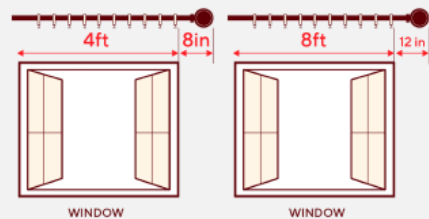

If installing new curtain rods or channels, ensure they extend at least 8 inches (20cm) beyond both sides of the window for a 4 ft wide window, and at least 12 inches (30cm) beyond for an 8 ft wide window.