


ISP programming labels are wired this way to take advantage of the buttons' "internal jumpers", to simplify the PCB layout. These specific connections are not required for handwired builds. Button wiring can be arranged as per the builder's convenience.

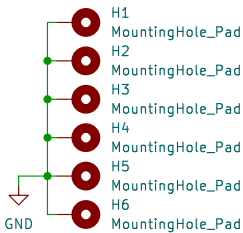

Designed by: Rafael G. Martins
Released under CERN Open Hardware Licence Version 2 – Strongly Reciprocal

Sheet: /
File: b8.kicad_sch

Title: b8

Size: A4 Date: 2024-04-03
KiCad E.D.A. kicad 7.0.11+dfsg-1

Rev: 20240403
Id: 1/1