

MD302 ADI on a 2.4-inch LCD screen and ESP32 S3 Microcontroller (Implemented as a Mobiflight Community Device)



1. Introduction:

This is an Attitude Directional Indicator (ADI) inspired by the MD302 for use in Flight Simulation displayed on a 3.5-inch LCD screen implemented as a Mobiflight community device for easy integration with flight simulators such as MSFS 2020 and X Plane. It uses an ESP32 S3 N16R8 microcontroller to drive the graphics and the firmware:

The motivations for implementing this device:

- Low cost and easy to build while providing an awesome flight simulator experience
- Minimal mechanical components (quiet operation)
- Minimal components and skills required (just wiring and uploading of firmware, and maybe 3D printing design if you want to design your own case/panel).
- Can be placed anywhere in the panel without the constraints of a large monitor
- Most of all, to have fun, and... Mobiflight rocks!!


For questions, please join the [Mobiflight Discord](#) server and go to the “custom-devices” channel.

Most important of all, have fun, and.... Mobiflight rocks!!!

2. Hardware:

- **ESP32 S3 N16R8 variant**

Note: Other variants have not been tested and may not work. Please get this specific variant

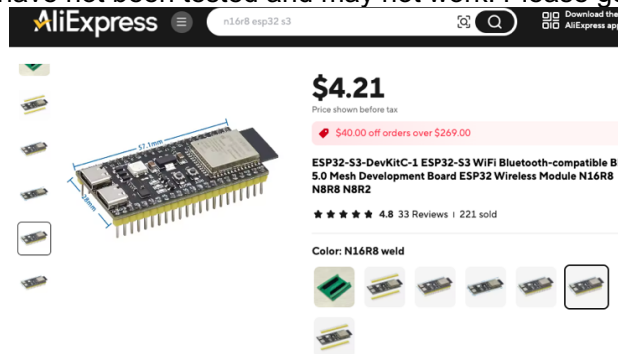

For example, you can order the ESP32 S3 N16R8 variant from the following:

- <https://tinyurl.com/at2ubb9a>
- <https://tinyurl.com/46rwnp9p>

- **2.2-inch LCD screen with the ILI9341 driver (touch functionality is not required)**

Note: Other LCD screens with a different driver will not work!

For example, you can order the LCD screens from the following:

- <https://tinyurl.com/ztrasbwt>
- <https://tinyurl.com/bdhy22hh>

- **Other hardware**

- Wires, USB connectors, etc.

- **ESP32 S3 and LCD Screen (ILI9341) PIN connections**

Connect the 2.4-inch LCD display pins to the corresponding ESP32 S3 GPIO pins according to the table below:

ESP32 S3 GPIO Pin	2.4-in LCD (ILI9341) Pin
3V3	VCC
GND	GND
7	CS
6	RESET
15	DC/RS
17	SDI(MOSI)
18	SCK
13	LED

3. Software:

- **Mobiflight**


- <https://www.mobiflight.com/en/index.html>

- **Mobiflight MD302 ADI custom firmware**

- See the instructions below for downloading and installing the custom firmware


4. Downloading the Mobiflight MD302 ADI custom firmware:

- Download the Mobiflight MD302 ADI Module custom firmware from the link below:
https://github.com/savesabanal01/Mobiflight-MD302-ADI-ESP32-S3/tree/MD302_ADI
Go to the folder “firmware” and download MD302_ADI_2.5.2.zip
- Open your Windows Explorer, using Win+E
- In the file path window, paste %LocalAppData%\MobiFlight\MobiFlight Connector\Community
- Extract the [MD302_ADI_2.5.2.zip](#) to this folder. The file structure should look like the one below (make sure that the “MD302_ADI” folder is directly under “Community”):

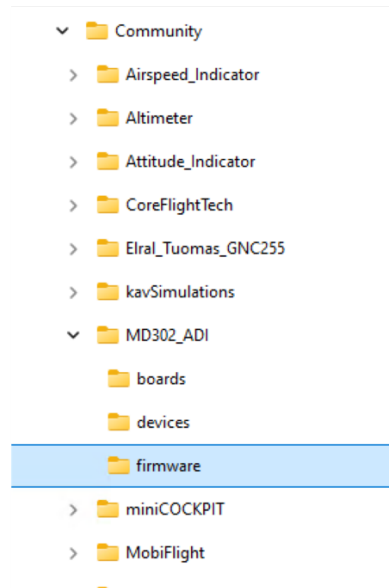


5. Flashing the Mobiflight MD302 ADI custom firmware to the ESP32 S3:

- **Important Note! Please make sure that Mobiflight is shut down.**
- Connect the ESP32 S3 to your PC using the USB port in (highlighted in red) in the picture below:

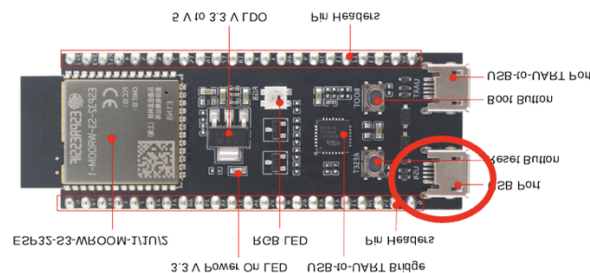


- To flash the firmware, we need to use the esptool tool. Please download the esptool-v4.7.0-win64.zip file from <https://github.com/espressif/esptool/releases>
- Extract the esptool-v4.7.0-win64.zip and look for the esptool.exe file (see below) and copy this to a working folder (for ex. C:\temp)

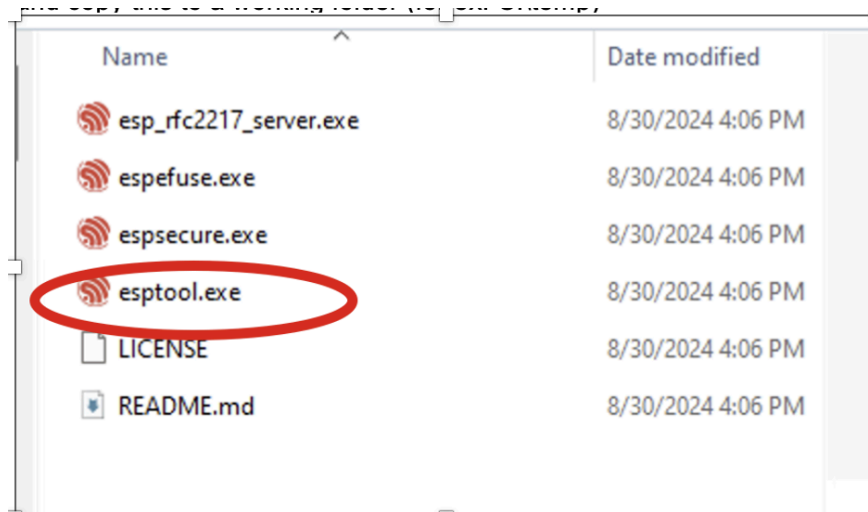

Find the “MD302_ADI_esp32s3_2_5_2_merged.bin” file, which is in the “MD302_ADI” -> “firmware” folder that you extracted previously, and copy this to the working folder (ex. C:\temp)

Hint: It is under: C:\Users\<username>\AppData\Local\MobiFlight\MobiFlight Connector\Community\MD302_ADI\firmware

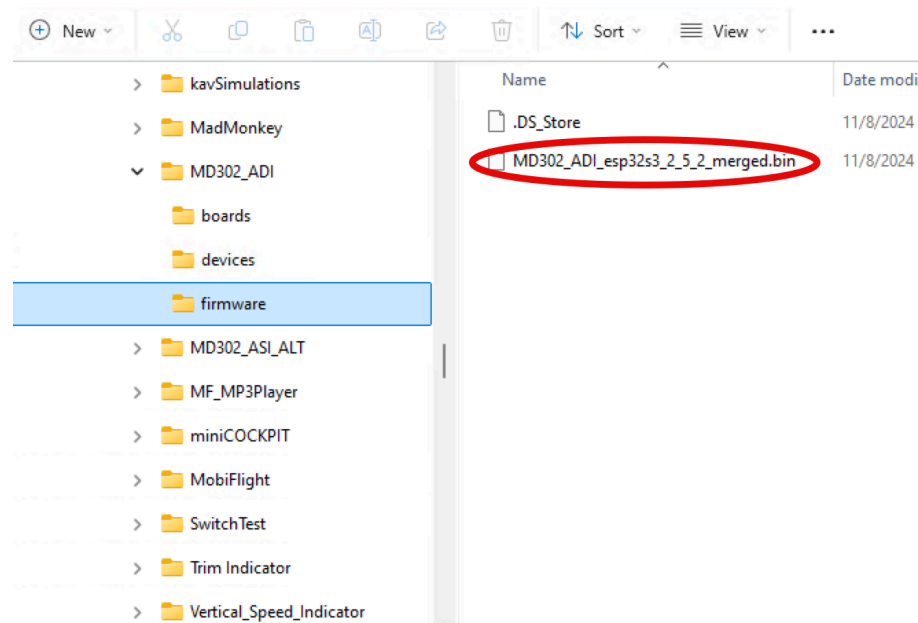

- From the working folder (ex. C:\temp), execute the following command to flash the firmware


```
.\esptool --chip esp32s3 --port=<COMxx> --baud 460800 --before default_reset --after hard_reset write_flash -z --flash_mode dio --flash_freq 80m --flash_size 16MB 0x00 <direcoty where firmware is stored>\MD302_ADI_esp32s3_2_5_2_merged.bin
```

Note: COMxx should be your correct port number, for example, COM5. The full command should look like below. If you don't know the port number, you can open the "Device Manager" in Windows and unplug and plug the ESP32 S3 and see which port appears.


```
.\esptool --chip esp32s3 --port=COM5 --baud 460800 --before default_reset --after hard_reset write_flash -z --flash_mode dio --flash_freq 80m --flash_size 16MB 0x00 <directoty where firmware is stored>\MD302_ADI_esp32s3_2_5_2_merged.bin
```

6. Uploading the Mobiflight profiles


- Download the Mobiflight profiles and save them to your local PC. The profiles can be downloaded from: https://github.com/savesabanal01/Mobiflight-MD302-ADI-ESP32-S3/tree/MD302_ADI/profiles
- The files are MD302 ADI ESP32-S3.mfmc and MD302_ADI_XPlane.mcc
- Start Mobiflight, open "Mobiflight Modules", click "Open" and upload MD302 ADI ESP32-S3.mfmc file to the "MD302 ADI ESP32-S3" device (see below):

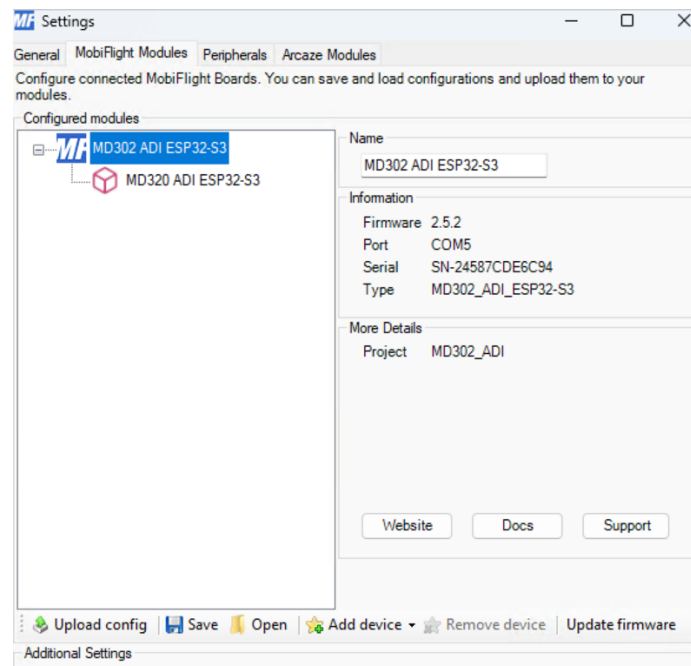


- Now, click "Upload config" and wait for it to finish uploading. You will get an "Upload finished with error" pop-up, but this is fine. Just hit "OK".

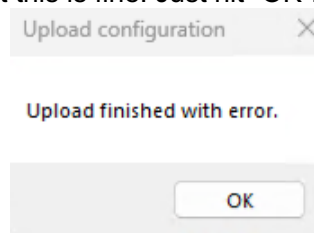

- Now close the Mobiflight Settings pop-up and you will get the error pop-out below, but this is also ok. Just hit “OK”.

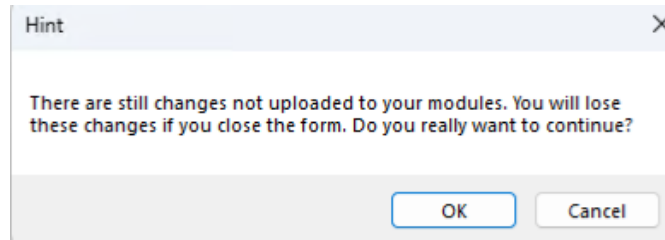

- From the Mobiflight main screen, go to Files -> Open, and open the downloaded MD302_ADI_XPlane.mcc. You should get the settings for X Plane as shown below:

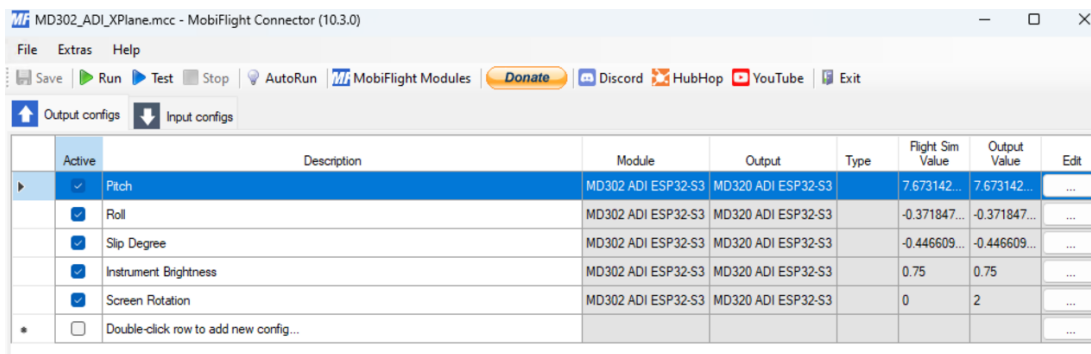

Important Note: I only have X Plane, so I have not prepared configurations for MSFS2020, but the X Plane datarefs can be replaced by MSFS 2020 variables that correspond to them. Please try it!

- Now, start your flight simulator, start Mobiflight and have fun!!!

7. Important Notes and Future Directions:

- You can use the other open pins in the ESP32 S3 for buttons, encoders, etc. Just make sure not to use pins 19, 20, 35, 36, and 37 (they have some limitations).
- To change the LCD screen orientation, edit the “Screen Orientation” output config, go to Modify -> Transformation, and change the value from “2” to “0”. This will flip the screen (see below)

