



How to plug 2 Intan headstages into 256 channel silicon microprobes

1. Connectors on Top:

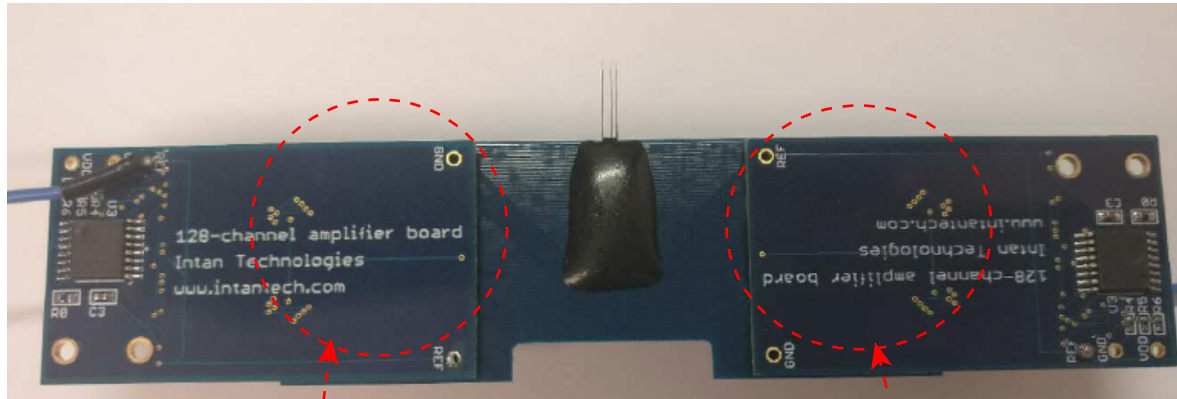


Channels: 128-256


Channels: 0-127

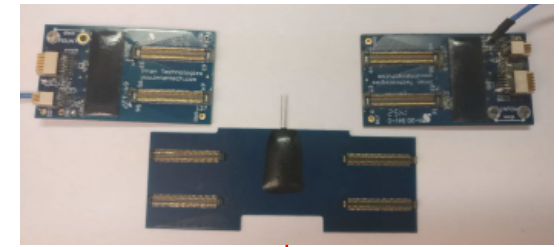

headstage plugged in

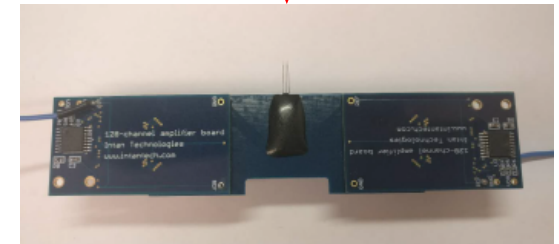


2. Connectors on Bottom:

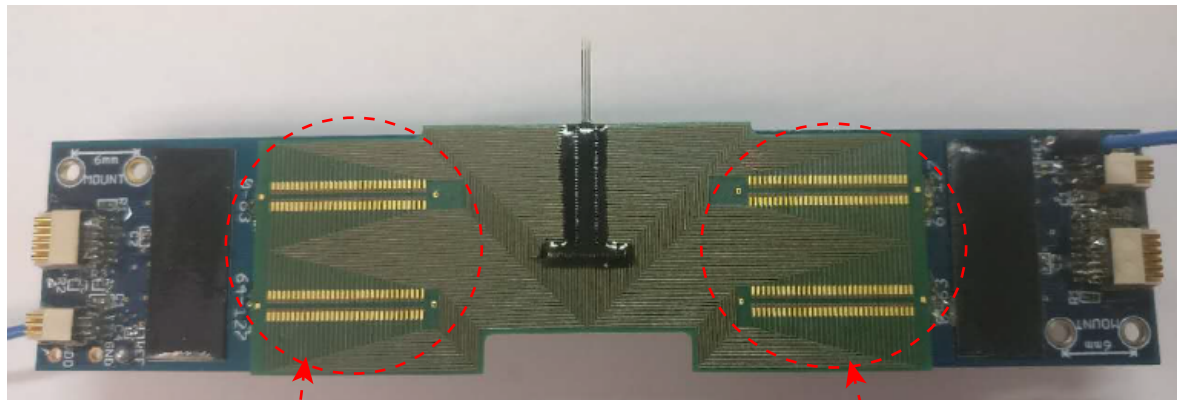


Channels: 128-256

Channels: 0-127

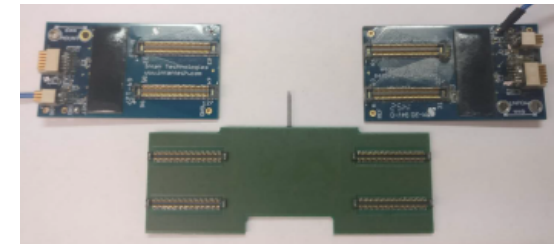

headstage plugged in

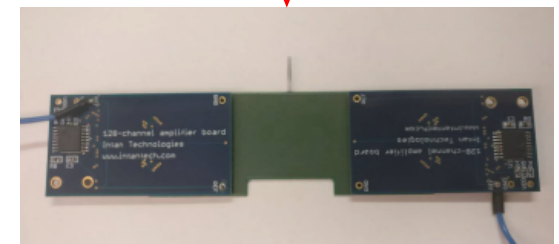

Flipped

