



1. Attach the stem to the plate with m3 screws and m3 lock nuts

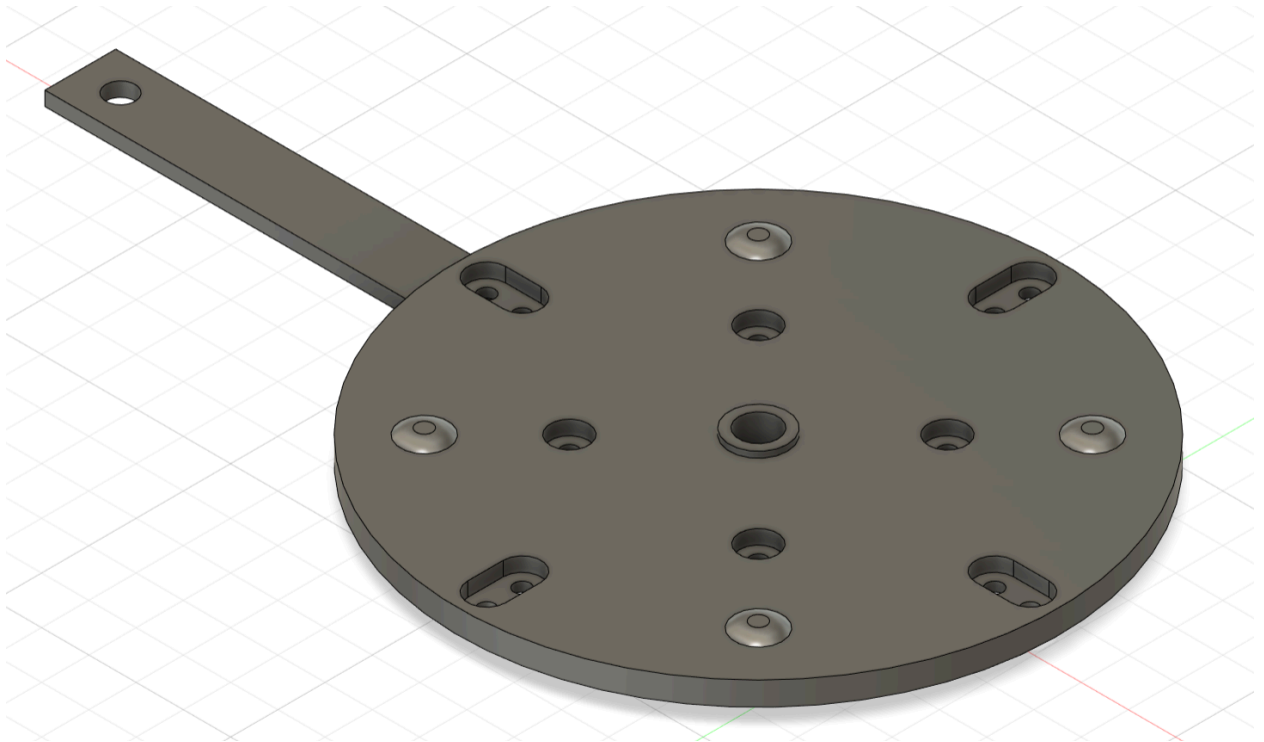


2. Using long m3 screws and m3 nuts, screw down the off-centering plate to the handle with the handle clamp and spacer in between

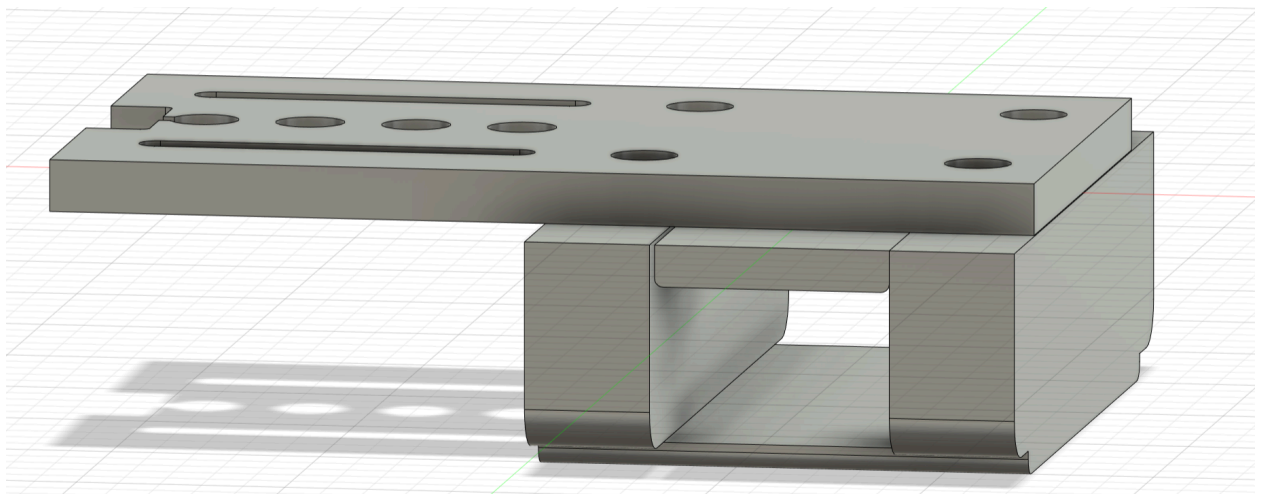


3. Attach the plate and stem to the off-centering plate with m3 screws and m3 lock nuts. Leave the m8 screw in so the plate remains aligned. Use the two holes in the plate that

clear into the long opening on the off-centering plate

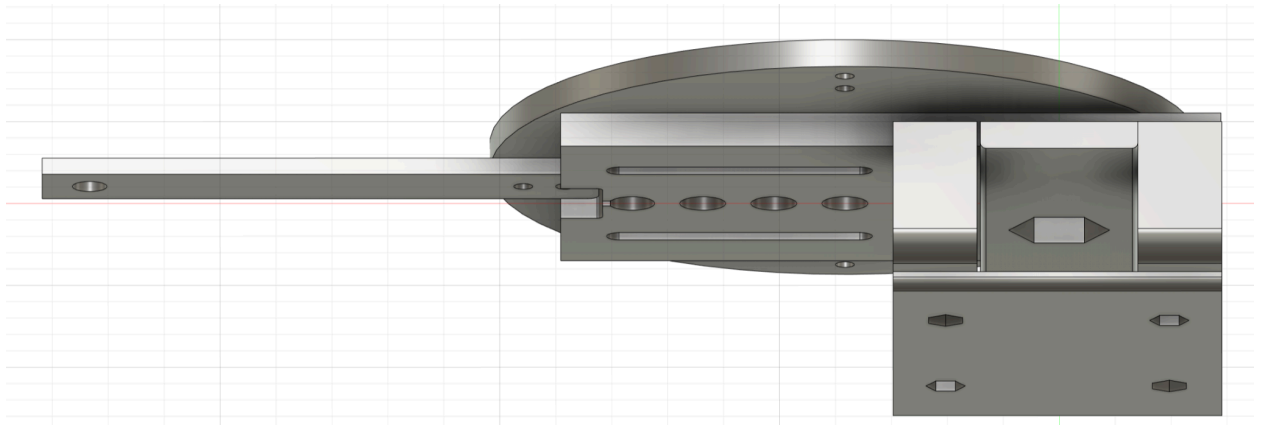

4. Wind the film onto the dish. Then, put that on the dish on and the holding arm on, making sure the holding arm slots into the stem. Put a wing nut on the m8 screw and use the collar on the holding arm with a m3 screw and nut

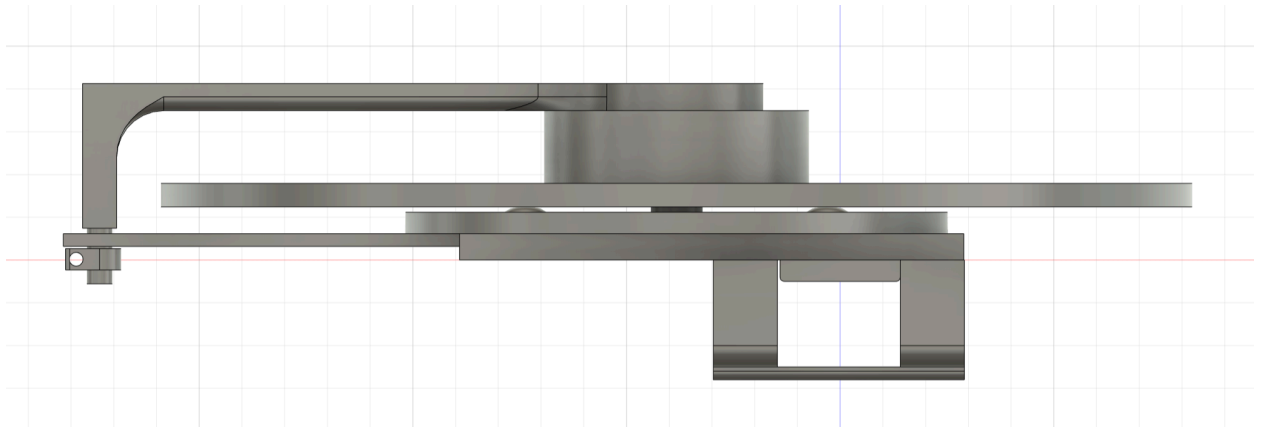

Other Method of Attachment:

Can be attached centered to the handle, but film will rub on pulleys

