



TSB 5 INCH ROBOT CHASSIS ASSEMBLY INSTRUCTION

STEP 1: PUT BRACKET OVER MOTOR


Solder Wires to the motors beforehand

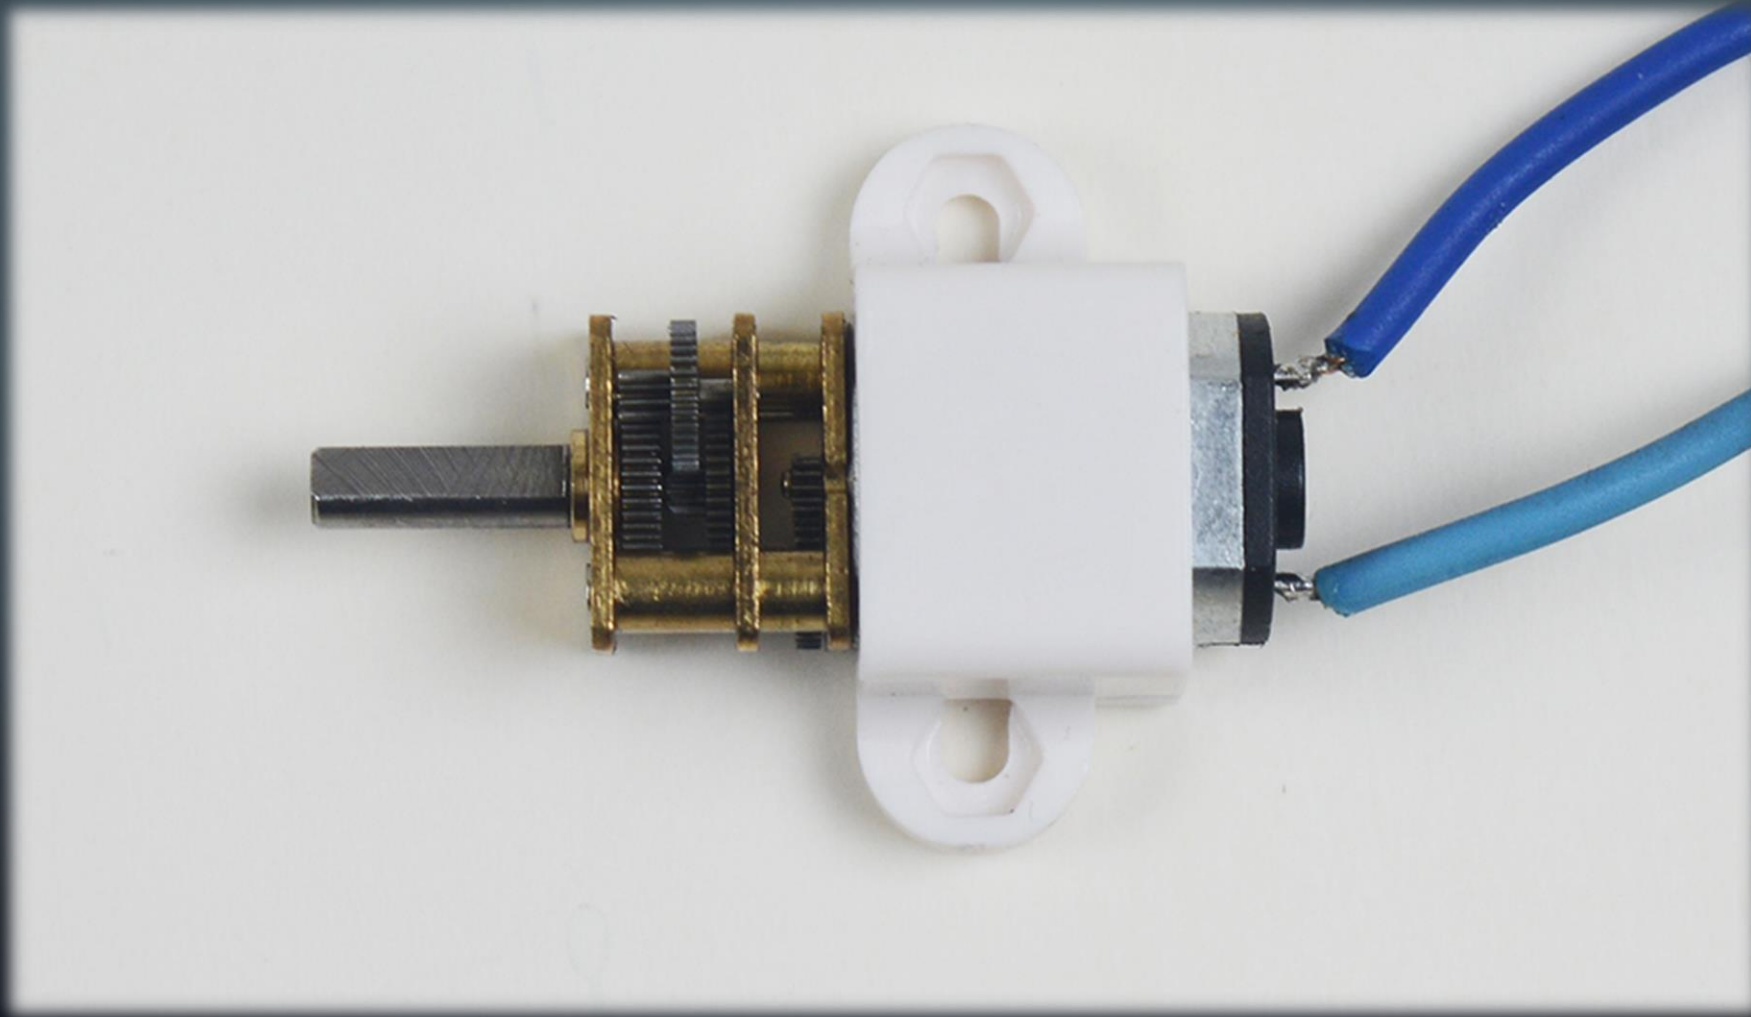

STEP 2: ATTACH WHEEL TO THE MOTOR

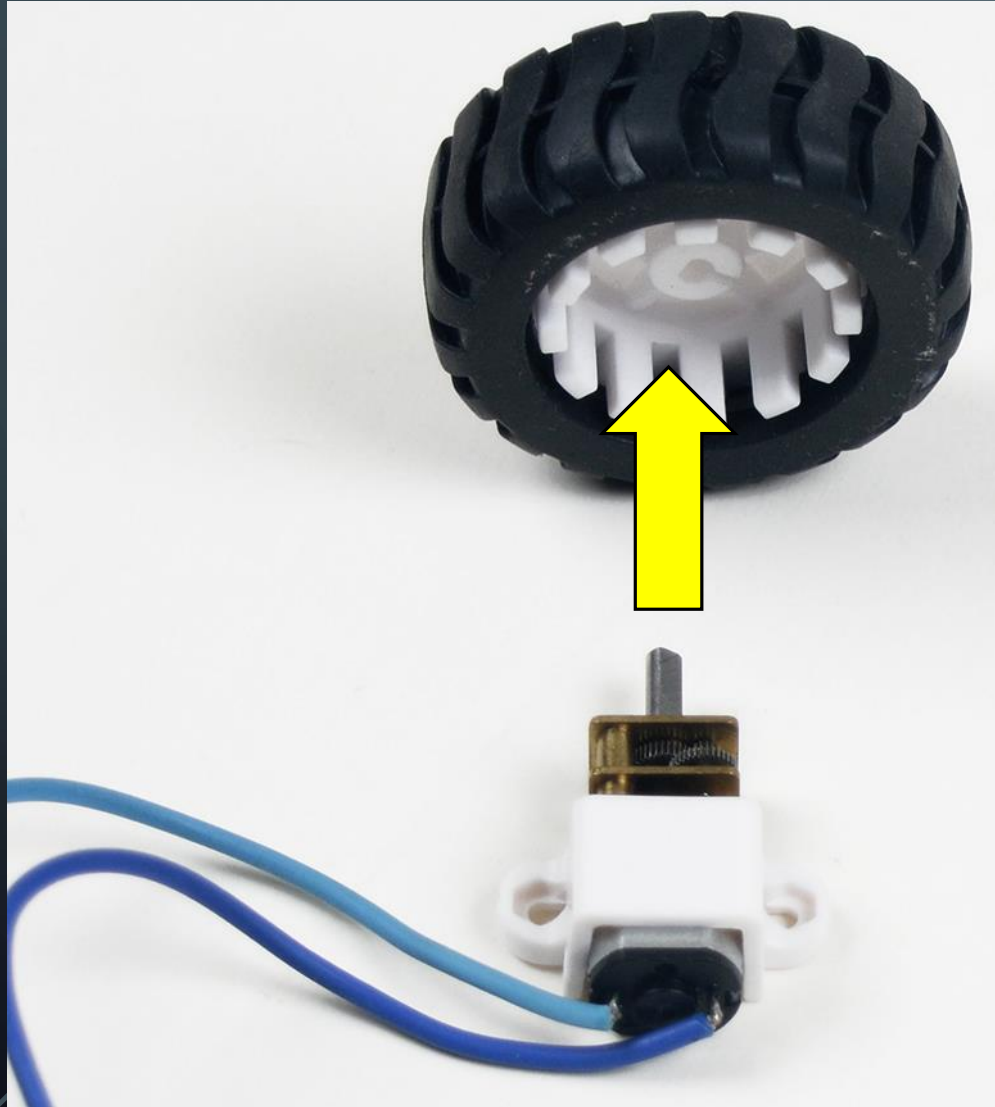

STEP 3: PLACE HEX NUT

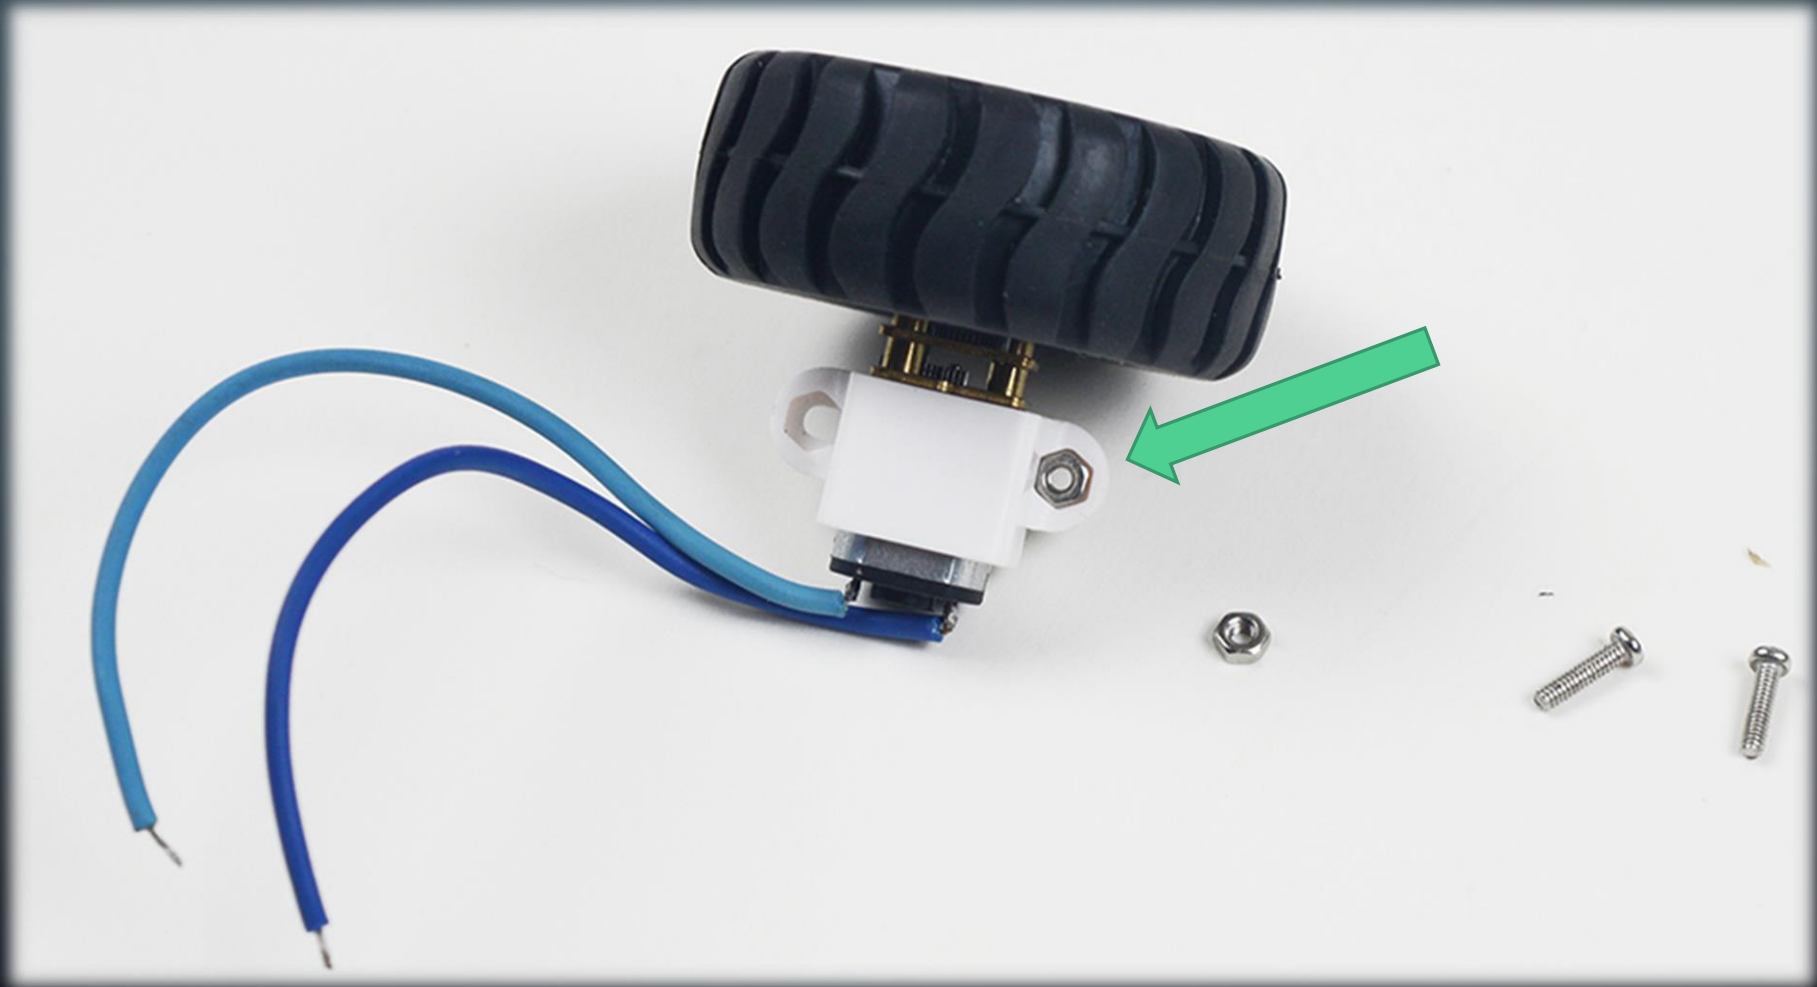

STEP 4: TIGHTEN SCREW



MOTOR AND WHEEL LOOK LIKE THIS

You can also add Encoders under the motors


TOP




BOTTOM



STEP 5: ATTACH BOTH MOTORS

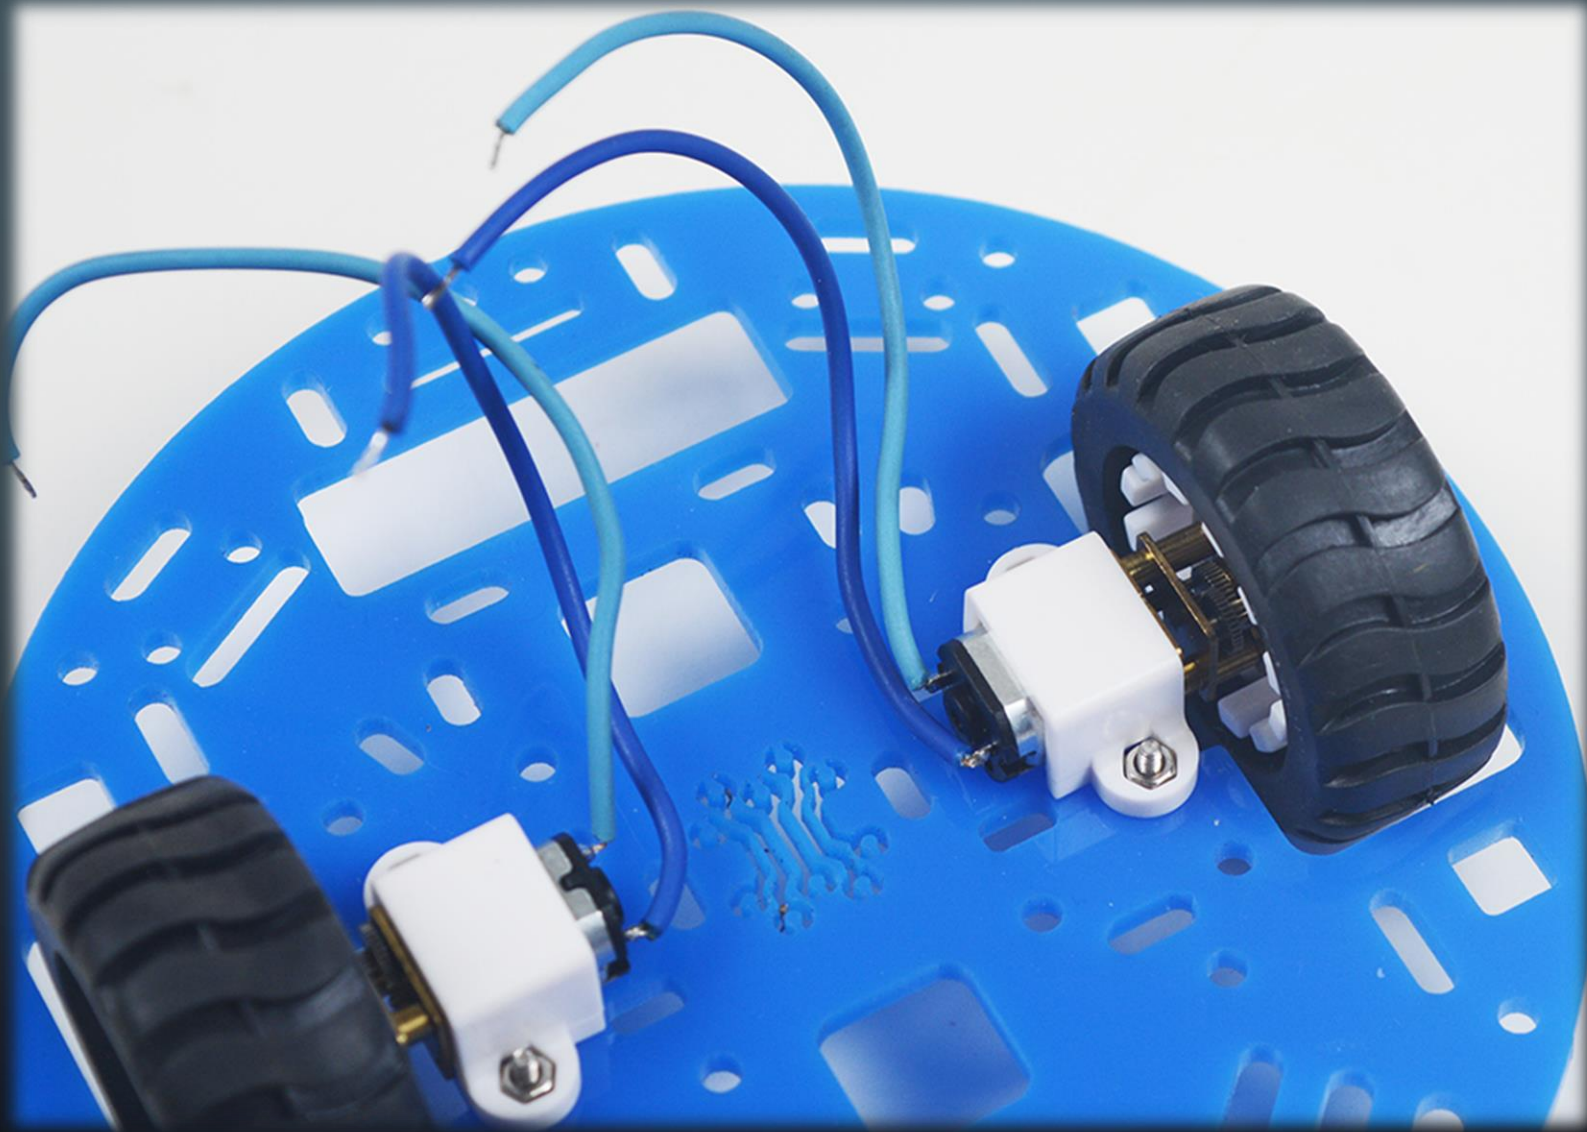

STEP 6: REMOVE SCREWS FROM BALL CASTER

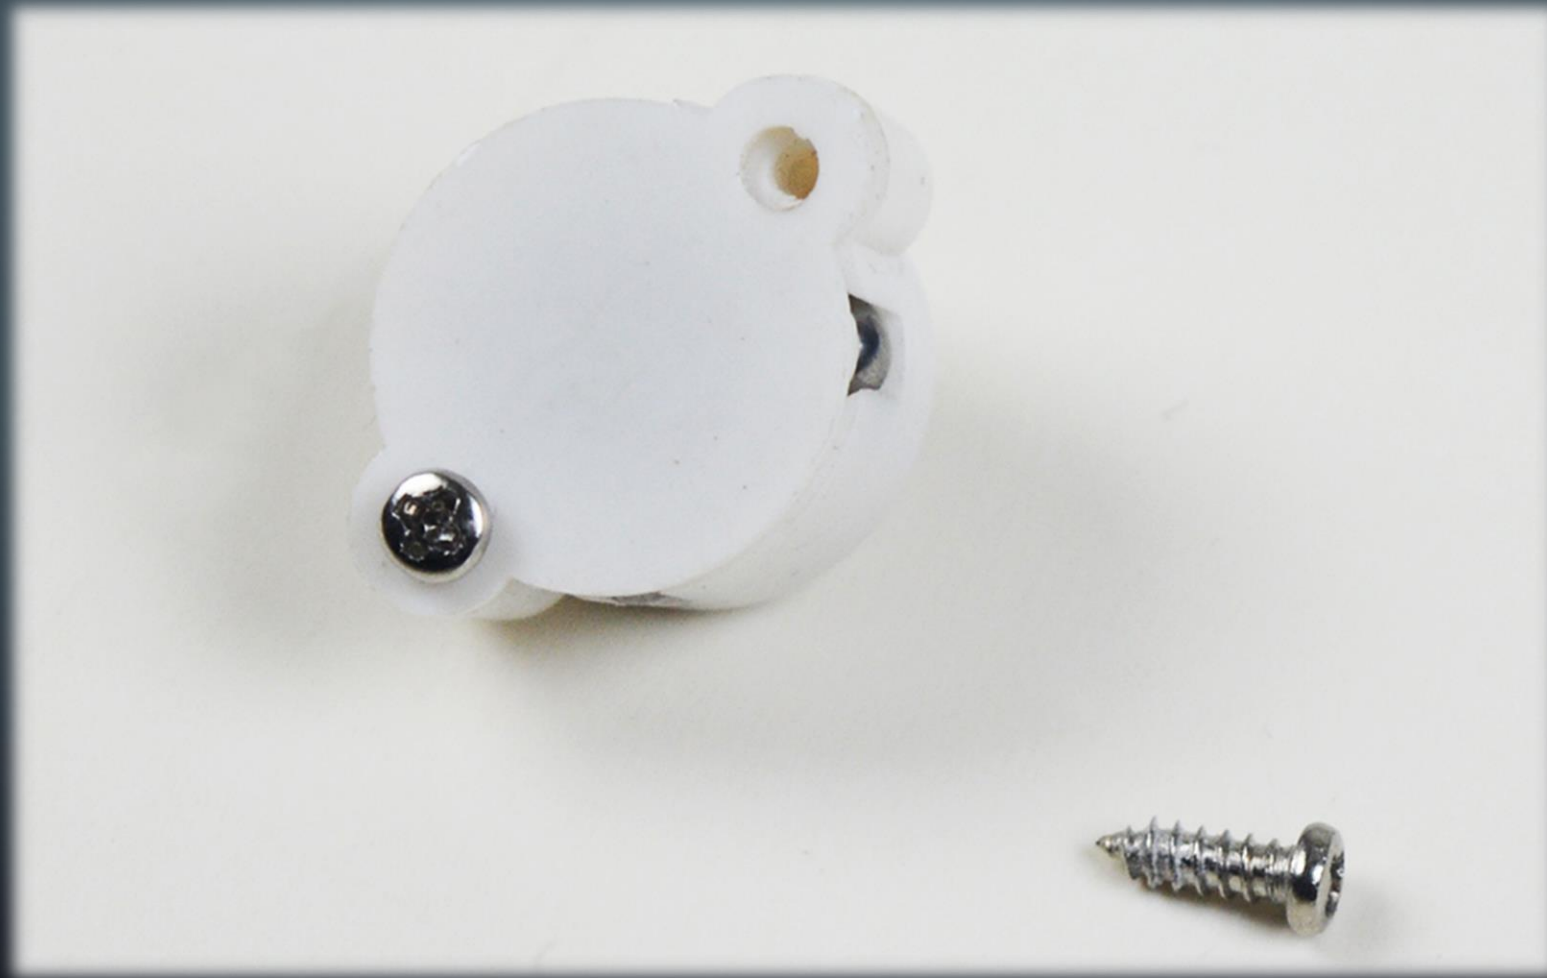

STEP 7: ATTACH BALL CASTER

