



Setting the cellular carrier's APN in the Modem

1. Install the SIM into the SIM socket, then install modem the PC.
2. Boot the Windows operating system and load the required modem drivers.
3. Navigate to **Control Panel → Device Manager → Modems → [Modem Name]**
4. Right click on the **[Modem Name]** entry and select **Properties → Modem tab**. Note the **'Port'** being used.

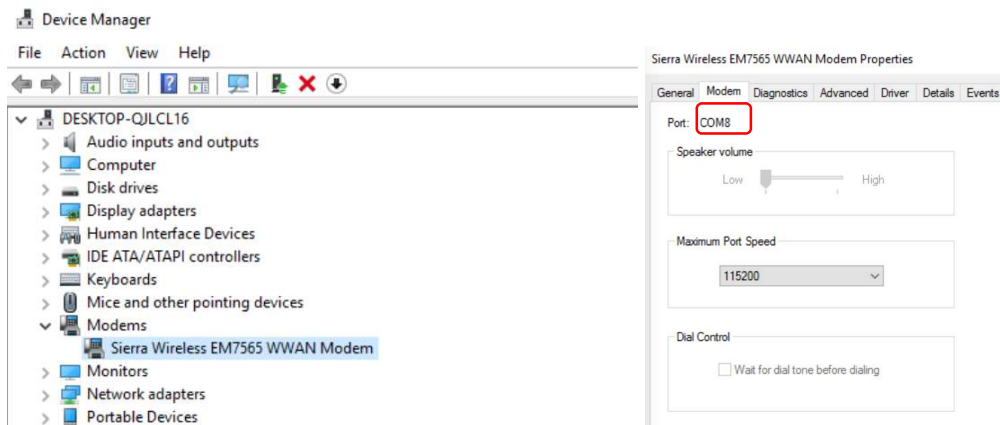

5. Open **'TeraTerm'** select **'Serial'** and in the drop down box, select the COM port noted in step 4. In this case it is **COM8**

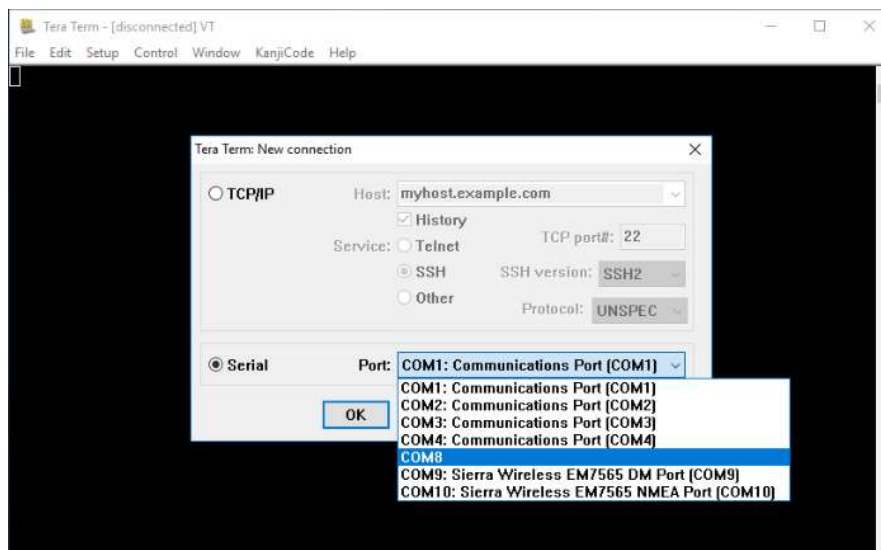



Tekdis

6. At the prompt type '**at**' followed by the '**Enter**' key. If the modem is on this port, you will receive an '**OK**' response.

7. Type the following command followed by the '**Enter**' key to set the APN.

at+cgdcont=1,"IP","[APN Name]"

For example for a Telstra SIM

at+cgdcont=1,"IP","telstra.internet"