



# **LAMOBO D1S Installation Guide**

For more details, please visit [LAMOBO.org](http://LAMOBO.org) or [LAMOBO.com](http://LAMOBO.com)

**Version 1.0**

**©2014 Kortide Co., All rights reserved**

## Table of Contents

|  |   |
|--|---|
| Introduction .....                       | 2 |
| Appearance.....                          | 3 |
| Acrylic Shell Accessories .....          | 4 |
| Metal materials Parts List .....         | 5 |
| Acrylic Shell Detailed Installation..... | 6 |



# Introduction

This document explains how to install Lamobo D1S acrylic shell, yellow shell with 120 degree lens as installation example, others lens do the same installation method and also can follow these steps in order.

**【CAUTION:】** Please be careful when installing D1S shell. Do not over tighten the copper cylinders and screws to avoid causing D1S or acrylic shell damage. Be careful when installation, if you refer to the following steps can't to complete the installation, please contact us, Lamobo team will provide professional guidance for you.








# Appearance





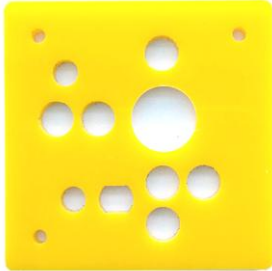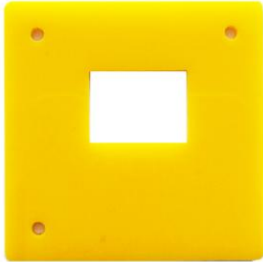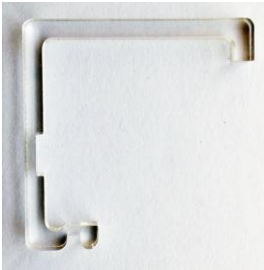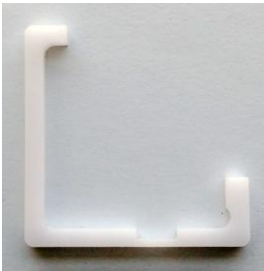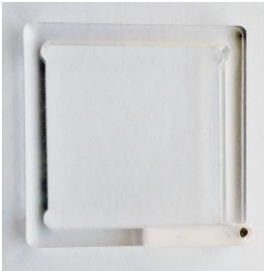

**D1S Acrylic Shell**

## Acrylic Shell Accessories

| Parts Figure  | Part Name                   | Pieces |
|---|-----------------------------|--------|
|    | D1S Acrylic Front Cover     | 1      |
|   | D1S Acrylic Back Cover      | 1      |
|  | D1S Dragon's Head-form part | 1      |
|  | D1S L-form part             | 1      |
|  | D1SOLL-form part            | 1      |



## Metal materials Parts List

| Parts Figure   | Part Name   | Pieces |
|--|---|--------|
|   | Both ends nut copper cylinder   | 3      |
|   | One end of the screw tooth and one end of the nut copper cylinder (Long)  | 1      |
|   | One end of the screw tooth and one end of the nut copper cylinder (Short) | 4      |
|  | Hand-rotate screw   | 6      |


# Acrylic Shell Detailed Installation

**Step 1:** Night vision LED aligns acrylic shell front cover openings and install, then tighten the three screws on the front cover.



**【NOTE:】** Only temporarily fixed D1S and front cover, do not over tighten the screws.

**Step 2:** According to the D1S board 3 arc angles install the OLL-form part.

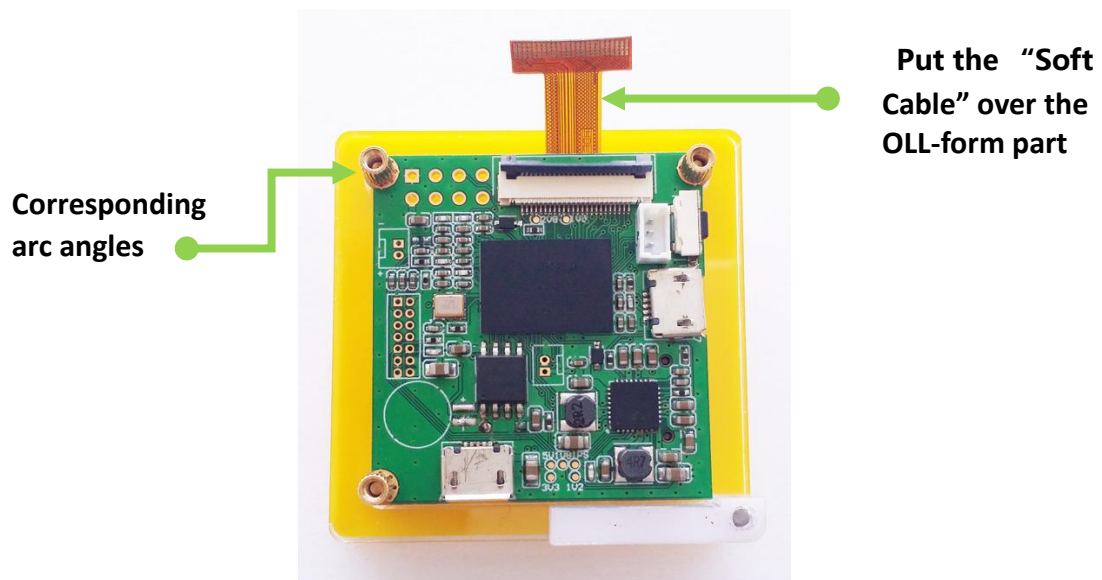

**【NOTE:】** Because OLL-form part making according to D1S size, if cannot be installed vertically, it is recommended the first gently press "soft cable" side of the shell and then press the remaining border gently.




**Step 3:** Open up the 24pin lens fixed buckle, insert the lens soft cable and shut down the fixed buckle.



**Step 4:** According to the D1S board 3 arc angles install the L-form part. Meanwhile, it needs to fine-tune lens soft cable position for next installation.


Corresponding  
arc angles

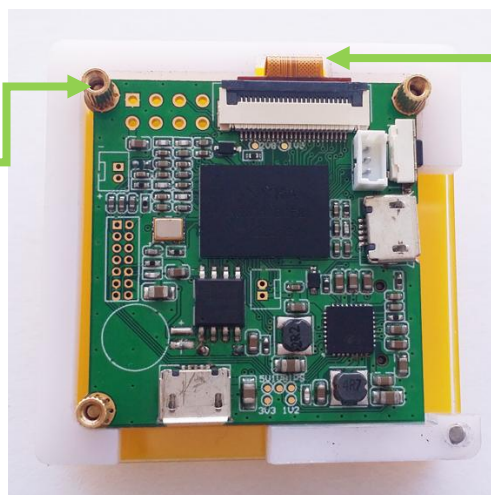

Fine-tunes lens  
soft cable  
position, put it  
into the slot  
reserved as far  
as possible.




**Step 5:** According to the D1S board 3 arc angles install the Dragon's Head-form part.

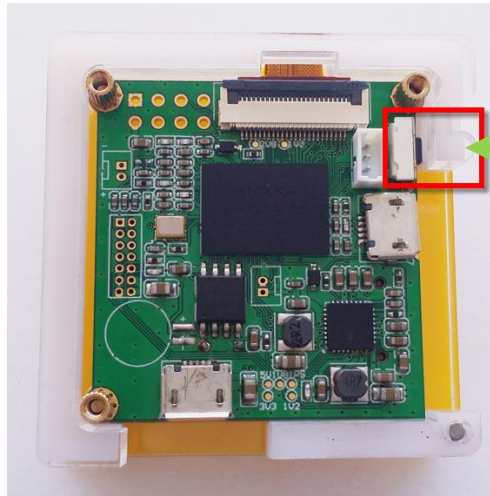

Here please aligns D1S [primary key], after complete installation here as switch operation

**Step 6:** Remove radiator tape and press on the D1S chip gently.

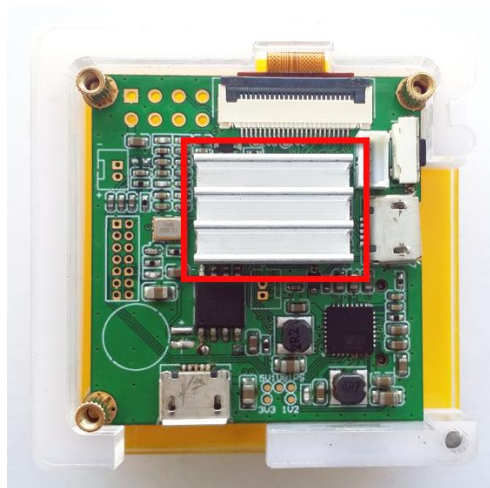

**Step 7:** Finally install the back cover, tighten the three screws on it. After finishing, can properly adjust 3 screws tightness on the front cover to keep the parts firmly installed.



---

**【NOTE:】**Please do not over tighten the copper cylinders and screws to avoid causing D1S or acrylic shell damage.

---