

Printing and assembly instructions C211 mount



Printing instructions

15% infill

0.2mm layer height

It's also recommended to print below two parts of the mount mechanism in 100% infill for extra stability.


Use a box modifier with 100% infill like below:

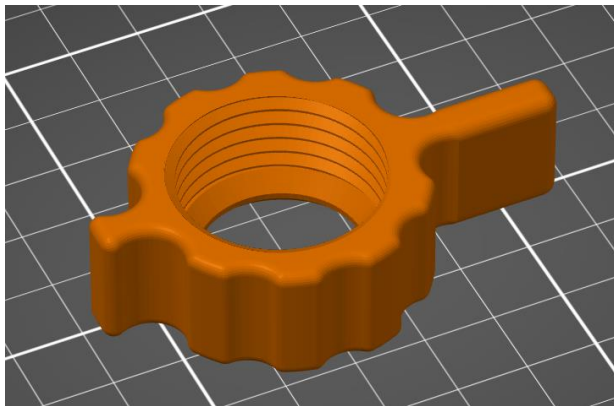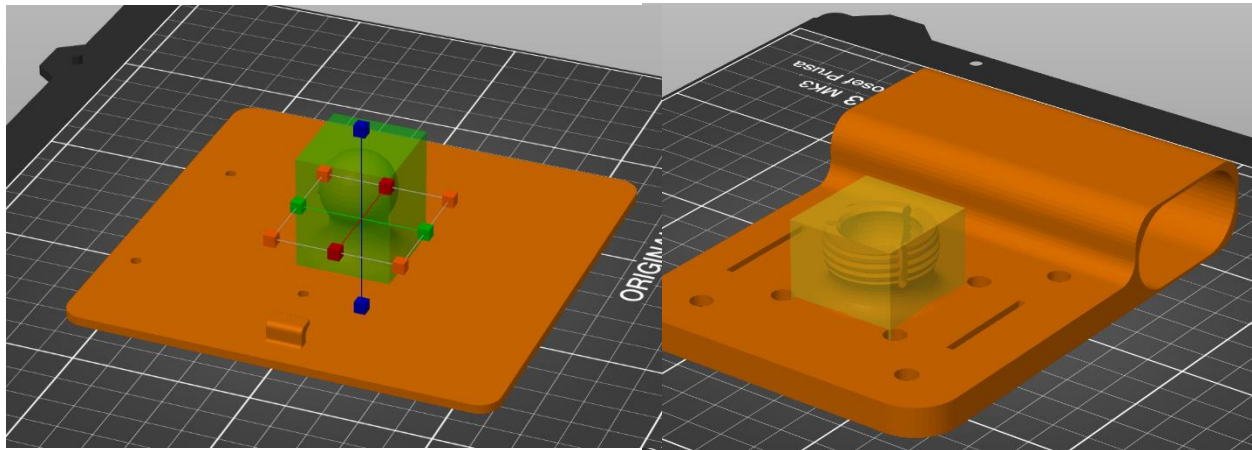


Knob must be printed in this orientation:

Assembly instructions


Screw the knob on about three-quarter turn.

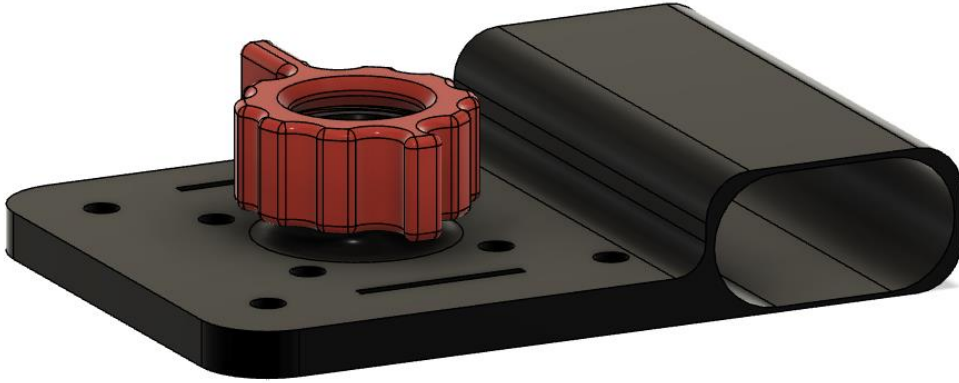


Now press the back plate in with force.

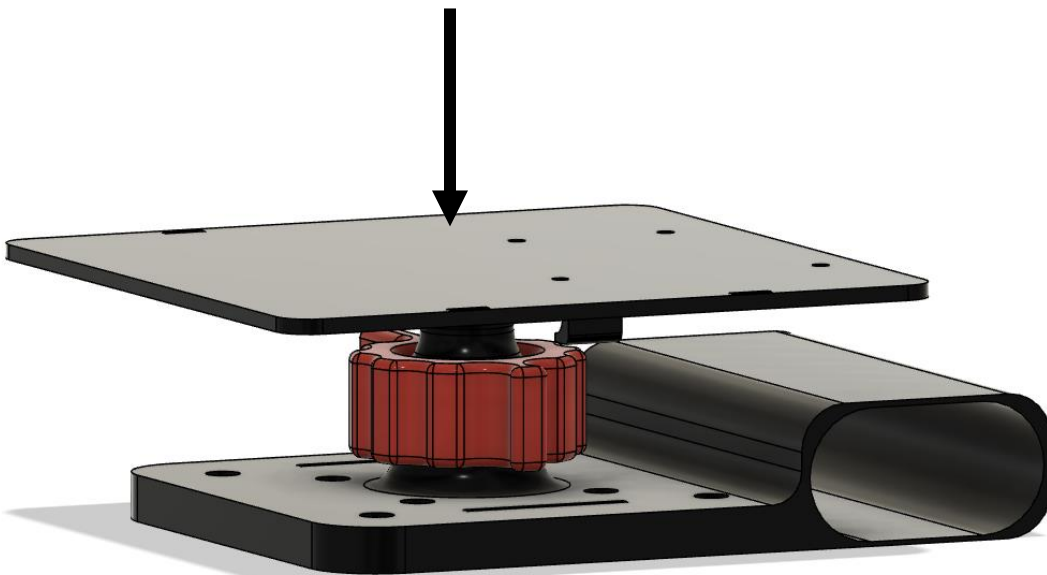


Glue the pins like this into the holes. Note the orientation, the “head” shall point out.

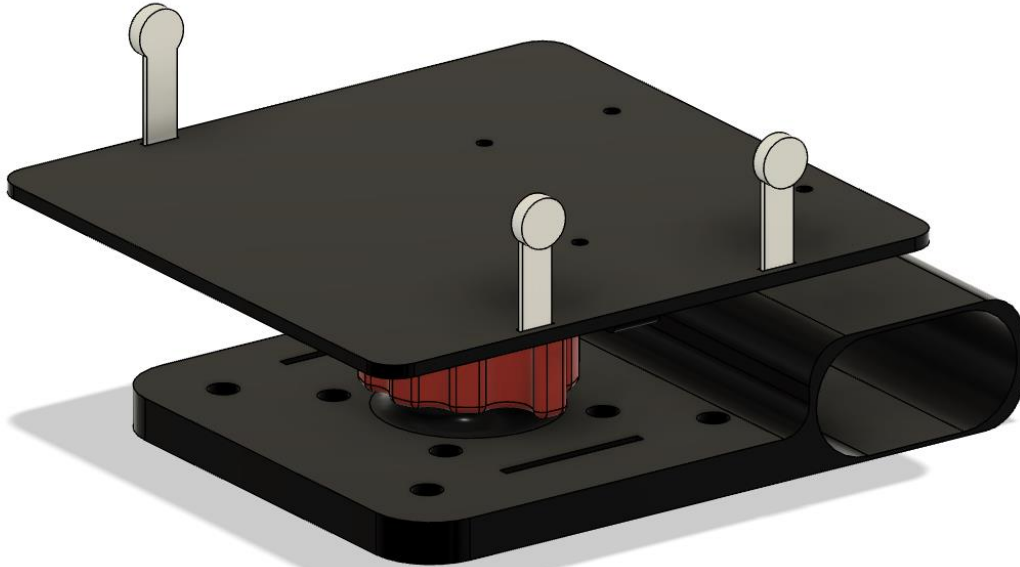

Now place C211 antenna board on top of the Odin EVK

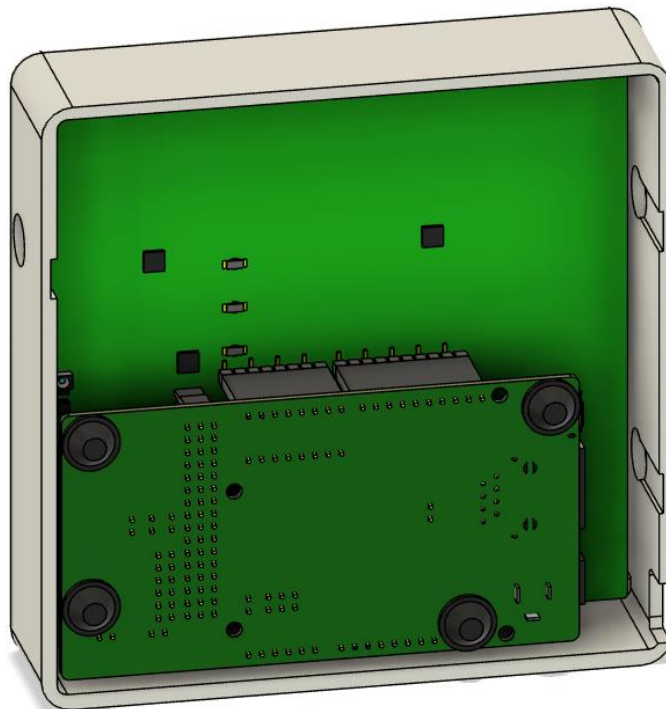

Now fit the lid on, the pins will bend slightly allowing you to put on the lid. The pins will lock into the holes in the lid.

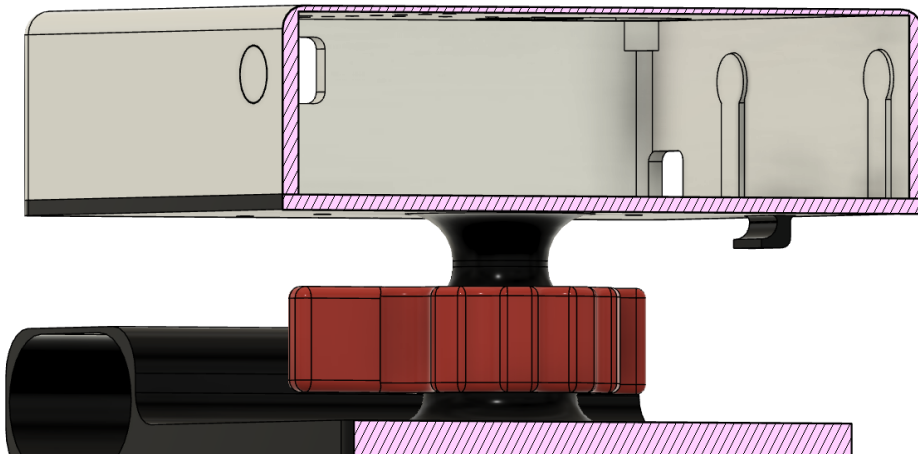

Done

