



1. Download the [Flash Download Tools](#) and unzip.
2. Execute flash_download_tool_x.y.z.exe

Name	Date modified	Type	Size
bin	2023-02-21 4:14 AM	File folder	
configure	2023-10-21 4:12 PM	File folder	
doc	2023-06-12 3:44 AM	File folder	
flash_download_tool_3.9.5.exe	2023-06-12 2:16 AM	Application	19,177 KB

3. Select develop Mode
Select ESP32 DownloadTool

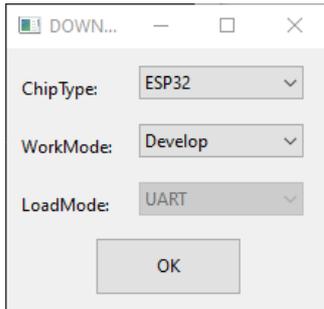

4. Select and check the first 3 binary files in the first 3 fields and match the option as in the screenshot.
For the 4th field, check it too and use the firmware that match your adapter type.
In order each bin offset value are: 0x1000, 0x8000, 0xD000 & 0x10000.

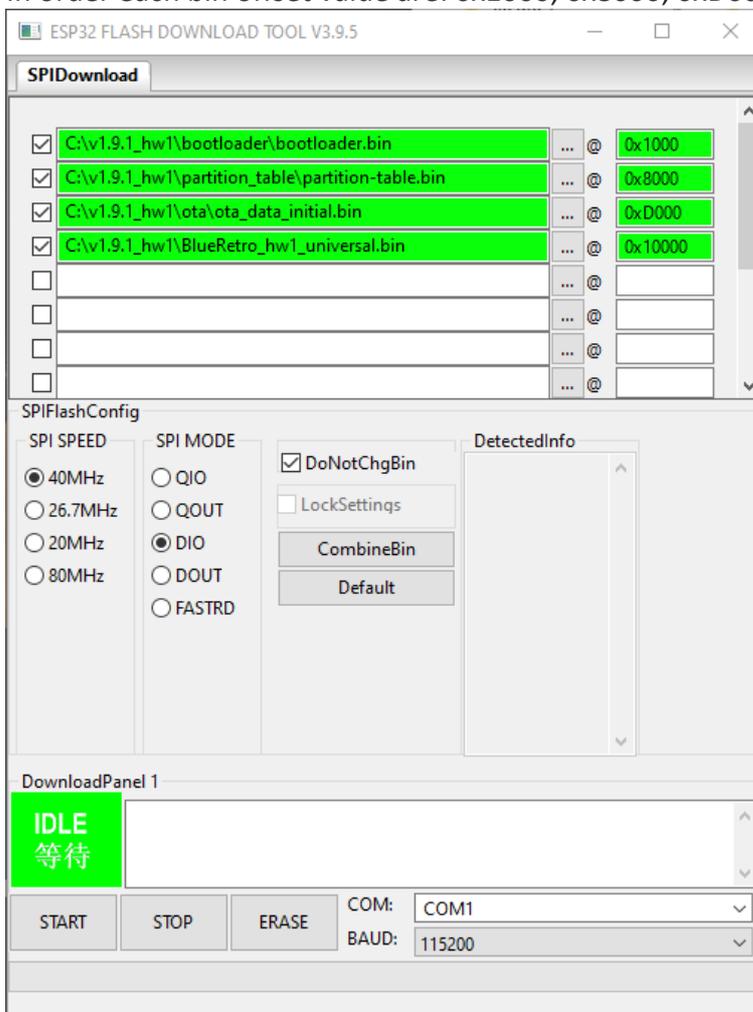

5. Select proper COM port for your machine.
6. Press START
7. Wait for status to change to FINISH.