

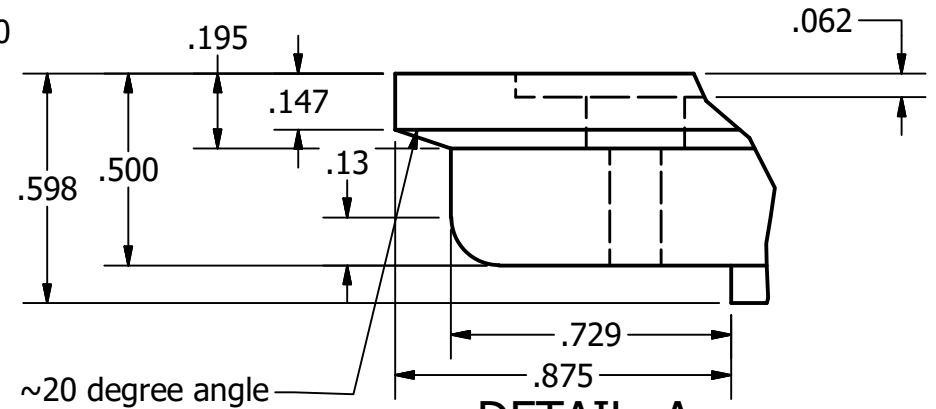


Notes:

- The 0.25" holes will be for a 0.25" slip-fit dowel.
- The other holes should be thru, tapped, and counter-bored for an M3 screw/bolt.
- Please break all hard edges.

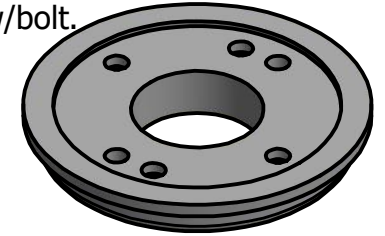

DETAIL A
SCALE 2 : 1

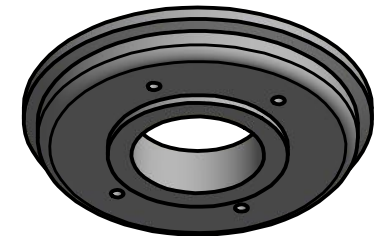

*Units of inches