



SIM800C

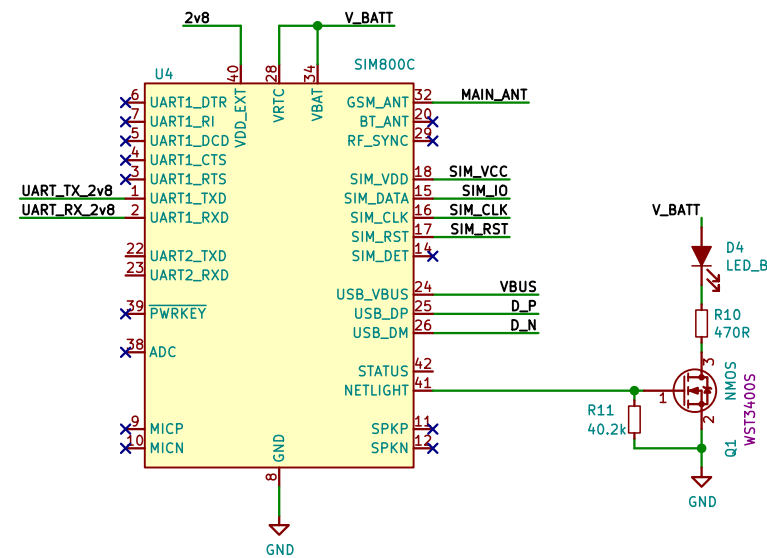

H1 MountingHole_Pad
H2 MountingHole_Pad

Antennas

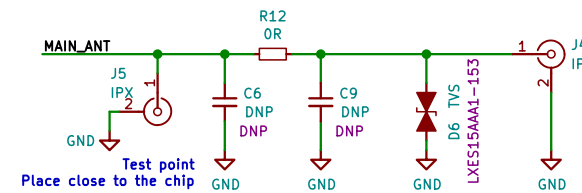


Host connector

Maj version

0	Dev
1	
2	2G
3	
4	4G
5	
6	WiFi
7	
8	
9	


The version resistor forms a voltage divider with a 40.2K resistor on the host board. The host then can read the version as an analog voltage value. Check out the table.

Version	V_in	ADC voltage	R_bottom	#DIVI/O	Standard
0	3.3	0	40200	DNP	DNP
1	3.3	0.35	40200	338229	340K
2	3.3	0.7	40200	149314	150K
3	3.3	1.05	40200	86143	86.6K
4	3.3	1.4	40200	54557	54.9K
5	3.3	1.75	40200	35606	35.7K
6	3.3	2.1	40200	22971	22.6K
7	3.3	2.45	40200	13947	14K
8	3.3	2.8	40200	7179	7.15K
9	3.3	3.15	40200	1914	1.91K

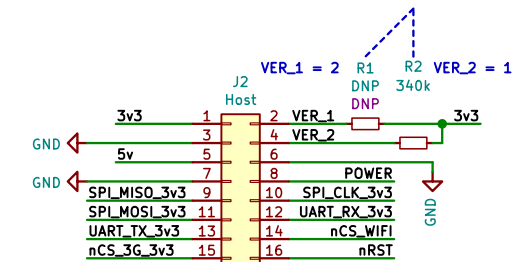

Level shifters


2.8v <-> 3.3v

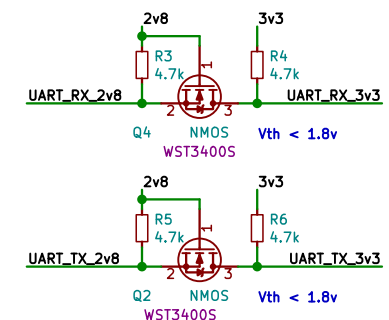


Okra logo

USB


(Optional, for FW update)

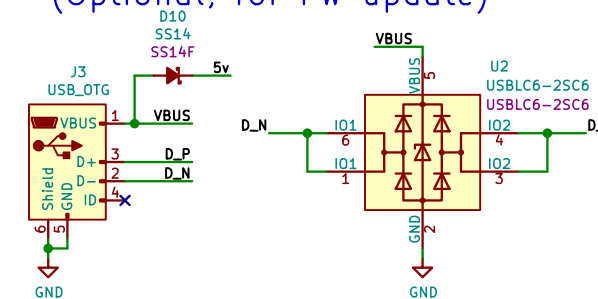

Power supply

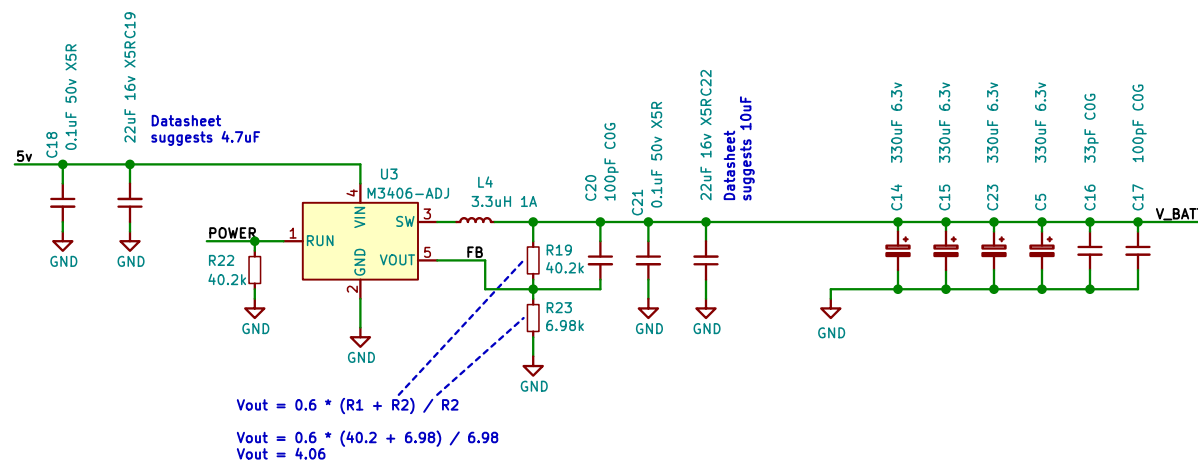

USIM Card

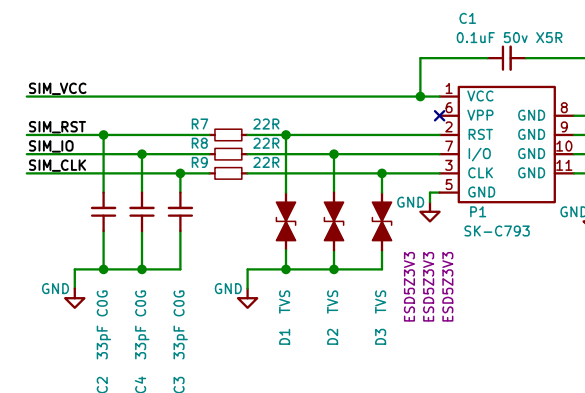

Alexey Zaytsev / Okra Solar

Sheet: /
File: cicada-2g.sch

Title: Cicada 4G

Size: A3 Date: 2019-04-02

KiCad E.D.A. kicad (5.1.0-10-g6006703)

Rev: 0.1

Id: 1/1