



Illustrated Parts List

Model Series

49M900

TYPE NUMBERS
0036 THROUGH 1036












TABLE OF CONTENTS

Air Cleaner	7
Alternator	10
Blower Housing	7
Camshaft	2
Carburetor	6
Controls	9
Crankshaft	2
Cylinder	2
Cylinder Head	5
Electric Starter	10
Engine Sump	3
Flywheel	8
Fuel Supply	6
Ignition	10
Gasket Set - Engine	3
Gasket Set - Valve	5
Lubrication	4
Kit-Carburetor Overhaul	6
Piston, Rings, Connecting Rod	2
Valves	5



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

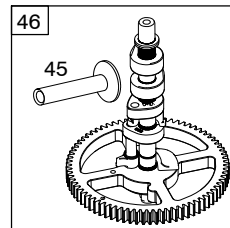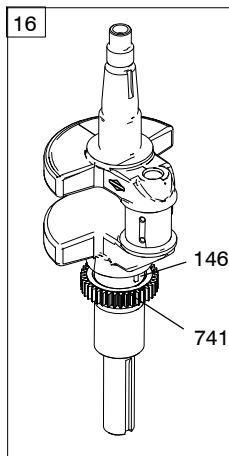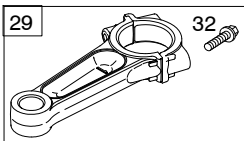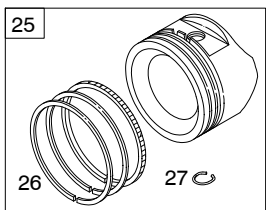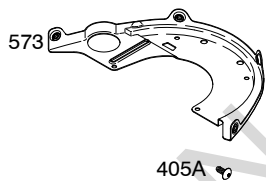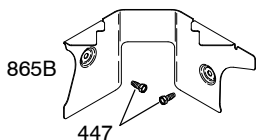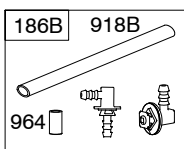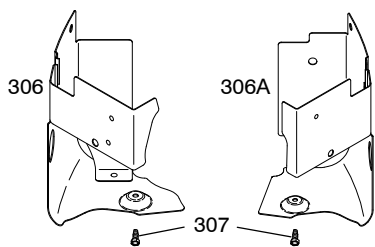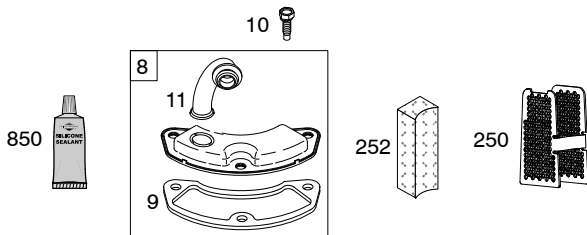
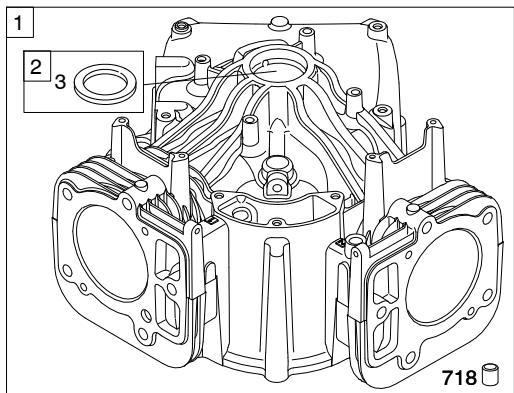


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

10283-2

Assemblies include all parts shown in frames.

03/01//2011

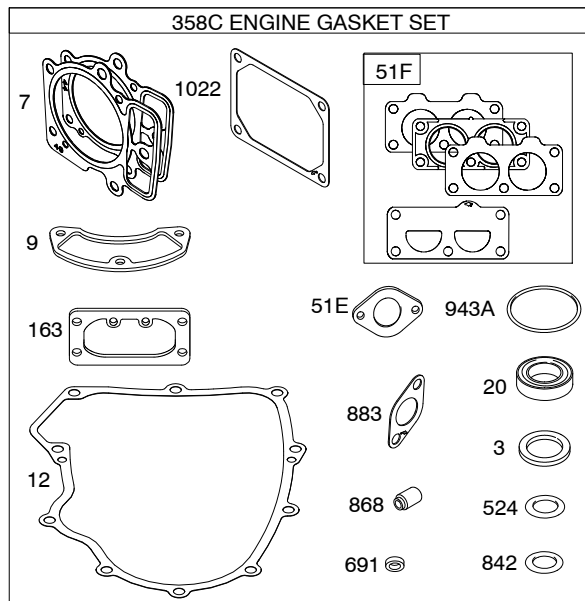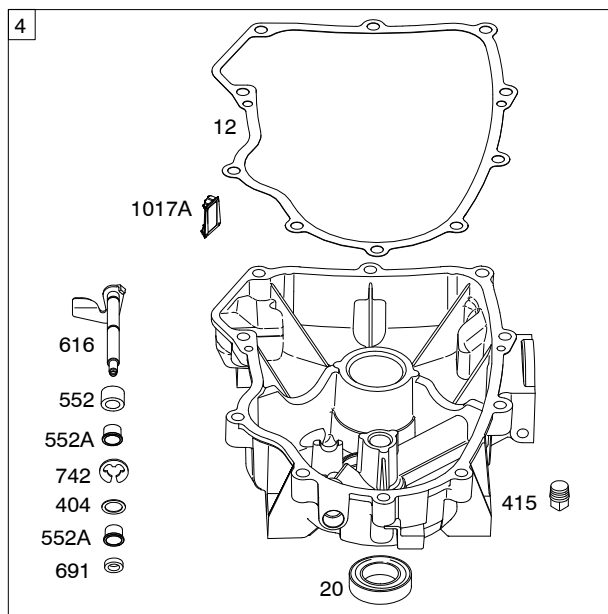


Not for
Reproduction

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.


10283-3

Assemblies include all parts shown in frames.

03/01//2011

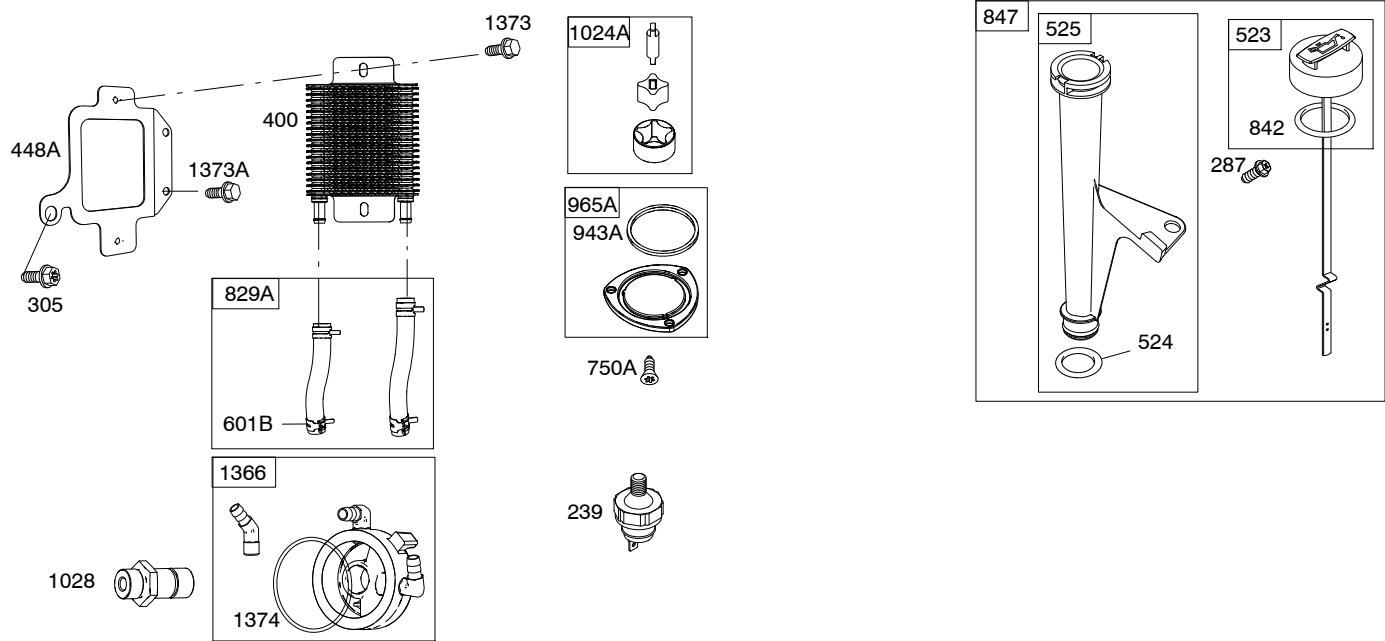

Not for
Reproduction



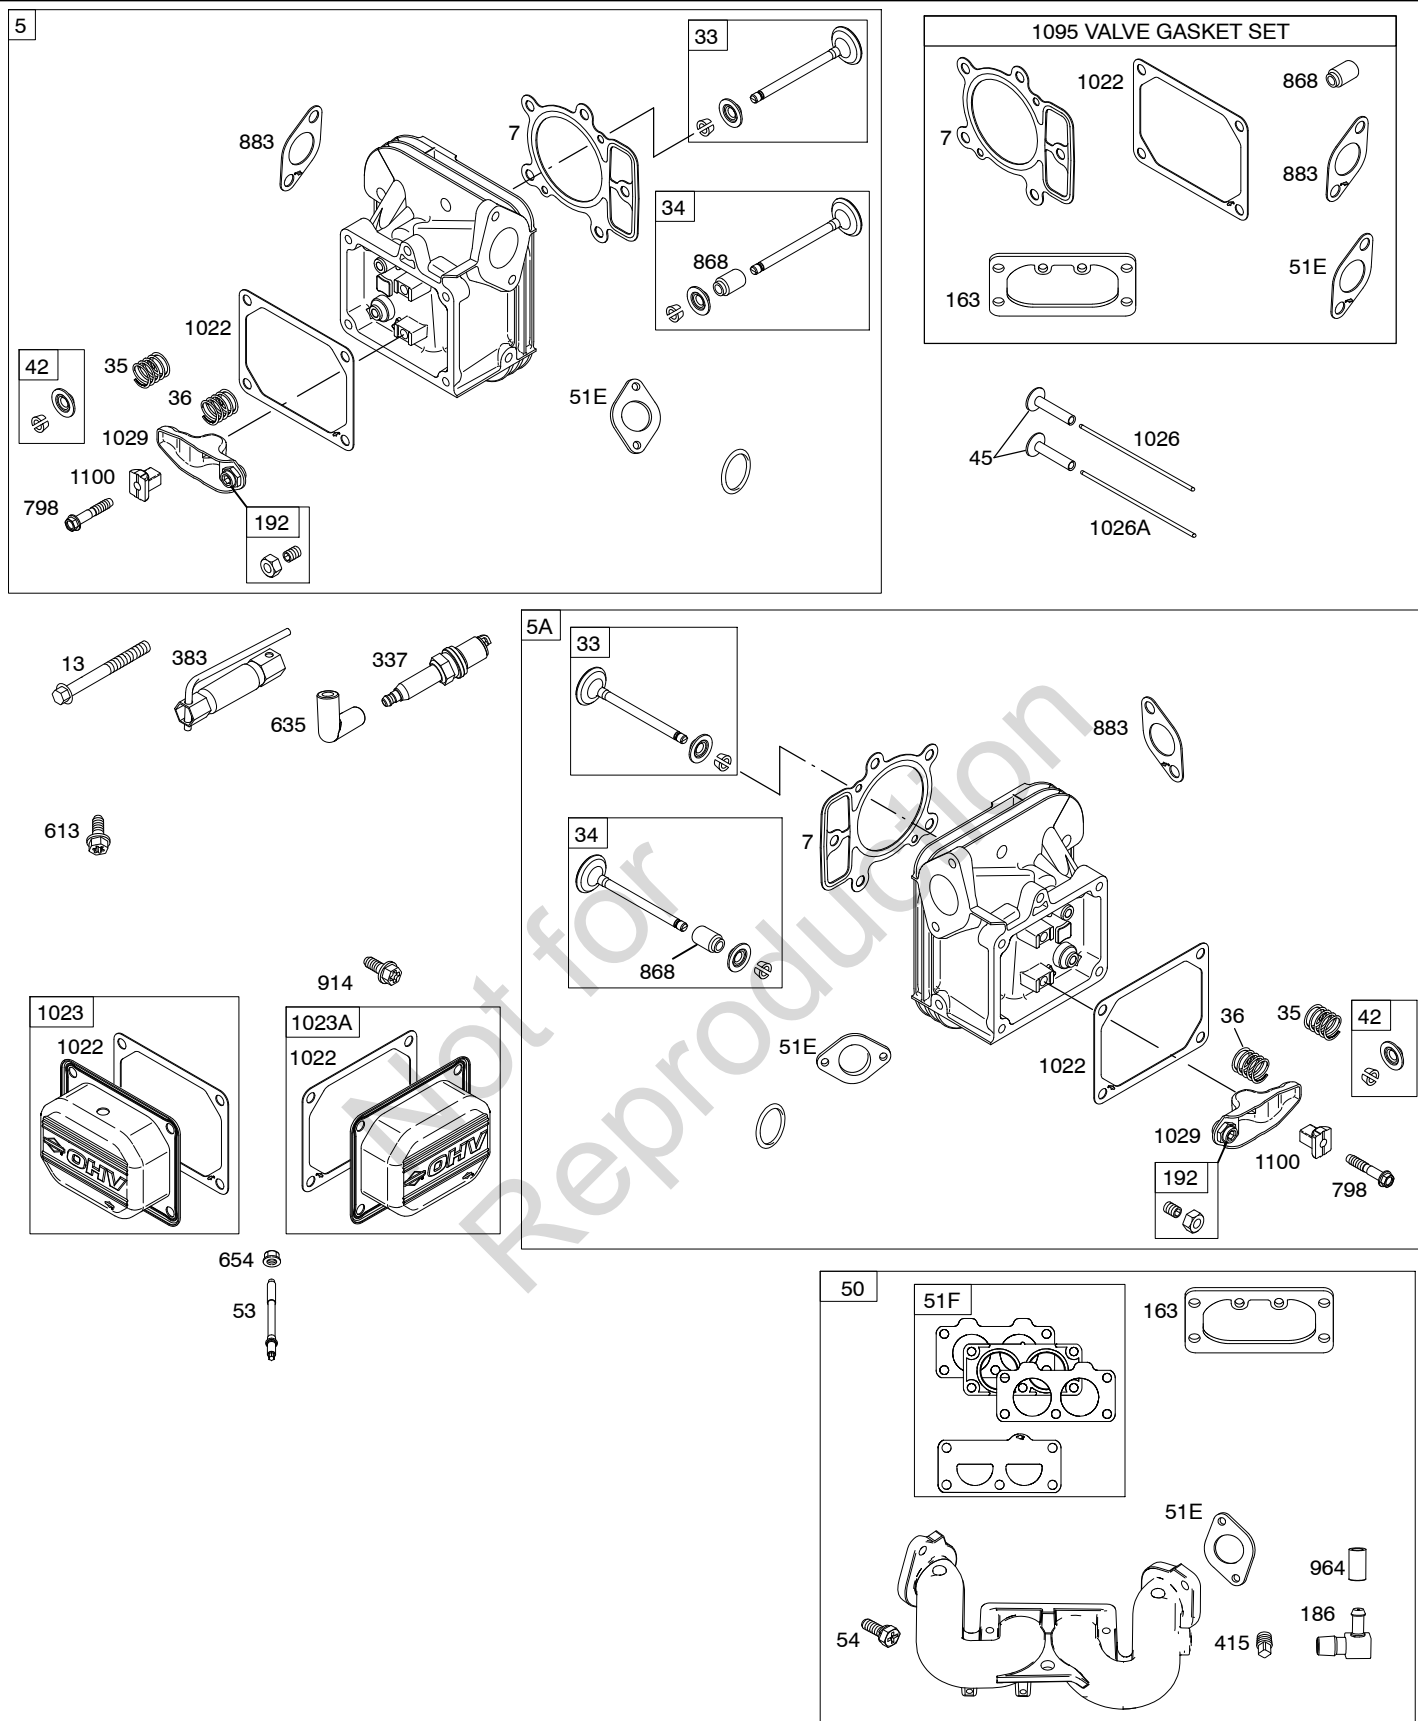


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.


10283-5

Assemblies include all parts shown in frames.

03/01//2011

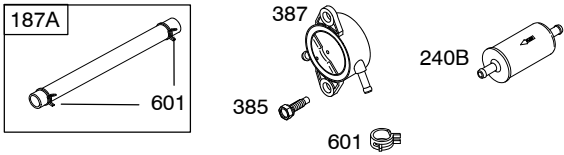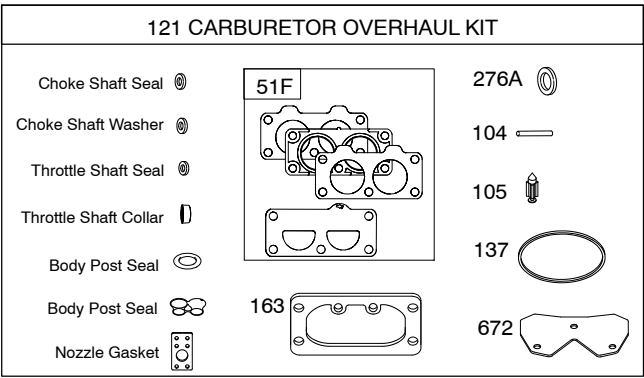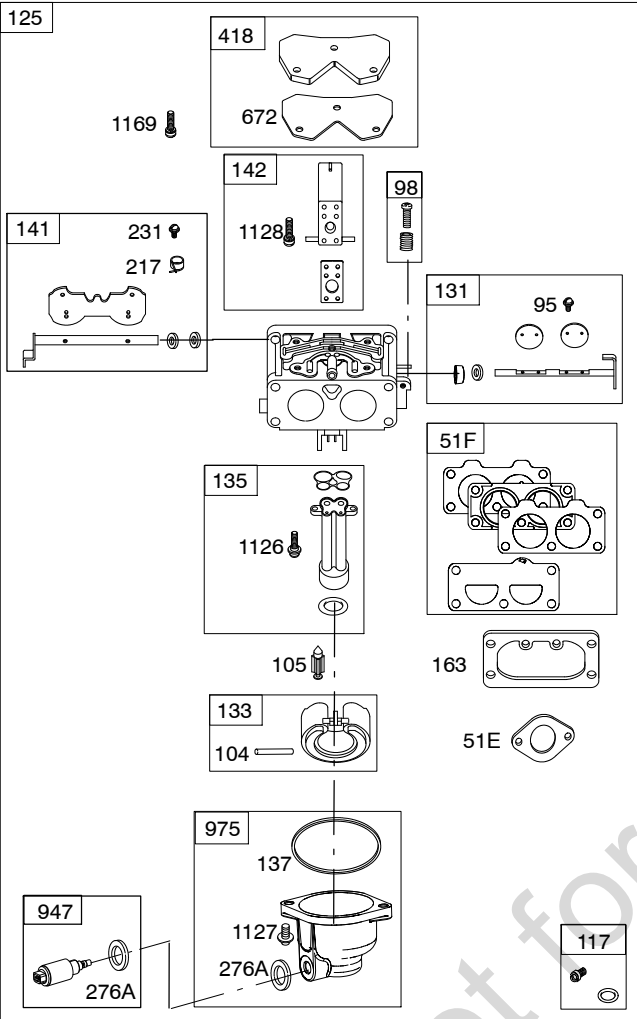

1036 EMISSIONS LABEL

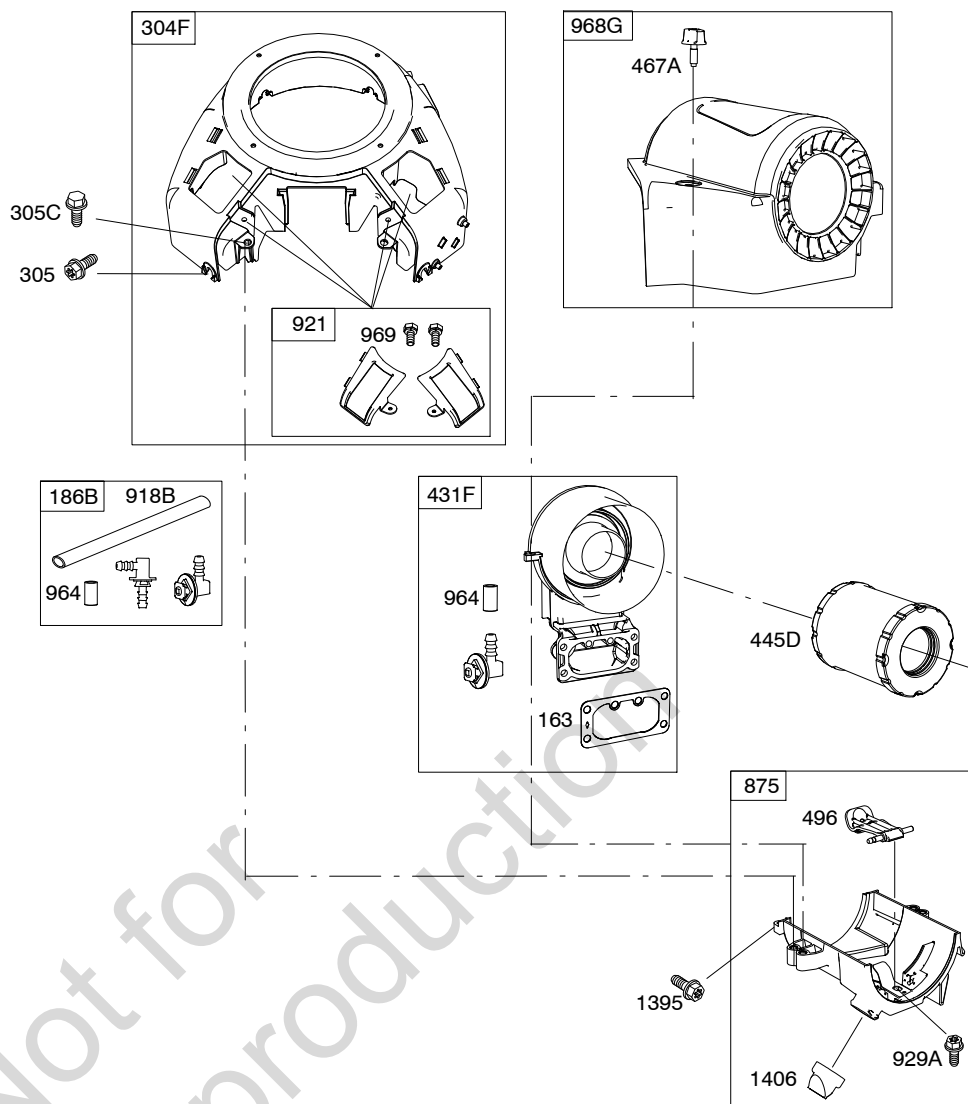










Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

10283-7



Assemblies include all parts shown in frames.

03/01//2011

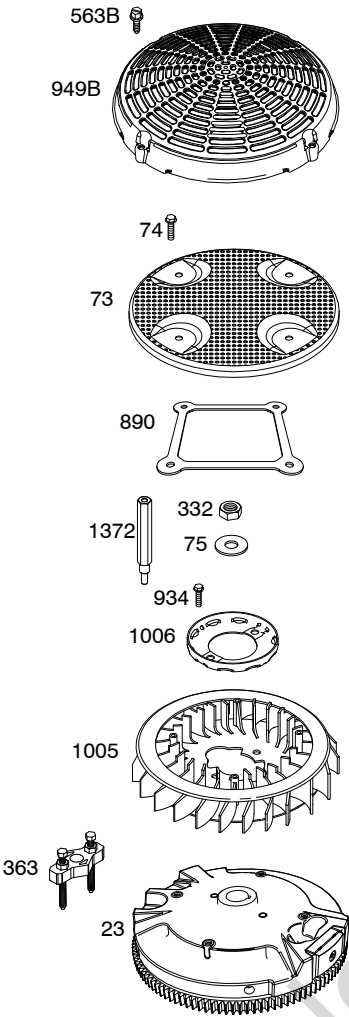

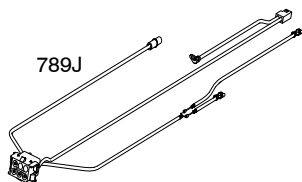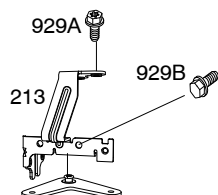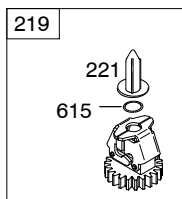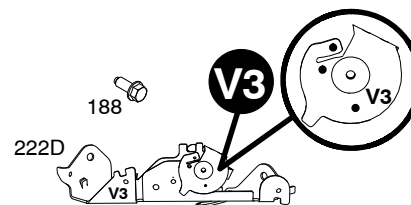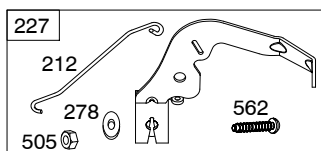


Not for
Reproduction

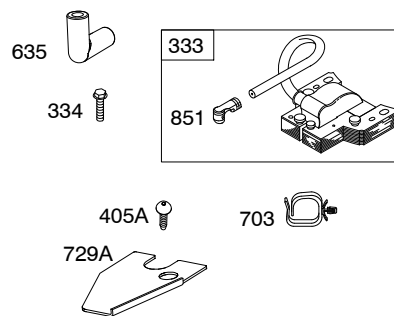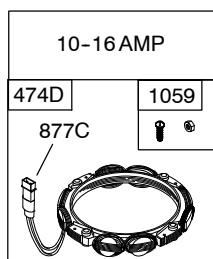

NOTE: All stators use 1119

NOTE: The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information.

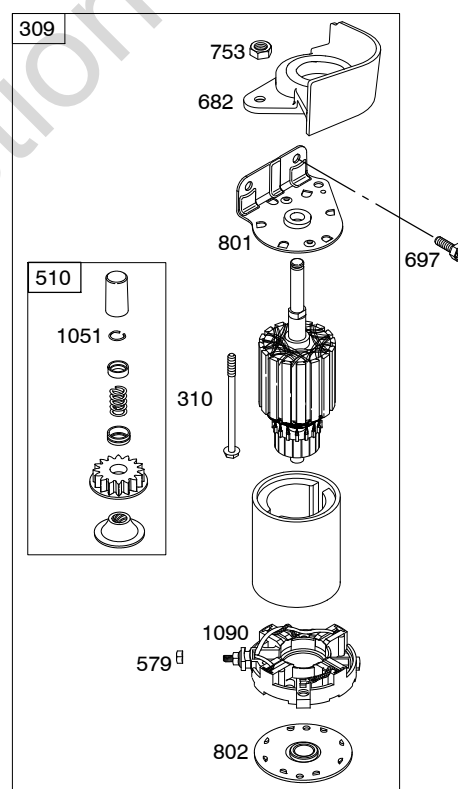

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	799509	Cylinder Assembly	53	690951	Stud (Carburetor)	221	841026	Cup-Governor
2	797673	Kit-Bushing/Seal (Magneto Side)	54	699816	Screw (Intake Manifold)	222D	798916	Bracket-Control (V3 Manual Choke)
3	391086s	Seal-Oil (Magneto Side)	73	799098	Screen-Rotating	227	798856	Lever-Governor Control
4	797502	Sump-Engine	74	799099	Screw (Rotating Screen)	231	690718	Screw (Choke Valve)
5	799088	Head-Cylinder (Cylinder #1)	75	691056	Washer (Flywheel)	239	792028	Switch-Oil Pressure
5A	799089	Head-Cylinder (Cylinder #2)	95	690718	Screw (Throttle Valve)	240B	695666	Filter-Fuel
7	796851	Gasket-Cylinder Head	98	699721	Kit-Idle Speed	250	690957	Retainer-Breather
8	792185	Breather Assembly	104	694918	Pin-Float Hinge	252	794389	Collector-Oil
9	690937	Gasket-Breather	105	797410	Valve-Float	265	691024	Clamp-Casing
10	697551	Screw (Breather Assembly)	117	842082	Jet-Main (Standard)	267	691044	Screw (Casing Clamp)
11	792184	Tube-Breather	118	842081	Jet-Main (High Altitude)	276A	695410	Washer-Sealing
12	697227	Gasket-Crankcase	121	799132	Kit-Carburetor Overhaul	278	792651	Washer (Governor Control Lever)
13	793988	Screw (Cylinder Head)	125	799511	Carburetor	287	697820	Screw (Dipstick Tube)
15A	690946	Plug-Oil Drain	131	796872	Kit-Throttle Shaft	304F	799091	Housing-Blower (Oil Cooler Compatible)
16	796855	Crankshaft	133	699724	Float-Carburetor	305	691005	Screw (Blower Housing)
20	795387	Seal-Oil (PTO Side)	135	699729	Tube-Fuel Transfer	305C	691130	Screw (Blower Housing to Air Cleaner Base)
22	694966	Screw (Crankcase Cover/Sump)	137	690994	Gasket-Float Bowl	306	796852	Shield-Cylinder (Cylinder #1)
23	799090	Flywheel	141	799112	Kit-Choke Shaft	306A	798855	Shield-Cylinder (Cylinder #2)
24	796335	Key-Flywheel	142	796871	Nozzle-Carburetor	307	691003	Screw (Cylinder Shield)
25	796909	Piston Assembly (Standard)	146	690979	Key-Timing	309	799106	Motor-Starter
	----- Note -----		163	691001	Gasket-Air Cleaner	310	691263	Screw (Starter Motor)
	796910	Piston Assembly (.020" Oversize)	186	794873	Connector-Hose	332	691059	Nut (Flywheel)
26	796911	Ring Set (Standard)	186B	799158	Connector-Hose	333	691060	Armature-Magneto
	----- Note -----		187A	791766	Line-Fuel (15" Long)(Cut to Required Length)	334	691061	Screw (Magneto Armature)
	796912	Ring Set (.020" Oversize)	188	697551	Screw (Control Bracket)	337	491055s	Plug-Spark
27	690975	Lock-Piston Pin	192	690083	Adjuster-Rocker Arm	358C	799117	Gasket Set-Engine
28	696581	Pin-Piston	209	799175	Spring-Governor Used on Type No(s). 0036.	363	19203	Puller-Flywheel
29	796209	Rod-Connecting		----- Note -----		383	19576S	Wrench-Spark Plug
32	690976	Screw (Connecting Rod)		799258	Spring-Governor Used on Type No(s). 0110, 0111, 1036.	385	797409	Screw (Fuel Pump)
33	793557	Valve-Exhaust	211	691019	Spring-Governed Idle	387	808656	Pump-Fuel
34	793556	Valve-Intake	212	695238	Link-Throttle	400	796862	Cooler-Oil
35	694865	Spring-Valve (Intake)	213	799510	Bracket-Choke (Manual Choke)	404	690442	Washer (Governor Crank)
36	694865	Spring-Valve (Exhaust)	216	691022	Link-Choke (Manual Choke)	405A	697820	Screw (Backplate)
42	499586	Keeper-Valve	217	695409	Spring-Choke Return			
45	690977	Tappet-Valve	219	793338	Gear-Governor			
46	796853	Camshaft	220	690412	Washer (Governor Gear)			
50	797503	Manifold-Intake						
51E	690949	Gasket-Intake						
51F	798759	Gasket-Intake						

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

49M900

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
415	794903	Plug	703	691010	Clip	975	799114	Bowl-Float/Solenoid
418	795912	Plate-Carburetor	718	690959	Pin-Locating	1005	791236	Fan-Flywheel
431F	799097	Elbow-Intake	729A	797454	Clip-Wire	1006	798750	Retainer-Fan
445D	798897	Filter-Air Cleaner Cartridge	741	690980	Gear-Timing	1017A	796214	Screen-Oil Pump
447	691003	Screw (Air Guide Cover)	742	690328	Retainer-E Ring	1022	690971	Gasket-Rocker Cover
448A	799103	Bracket-Oil Cooler	750A	796208	Screw (Oil Pump Cover)	1023	793146	Cover-Rocker (Cylinder #1)
467A	790697	Knob-Air Cleaner	753	690276	Nut-Starter	1023A	499600	Cover-Rocker (Cylinder #2)
474D	696458	Alternator (10-16 Amp. Regulated)	789J	797424	Harness-Wiring	1024A	796220	Pump-Oil
496	799095	Lever-Air Cleaner Base	798	697890	Screw (Rocker Arm)	1026	690981	Rod-Push (Steel)
501D	797375	Regulator (10-16 Amp.)	801	691283	Cap-Drive	1026A	690982	Rod-Push (Aluminum)
505	691029	Nut (Governor Control Lever)	802	691286	Cap-End	1027	696854	Filter-Oil (Premium)
510	496881	Drive-Starter	829A	799104	Hose-Oil Cooler	1028	796864	Adapter-Oil Filter
523	691036	Dipstick	842	691031	Seal-O Ring (Dipstick)	1029	690972	Arm-Rocker (Includes Reference 192)
524	691032	Seal-Dipstick Tube	847	499602	Dipstick/Tube Assembly	1036		Label-Emissions (Available From A Briggs And Stratton Authorized Dealer)
525	691037	Tube-Dipstick	850	100106	Sealant-Liquid	1051	691124	Ring-Retaining
526B	697551	Screw (Regulator)	851	493880s	Terminal-Spark Plug	1058	279348	Operator's Manual
552	796638	Bushing-Governor Crank	865B	792286	Cover-Air Guide (Valley)	1059	698516	Kit-Screw/Washer
552A	690553	Bushing-Governor Crank	868	690968	Seal-Valve	1090	691293	Retainer-Brush
562	690311	Bolt (Governor Control Lever)	875	799094	Base-Air Cleaner	1095	694013	Gasket Set-Valve
563B	799360	Screw (Debris Guard)	877C	399916	Wire/Connector-Alternator	1100	791959	Pivot-Rocker Arm
573	790444	Plate-Back	883	690970	Gasket-Exhaust	1119	691183	Screw (Alternator)
579	691029	Nut (Starter Cable)	890	799100	Plate-Support	1126	690991	Screw (Fuel Transfer Tube)
601	691038	Clamp-Hose	914	691127	Screw (Rocker Cover)	1127	695407	Screw (Float Bowl)
601B	841597	Clamp-Hose	918B	799160	Hose-Vacuum (Length 9.4 Inches)	1128	690990	Screw (Carburetor Nozzle)
613	690341	Screw (Muffler)	921	799092	Cover-Blower Housing	1169	690990	Screw (Carburetor Cover Plate)
615	698290	Retainer-Governor Shaft	929A	695134	Screw (Air Cleaner Base Tab To Choke Bracket)	1319	794467	Label-Warning
616	691045	Crank-Governor	929B	691003	Screw (Choke Bracket To Manifold)	1366	799131	Diverter-Oil Cooler
635	692076	Boot-Spark Plug	934	791680	Screw (Fan Retainer)	1372	799101	Stud-Mounting
654	690958	Nut (Carburetor)	943A	796222	Seal-O Ring (Oil Pump Cover)	1373	695629	Screw (Oil Cooler Bracket)
672	690234	Gasket-Carburetor Plate	947	798779	Solenoid-Fuel	1373A	799105	Screw (Oil Cooler Bracket)
682	799107	Shield-Starter	949B	799357	Guard-Debris Screen	1374	796863	Seal-O-Ring (Oil Cooler Diverter)
691	790574	Seal-Governor Shaft	964	799159	Cap-Connector	1395	698304	Screw (Air Cleaner Base)
697	791680	Screw (Drive Cap)	965A	796221	Cover-Oil Pump	1406	799096	Valve
			968G	799102	Cover-Air Cleaner			
			969	799093	Screw (Blower Housing Cover)			

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 10283-12 Assemblies include all parts shown in frames. 03/01/2011

Not for
Reproduction

Not for
Reproduction

Not for
Reproduction

Not for
Reproduction

