





C1402- TRANSFER CASE RANGE SELECT SWITCH CIRCUIT HIGH

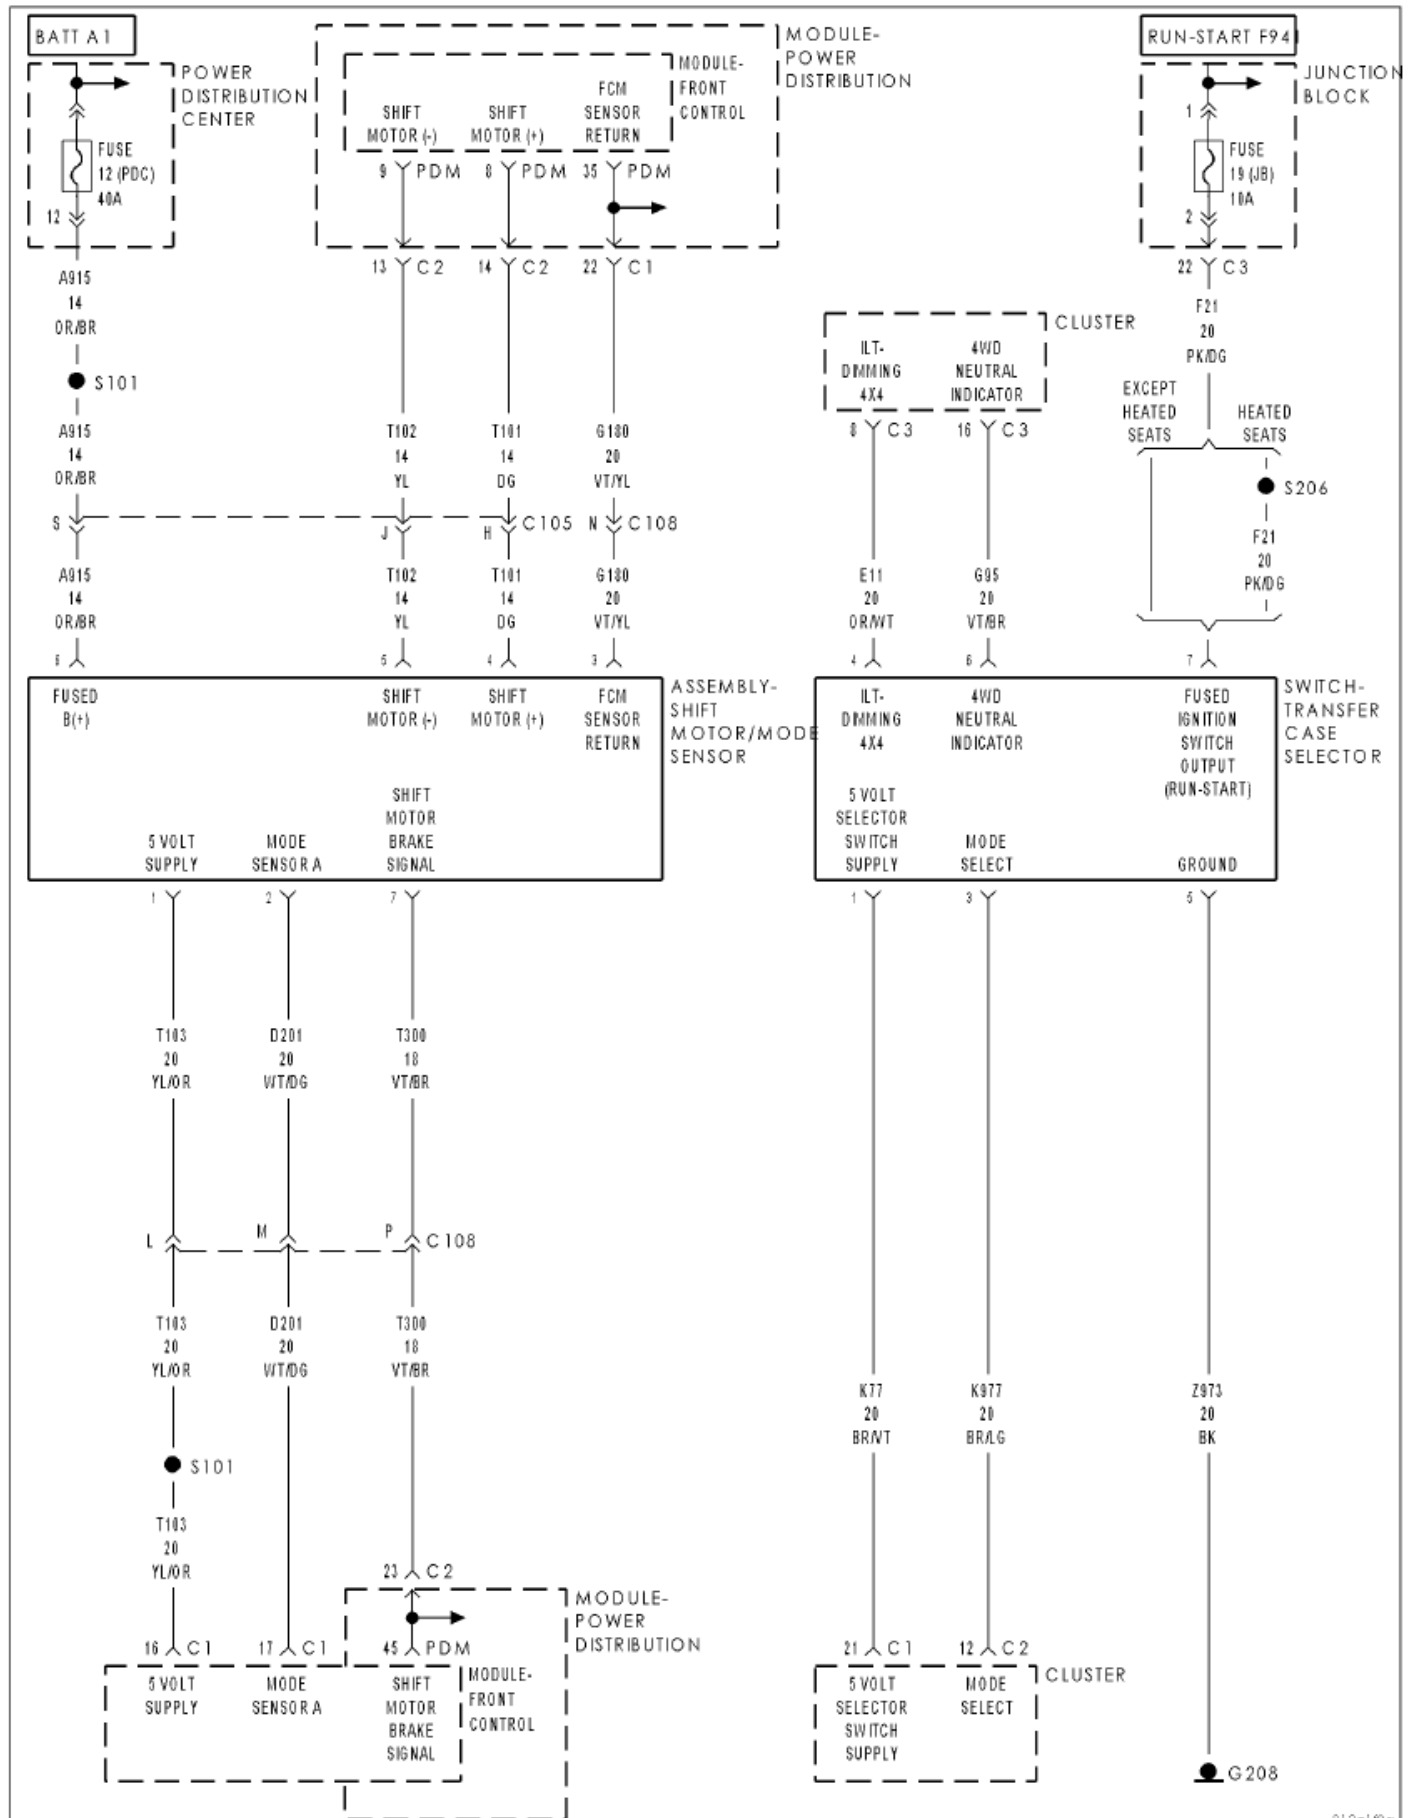



4.7L/5.7L

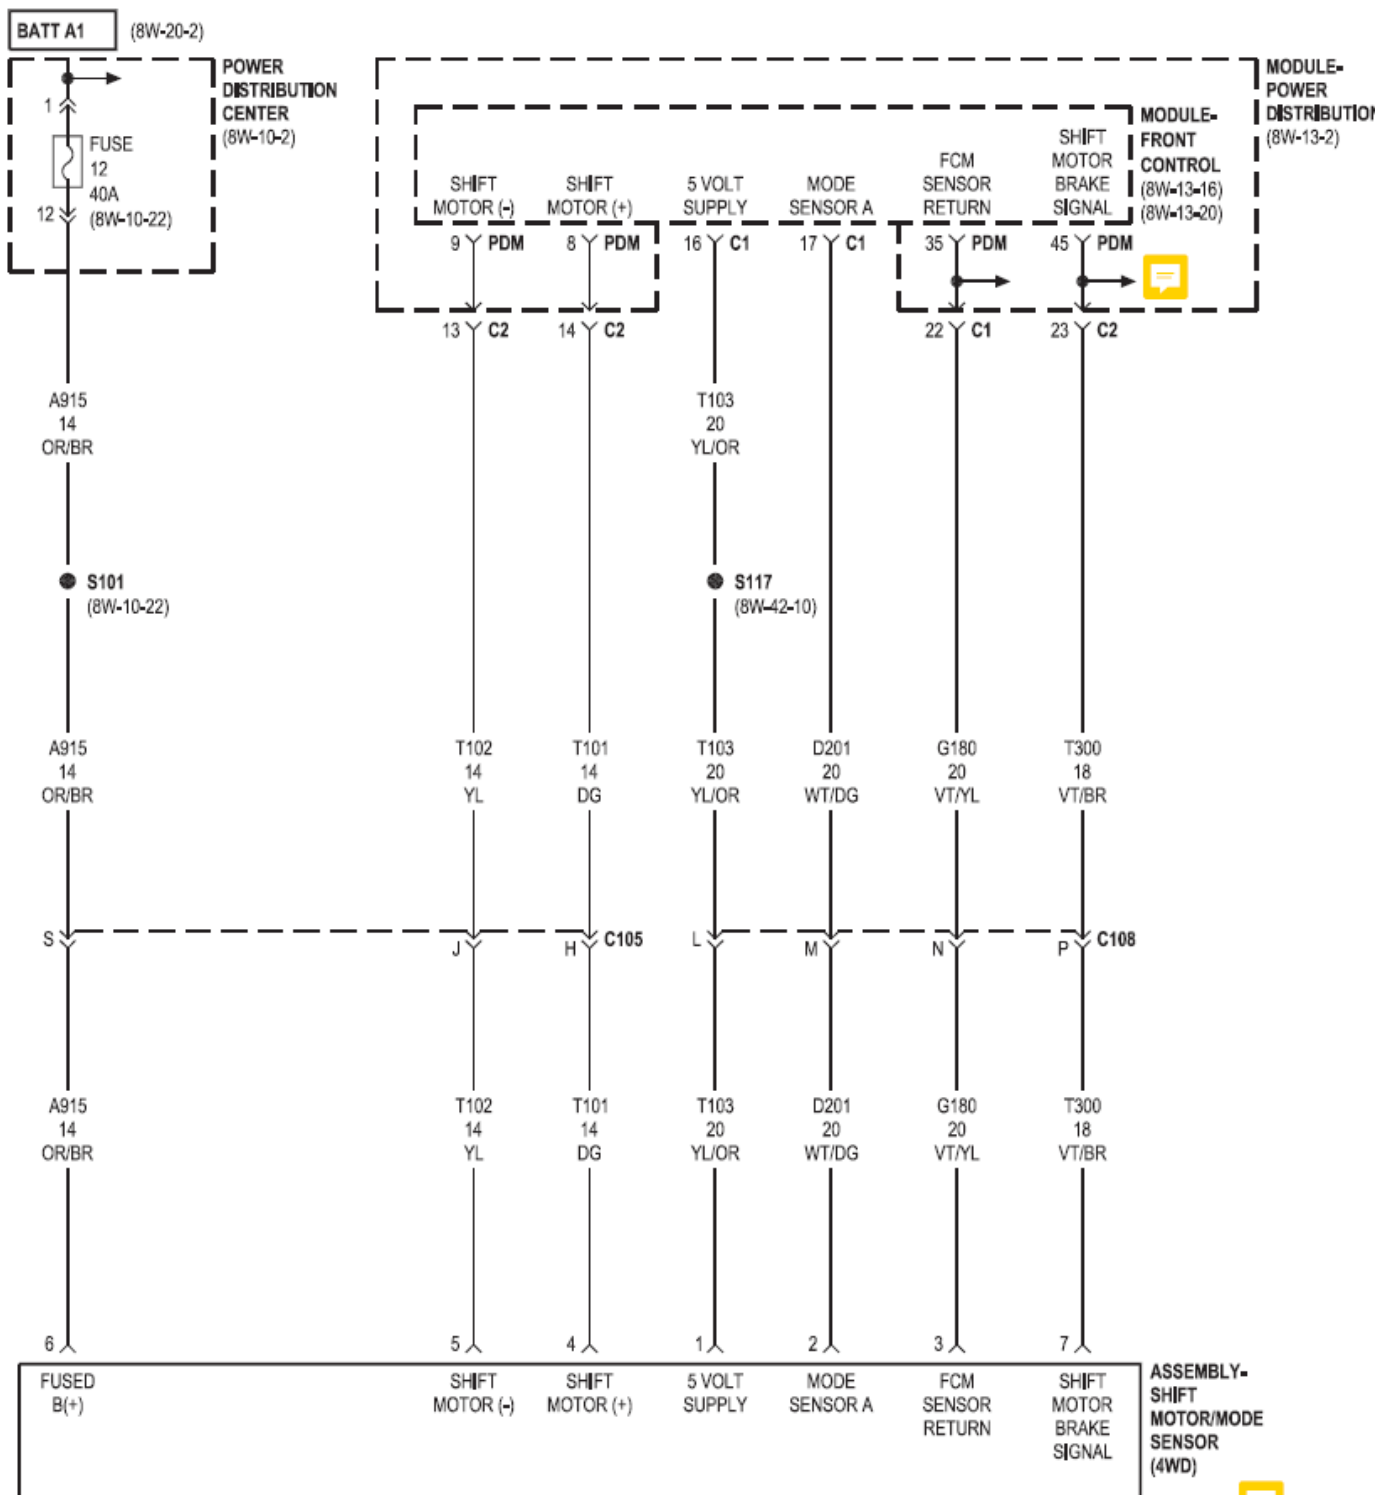


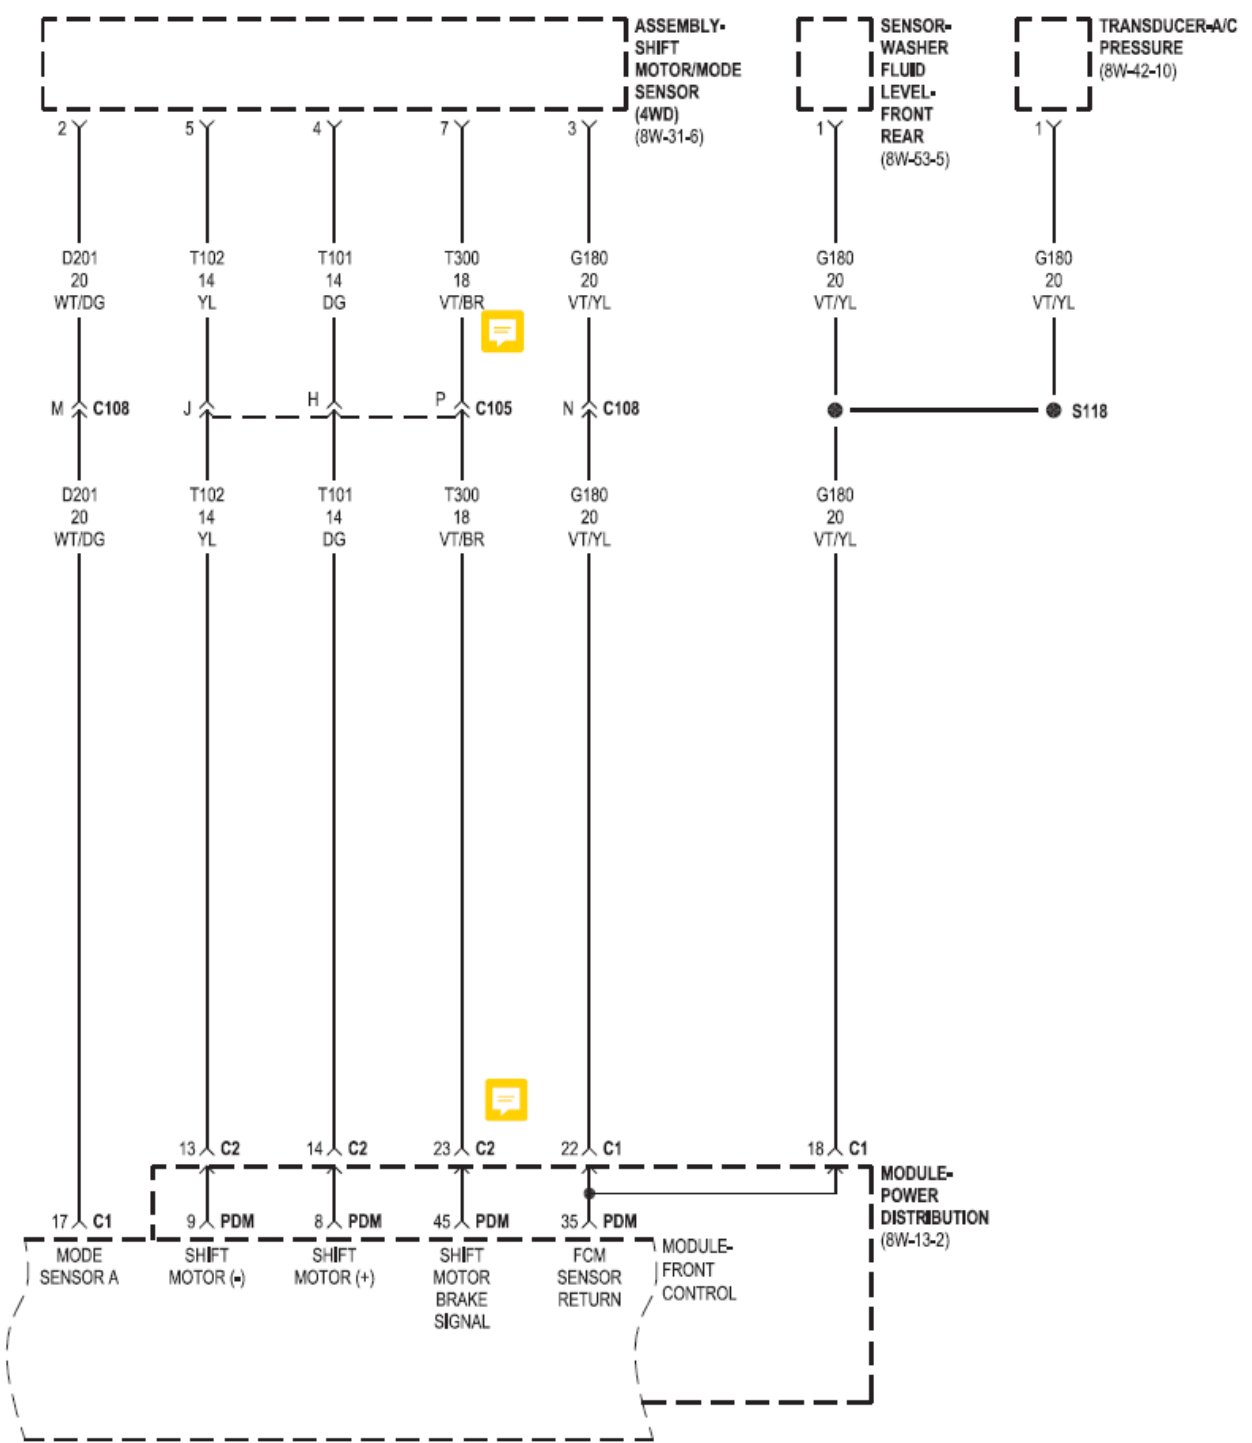

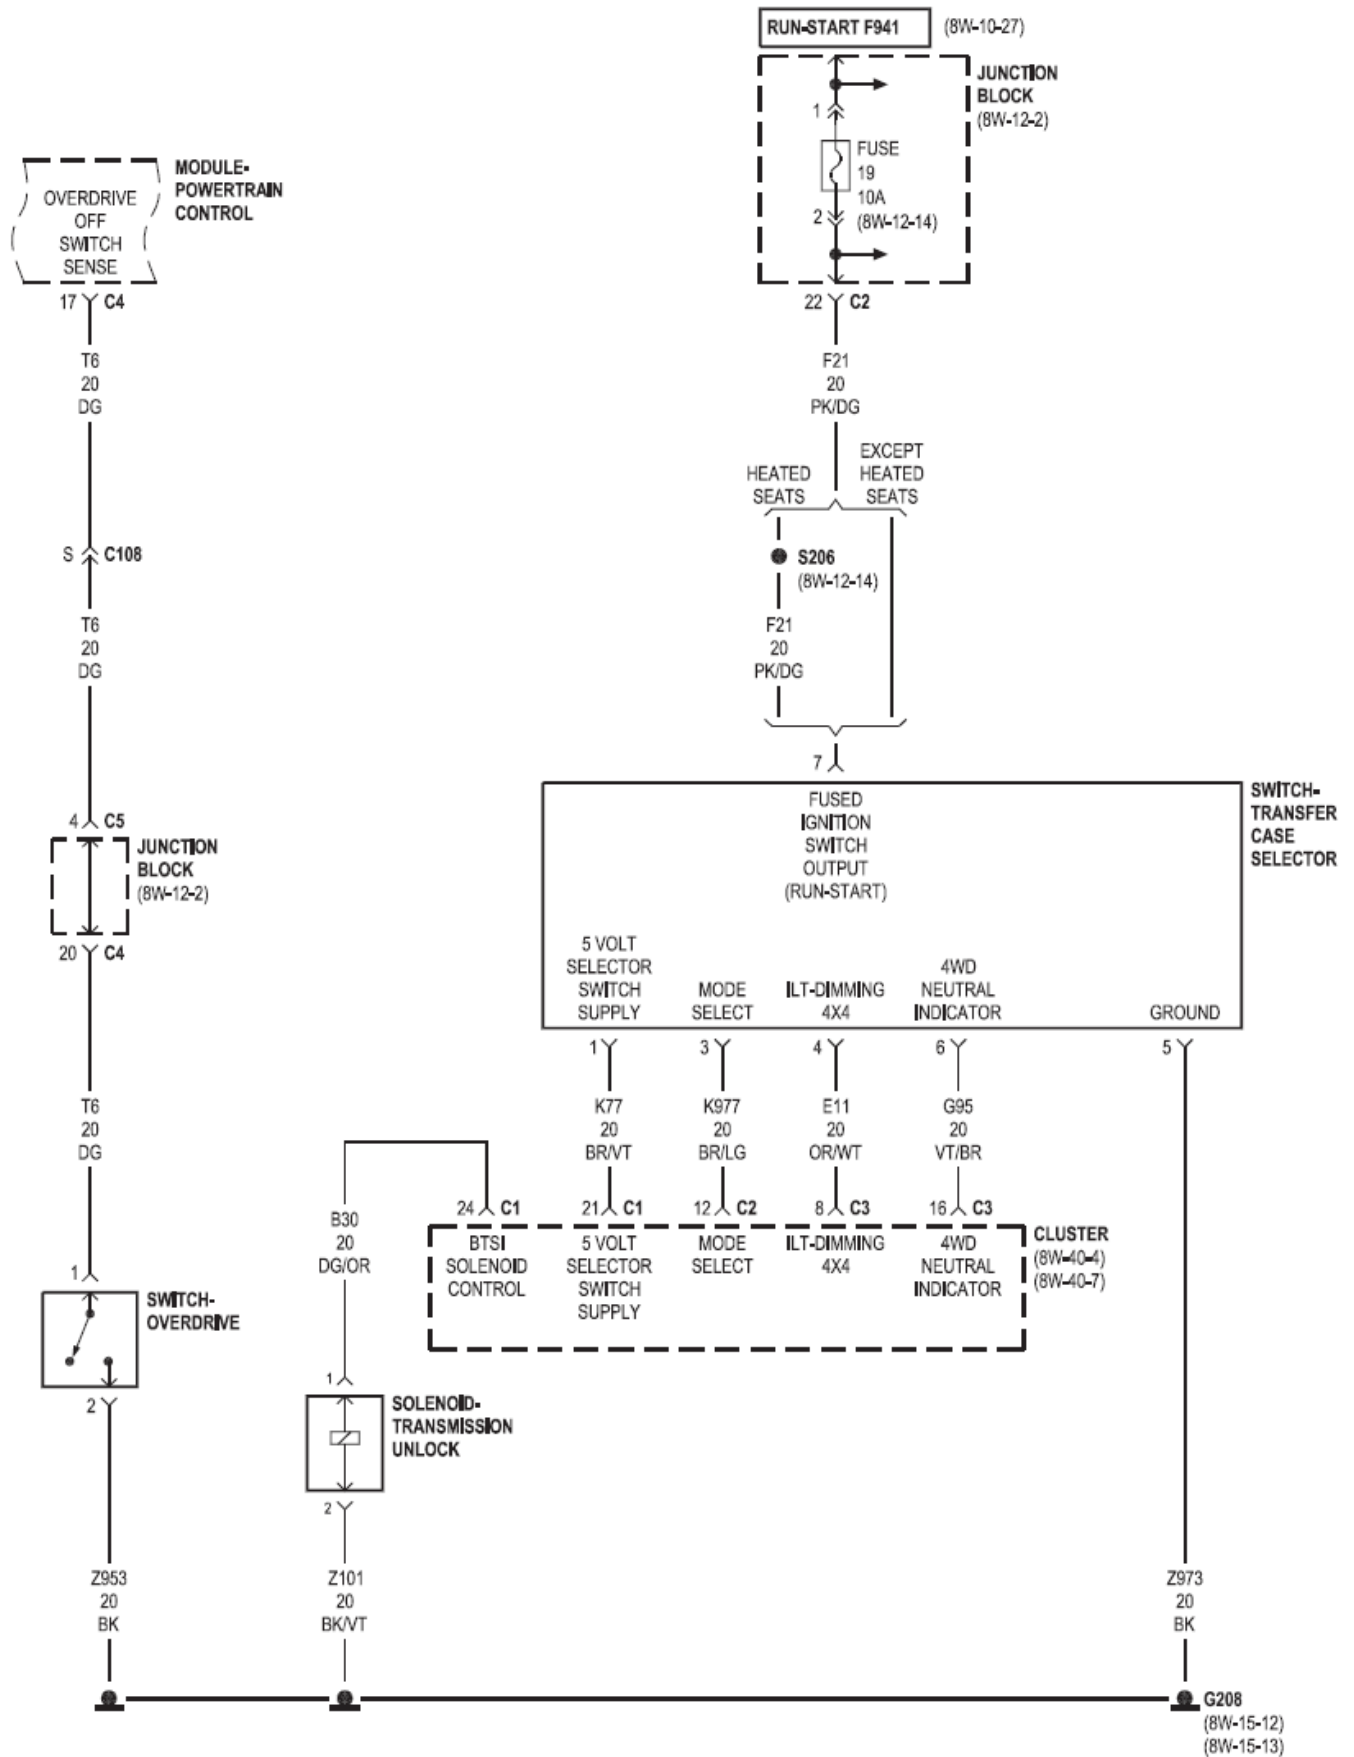

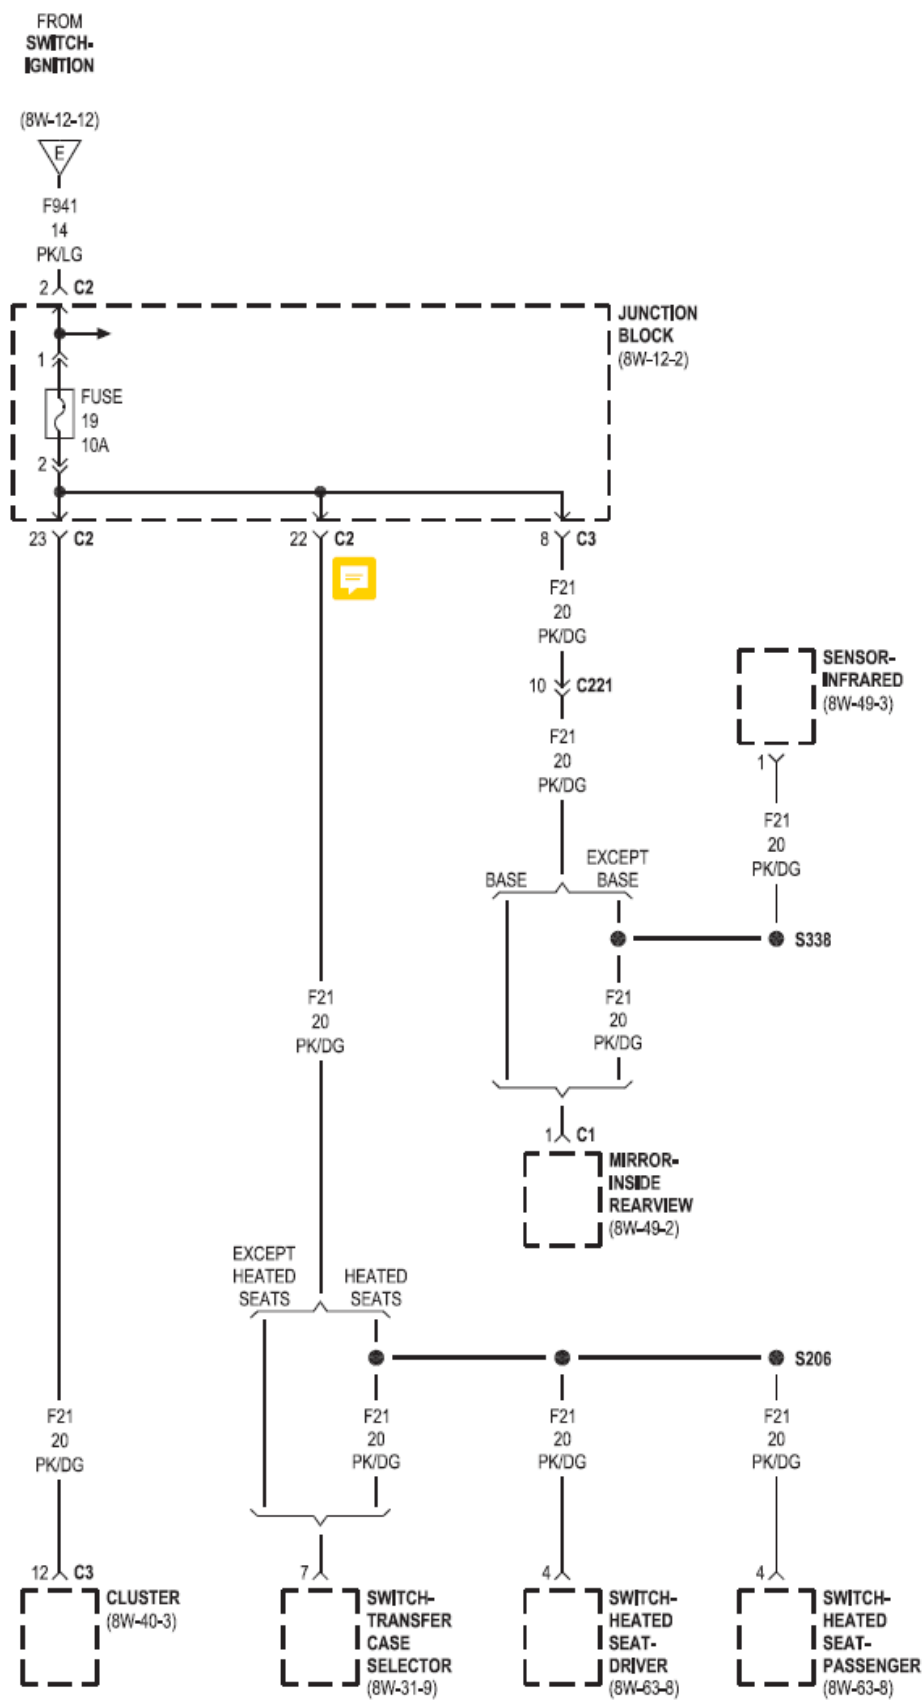


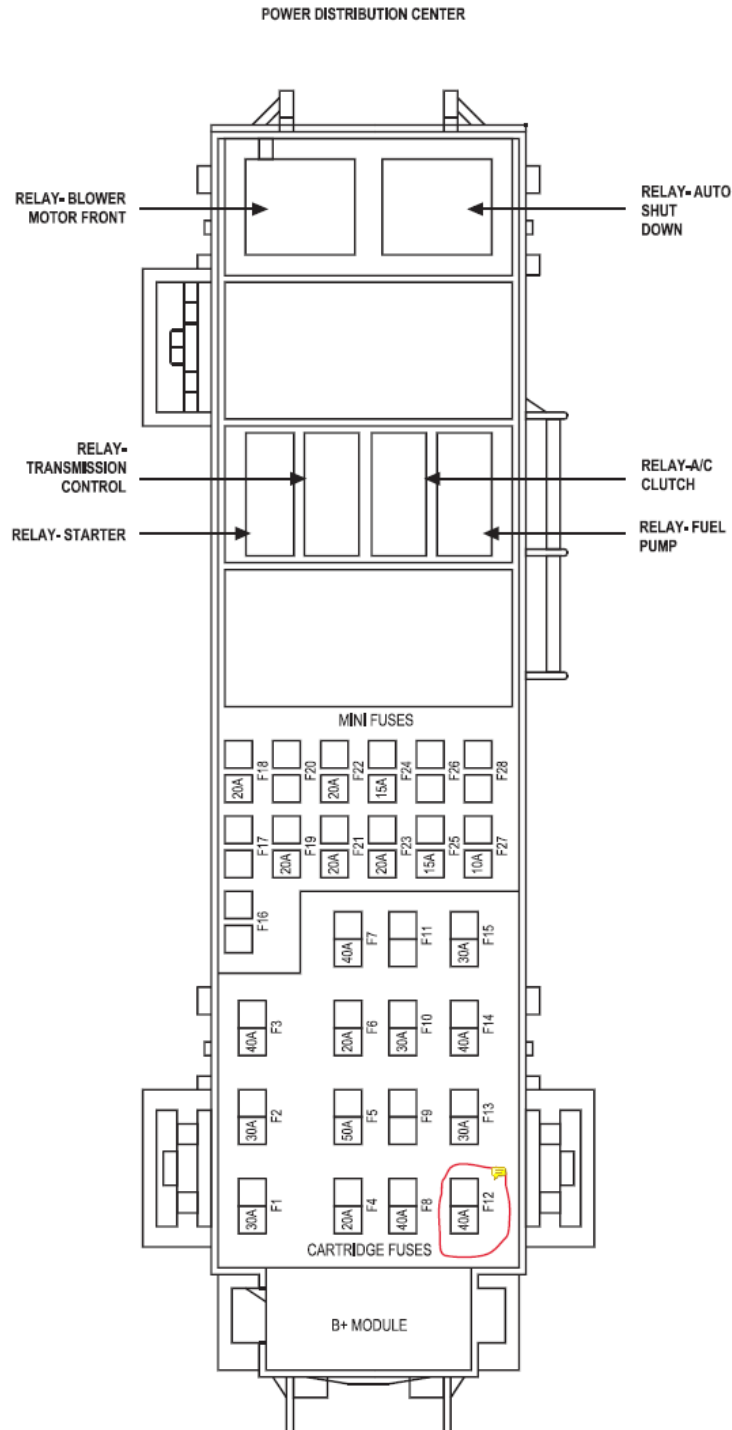

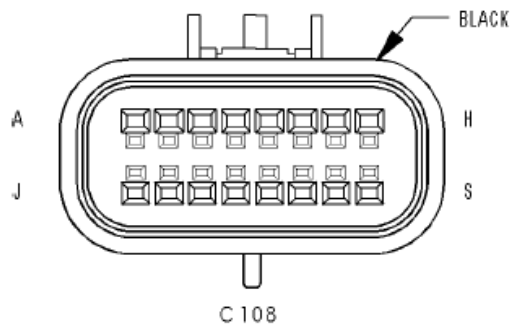


C108 - BLACK (HEADLAMP AND DASH SIDE)

CAV	CIRCUIT
A	K299 20DG/RD
B	K399 20TN/WT
C	D65 20YL/RD
D	D64 20WT/LB
E	D16 20WT/OR
F	D15 20BR/WT
G	D20 20WT/BR
H	D21 20WT/GY
J	T41 20YL/DB
K	A955 16RD
L	T103 20YL/OR (4 WHEEL DRIVE)
M	D201 20WT/DG (4 WHEEL DRIVE)
N	G180 20VT/YL (4 WHEEL DRIVE)
P	T300 18VT/BR (4 WHEEL DRIVE)
R	K900 20DB/DG (3.7L/4.7L)
S	T6 20DG

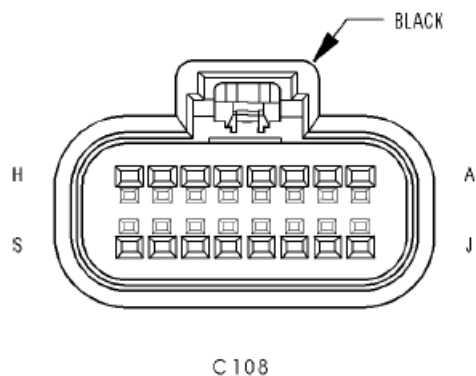


C108 - BLACK (ENGINE SIDE)

CAV	CIRCUIT
A	K299 20DG/RD
B	K399 20TN/WT
C	D65 20YL/RD
D	D64 20WT/LB
E	D16 20WT/OR
F	D15 20BR/WT
G	D20 20WT/BR
H	D21 20WT/GY
J	T41 20YL/DB
K	A955 16RD
L	T103 20YL/OR (4 WHEEL DRIVE)
M	D201 20WT/DG (4 WHEEL DRIVE)
N	G180 20VT/YL (4 WHEEL DRIVE)
P	T300 18VT/BR (4 WHEEL DRIVE)
R	K900 20DB/DG (3.7L/4.7L)
S	T6 20DG

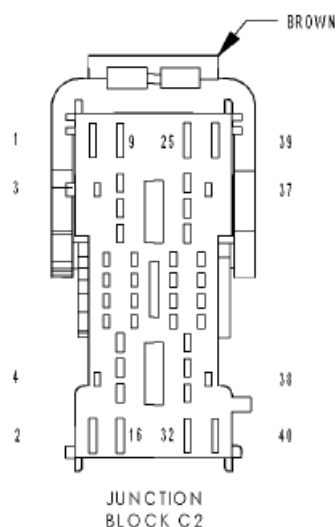


JUNCTION BLOCK C2 - BROWN

CAV	CIRCUIT	FUNCTION
1	F921 12PK/YL	IGNITION SWITCH OUTPUT (RUN)
2	F941 14PK/LG	IGNITION SWITCH OUTPUT (RUN-START)
3	-	-
4	-	-
5	F201 20PK/OR	FUSED IGNITION SWITCH OUTPUT (RUN-START)
6	-	-
7	-	-
8	-	-
9	A904 14RD/GY	FUSED B(+)
10	F961 14PK/LB	IGNITION SWITCH OUTPUT (START)
11	A924 16RD/LG	FUSED B(+)
12	-	-
13	F504 20GY/PK	IGNITION SWITCH OUTPUT (RUN)
14	A116 14YL/RD (ATC/PREMIUM SPEAKERS)	FUSED B(+)
15	F306 18DB/PK	FUSED ACCESSORY RELAY OUTPUT
16	A114 16GY/RD	FUSED B(+)
17	-	-
18	A926 18RD	FUSED B(+)
19	A926 18RD	FUSED B(+)
20	-	-
21	F202 20PK/GY	FUSED IGNITION SWITCH OUTPUT (RUN-START)
22	F21 20PK/DG	FUSED IGNITION SWITCH OUTPUT (RUN-START)
23	F21 20PK/DG	FUSED IGNITION SWITCH OUTPUT (RUN-START)
24	A925 18RD/BK (ATC)	FUSED B(+)
25	F901 14PK	IGNITION SWITCH OUTPUT (OFF-RUN-START)
26	F984 14PK/TN	IGNITION SWITCH OUTPUT (RUN-ACC)
27	C43 18WT/DB	AUXILIARY COOLANT PUMP DRIVER
28	A953 16RD/YL	FUSED B(+)
29	-	-
30	-	-
31	A117 18RD/DG	FUSED B(+)
32	A927 10RD/BR	FUSED B(+)
33	K900 20DB/DG	SENSOR GROUND
34	-	-
35	A103 18GY/RD	FUSED B(+)
36	L50 18WT/TN	BRAKE LAMP SWITCH OUTPUT
37	-	-
38	-	-
39	A923 14RD/OR	FUSED B(+)
40	A917 12RD/DB	FUSED B(+)

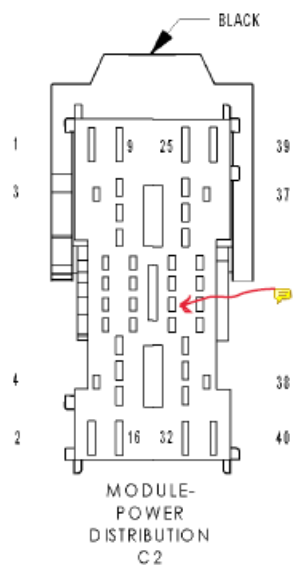


MODULE-POWER DISTRIBUTION C2 - BLACK (HEADLAMP AND DASH SIDE)

CAV	CIRCUIT	FUNCTION
1	-	-
2	L1 18WT/LG (TRAILER TOW)	BACK-UP LAMP FEED
3	-	-
4	-	-
5	-	-
6	-	-
7	F202 20PK/GY	FUSED IGNITION SWITCH OUTPUT (RUN-START)
8	L1 18WT/LG	BACK-UP LAMP FEED
9	Z118 18BK/YL	GROUND
10	A85 18RD/LB	ADJUSTABLE PEDALS RELAY OUTPUT
11	A955 16RD	ASD RELAY OUTPUT
12	-	-
13	T102 14YL (4 WHEEL DRIVE)	SHIFT MOTOR (-)
14	T101 14DG (4 WHEEL DRIVE)	SHIFT MOTOR (+)
15	L63 18WT/DG	LEFT TURN SIGNAL
16	-	-
17	-	-
18	L89 18WT/YL	FRONT FOG LAMP RELAY OUTPUT
19	L89 18WT/YL	FRONT FOG LAMP RELAY OUTPUT
20	-	-
21	-	-
22	-	-
23	T300 18VT/BR (4 WHEEL DRIVE)	SHIFT MOTOR BRAKE SIGNAL
24	P305 20LG/LB	ACCESSORY DELAY RELAY CONTROL
25	A5 14RD/VT	FUSED B(+)
26	Z902 14BK	GROUND
27	W4 14BR/OR	FRONT WIPER HIGH/LOW RELAY HIGH SPEED OUTPUT
28	W3 14BR/WT	FRONT WIPER HIGH/LOW RELAY LOW SPEED OUTPUT
29	Z903 14BK	GROUND
30	Z901 18BK	GROUND
31	L673 20YL (TRAILER TOW)	LEFT TRAILER TOW BRAKE LAMP RELAY OUTPUT
32	Z921 14BK	GROUND
33	-	-
34	X2 18DG/OR	HORN RELAY OUTPUT
35	X2 18DG/OR	HORN RELAY OUTPUT
36	W13 18LG/BR	REAR WIPER MOTOR CONTROL
37	-	-
38	-	-
39	-	-
40	-	-

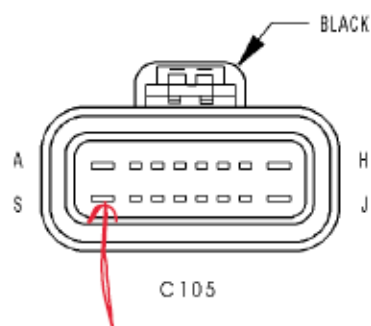


C105 - BLACK (ENGINE SIDE)

CAV	CIRCUIT
A	T750 14YL/GY
B	F855 20PK/YL (5.7L)
C	T16 18YL/OR
D	F856 20YL/PK (5.7L)
E	A955 16RD (5.7L)
F	F1 20PK/DG
G	C3 20DB/GY
H	T101 14DG (4 WHEEL DRIVE)
J	T102 14YL (4 WHEEL DRIVE)
K	K66 20DB/WT (5.7L)
L	A955 16RD
M	A919 18OR/GY
N	F924 20PK/YL
P	F202 20PK/GY
R	T15 20YL/VT
S	A915 14OR/BR (4 WHEEL DRIVE)

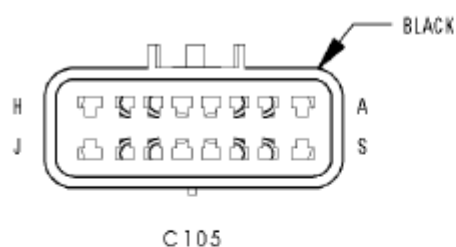


C105 - BLACK (HEADLAMP AND DASH SIDE)

CAV	CIRCUIT
A	T750 14YL/GY
B	F855 20PK/YL (5.7L)
C	T16 18YL/OR
D	F856 20YL/PK (5.7L)
E	A955 16RD (3.7L)
F	F1 20PK/DG
G	C3 20DB/GY
H	T101 14DG (4 WHEEL DRIVE)
J	T102 14YL (4 WHEEL DRIVE)
K	K66 20DB/WT (5.7L)
L	A955 16RD
M	A919 18OR/GY
N	F924 20PK/YL
P	F202 20PK/GY
R	T15 20YL/VT
S	A915 14OR/BR (4 WHEEL DRIVE)

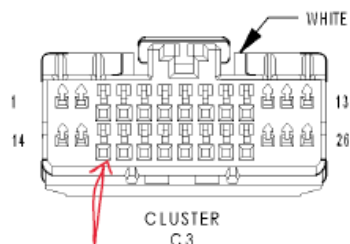


CLUSTER C3 - WHITE 26 WAY

CAV	CIRCUIT	FUNCTION
1	M28 20YL/TN	GLOVE BOX LAMP DRIVER
2	-	-
3	-	-
4	-	-
5	-	-
6	E12 20OR/GY	ILT-DIMMING HVAC
7	E10 20OR/DG	ILT-DIMMING REAR HVAC
8	E11 20OR/WT	ILT-DIMMING 4X4
9	E19 20OR/BR	ILT-DIMMING HEADLAMP SWITCH
10	E33 20OR	ILT-DIMMING CENTER BEZEL/HEATED SEAT SWITCHES
11	M22 20YL/OR	COURTESY LAMPS DRIVER
12	F21 20PK/DG	FUSED IGNITION SWITCH OUTPUT (RUN-START)
13	F1 20PK/DG	FUSED ASD RELAY OUTPUT
14	A117 18RD/DG	FUSED B(+)
15	A117 18RD/DG	FUSED B(+)
16	G95 20VT/BR	4WD NEUTRAL INDICATOR
17	-	-
18	P81 20TN/OR (ATC)	DRIVER HEATED SEAT LOW INDICATOR DRIVER
19	P82 20TN/LB (ATC)	PASSENGER HEATED SEAT LOW INDICATOR DRIVER
20	P84 20TN/DG (ATC)	PASSENGER HEATED SEAT HIGH INDICATOR DRIVER
21	P83 20TN/WT (ATC)	DRIVER HEATED SEAT HIGH INDICATOR DRIVER
22	G76 20VT/YL	RIGHT REAR DOOR AJAR SWITCH SENSE
23	G74 20VT/WT	PASSENGER DOOR AJAR SWITCH SENSE
24	F983 16PK/VT	IGNITION SWITCH OUTPUT (RUN-ACC)
25	A920 16OR/RD	FUSED B(+)
26	Z948 20BK	GROUND

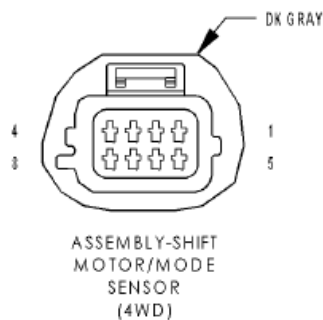

ASSEMBLY-SHIFT MOTOR/MODE SENSOR (4WD) - DK GRAY 8 WAY

CAV	CIRCUIT	FUNCTION
1	T103 20YL/OR	5 VOLT SUPPLY
2	D201 20WT/DG	MODE SENSOR A
3	G180 20VT/YL	FCM SENSOR RETURN
4	T101 14DG	SHIFT MOTOR (+)
5	T102 14YL	SHIFT MOTOR (-)
6	A915 14OR/BR	FUSED B(+)
7	T300 18VT/BR	SHIFT MOTOR BRAKE SIGNAL
8	-	-

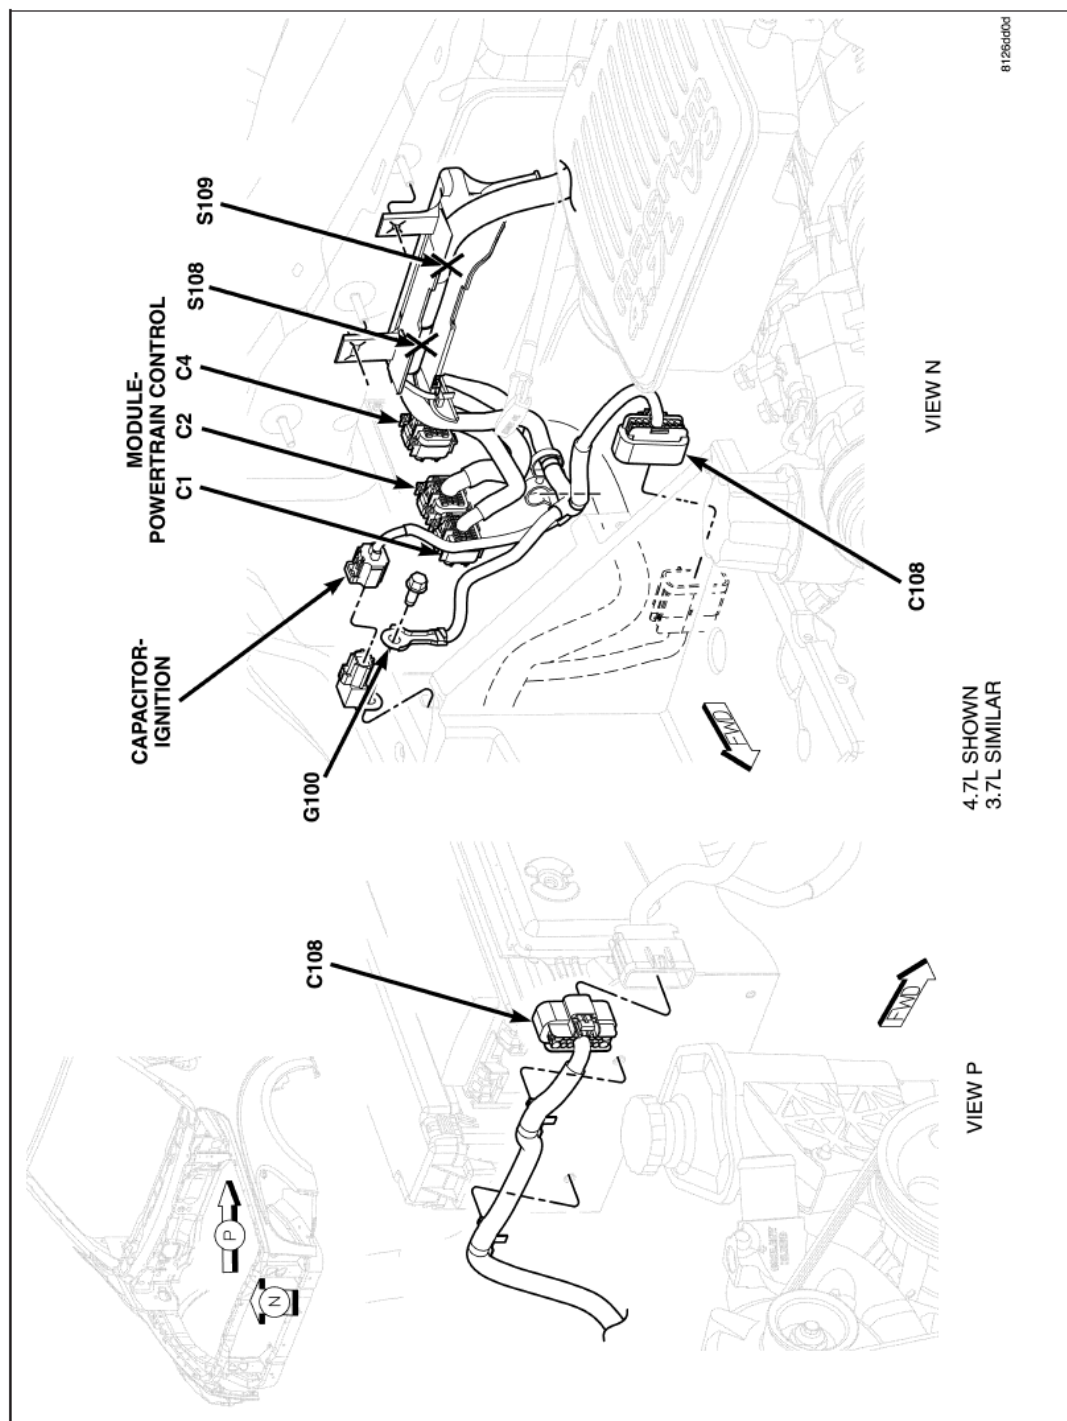

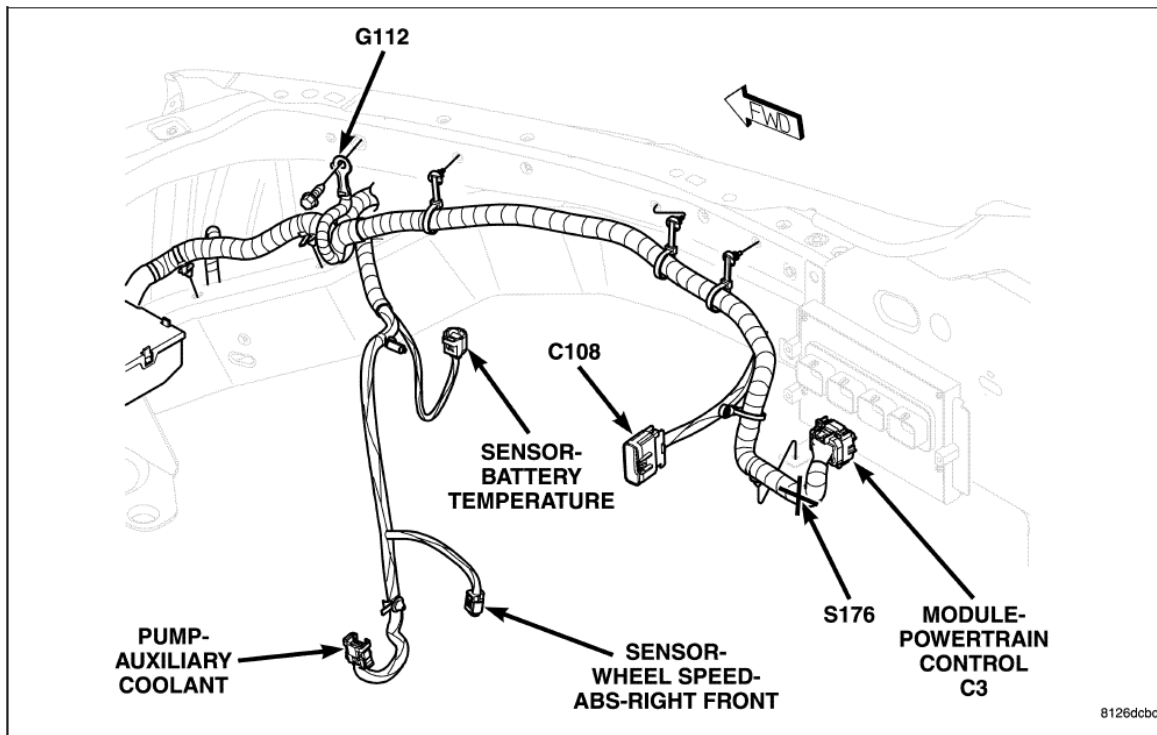


Fig. 4 ENGINE COMPARTMENT - RIGHT


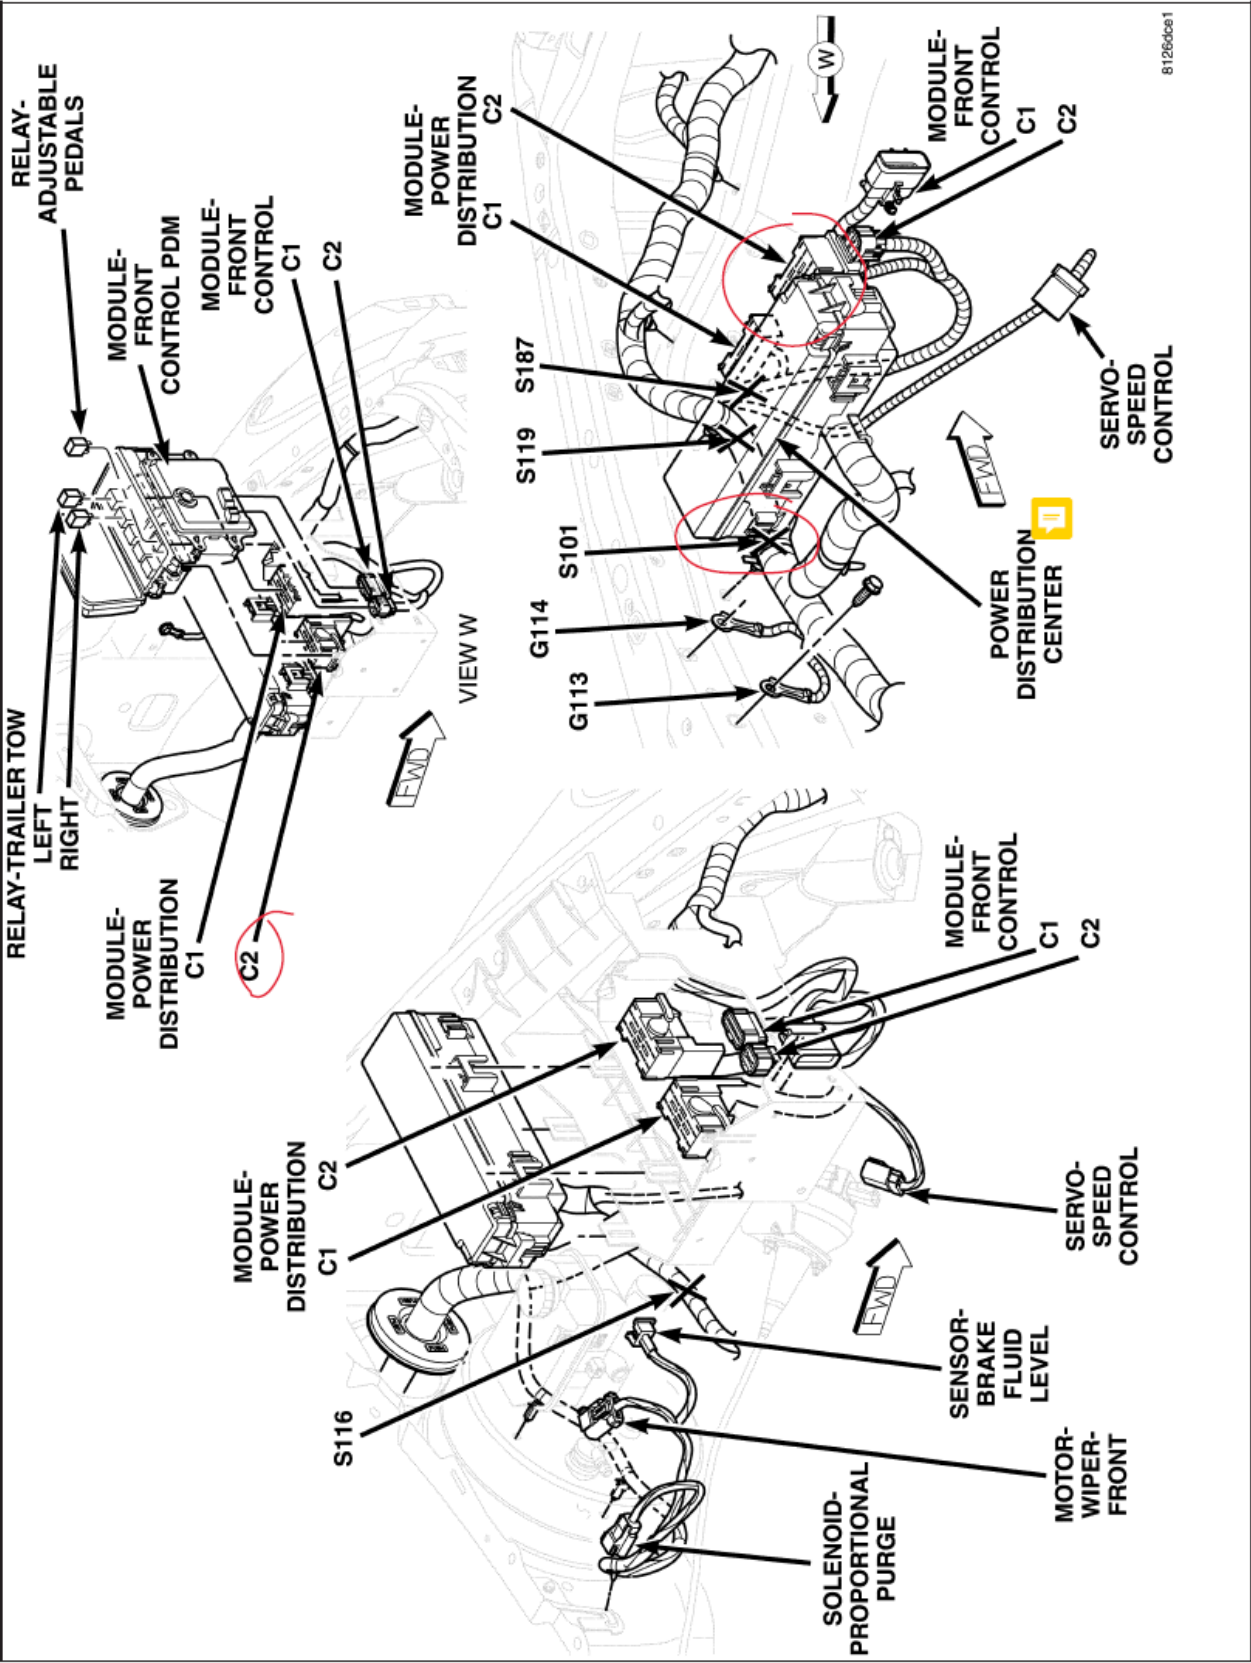


Fig. 8 ENGINE COMPARTMENT - LEFT

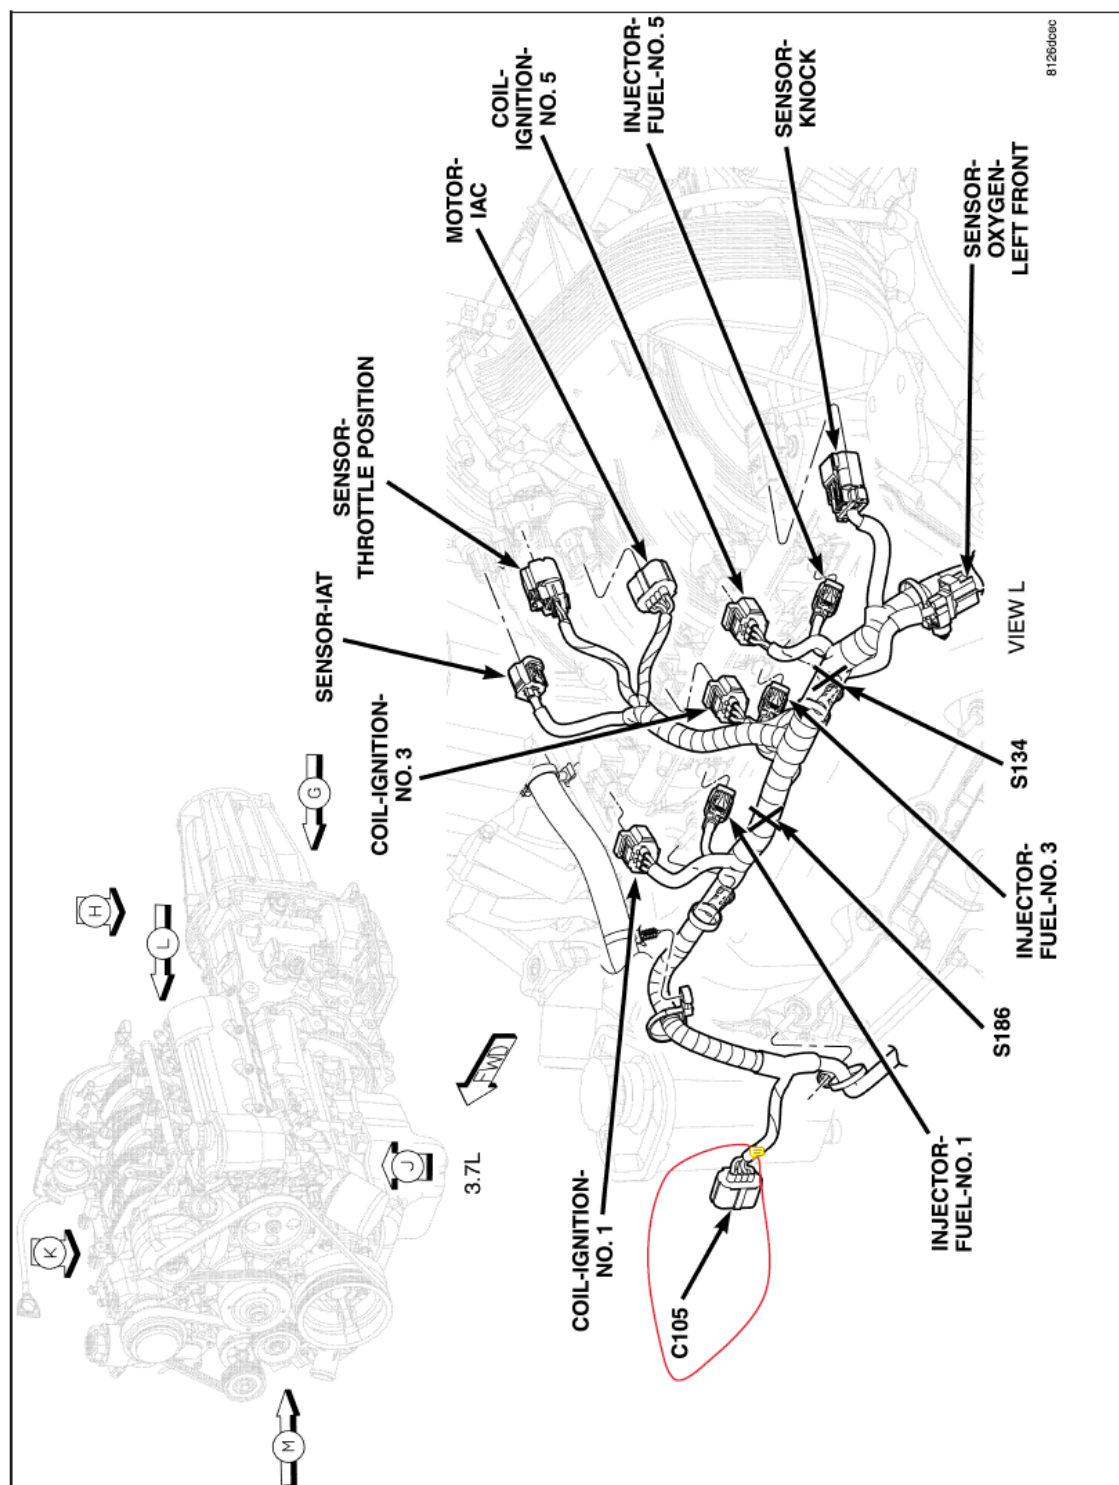

8126d0ec

Fig. 10 ENGINE 3.7L


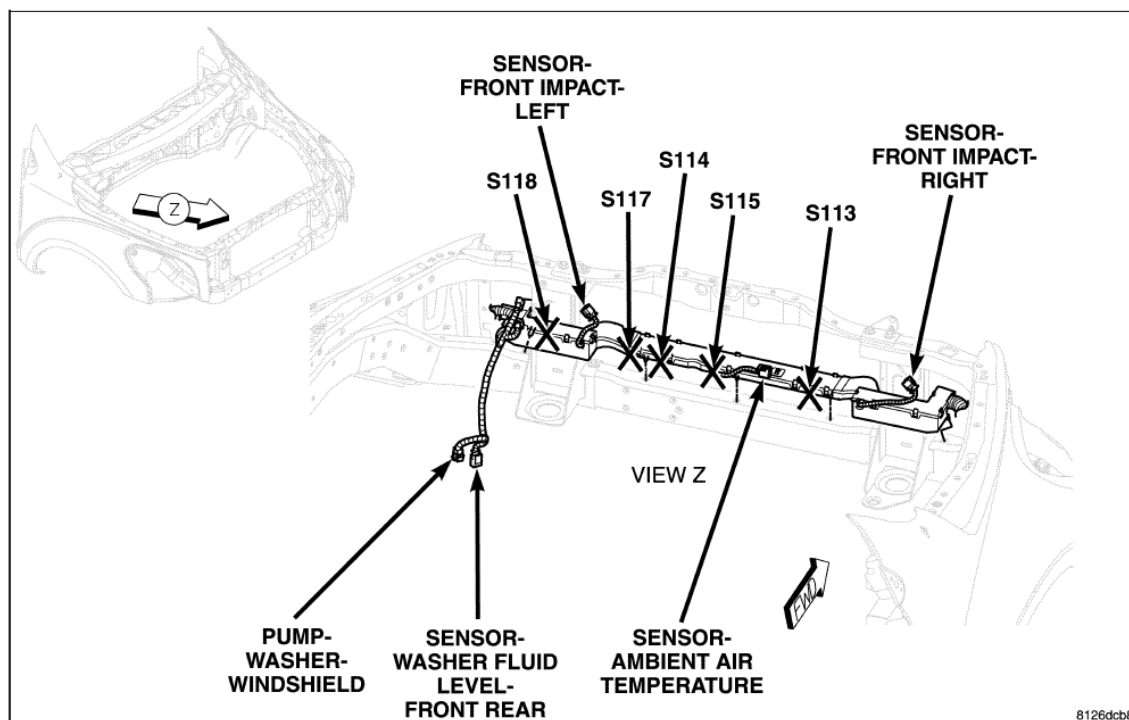


Fig. 2 ENGINE COMPARTMENT - FRONT

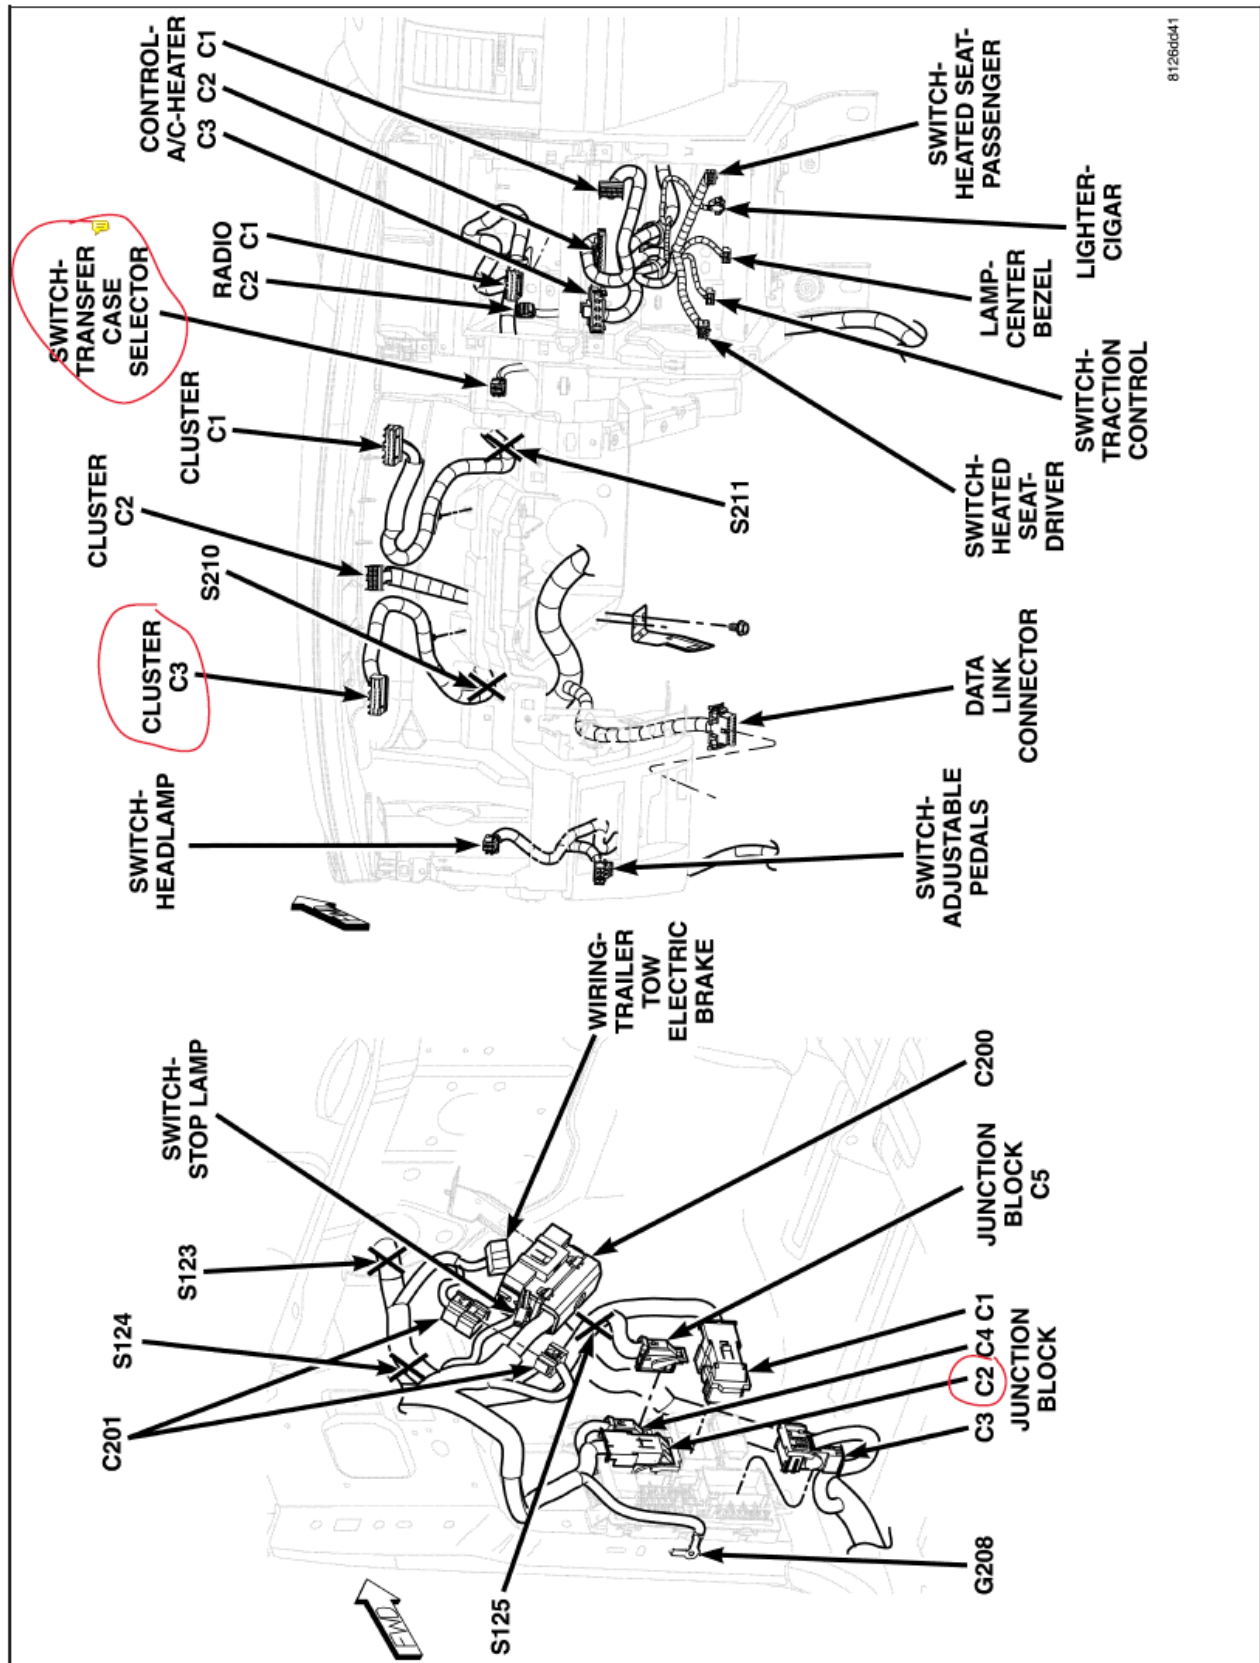

8126dd41

Fig. 31 INSTRUMENT PANEL - LEFT CENTER