

---

## Parameters and calibration of a low-g 3-axis accelerometer

---

### Introduction

This application note describes the parameters and calibration of a low-g 3-axis accelerometer. In general, the procedures described here may also be applied to 3-axis analog or digital accelerometers, depending on their respective specifications.

[Section 1](#) of this application note introduces the terminology and parameters related to the accelerometer, while [Section 2](#) presents the accelerometer calibration techniques.

Contents

1      Terminology ..... 4

      1.1    Accelerometer datasheet ..... 4

      1.2    Definitions ..... 5

2      Calibrating the accelerometer ..... 8

Appendix A    Least square method..... 9

Revision history ..... 12



List of figures

Figure 1. Accelerometer inside a handheld device ..... 5

Figure 2. Pitch definition ..... 6

Figure 3. Roll definition ..... 6

# 1 Terminology

## 1.1 Accelerometer datasheet

The first step is to examine the accelerometer specifications and understand the meaning of each parameter.

### Understanding the parameters

- **Vdd** - Power supply: This parameter defines the accelerometer operating DC power supply. Correct operation of the accelerometer using a power supply voltage outside of this range is not guaranteed. The parameters are provided by the accelerometer manufacturer under  $V_{dd} = +2.5\text{ V}$  at a room temperature of  $T = 25\text{ °C}$ . It is recommended to keep  $V_{dd}$  clean, with minimum ripple. One possible way to do this is to use an ultra-low-noise low-dropout regulator to power the accelerometer.
- **Idd** - Current consumption in normal mode: lower ODR corresponds to lower current consumption.
- **ODR** - Output data rate in normal mode: This parameter shows the possible output data rates in normal mode from which the user may select.
- **BW** - System bandwidth: This parameter defines the bandwidth of the system. When  $ODR = 100\text{ Hz}$ , BW is typically 50 Hz with a built-in low pass filter. The system recognizes any motion below 50 Hz. If the system has dynamic motion higher than 50 Hz, then the ODR needs to be increased to a higher setting in order to cover all useful system signals.
- **Ton** - Turn-on time: This parameter defines the time required before the accelerometer is ready to output measured acceleration data after exiting power-down mode.
- **Top** - operating temperature range: This parameter defines the operating temperature range. When the device is operated inside the specified range, proper behavior of the sensor is guaranteed.
- **FS** - Full-scale measurement range: For tilt sensing applications, a  $\pm 2.0\text{ g}$  range is sufficient because the Earth's gravity is  $\pm 1\text{ g}$  only. If the application requires measurement of higher  $g$  acceleration, the user can set the device to a higher full-scale range which results in lower sensitivity.
- **So** - Sensitivity: This parameter defines the value of 1 LSB with respect to mg in the digital representation.
- **TCSO** - Sensitivity change vs. temperature: This parameter defines how sensitivity changes with temperature. For example, at a  $\pm 2.0\text{ g}$  full-scale range, the sensitivity changes within  $\pm 0.01\%/^{\circ}\text{C}$ . Therefore, if the environmental temperature changes  $40\text{ °C}$ , from  $25\text{ °C}$  to  $65\text{ °C}$ , then the sensitivity changes within the range of  $\pm 0.01\% \times 40 = \pm 0.4\%$ , which means the sensitivity change over  $40\text{ °C}$  is within 0.996 mg/LSB and 1.004 mg/LSB, which shows that the sensitivity is very stable versus temperature change. Thus, temperature compensation for sensitivity can be ignored.
- **TyOff** - Typical zero- $g$  level offset accuracy: This parameter defines the zero- $g$  accuracy at room temperature of  $25\text{ °C}$ . For example, at a  $\pm 2.0\text{ g}$  full-scale range, the

zero-g accuracy of  $\pm 20$  mg means that the zero-g output varies typically in the range of  $\pm 20$  mg around the expected ideal value.

- TCOFF - Zero-g level change vs. temperature: This parameter defines how much the zero-g level is affected by temperature variations.
- An - Acceleration noise density: This parameter defines the standard resolution the user can obtain from the accelerometer (once the desired BW is selected).


$1\sigma$  resolution =  $A_n(\mu g/\sqrt{Hz}) \cdot \sqrt{BW(Hz)}$ . The higher BW leads to lower resolution.

- NL - Non linearity: This parameter defines the maximum error between the outputs and the best-fit straight line. For example, at  $\pm 2.0$  g full-scale range, the non-linearity of 0.5% of FS means the largest error is  $0.5\% \cdot 4000\text{ mg} = 2\text{ mg}$ , which corresponds to  $0.1^\circ$ . When the application requires measurements around the 0 g condition (as with tilt measurement), the non-linearity effect is negligible and can be ignored.
- CrossAx - Cross-axis sensitivity: The cross-axis effect arises due to natural misalignment of die positioning on the package substrate. Even if negligible in most applications, for very accurate tilt measurement the cross-axis sensitivity effect can be easily compensated for by following the procedure in [Section 2: Calibrating the accelerometer](#). Moreover, when the device is placed on the final application board, the accelerometer calibration compensates both the device cross-axis sensitivity, and the misalignment between the accelerometer sensing axes and the board axes.

## 1.2 Definitions

Assume that the accelerometer is installed in a handheld device, such as a cell phone, a PDA or simply on a PCB board as shown in [Figure 1](#).

**Figure 1. Accelerometer inside a handheld device**

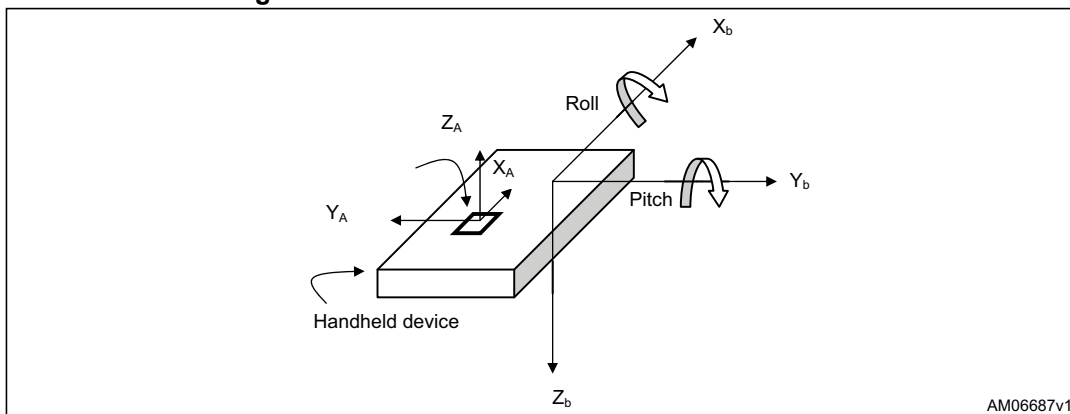

$X_b$ ,  $Y_b$  and  $Z_b$  are the handheld device body axes with a forward-right-down configuration.

$X_A$ ,  $Y_A$  and  $Z_A$  are the accelerometer sensing axes, respectively. Note that the sign of  $Y_A$  and  $Z_A$  from the sensor measurements need to be reversed to have the sensing axes in the same direction as the device body axes.


Pitch and roll angles are referenced to the local horizontal plane, which is perpendicular to the Earth's gravity.

- Pitch ( $\alpha$ ) is defined as the angle between the  $X_b$  axis and the horizontal plane. Assume that the pitch angle resolution is  $0.1^\circ$ , then it goes from  $0^\circ$  to  $+179.9^\circ$  when rotating around the  $Y_b$  axis with the  $X_b$  axis moving upwards from a flat level, and then keeps


moving from a vertical position ( $+90^\circ$ ) back to a flat level again. The pitch angle goes from  $0^\circ$  to  $-180^\circ$  when the  $X_b$  axis is moving downwards from a flat level, and then keeps moving from a vertical position ( $-90^\circ$ ) back to a flat level again. For example, in [Figure 2](#),  $Y_b$  is fixed,  $X_b$  is rotating from Pitch =  $0^\circ$  to  $+30^\circ$ ,  $+90^\circ$ ,  $+150^\circ$  and  $+179.9^\circ$  for a positive direction.

- Roll ( $\beta$ ) is defined as the angle between the  $Y_b$  axis and the horizontal plane. Assume that the roll angle resolution is  $0.1^\circ$ , then it goes from  $0^\circ$  to  $+179.9^\circ$  when rotating around the  $X_b$  axis with the  $Y_b$  axis moving downwards from a flat level, and then keeps moving from a vertical position ( $+90^\circ$ ) back to a flat level again. The roll angle goes from  $0^\circ$  to  $-180^\circ$  when the  $Y_b$  axis is moving upwards from a flat level, and then keeps moving from a vertical position ( $-90^\circ$ ) back to a flat level again. For example, in [Figure 3](#),  $X_b$  is fixed,  $Y_b$  is rotating from roll =  $0^\circ$  to  $+30^\circ$ ,  $+90^\circ$ ,  $+150^\circ$  and  $+179.9^\circ$  for a positive direction.

**Figure 2. Pitch definition**

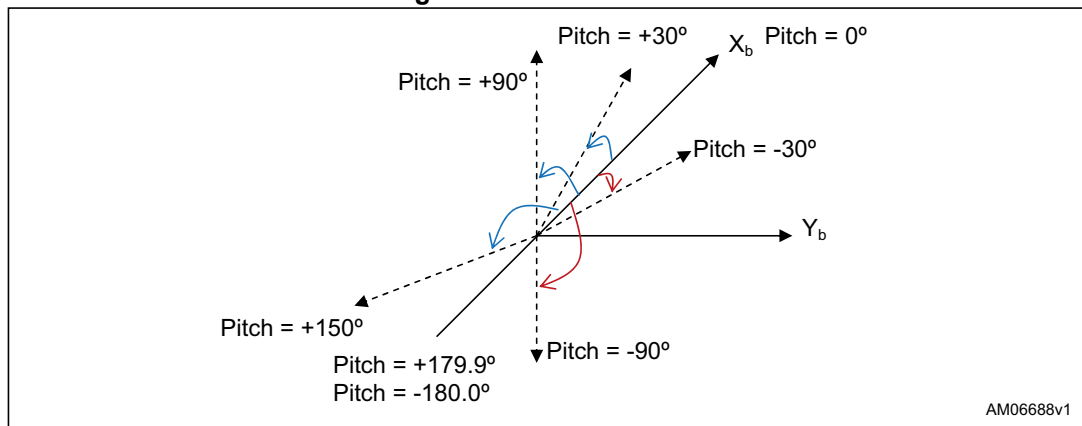

**Figure 3. Roll definition**

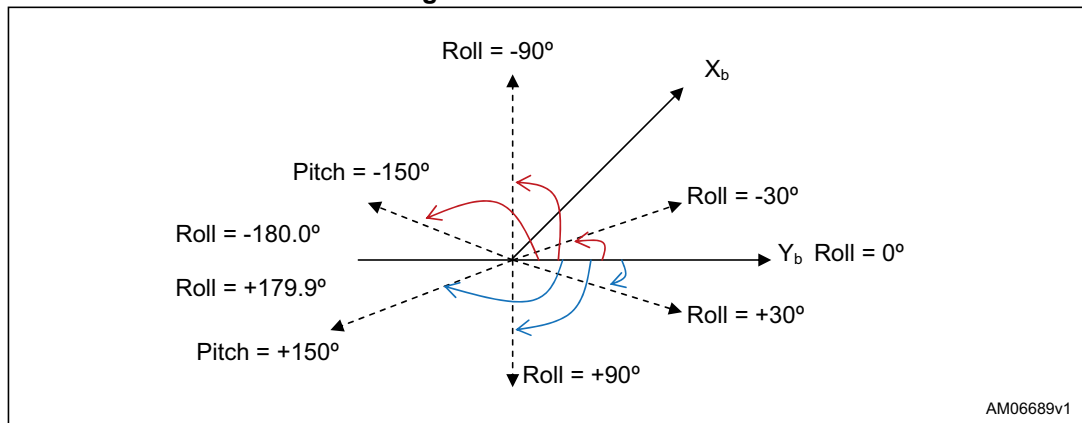

Assume  $A_x$ ,  $A_y$ ,  $A_z$  is the accelerometer raw measurement in the format of LSBs. [Table 1](#) shows the sign definition of the raw sensor data at 6 stationary positions with respect to the known Earth gravity vector. For example, in [Figure 1](#),  $X_b$  and  $Y_b$  are level and  $Z_b$  is pointing down. Therefore,  $A_x = A_y = 0$ ,  $A_z = +1\text{ g}$ .

Table 1. Sign definition of sensor raw measurements

Stationary position	Accelerometer (signed integer)		
	$A_x$	$A_y$	$A_z$
$Z_b$ down	0	0	+1 $g$
$Z_b$ up	0	0	-1 $g$
$Y_b$ down	0	+1 $g$	0
$Y_b$ up	0	-1 $g$	0
$X_b$ down	+1 $g$	0	0
$X_b$ up	-1 $g$	0	0

## 2 Calibrating the accelerometer

[Section 1](#) describes the accelerometer parameters, the next step is to calibrate the accelerometer.

Please note that all accelerometers from ST have been factory-calibrated. For most applications, such as screen portrait/landscape rotation and laptop lid open/close detection, accelerometer calibration is not necessary. This means that users can use the zero-g level and sensitivity parameters from the datasheet directly to convert raw measurements  $A_x$ ,  $A_y$  and  $A_z$  to normalized measurements  $A_{x1}$ ,  $A_{y1}$  and  $A_{z1}$ . For applications that require better than 1° tilt-measurement accuracy, such as automobile alert systems, tilt-compensated electronic compasses and level monitoring systems, accelerometer calibration is recommended.

The relationship between the normalized  $A_{x1}$ ,  $A_{y1}$  and  $A_{z1}$  and the accelerometer raw measurements  $A_x$ ,  $A_y$  and  $A_z$  can be expressed as,

**Equation 1**

$$\begin{bmatrix} A_{x1} \\ A_{y1} \\ A_{z1} \end{bmatrix} = [A\_m]_{3 \times 3} \begin{bmatrix} 1/A\_SC_x & 0 & 0 \\ 0 & 1/A\_SC_y & 0 \\ 0 & 0 & 1/A\_SC_z \end{bmatrix} \begin{bmatrix} A_x - A\_OS_x \\ A_y - A\_OS_y \\ A_z - A\_OS_z \end{bmatrix} \\ = \begin{bmatrix} ACC_{11} & ACC_{12} & ACC_{13} \\ ACC_{21} & ACC_{22} & ACC_{23} \\ ACC_{31} & ACC_{32} & ACC_{33} \end{bmatrix} \begin{bmatrix} A_x \\ A_y \\ A_z \end{bmatrix} + \begin{bmatrix} ACC_{10} \\ ACC_{20} \\ ACC_{30} \end{bmatrix}$$

where  $[A\_m]$  is the 3 x 3 misalignment matrix between the accelerometer sensing axes and the device body axes,  $A\_SC_i$  ( $i = x, y, z$ ) is the sensitivity (or scale factor) and  $A\_OS_i$  is the zero-g level (or offset).

The goal of accelerometer calibration is to determine 12 parameters from  $ACC_{10}$  to  $ACC_{33}$ , so that with any given raw measurements at arbitrary positions, the normalized values  $A_{x1}$ ,  $A_{y1}$  and  $A_{z1}$  can be obtained, resulting in:

**Equation 2**

$$|A| = \sqrt{A_{x1}^2 + A_{y1}^2 + A_{z1}^2} = 1$$

Calibration can be performed at 6 stationary positions as shown in [Table 1](#). Collect 5 to 10 seconds of accelerometer raw data with ODR = 100 Hz at each position with known  $A_{x1}$ ,  $A_{y1}$  and  $A_{z1}$ . Then apply the least square method to obtain the 12 accelerometer calibration parameters. Refer to [Appendix A](#) for additional details.



## Appendix A Least square method

Let's consider accelerometer calibration at the 6 stationary positions shown in [Table 1](#). [Equation 1](#) can be rewritten as:

### Equation 3

$$[A_{x1} \ A_{y1} \ A_{z1}] = [A_x \ A_y \ A_z \ 1] \cdot \begin{bmatrix} ACC_{11} & ACC_{21} & ACC_{31} \\ ACC_{12} & ACC_{22} & ACC_{32} \\ ACC_{13} & ACC_{23} & ACC_{33} \\ ACC_{10} & ACC_{20} & ACC_{30} \end{bmatrix}$$

Or

### Equation 4

$$Y = w \cdot X$$

where:

- Matrix X is the 12 calibration parameters that need to be determined
- Matrix w is sensor raw data LSBs collected at 6 stationary positions
- Matrix Y is the known normalized Earth gravity vector

For example,

- At Z<sub>b</sub> down position (P1 position),  $[A_{x1} \ A_{y1} \ A_{z1}] = [0 \ 0 \ 1]$ , and assume that at Z<sub>b</sub> down position, n1 sets of accelerometer raw data A<sub>x</sub>, A<sub>y</sub> and A<sub>z</sub> have been collected. Then,

### Equation 5

$$Y_1 = [0 \ 0 \ 1]_{n1 \times 3}$$

$$w_1 = [A_{xP1} \ A_{yP1} \ A_{zP1} \ 1]_{n1 \times 4}$$

where:

Matrix Y<sub>1</sub> has the same row of [0 0 1].

Matrix w<sub>1</sub> contains raw data in the format of LSBs.

- At Z<sub>b</sub> up position (P2 position),  $[A_{x1} \ A_{y1} \ A_{z1}] = [0 \ 0 \ -1]$ , and assume that at Z<sub>b</sub> up position, n2 sets of accelerometer raw data A<sub>x</sub>, A<sub>y</sub> and A<sub>z</sub> have been collected. Then,

### Equation 6

$$Y_2 = [0 \ 0 \ -1]_{n2 \times 3}$$

$$w_2 = [A_{xP2} \ A_{yP2} \ A_{zP2} \ 1]_{n2 \times 4}$$

- At Y<sub>b</sub> down position (P3 position),  $[A_{x1} \ A_{y1} \ A_{z1}] = [0 \ 1 \ 0]$ , and assume that at Y<sub>b</sub> down position, n3 sets of accelerometer raw data A<sub>x</sub>, A<sub>y</sub> and A<sub>z</sub> have been collected. Then,

### Equation 7

$$Y_3 = [0 \ 1 \ 0]_{n3 \times 3}$$

$$w_3 = [A_{xP3} \ A_{yP3} \ A_{zP3} \ 1]_{n3 \times 4}$$

- At  $Y_b$  up position (P4 position),  $[A_{x1} \ A_{y1} \ A_{z1}] = [0 \ -1 \ 0]$ , and assume that at  $Y_b$  up position,  $n_4$  sets of accelerometer raw data  $A_x$ ,  $A_y$  and  $A_z$  have been collected. Then,

**Equation 8**

$$Y_4 = [0 \ -1 \ 0]_{n_4 \times 3}$$

$$W_4 = [A_{xP4} \ A_{yP4} \ A_{zP4} \ 1]_{n_4 \times 4}$$

- At  $X_b$  down position (P5 position),  $[A_{x1} \ A_{y1} \ A_{z1}] = [1 \ 0 \ 0]$ , and assume that at  $X_b$  down position,  $n_5$  sets of accelerometer raw data  $A_x$ ,  $A_y$  and  $A_z$  have been collected. Then,

**Equation 9**

$$Y_5 = [1 \ 0 \ 0]_{n_5 \times 3}$$

$$W_5 = [A_{xP5} \ A_{yP5} \ A_{zP5} \ 1]_{n_5 \times 4}$$

- At  $X_b$  up position (P6 position),  $[A_{x1} \ A_{y1} \ A_{z1}] = [-1 \ 0 \ 0]$ , and assume that at  $X_b$  up position,  $n_6$  sets of accelerometer raw data  $A_x$ ,  $A_y$  and  $A_z$  have been collected. Then,

**Equation 10**

$$Y_6 = [-1 \ 0 \ 0]_{n_6 \times 3}$$

$$W_6 = [A_{xP6} \ A_{yP6} \ A_{zP6} \ 1]_{n_6 \times 4}$$

Combine [Equation 5](#) to [10](#) and let  $n = n_1 + n_2 + n_3 + n_4 + n_5 + n_6$ , then [Equation 4](#) becomes:

**Equation 11**

$$Y_{n \times 3} = W_{n \times 4} \cdot X_{4 \times 3}$$

where:

**Equation 12**

$$Y = \begin{bmatrix} Y_1 \\ Y_2 \\ Y_3 \\ Y_4 \\ Y_5 \\ Y_6 \end{bmatrix}_{n \times 3}$$

$$W = \begin{bmatrix} W_1 \\ W_2 \\ W_3 \\ W_4 \\ W_5 \\ W_6 \end{bmatrix}_{n \times 4}$$

Therefore, the calibration parameter matrix  $X$  can be determined by the least square method as:

**Equation 13**

$$X = \left[ W^T \cdot W \right]^{-1} \cdot W^T \cdot Y$$

where:

**Equation 14**

$W^T$  means matrix transpose

$\left[ W^T \cdot W \right]^{-1}$  means matrix inverse

# Revision history

Table 2. Document revision history

Date	Revision	Changes
10-Jun-2014	1	Initial release.



**Please Read Carefully:**

Information in this document is provided solely in connection with ST products. STMicroelectronics NV and its subsidiaries ("ST") reserve the right to make changes, corrections, modifications or improvements, to this document, and the products and services described herein at any time, without notice.

All ST products are sold pursuant to ST's terms and conditions of sale.

Purchasers are solely responsible for the choice, selection and use of the ST products and services described herein, and ST assumes no liability whatsoever relating to the choice, selection or use of the ST products and services described herein.

No license, express or implied, by estoppel or otherwise, to any intellectual property rights is granted under this document. If any part of this document refers to any third party products or services it shall not be deemed a license grant by ST for the use of such third party products or services, or any intellectual property contained therein or considered as a warranty covering the use in any manner whatsoever of such third party products or services or any intellectual property contained therein.

**UNLESS OTHERWISE SET FORTH IN ST'S TERMS AND CONDITIONS OF SALE ST DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY WITH RESPECT TO THE USE AND/OR SALE OF ST PRODUCTS INCLUDING WITHOUT LIMITATION IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE (AND THEIR EQUIVALENTS UNDER THE LAWS OF ANY JURISDICTION), OR INFRINGEMENT OF ANY PATENT, COPYRIGHT OR OTHER INTELLECTUAL PROPERTY RIGHT.**

**ST PRODUCTS ARE NOT DESIGNED OR AUTHORIZED FOR USE IN: (A) SAFETY CRITICAL APPLICATIONS SUCH AS LIFE SUPPORTING, ACTIVE IMPLANTED DEVICES OR SYSTEMS WITH PRODUCT FUNCTIONAL SAFETY REQUIREMENTS; (B) AERONAUTIC APPLICATIONS; (C) AUTOMOTIVE APPLICATIONS OR ENVIRONMENTS, AND/OR (D) AEROSPACE APPLICATIONS OR ENVIRONMENTS. WHERE ST PRODUCTS ARE NOT DESIGNED FOR SUCH USE, THE PURCHASER SHALL USE PRODUCTS AT PURCHASER'S SOLE RISK, EVEN IF ST HAS BEEN INFORMED IN WRITING OF SUCH USAGE, UNLESS A PRODUCT IS EXPRESSLY DESIGNATED BY ST AS BEING INTENDED FOR "AUTOMOTIVE, AUTOMOTIVE SAFETY OR MEDICAL" INDUSTRY DOMAINS ACCORDING TO ST PRODUCT DESIGN SPECIFICATIONS. PRODUCTS FORMALLY ESCC, QML OR JAN QUALIFIED ARE DEEMED SUITABLE FOR USE IN AEROSPACE BY THE CORRESPONDING GOVERNMENTAL AGENCY.**

Resale of ST products with provisions different from the statements and/or technical features set forth in this document shall immediately void any warranty granted by ST for the ST product or service described herein and shall not create or extend in any manner whatsoever, any liability of ST.

ST and the ST logo are trademarks or registered trademarks of ST in various countries.

Information in this document supersedes and replaces all information previously supplied.

The ST logo is a registered trademark of STMicroelectronics. All other names are the property of their respective owners.

© 2014 STMicroelectronics - All rights reserved

STMicroelectronics group of companies

Australia - Belgium - Brazil - Canada - China - Czech Republic - Finland - France - Germany - Hong Kong - India - Israel - Italy - Japan - Malaysia - Malta - Morocco - Philippines - Singapore - Spain - Sweden - Switzerland - United Kingdom - United States of America

[www.st.com](http://www.st.com)

