


Auto switching keymap hardware patch #1 for OneChipBook/MSXBOOK.



From pin #28 of connector "CON15" on Main Board PCB to pin #17 on Cyclone.


Auto switching keymap hardware patch #2 for OneChipBook/MSXBOOK.

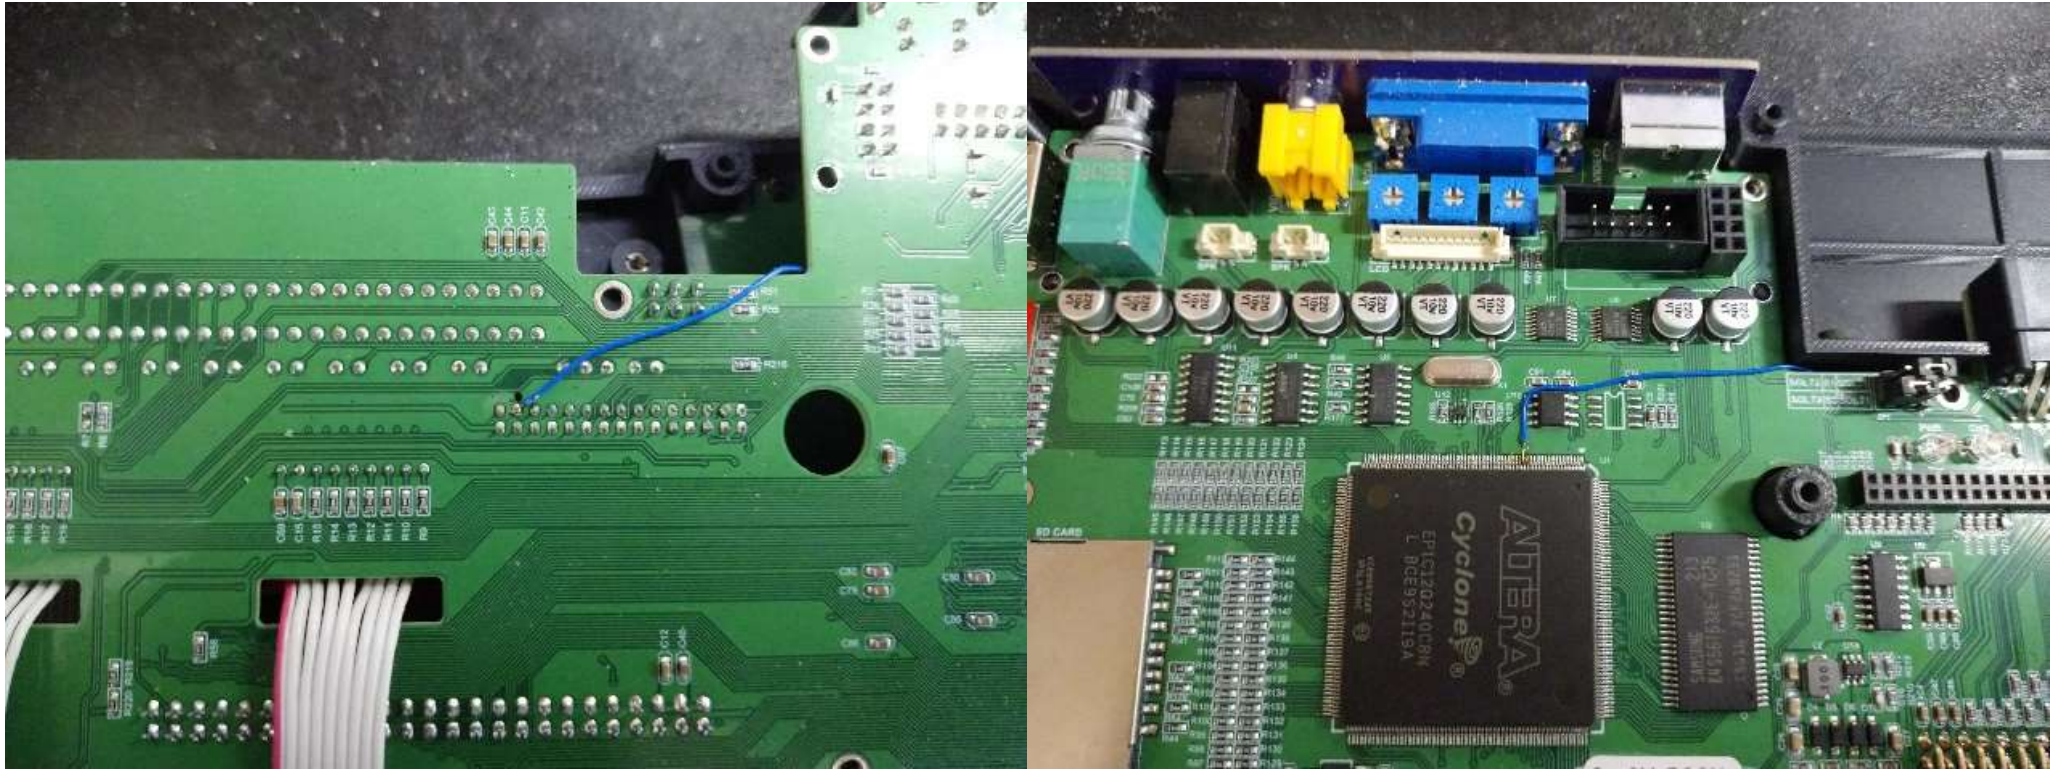

From pin #28 on Keyboard PCB connector to right pad of R80.

Removed the pseudo scanline generation circuit for OneChipBook/MSXBOOK.

(*Unless this circuit is removed, the pseudo scan line circuit will always be activated when DIPSW2-3 is turned ON-ON, regardless of the firmware.)

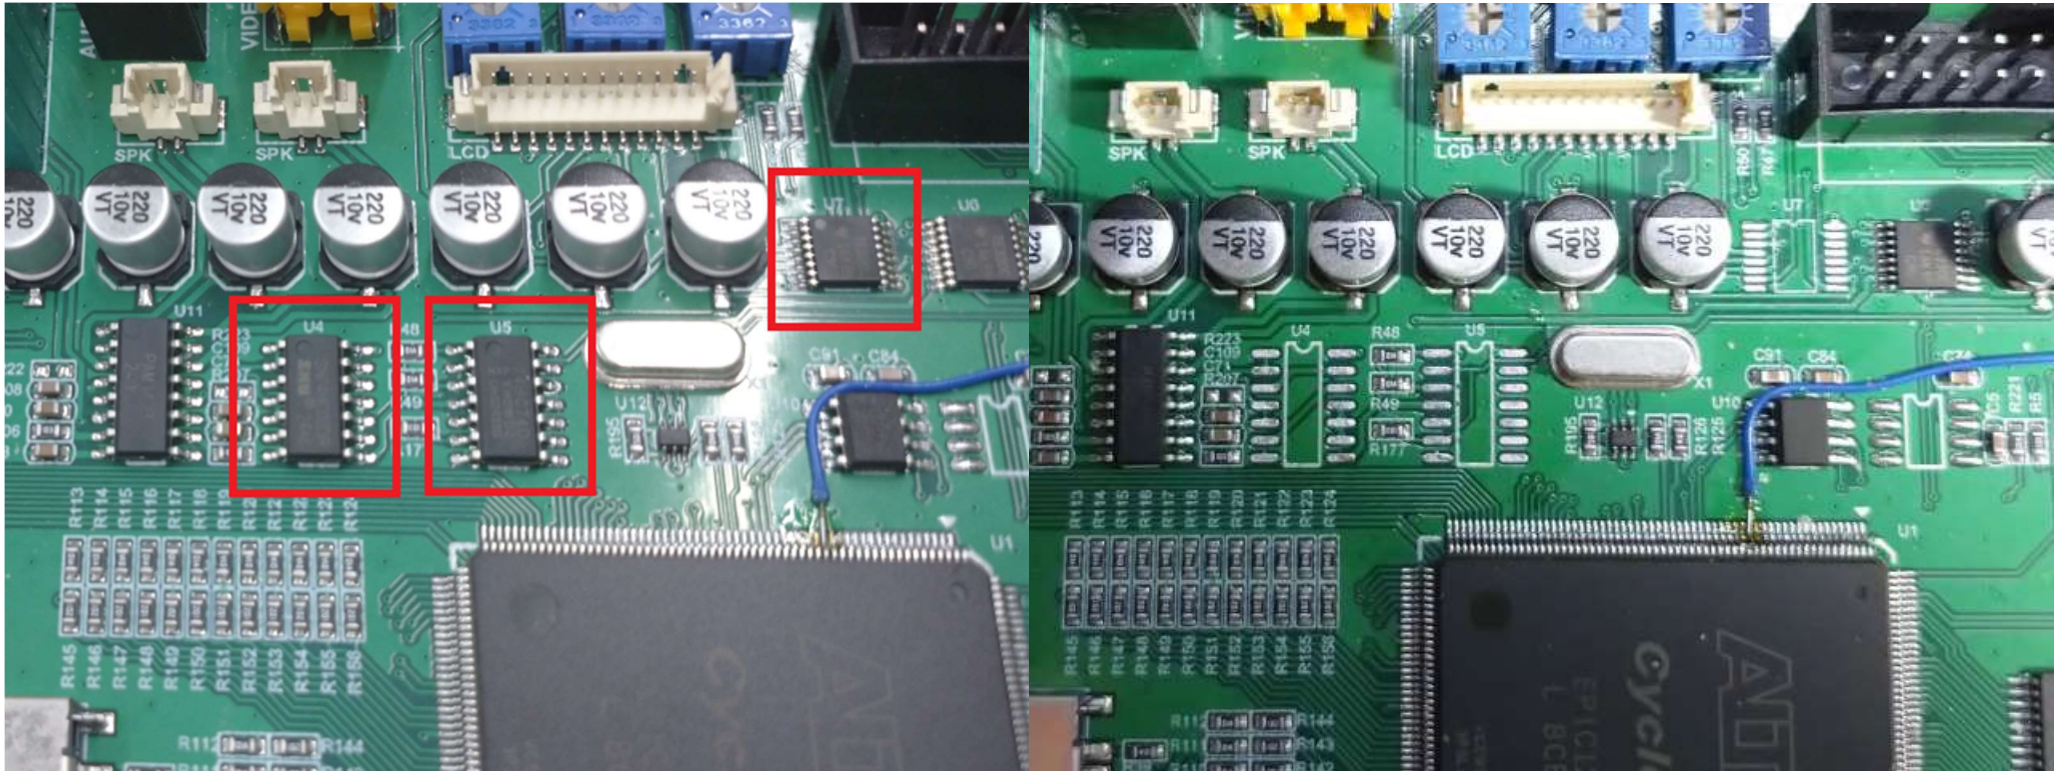

Remove ICs U4, U5, and U7.