

# Bridge Engine Unity Plugin

This plugin uses the Structure Sensor's depth sensor to generate and track real world elements and introduce them to your game experience.

BridgeEngine.unitypackage contains the BridgeEngine.Framework, and the iOS plugin interface code, that will allow you to develop your own Bridge Engine games. We also provide a simple scene and assets for starting a game from scratch.

## Section 0 - Overview

### What's Included

The BridgeEngine.unitypackage contains the libraries and code needed to scan a large area, and begin tracking in VR mode. BridgeEngine for Unity is designed to naturally extend the capabilities of Google VR (formerly Cardboard) and requires the GoogleVR unity package to be installed first. With this plugin you'll be able to scan a large area which can be used to precisely track the Bridge Headset movement and render a collision avoidance mesh when you approach real world objects.

## Section 0.1 - Requirements

Download the GoogleVR unitypackage available at <https://github.com/googlevr/gvr-unity-sdk>. Drag [GoogleVRForUnity.unitypackage](#) into the Unity directory of bridge-engine-beta.


The plugin was built and tested on Xcode **8.2** and iOS **9.3 & 10.2**.  
It is known to be compatible with Unity versions **5.4.2f2**.

Using other configurations may be possible, though we've not tested outside of the prescribed environment and cannot guarantee compatibility.


# Section 1 - Starting from Scratch

## Section 1.1 - Unity Project Creation Package Import and Build Steps


1. Create a new Unity project
  - a. Unity Menu: select **File** → **New Project...** Save as: “BEHelloWorld”
  - b. The project name is arbitrary, and can be located anywhere.

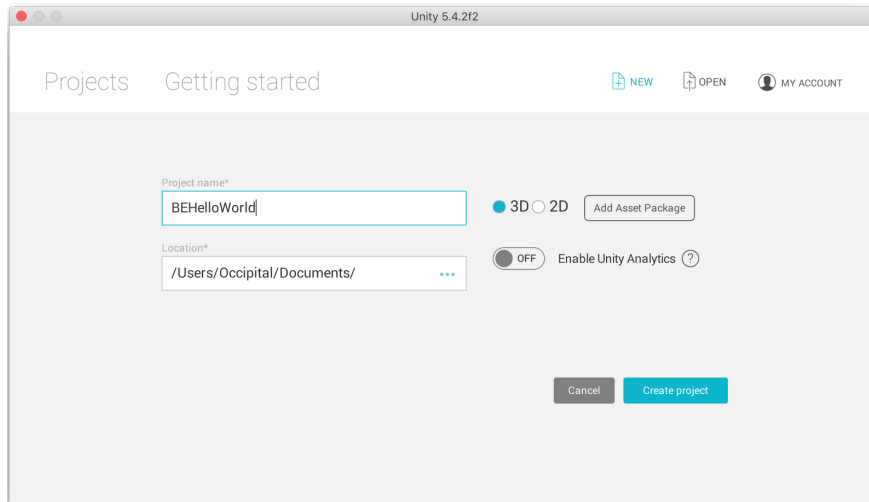


- c. Navigate to: **Assets** → **Import Package** → **Custom Package** and choose GoogleVRForUnity.unitypackage downloaded in section 0.

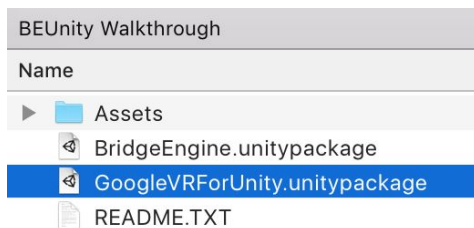



- d. Make sure that all the assets are selected by clicking **All** Then select **Import**. Follow the prompt to install “Additional libraries” for compatibility with GVR

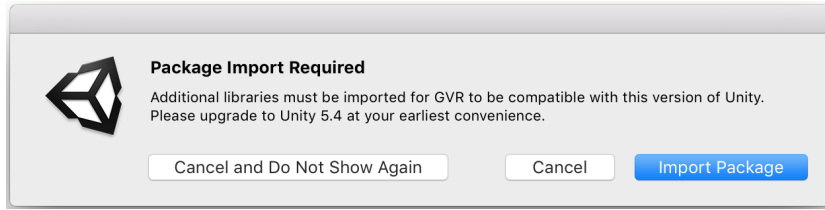


- e. Go to the Project, **Assets** → **GoogleVR** → **Prefabs** folder and drag in the **GvrViewerMain** prefab into your project.

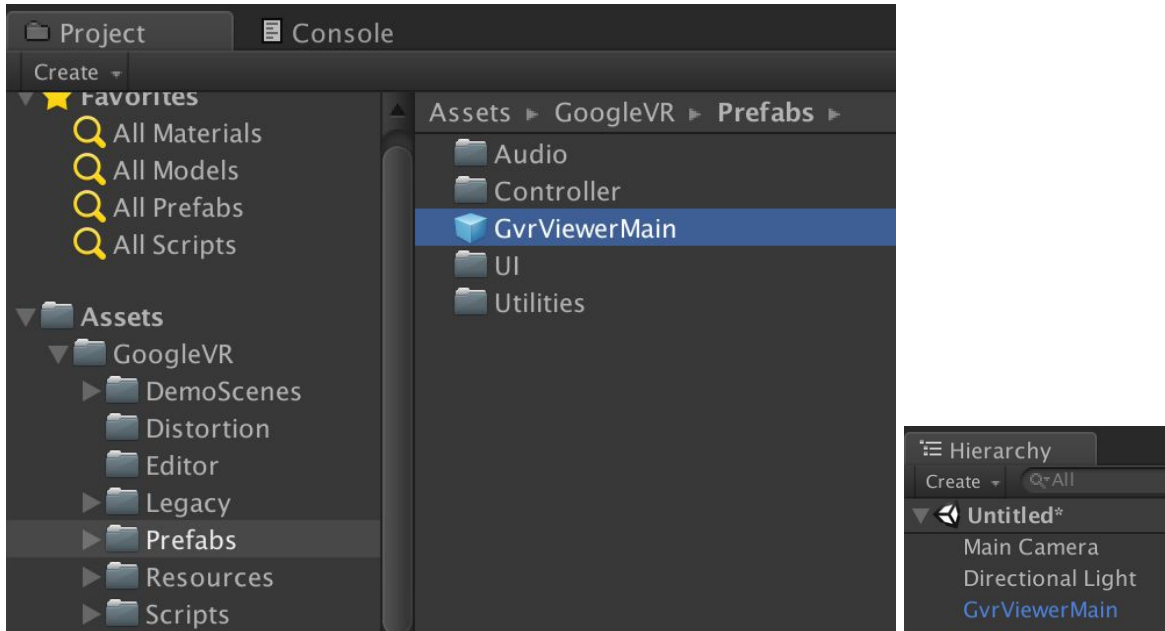


- f. Navigate to: **Assets** → **Import Package** → **Custom Package** and choose the `BridgeEngine.unitypackage` , included with this guide.

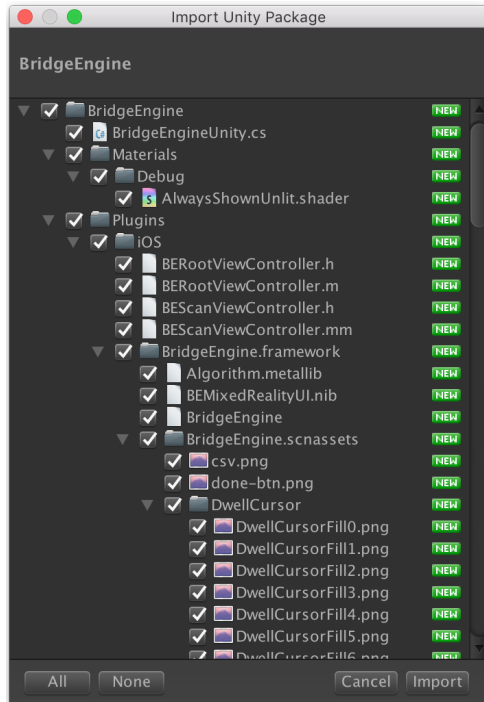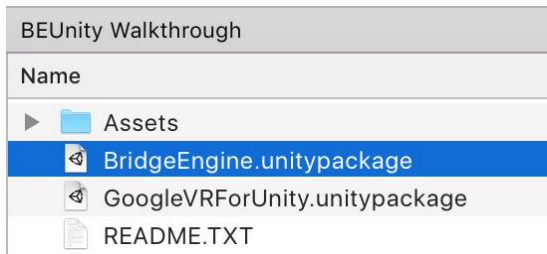


- g. Make sure that all the assets are selected by clicking **All** Then select **Import**.
- h. Go to the Project, **Assets** → **BridgeEngine** folder and drag **BridgeEngineUnity** script onto your **Main Camera**.

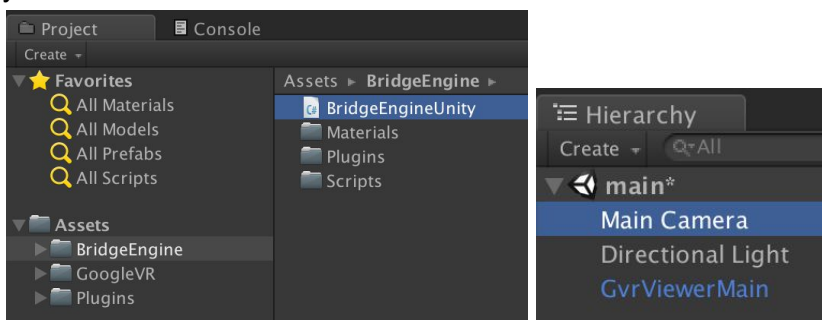


- i. Add some stock **Models** and **Textures** assets included with this guide:

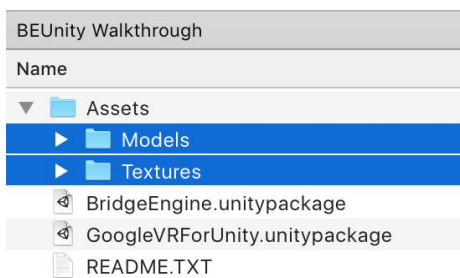

- j. Go to the Project, **Assets** → **Models** folder and drag **RobotRoom** model to the scene

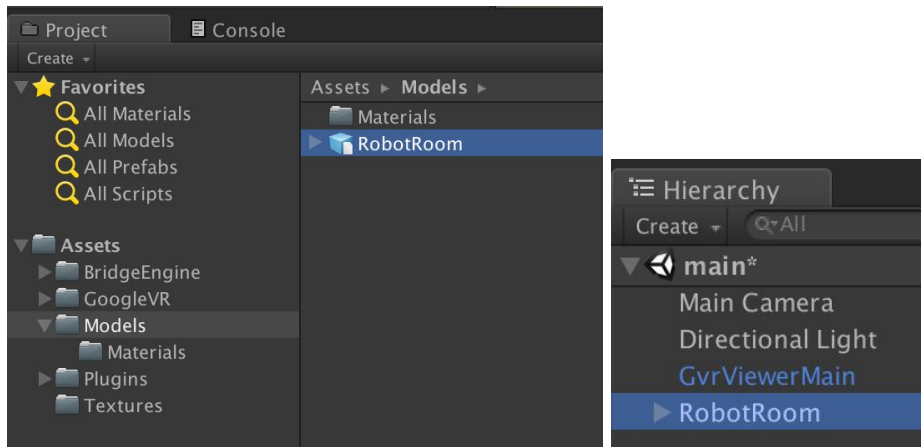


- k. Center your Main Camera

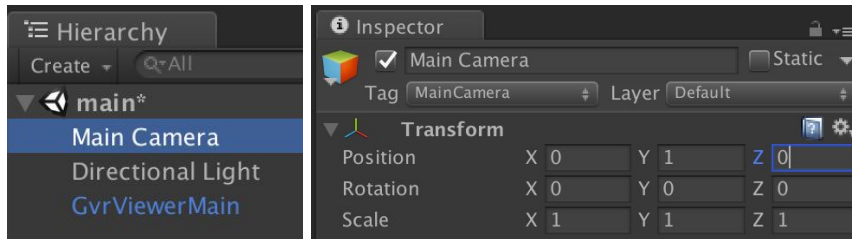

- l. Save your scene, as “main.scene”


## 2. Generating the Xcode Project

- To build and play BEHelloWorld, you'll want to change your **Build Settings**.
- File** → **Build Settings...** or “Shift + Command + B” to open the “Build Settings” window.
- In the “Platform” list, select “iOS” and press the “Switch Platform” button.
- Press the “Add Open Scenes” button, with the Main scene open. This will add the scene to the build, and the “Build Settings” window should now look as follows.

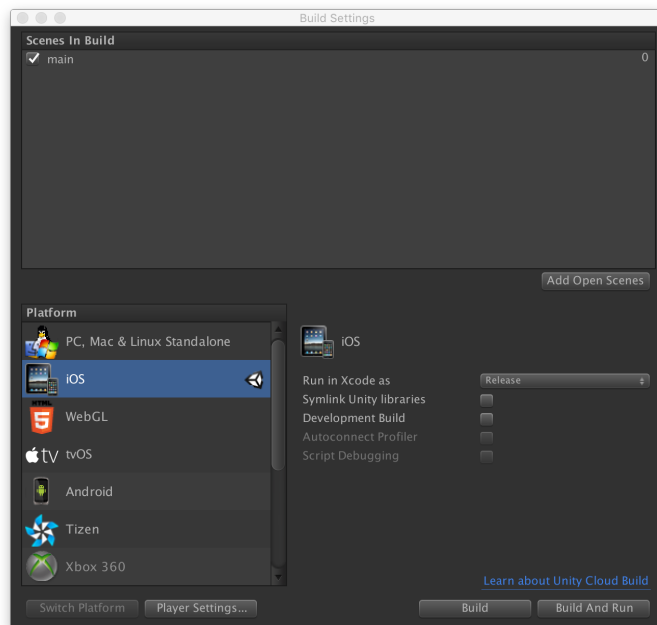


- e. Click the [**Player Settings...**] button under the “Platform” list.


- f. In the “Other Settings” section, add in your Bundle Identifier for the project.  
Example: “com.Company.ProductName”

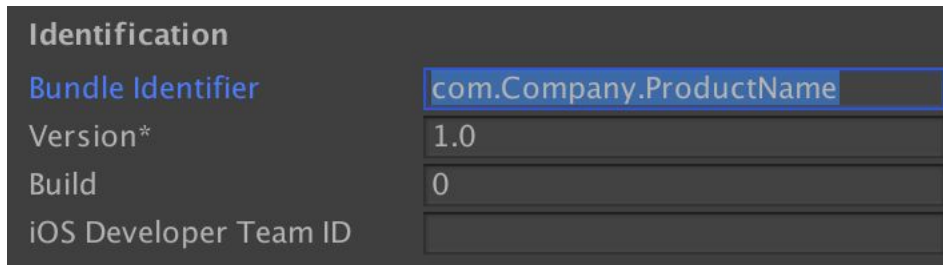

- g. In iOS Developer Team ID, add in your iOS Team ID
  - h. Go back to the “Build Settings” window, and press the “Build” button. Unity will then ask you for a location to save the Xcode project it will generate.
  - i. Pick a directory, then press “Save”.
3. Deploying the iOS App
    - a. Once Unity is done generating an Xcode project, it automatically opens the directory that contains it:

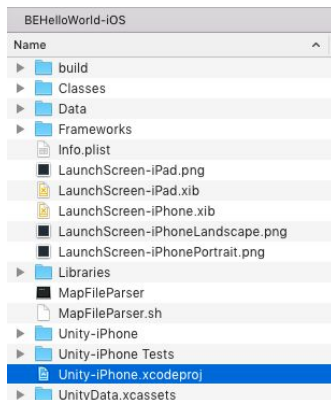

- b. First, connect your iPad to your Mac using a Lightning cable.
- c. Now, open “Unity-iPhone.xcodeproj”.
- d. Press the “Run” button (or “Command+R”).



- e. If all goes well, then Bridge Engine should automatically deploy on your iPhone.

After the iOS app has been successfully deployed, you will need to unplug the iPhone from your computer, then insert your iPhone into the Bridge Headset and plug the Structure Sensor.

## Section 2 - Scanning and Interacting

The gameplay of all Bridge Engine games is made of two distinct steps. First, the real-world geometry is captured, and then the actual game loop starts.

### Section 2.1 - Capturing Real-World Geometry

After the game has started, you scan the full room that you wish to track on. When ready, press the “Scan” button to start scanning and build the game world mesh. When you’ve scanned enough of the scene, press the “Done” button. Press “Re-Scan” to scan a new mesh and start over. Now you’re ready to play in the real world!

## Section 2.2 - Playing


When the Bridge Engine game loop starts you can freely move around the scene and look in the direction of wherever there's a scanned surface.

## Section 3 - Debugging Bridge Engine Games


Troubleshooting Bridge Engine

Code Signing Issues

When building the Xcode project, you may get an error message about missing provisioning profile.

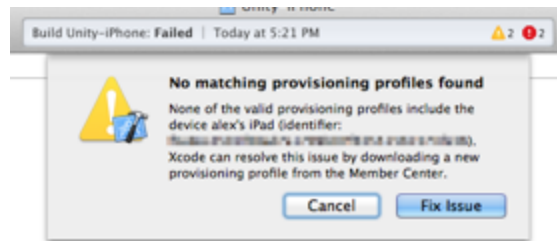

If everything is setup properly then you should be able to resolve this with the “Fix Issue” button.

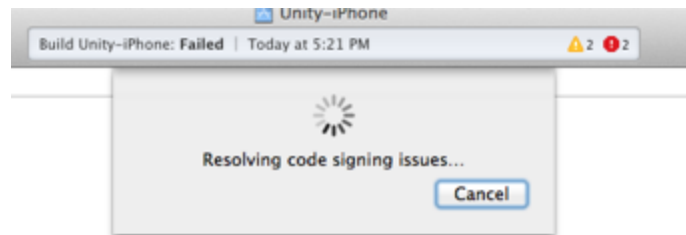

If this issue persists, please refer to the [“Troubleshooting” section](#) of [Apple’s iOS app Distribution Guide](#).

Additional Notes:

For this release we’ve decided to set Exit on Suspend to true by default. This was added in the PostprocessBuildPlayer script found in Assets/Editor. This is a script which sets the Xcode project up. If your project requires this to be false, then you may edit the PostprocessBuildPlayer script by commenting out the last two lines.

Debugging symbols (dSYM) are turned off by default in the generated Xcode project. To turn them on, modify the Debug Information Format from DWARF to DWARF with dSYM file in the Xcode Build Options.

We override Unity’s Exit on Suspend setting in Player Settings, as resuming from background can currently cause unexpected behavior.

## Section 4 - Performance improvements

Depending on your device you have the option to change the quality settings within Unity to improve the rendering speed. This will have a direct effect on the frame rate and the perceived quality of the unbounded tracking.

To change the quality settings select Edit->Project Settings->Quality



In the inspector Simple is used as the quality used for the iOS device. Select either Fast or Fastest for better performance.