




[Directory](#) → [Brands](#) → [Elo TouchSystems manuals](#) → [Monitors](#) → [IntelliTouch SecureTouch](#) → [Manual](#)

Elo TouchSystems IntelliTouch SecureTouch User Manual

Page 65

Text mode

Original mode

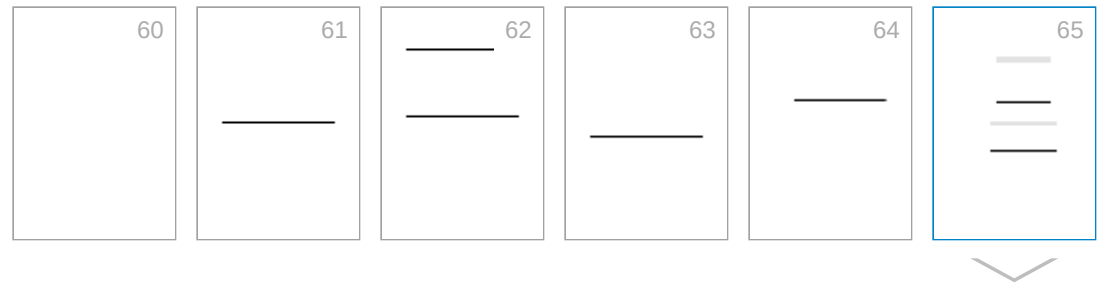

2500S Controller Protocol

The ten-byte binary data format displayed in hex by COMDUMP for correct operation with Elo driver software is as follows:

Byte	Description
1	ASCII 'U' (55h)
2	ASCII 'T' (54h)
3	Status Byte
4	XLow
5	XHigh
6	YLow
7	YHigh
8	ZLow
9	ZHigh (defaults to 0)
10	Checksum

A-4002 Controller Protocol

If the controller is jumpered for A-4002 emulation mode, the output will be the six-byte binary format as follows:

Byte	MSB								LSB
1	1	1	X11	X10	X9	X8	X7	X6	
2	1	0	X5	X4	X3	X2	X1	X0	
3	0	1	Y11	Y10	Y9	Y8	Y7	Y6	
4	0	0	Y5	Y4	Y3	Y2	Y1	Y0	
5	0	0	0	0	0	0	0	0	0
6	0	0	0	0	Z3	Z2	Z1	Z0	

In this mode, the first four bytes in each packet will be decreasing, followed by a zero byte, and a byte from 00 to 0F (hex). The Z value (byte 6) will be 00 when you lift your finger.




Popular Brands

- > Apple
- > Bissell
- > Brother
- > Canon
- > Casio
- > Cisco
- > Craftsman
- > Dell
- > FRIGIDAIRE
- > Garmin
- > GE
- > Honeywell

- › HP
- › John Deere
- › Kenmore
- › LG
- › Maytag
- › Motorola
- › NETGEAR
- › Nikon

- › Panasonic
- › Pioneer
- › Samsung
- › Sharp
- › SINGER
- › Sony
- › Whirlpool
- › Yamaha

 All brands



Popular manuals

[Canon - AE-1](#)

[Fitbit - Flex](#)

[Nikon - D5000](#)

[Nikon - D40](#)

[Nikon - D3100](#)

[Nikon - D90](#)

[Nikon - D7000](#)

[Nikon - D80](#)

[Nikon - D3000](#)

[HP - Officejet Pro 8600](#)

[Canon - EOS 60D](#)

[HP - 12C Financial calculator](#)

 Full list

[Home](#)

[About Us](#)

[Contact Us](#)

[ManualsDir DMCA P...](#)

[Brands](#)

[Popular manuals](#)

[Recently added](#)



MANUALS DIRECTORY

© 2012–2022, manualsdir.com

All rights reserved.