




# C4S



## CASCOS 13194S

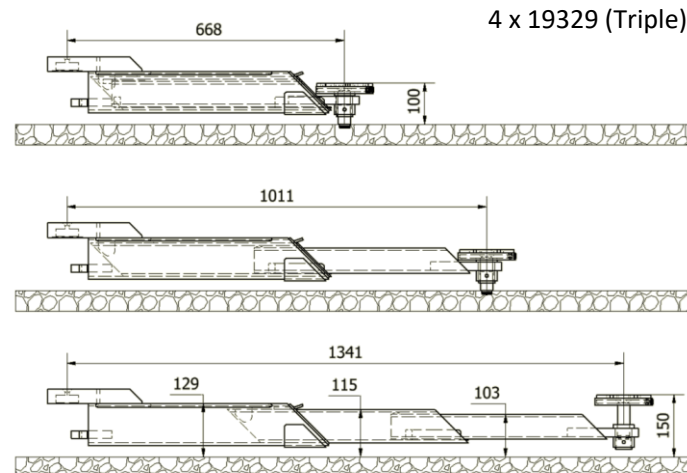


4 x 19329 (Triple)

### Kit de Calzos / Optional pads Kit / Kit de cales


Ref.	Ton.	Elevador / Lift / Pont élévateur		H-ext	H min.	H max	
26329	3.5	13168	C3.5	60	193	243	
		13194	C4		203	253	
	3.5	13169	C3.5 SYNC		173	223	
	4	13194S	C4 SYNC		173	223	
26315	3.5	13168	C3.5	100	228	278	
	4	13194	C4		238	288	
	3.5	13169	C3.5 SYNC		208	258	
	4	13194S	C4 SYNC		208	258	
26318	3.5	13168	C3.5	200	328	378	
	4	13194	C4		338	388	
	5.5	13998	C5.5		318	368	
	3.5	13169	C3.5 SYNC		308	358	
	4	13194S	C4 SYNC		308	358	
	5.5	13998S	C5.5 SYNC		313	363	



**Enchufe integrado en fábrica**  
Integrated power plug  
Assembled in factory  
Prise de courant intégrée  
Assemblé en usine

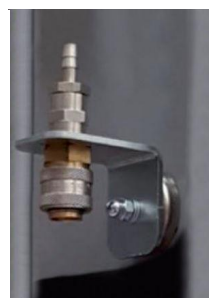


**Kit magnético de aire**  
Magnetic air Kit  
Connecteur d'air magnétique  
Ref. 26.177

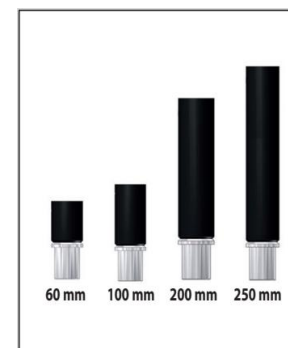

**Soporte magnético para herramientas**  
Magnetic holder for tools  
Porte-outils magnétique  
Ref. 26.141

REF: 15855 - KIT DOBLE BOTONERA ELEVADORES CONSUL



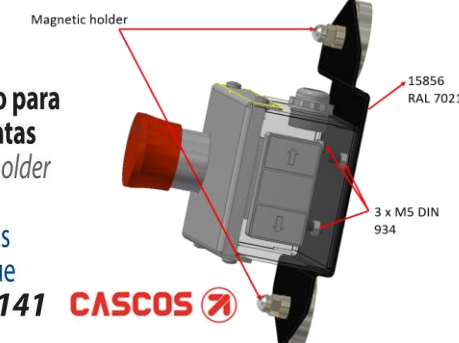


CASCOS



C4S

13194S

Ref.				
13194S	4.000 Kg.	750 Kg.	400/230V - 3+3kW	45"

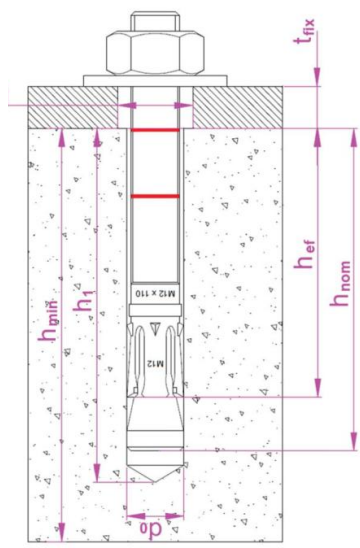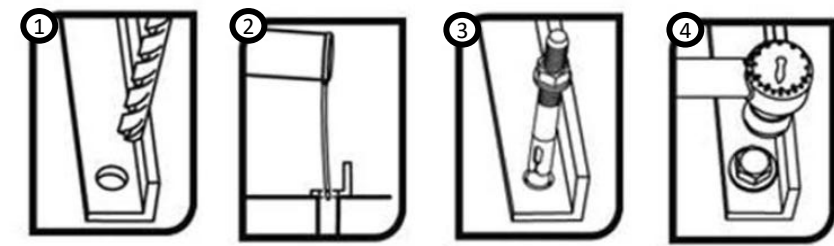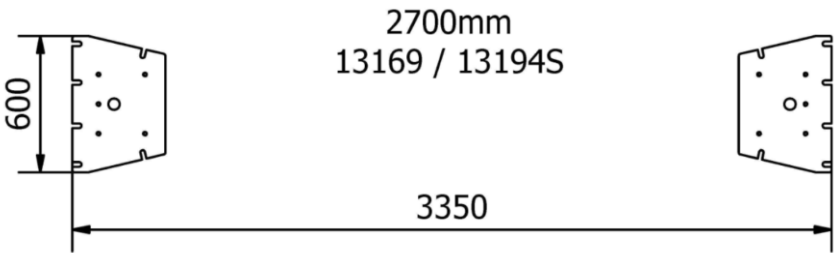

Calidad del Hormigón: C20/25  
Concrete quality: C20/25

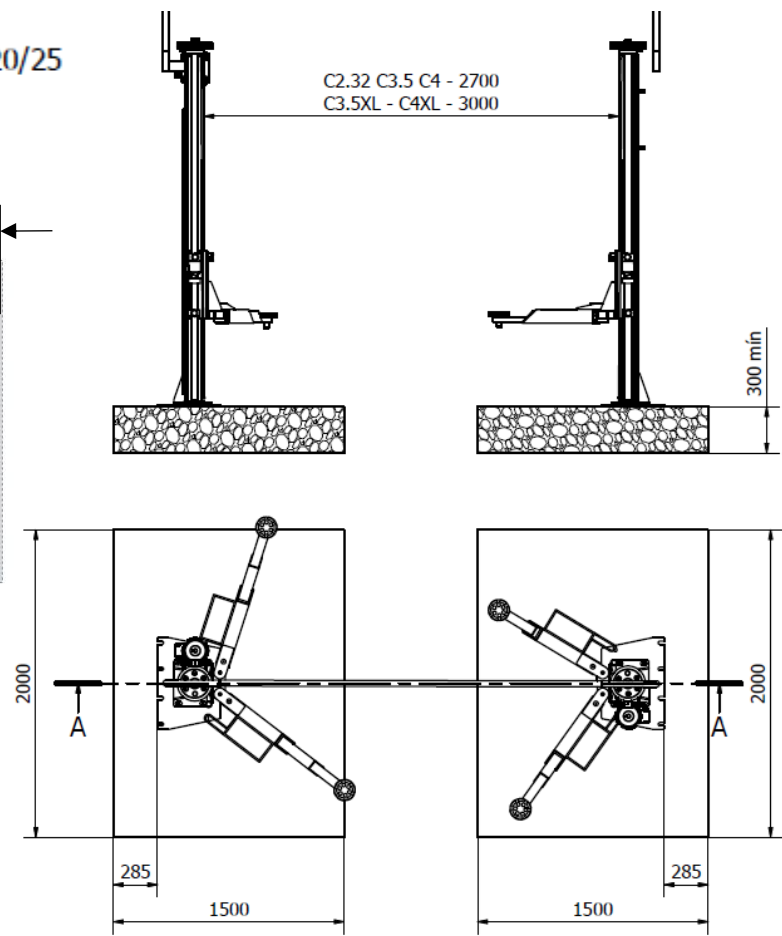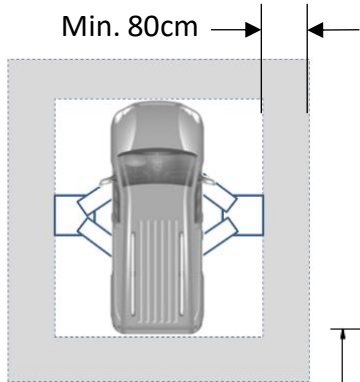

KIT Anchor bolts	Model	Max load Capacity (Ton)	Anchor Bolt type	Ø (mm)	(N*m)	Reference	Qty	Anchor Min. Tensile Strength (Kg)	Concrete quality	Optimal Concrete thickness (mm)	Min. Concrete thickness (mm)
17232S	C4S	4	M16x145	16	120	10549	12	3400	C20/25	<b>200</b>	170









# C4S 13194S



CASCOS



GUÍA RÁPIDA PARA RESET EN ELEVADOR Sincrónico con "ILC"  
FAST GUIDE FOR RESET IN 2 POST LIFT Syncro with "ILC"

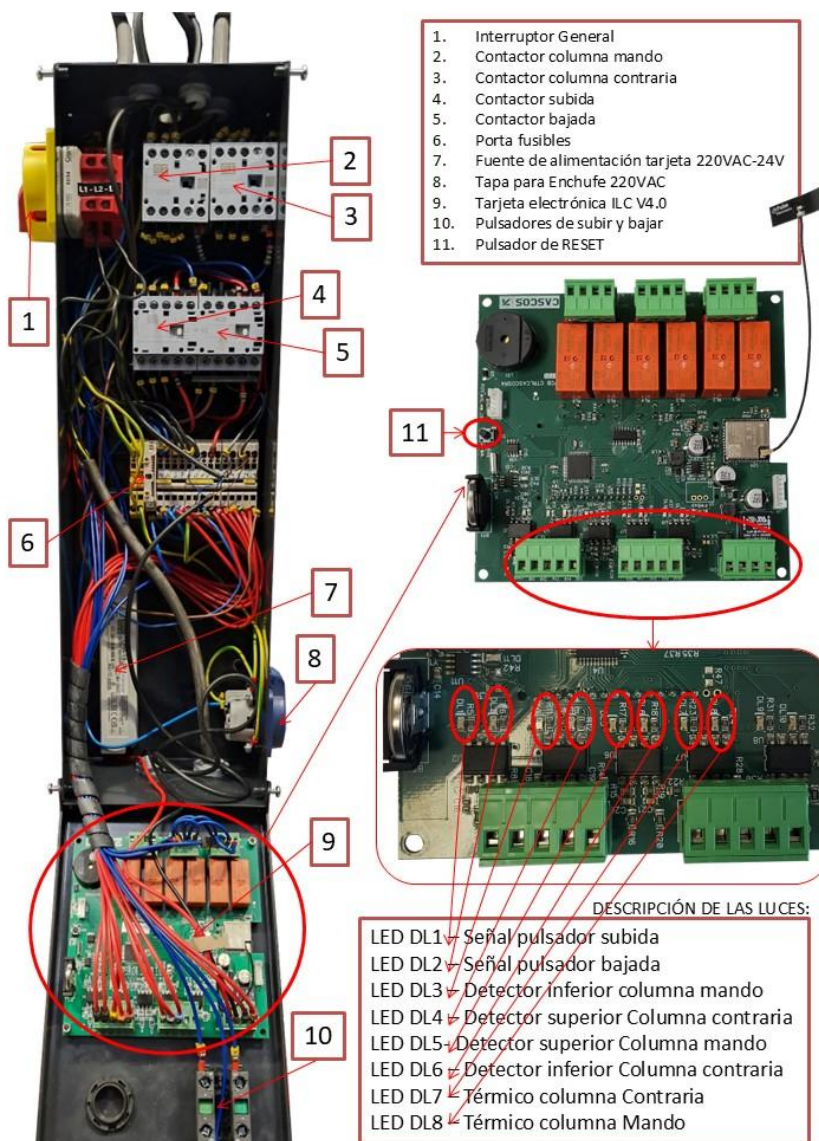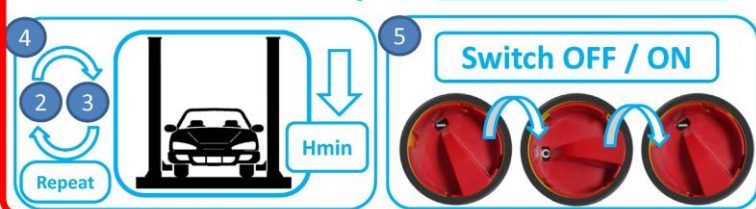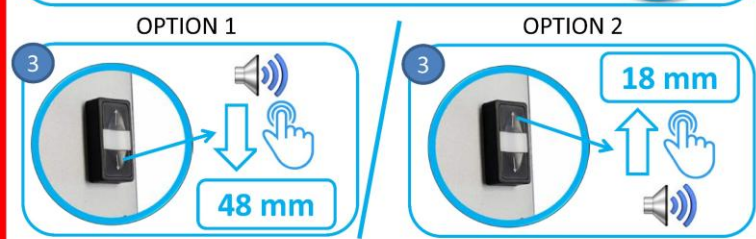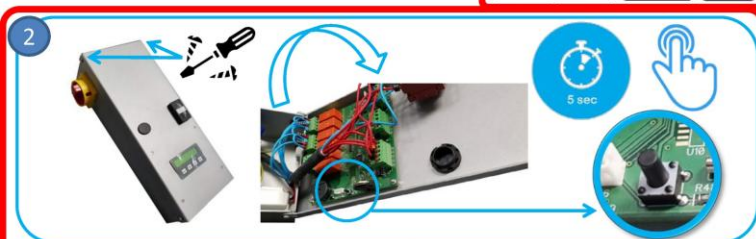


1. Interruptor General
2. Contactor columna mando
3. Contactor columna contraria
4. Contactor subida
5. Contactor bajada
6. Porta fusibles
7. Fuente de alimentación tarjeta 220VAC-24V
8. Tapa para Enchufe 220VAC
9. Tarjeta electrónica ILC V4.0
10. Pulsadores de subir y bajar
11. Pulsador de RESET

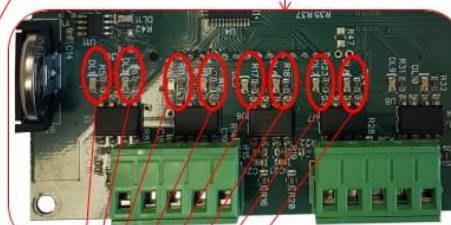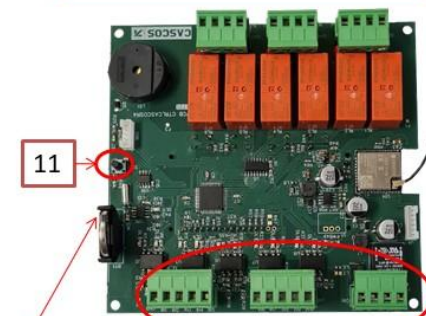

## DESCRIPCIÓN DE LAS LUCES:

- LED DL1 - Señal pulsador subida
- LED DL2 - Señal pulsador bajada
- LED DL3 - Detector inferior columna mando
- LED DL4 - Detector superior Columna contraria
- LED DL5 - Detector superior Columna mando
- LED DL6 - Detector inferior Columna contraria
- LED DL7 - Térmico columna Contraria
- LED DL8 - Térmico columna Mando

## ESQUEMA ELECTICO SINCRONICO ELECTRICAL CONNECTION IN CABINET

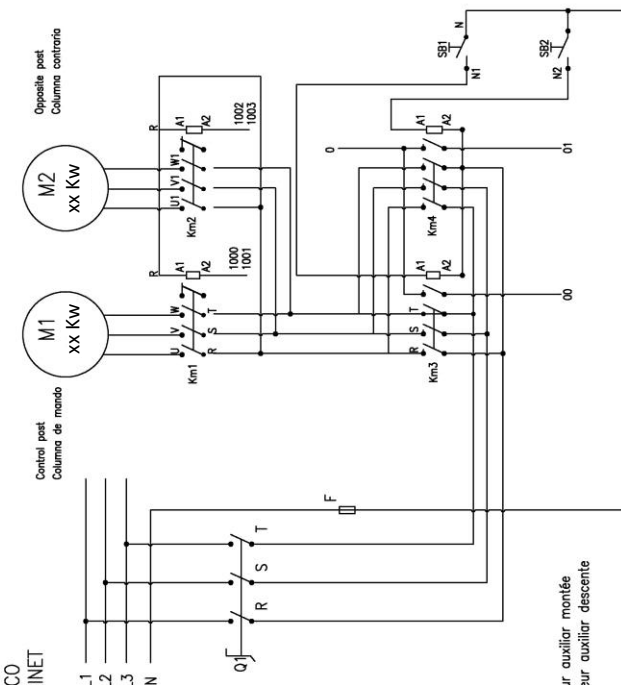

xx Kw
C3.25 - 2,2Kw
C3.55 - 3Kw
C4.5 - 3Kw
C5.5 - 3Kw
C7.5 - 5Kw

Colocación chapas según corriente.  
Plates placed according to current.

220 V


EN CASO QUE LA INSTALACION SEA DE 220 V, CAMBIAR CONEXION DEL TRANSFORMADOR A 220 V IF ELECTRIC INSTALLATION IS 220 V CHANGING TRANSFORMER CONNECTION TO 220V

Km1: Contactor M1 - Contactor M1 - Contacteur M1  
Km2: Contactor M2 - Contactor M2 - Contacteur M2  
Km3: Contactor auxiliar ascenso- Contactor auxiliar ascend - Contacteur auxiliaire montée  
Km4: Contactor auxiliar descenso- Contactor auxiliar descend - Contacteur auxiliaire descente


F: Fusible - Fuse - Fusible  
Q1: Interruptor general - General ON/OFF switch - Interrupteur général  
SB1: Botón ascenso - Roise push button - Bouton Montée  
SB2: Botón descenso - Lower push button - Bouton descente




**CASCOS**

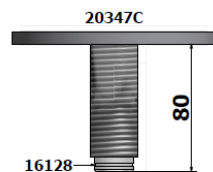


C3.2 ECO Sync  
C3.2 ECO base  
C3.2 CONFORT Sync  
C3.2 CONFORT Base

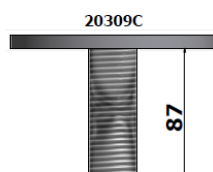


C3.5 BRAZO TRIPLE base  
C4 base  
C5.5 base

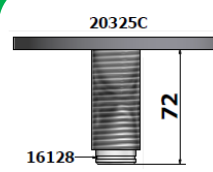

C3.5 SYNC BRAZO TRIPLE  
C4 SYNC  
C5.5 SYNC

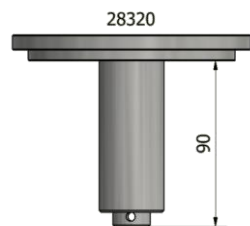


C5WAGON  
C5.5WAGON  
C5 SYNC WAGON  
C5.5 SYNC WAGON

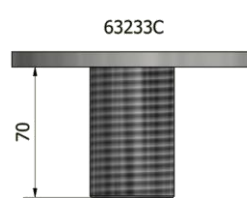


C7S

#### HUSILLO DOBLE CORTO

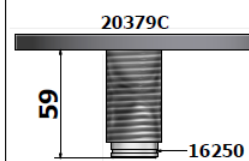


C3.2 WEBER base  
C3.2 SYNC WEBER  
C3.2 SYNC SPORT

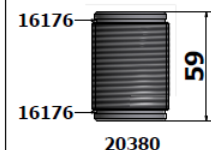


(\*)

#### HUSILLO DOBLE

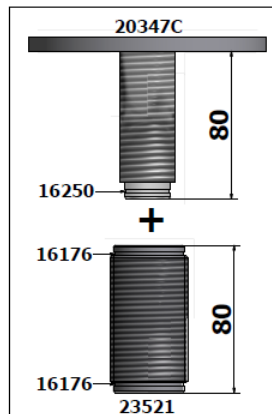


C3.2 ECO base- 23520  
C3.2 CONFORT base - 23520C  
C3.5 BRAZO TRIPLE base - 23522  
C4 base - 23529  
C3.2 SYNC ECO - 23520S  
C3.2 SYNC CONFORT - 23520SC  
C3.5 SYNC BRAZO TRIPLE - 23522  
C4 SYNC - 23529

#### HUSILLO TRIPLE SYNC

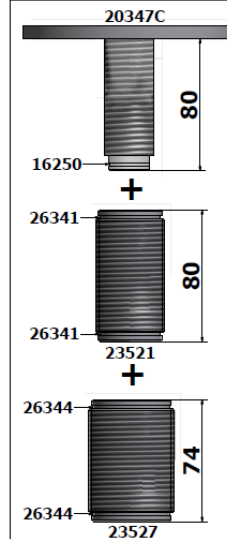


C3.5 SYNC BRAZO TRIPLE 23526  
C4 SYNC 23528

#### HUSILLO TRIPLE

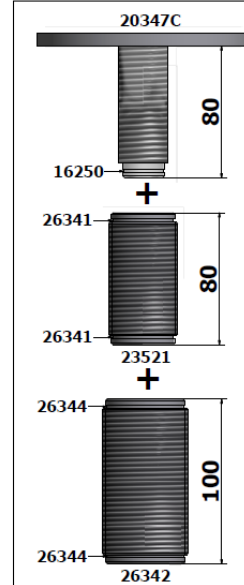

C3.5 BRAZO TRIPLE base - 23523  
C4 base - 23525

#### HUSILLO TRIPLE SVS

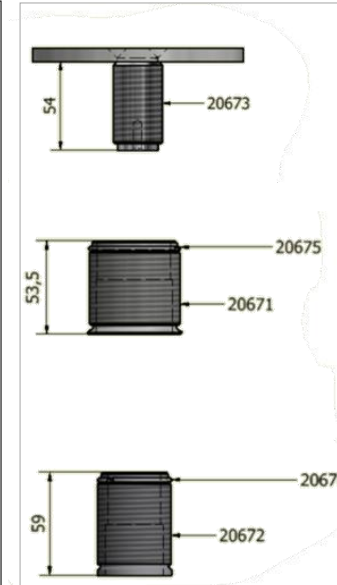

C3.2 SVS  
C4SXL SVS