



2005 Toyota RAV4

2005 ELECTRICAL Power Source - RAV4

2005 ELECTRICAL

Power Source - RAV4

LOCATION

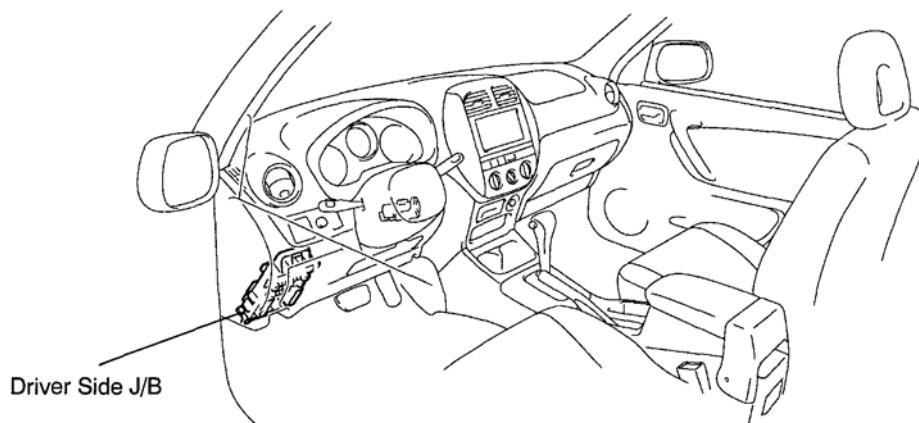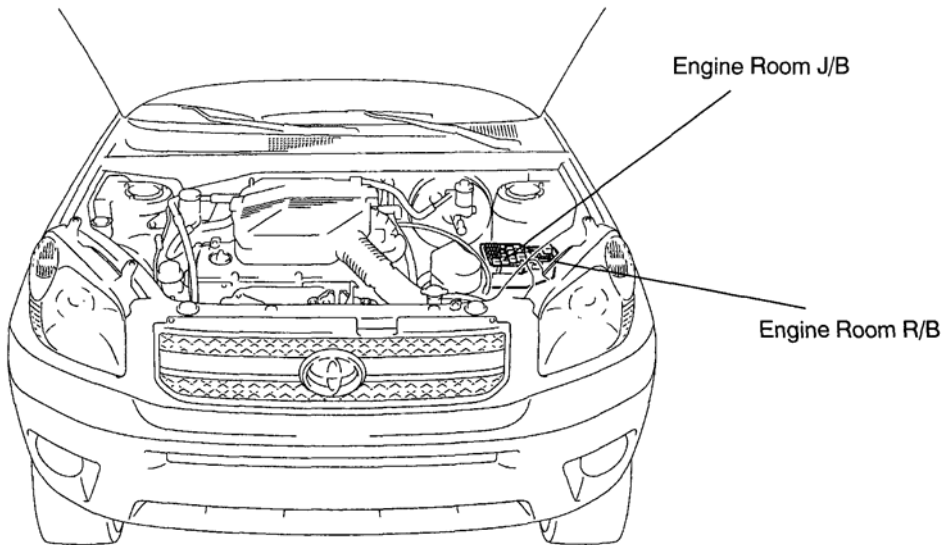


2005 Toyota RAV4

2005 ELECTRICAL Power Source - RAV4

Fig. 1: Identifying Power Source Components Location

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

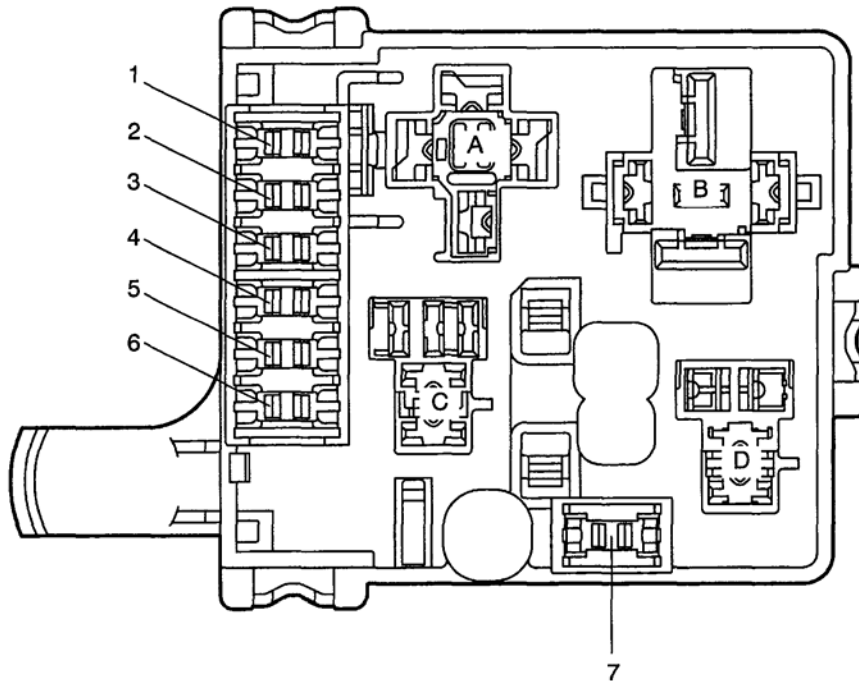

Fuses

1: -	
2: -	
3: ETCS	10 A
4: H-LP LH	15 A
5: H-LP RH	15 A
6: -	
7: ST	5 A

Relays

A: Starter Relay (Marking: ST)
B: w/o Daytime Running Light System: Headlight Control Relay (Marking: H-LP)
C: -
D: -

P

G02640839

Fig. 2: Identifying Power Source Relays And Fuses Location - Engine Room R/B (1 Of 2)

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


2005 Toyota RAV4

2005 ELECTRICAL Power Source - RAV4

Engine Room J/B

Fuses

1: ALT-S	5 A	11: RADIO	15 A
2: RADIO NO.2	30 A	12: A/C	5 A
3: EFI1	20 A	13: IGN	15 A
4: CUT	30 A	14: AM2 (Medium Current)	30 A
5: HAZ	10 A	15: HTR (Medium Current)	40 A
6: EFI2	5 A	16: CDS (Medium Current)	30 A
7: ABS2	30 A	17: ABS1 (Medium Current)	50 A
8: DOME	10 A	18: -	
9: MAIN	30 A	19: RDI (Medium Current)	30 A
10: EFI3	10 A		

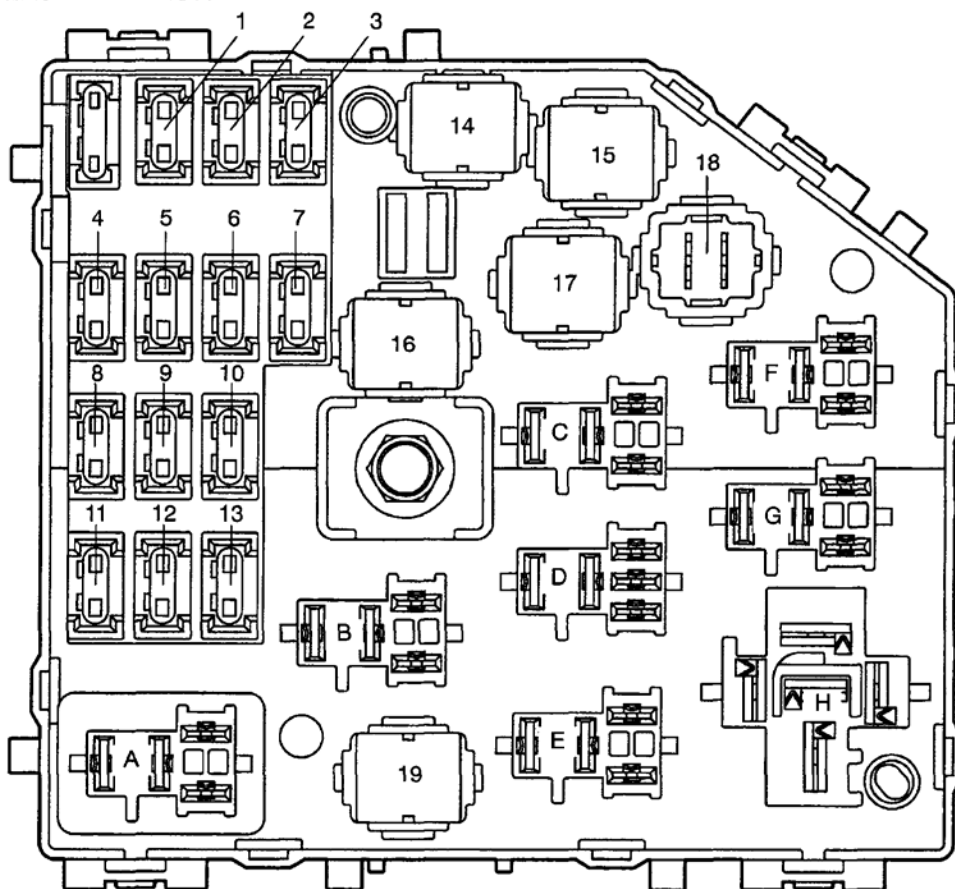

Relays


- A: No. 1 Cooling Fan Relay (Marking: FAN NO.1)
- B: Ignition Relay (Marking: IG2)
- C: EFI Main Relay (Marking: EFI MAIN)
- D: No. 2 Cooling Fan Relay (Marking: FAN NO.2)
- E: Circuit Opening Relay (Marking: C/OPN) or EDC Relay
- F: No. 3 Cooling Fan Relay (Marking: FAN NO.3)
- G: w/ Power Amplifier:
Short Pin
- H: Heater Main Relay (Marking: HTR)

2005 Toyota RAV4

2005 ELECTRICAL Power Source - RAV4

Fig. 3: Identifying Power Source Relays And Fuses Location - Engine Room R/B (2 Of 2)
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

Driver Side J/B (Front Side)

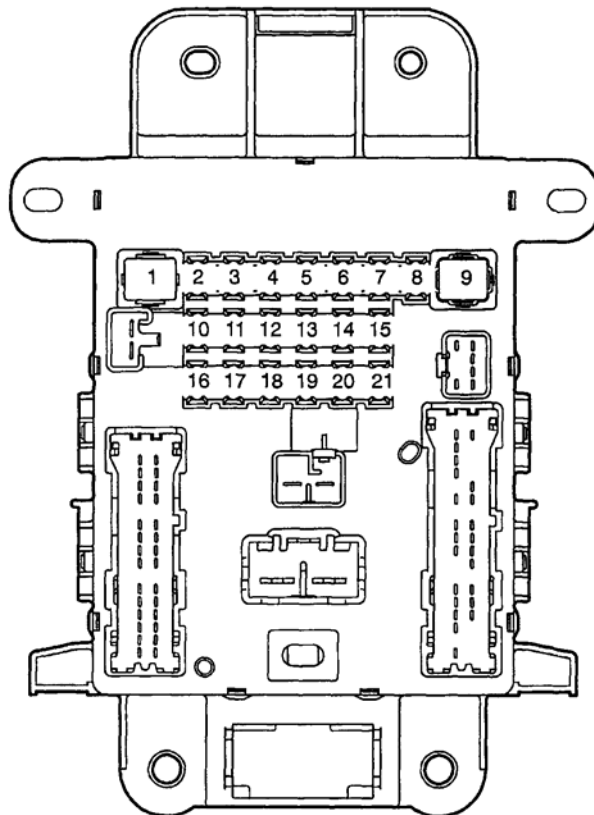

Fuses

1: POWER	30 A (Medium Current)	12: ACC	7.5 A
2: STOP	10 A	13: DEF	20 A
3: CIG	15 A	14: GAUGE	10 A
4: POWER OUTLET	15 A	15: OBD	7.5 A
5: S-HTR	10 A	16: IG2	10 A
6: PANEL	7.5 A	17: DOOR	20 A
7: FR FOG	15 A	18: MIR HTR	10 A
8: HORN	10 A	19: RR WIP	15 A
9: AM1	40 A (Medium Current)	20: WIP	25 A
10: TAIL	7.5 A	21: ECU IG	10 A
11: TAIL & PANEL	15 A		

p


G02640841

Fig. 4: Identifying Power Source Relays And Fuses Location - Driver Side J/B Front Side

2005 Toyota RAV4

2005 ELECTRICAL Power Source - RAV4

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

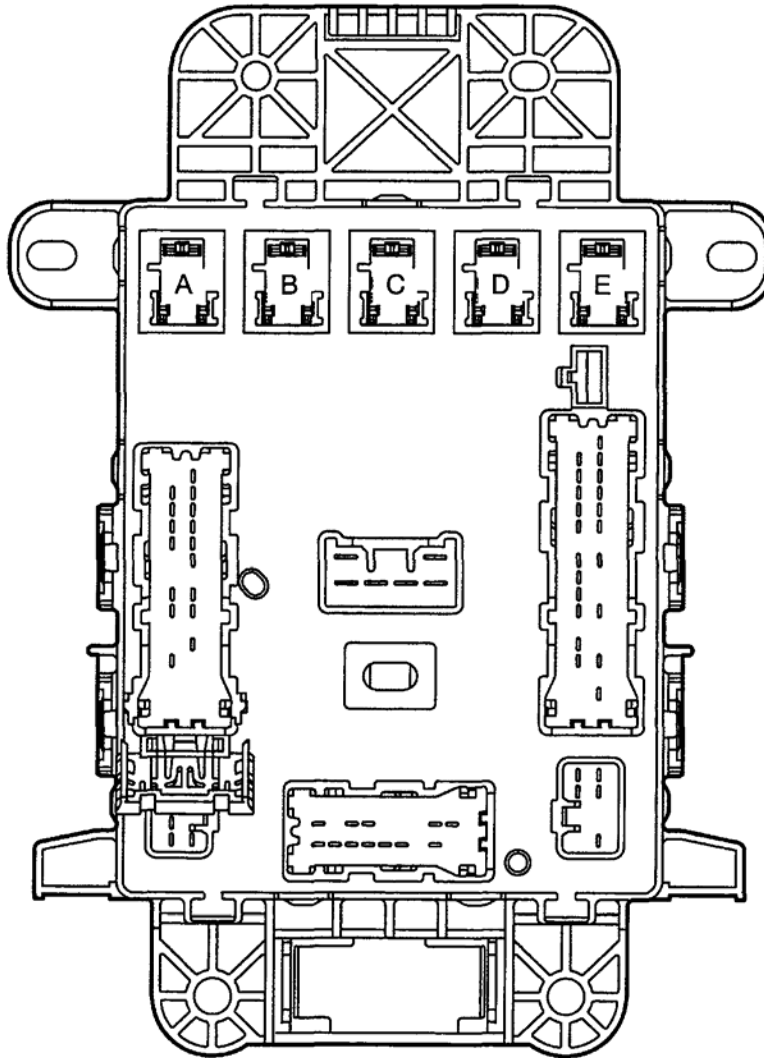

Relays

- A: Horn Relay (Marking: HORN)
- B: Front Fog Light Relay (Marking: FR FOG)
- C: Defogger Relay (Marking: DEF)
- D: Power Outlet Relay (Marking: POWER OUTLET)
- E: Power Relay (Marking: POWER)

Fig. 5: Identifying Power Source Relays And Fuses Location - Driver Side J/B Rear Side

2005 Toyota RAV4
2005 ELECTRICAL Power Source - RAV4

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.